Changes for the Better



MOTION CONTROLLER Qseries SV13/SV22(REAL MODE) Q173DSCPU Q172DSCPU Q173DCPU(-S1 Q172DCPU(-S1 **Programming Manual**

● SAFETY PRECAUTIONS ●

(Please read these instructions before using this equipment.)

Before using this product, please read this manual and the relevant manuals introduced in this manual carefully and pay full attention to safety to handle the product correctly.

These precautions apply only to this product. Refer to the Q173D(S)CPU/Q172D(S)CPU Users manual for a description of the Motion controller safety precautions.

In this manual, the safety instructions are ranked as "DANGER" and "CAUTION".



Indicates that incorrect handling may cause hazardous conditions, resulting in death or severe injury.

Indicates that incorrect handling may cause hazardous conditions, resulting in medium or slight personal injury or physical damage.

Depending on circumstances, procedures indicated by <u>A</u> CAUTION may also be linked to serious results.

In any case, it is important to follow the directions for usage.

Please save this manual to make it accessible when required and always forward it to the end user.

For Safe Operations

1. Prevention of electric shocks

▲DANGER

- Never open the front case or terminal covers while the power is ON or the unit is running, as this may lead to electric shocks.
- Never run the unit with the front case or terminal cover removed. The high voltage terminal and charged sections will be exposed and may lead to electric shocks.
- Never open the front case or terminal cover at times other than wiring work or periodic inspections even if the power is OFF. The insides of the Motion controller and servo amplifier are charged and may lead to electric shocks.
- Completely turn off the externally supplied power used in the system before mounting or removing the module, performing wiring work, or inspections. Failing to do so may lead to electric shocks.
- When performing wiring work or inspections, turn the power OFF, wait at least ten minutes, and then check the voltage with a tester, etc. Failing to do so may lead to electric shocks.
- Be sure to ground the Motion controller, servo amplifier and servomotor. (Ground resistance : 100 Ω or less) Do not ground commonly with other devices.
- The wiring work and inspections must be done by a qualified technician.
- Wire the units after installing the Motion controller, servo amplifier and servomotor. Failing to do so may lead to electric shocks or damage.
- Never operate the switches with wet hands, as this may lead to electric shocks.
- Do not damage, apply excessive stress, place heavy things on or sandwich the cables, as this may lead to electric shocks.
- Do not touch the Motion controller, servo amplifier or servomotor terminal blocks while the power is ON, as this may lead to electric shocks.
- Do not touch the built-in power supply, built-in grounding or signal wires of the Motion controller and servo amplifier, as this may lead to electric shocks.

2. For fire prevention

≜CAUTION

- Install the Motion controller, servo amplifier, servomotor and regenerative resistor on incombustible. Installing them directly or close to combustibles will lead to fire.
- If a fault occurs in the Motion controller or servo amplifier, shut the power OFF at the servo amplifier's power source. If a large current continues to flow, fire may occur.
- When using a regenerative resistor, shut the power OFF with an error signal. The regenerative resistor may abnormally overheat due to a fault in the regenerative transistor, etc., and may lead to fire.
- Always take heat measures such as flame proofing for the inside of the control panel where the servo amplifier or regenerative resistor is installed and for the wires used. Failing to do so may lead to fire.
- Do not damage, apply excessive stress, place heavy things on or sandwich the cables, as this may lead to fire.

3. For injury prevention

- Do not apply a voltage other than that specified in the instruction manual on any terminal.
 Doing so may lead to destruction or damage.
- Do not mistake the terminal connections, as this may lead to destruction or damage.
- Do not mistake the polarity (+/-), as this may lead to destruction or damage.
- Do not touch the heat radiating fins of controller or servo amplifier, regenerative resistor and servomotor, etc., while the power is ON and for a short time after the power is turned OFF. In this timing, these parts become very hot and may lead to burns.
- Always turn the power OFF before touching the servomotor shaft or coupled machines, as these parts may lead to injuries.
- Do not go near the machine during test operations or during operations such as teaching. Doing so may lead to injuries.

4. Various precautions

Strictly observe the following precautions.

Mistaken handling of the unit may lead to faults, injuries or electric shocks.

(1) System structure

≜CAUTION

- Always install a leakage breaker on the Motion controller and servo amplifier power source.
- If installation of an electromagnetic contactor for power shut off during an error, etc., is specified in the instruction manual for the servo amplifier, etc., always install the electromagnetic contactor.
- Install the emergency stop circuit externally so that the operation can be stopped immediately and the power shut off.
- Use the Motion controller, servo amplifier, servomotor and regenerative resistor with the correct combinations listed in the instruction manual. Other combinations may lead to fire or faults.
- Use the Motion controller, base unit and motion module with the correct combinations listed in the instruction manual. Other combinations may lead to faults.
- If safety standards (ex., robot safety rules, etc.,) apply to the system using the Motion controller, servo amplifier and servomotor, make sure that the safety standards are satisfied.
- Construct a safety circuit externally of the Motion controller or servo amplifier if the abnormal operation of the Motion controller or servo amplifier differ from the safety directive operation in the system.
- In systems where coasting of the servomotor will be a problem during the forced stop, emergency stop, servo OFF or power supply OFF, use dynamic brakes.
- Make sure that the system considers the coasting amount even when using dynamic brakes.
- In systems where perpendicular shaft dropping may be a problem during the forced stop, emergency stop, servo OFF or power supply OFF, use both dynamic brakes and electromagnetic brakes.

- The dynamic brakes must be used only on errors that cause the forced stop, emergency stop, or servo OFF. These brakes must not be used for normal braking.
- The brakes (electromagnetic brakes) assembled into the servomotor are for holding applications, and must not be used for normal braking.
- The system must have a mechanical allowance so that the machine itself can stop even if the stroke limits switch is passed through at the max. speed.
- Use wires and cables that have a wire diameter, heat resistance and bending resistance compatible with the system.
- Use wires and cables within the length of the range described in the instruction manual.
- The ratings and characteristics of the parts (other than Motion controller, servo amplifier and servomotor) used in a system must be compatible with the Motion controller, servo amplifier and servomotor.
- Install a cover on the shaft so that the rotary parts of the servomotor are not touched during operation.
- There may be some cases where holding by the electromagnetic brakes is not possible due to the life or mechanical structure (when the ball screw and servomotor are connected with a timing belt, etc.). Install a stopping device to ensure safety on the machine side.

(2) Parameter settings and programming

- Set the parameter values to those that are compatible with the Motion controller, servo amplifier, servomotor and regenerative resistor model and the system application. The protective functions may not function if the settings are incorrect.
- The regenerative resistor model and capacity parameters must be set to values that conform to the operation mode, servo amplifier and servo power supply module. The protective functions may not function if the settings are incorrect.
- Set the mechanical brake output and dynamic brake output validity parameters to values that are compatible with the system application. The protective functions may not function if the settings are incorrect.
- Set the stroke limit input validity parameter to a value that is compatible with the system application. The protective functions may not function if the setting is incorrect.
- Set the servomotor encoder type (increment, absolute position type, etc.) parameter to a value that is compatible with the system application. The protective functions may not function if the setting is incorrect.
- Set the servomotor capacity and type (standard, low-inertia, flat, etc.) parameter to values that are compatible with the system application. The protective functions may not function if the settings are incorrect.
- Set the servo amplifier capacity and type parameters to values that are compatible with the system application. The protective functions may not function if the settings are incorrect.
- Use the program commands for the program with the conditions specified in the instruction manual.

- Set the sequence function program capacity setting, device capacity, latch validity range, I/O assignment setting, and validity of continuous operation during error detection to values that are compatible with the system application. The protective functions may not function if the settings are incorrect.
- Some devices used in the program have fixed applications, so use these with the conditions specified in the instruction manual.
- The input devices and data registers assigned to the link will hold the data previous to when communication is terminated by an error, etc. Thus, an error correspondence interlock program specified in the instruction manual must be used.
- Use the interlock program specified in the intelligent function module's instruction manual for the program corresponding to the intelligent function module.

(3) Transportation and installation

- Transport the product with the correct method according to the mass.
- Use the servomotor suspension bolts only for the transportation of the servomotor. Do not transport the servomotor with machine installed on it.
- Do not stack products past the limit.
- When transporting the Motion controller or servo amplifier, never hold the connected wires or cables.
- When transporting the servomotor, never hold the cables, shaft or detector.
- When transporting the Motion controller or servo amplifier, never hold the front case as it may fall off.
- When transporting, installing or removing the Motion controller or servo amplifier, never hold the edges.
- Install the unit according to the instruction manual in a place where the mass can be withstood.
- Do not get on or place heavy objects on the product.
- Always observe the installation direction.
- Keep the designated clearance between the Motion controller or servo amplifier and control panel inner surface or the Motion controller and servo amplifier, Motion controller or servo amplifier and other devices.
- Do not install or operate Motion controller, servo amplifiers or servomotors that are damaged or that have missing parts.
- Do not block the intake/outtake ports of the Motion controller, servo amplifier and servomotor with cooling fan.
- Do not allow conductive matter such as screw or cutting chips or combustible matter such as oil enter the Motion controller, servo amplifier or servomotor.
- The Motion controller, servo amplifier and servomotor are precision machines, so do not drop or apply strong impacts on them.
- Securely fix the Motion controller, servo amplifier and servomotor to the machine according to the instruction manual. If the fixing is insufficient, these may come off during operation.

- Always install the servomotor with reduction gears in the designated direction. Failing to do so may lead to oil leaks.
- Store and use the unit in the following environmental conditions.

	Conditions	
Environment	Motion controller/Servo amplifier	Servomotor
Ambient temperature	According to each instruction manual.	0°C to +40°C (With no freezing) (32°F to +104°F)
Ambient humidity	According to each instruction manual.	80% RH or less (With no dew condensation)
Storage temperature	According to each instruction manual.	-20°C to +65°C (-4°F to +149°F)
Atmosphere	Indoors (where not subject to direct sunlight). No corrosive gases, flammable gases, oil mist or dust must exist	
Altitude	1000m (3280.84ft.) or less above sea level	
Vibration	According to each instruction manual	


• When coupling with the synchronous encoder or servomotor shaft end, do not apply impact such as by hitting with a hammer. Doing so may lead to detector damage.

- Do not apply a load larger than the tolerable load onto the synchronous encoder and servomotor shaft. Doing so may lead to shaft breakage.
- When not using the module for a long time, disconnect the power line from the Motion controller or servo amplifier.
- Place the Motion controller and servo amplifier in static electricity preventing vinyl bags and store.
- When storing for a long time, please contact with our sales representative. Also, execute a trial operation.
- When fumigants that contain halogen materials such as fluorine, chlorine, bromine, and iodine are used for disinfecting and protecting wooden packaging from insects, they cause malfunction when entering our products.

Please take necessary precautions to ensure that remaining materials from fumigant do not enter our products, or treat packaging with methods other than fumigation (heat method). Additionally, disinfect and protect wood from insects before packing products.

(4) Wiring

- Correctly and securely wire the wires. Reconfirm the connections for mistakes and the terminal screws for tightness after wiring. Failing to do so may lead to run away of the servomotor.
- After wiring, install the protective covers such as the terminal covers to the original positions.
- Do not install a phase advancing capacitor, surge absorber or radio noise filter (option FR-BIF) on the output side of the servo amplifier.
- Correctly connect the output side (terminal U, V, W) and ground. Incorrect connections will lead the servomotor to operate abnormally.
- Do not connect a commercial power supply to the servomotor, as this may lead to trouble.
- Do not mistake the direction of the surge absorbing diode installed on the DC relay for the control signal output of brake signals, etc. Incorrect installation may lead to signals not being output when trouble occurs or the protective functions not functioning.

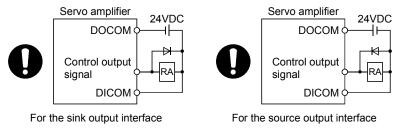

- Do not connect or disconnect the connection cables between each unit, the encoder cable or PLC expansion cable while the power is ON.
- Securely tighten the cable connector fixing screws and fixing mechanisms. Insufficient fixing may lead to the cables coming off during operation.
- Do not bundle the power line or cables.

(5) Trial operation and adjustment

▲CAUTION

- Confirm and adjust the program and each parameter before operation. Unpredictable movements may occur depending on the machine.
- Extreme adjustments and changes may lead to unstable operation, so never make them.
- When using the absolute position system function, on starting up, and when the Motion controller or absolute value motor has been replaced, always perform a home position return.
- Before starting test operation, set the parameter speed limit value to the slowest value, and make sure that operation can be stopped immediately by the forced stop, etc. if a hazardous state occurs.


(6) Usage methods

≜CAUTION

- Immediately turn OFF the power if smoke, abnormal sounds or odors are emitted from the Motion controller, servo amplifier or servomotor.
- Always execute a test operation before starting actual operations after the program or parameters have been changed or after maintenance and inspection.
- Do not attempt to disassemble and repair the units excluding a qualified technician whom our company recognized.
- Do not make any modifications to the unit.
- Keep the effect or electromagnetic obstacles to a minimum by installing a noise filter or by using wire shields, etc. Electromagnetic obstacles may affect the electronic devices used near the Motion controller or servo amplifier.
- When using the CE Mark-compliant equipment, refer to the User's manual for the Motion controllers and refer to the corresponding EMC guideline information for the servo amplifiers, inverters and other equipment.
- Use the units with the following conditions.

Item	Conditions
Input power	According to each instruction manual.
Input frequency	According to each instruction manual.
Tolerable momentary power failure	According to each instruction manual.

(7) Corrective actions for errors

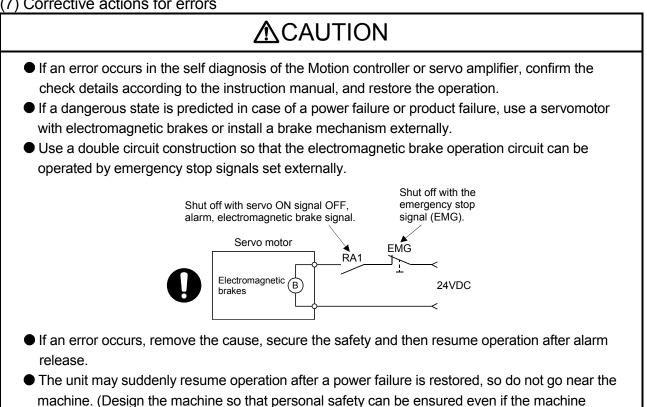

restarts suddenly.)

(8) Maintenance, inspection and part replacement

▲CAUTION

- Perform the daily and periodic inspections according to the instruction manual.
- Perform maintenance and inspection after backing up the program and parameters for the Motion controller and servo amplifier.
- Do not place fingers or hands in the clearance when opening or closing any opening.
- Periodically replace consumable parts such as batteries according to the instruction manual.
- Do not touch the lead sections such as ICs or the connector contacts.
- Before touching the module, always touch grounded metal, etc. to discharge static electricity from human body. Failure to do so may cause the module to fail or malfunction.
- Do not directly touch the module's conductive parts and electronic components. Touching them could cause an operation failure or give damage to the module.
- Do not place the Motion controller or servo amplifier on metal that may cause a power leakage or wood, plastic or vinyl that may cause static electricity buildup.
- Do not perform a megger test (insulation resistance measurement) during inspection.
- When replacing the Motion controller or servo amplifier, always set the new module settings correctly.
- When the Motion controller or absolute value motor has been replaced, carry out a home position return operation using one of the following methods, otherwise position displacement could occur.
 - 1) After writing the servo data to the Motion controller using programming software, switch on the power again, then perform a home position return operation.
 - 2) Using the backup function of the programming software, load the data backed up before replacement.
- After maintenance and inspections are completed, confirm that the position detection of the absolute position detector function is correct.
- Do not drop or impact the battery installed to the module. Doing so may damage the battery, causing battery liquid to leak in the battery. Do not use the dropped or impacted battery, but dispose of it.
- Do not short circuit, charge, overheat, incinerate or disassemble the batteries.
- The electrolytic capacitor will generate gas during a fault, so do not place your face near the Motion controller or servo amplifier.
- The electrolytic capacitor and fan will deteriorate. Periodically replace these to prevent secondary damage from faults. Replacements can be made by our sales representative.
- Lock the control panel and prevent access to those who are not certified to handle or install electric equipment.
- Do not burn or break a module and servo amplifier. Doing so may cause a toxic gas.

(9) About processing of waste

When you discard Motion controller, servo amplifier, a battery (primary battery) and other option articles, please follow the law of each country (area).

▲CAUTION

- This product is not designed or manufactured to be used in equipment or systems in situations that can affect or endanger human life.
- When considering this product for operation in special applications such as machinery or systems used in passenger transportation, medical, aerospace, atomic power, electric power, or submarine repeating applications, please contact your nearest Mitsubishi sales representative.
- Although this product was manufactured under conditions of strict quality control, you are strongly advised to install safety devices to forestall serious accidents when it is used in facilities where a breakdown in the product is likely to cause a serious accident.

(10) General cautions

All drawings provided in the instruction manual show the state with the covers and safety partitions removed to explain detailed sections. When operating the product, always return the covers and partitions to the designated positions, and operate according to the instruction manual.

REVISIONS

* The manual number is given on the bottom left of the back cover.

Print Date	* Manual Number	* The manual number is given on the bottom left of the back cover. Revision
Sep., 2007	IB(NA)-0300136-A	
Nov., 2007	IB(NA)-0300136-B	
1000., 2009	ID(INA)-0300130-D	MR-J3W- \Box B, MR-J3- \Box B-RJ080W, MR-J3- \Box BS
		[Additional correction/partial correction]
		Safety precautions, About Manuals, Restrictions by the software's
		version or serial number, Servo amplifier display servo error code
		(#8008+20), Amplifier-less operation status flag (SM508), SSCNET
		control (Status_SD508), SSCNET control (Command_SD803),
		Advanced S-curve acceleration/deceleration, Error code list, Warranty
Sep., 2011	IB(NA)-0300136-C	[Additional model]
cop., <u>_</u> o : :		Q173DCPU-S1, Q172DCPU-S1, GX Works2, MR Configurator2
		[Additional function]
		External input signal (DOG) of servo amplifier, Home position return of
		scale home position signal detection type
		[Additional correction/partial correction]
		Safety precautions, About Manuals, Restrictions by the software's
		version, Error code list
Mar., 2012	IB(NA)-0300136-D	[Additional model]
		Q173DSCPU, Q172DSCPU, MR-J4-⊡B, MR-J4W-⊡B
		[Additional function]
		Stroke limit invalid setting, Rapid stop deceleration time setting error
		invalid, Expansion parameters, Speed-torque control
		[Additional correction/partial correction]
		About Manuals, Manual Page Organization, Restrictions by the
		software's version, Programming software version, PI-PID switching
		command (M3217+20n), Parameter error No. (#8009+20n), Servo
		status1 (#8010+20n), Servo status2 (#8011+20n), Servo status3
		(#8012+20n), Maximum Motion operation cycle (SD524), System
		setting error information (SD550, SD551), Torque limit function, Error
Con 2012		code list, Processing times of the Motion CPU
Sep., 2012	IB(NA)-0300136-E	[Additional function] Advanced synchronous control
		[Additional correction/partial correction]
		About Manuals, Restrictions by the software's version, Programming
		software version, Positioning dedicated devices (Internal relays
		(M8192 to M12063), Data registers (D8192 to D19823)), External
		forced stop input ON latch flag (SM506), Operation method (SD560),
		Error code list, Processing times of the Motion CPU
Apr., 2013	IB(NA)-0300136-F	[Additional function]
		Acceleration/deceleration time change function, Home position return
		by the dogless home position signal reference type
		[Additional correction/partial correction]
		About Manuals, Restrictions by the software's version, Error code list,
		Processing times of the Motion CPU

Print Date	* Manual Number	Revision
Nov., 2013	IB(NA)-0300136-G	[Additional function] Compatible with servo driver VCII series manufactured by Nikki Denso Co., Ltd., compatible with inverter FR-A700 series [Additional correction/partial correction] Safety precautions, Restrictions by the software's version, Error code list

Japanese Manual Number IB(NA)-0300128

This manual confers no industrial property rights or any rights of any other kind, nor does it confer any patent licenses. Mitsubishi Electric Corporation cannot be held responsible for any problems involving industrial property rights which may occur as a result of using the contents noted in this manual.

© 2007 MITSUBISHI ELECTRIC CORPORATION

INTRODUCTION

Thank you for choosing the Mitsubishi Motion controller Q173D(S)CPU/Q172D(S)CPU. Before using the equipment, please read this manual carefully to develop full familiarity with the functions and performance of the Motion controller you have purchased, so as to ensure correct use.

CONTENTS

Safety Precautions	A- 1
Revisions	A-11
Contents	A-13
About Manuals	A-17
Manual Page Organization	A-19
1. OVERVIEW	1- 1 to 1-12
1.1 Overview	1- 1
1.2 Features	
1.2.1 Performance Specifications	
1.3 Restrictions by the Software's Version	
1.4 Programming Software Version	
2. POSITIONING CONTROL BY THE MOTION CPU	2- 1 to 2-14
2.1 Positioning Control by the Motion CPU	2- 1
3. POSITIONING DEDICATED SIGNALS	3- 1 to 3-72
3.1 Internal Relays	3-3
3.1.1 Axis statuses	
3.1.2 Axis command signals	
3.1.3 Common devices	
3.2 Data Registers	
3.2.1 Axis monitor devices	
3.2.2 Control change registers	
3.2.3 Common devices	
3.3 Motion Registers(#)	
3.4 Special Relays (SM)	
3.5 Special Registers (SD)	
4. PARAMETERS FOR POSITIONING CONTROL	4- 1 to 4-42
4.1 System Settings	
4.2 Fixed Parameters	
4.2.1 Number of pulses/travel value per rotation	

4.2.2 Backlash compensation amount	4- 6
4.2.3 Upper/lower stroke limit value	
4.2.4 Command in-position range	4-10
4.2.5 Speed control 10×multiplier setting for degree axis	4-11
4.3 Parameter Block	4-14

4.3.1 Relationships between the speed limit value, acceleration time, deceleration time and rap	oid stop
deceleration time	4-18
4.3.2 S-curve ratio	4-20
4.3.3 Advanced S-curve acceleration/deceleration	4-21
4.3.4 Allowable error range for circular interpolation	
4.4 Expansion Parameters	4-36
4.4.1 Positive direction torque limit value monitor device/negative direction torque limit value m	onitor
device	
4.4.2 Acceleration/deceleration time change parameter	4-40

5. SERVO PROGRAMS FOR POSITIONING CONTROL

5.1 Servo Program Composition Area	1
5.1.1 Servo program composition	1
5.1.2 Servo program area	2
5.2 Servo Instructions	
5.3 Positioning Data	6
5.4 Setting Method for Positioning Data	22
5.4.1 Setting method by specifying numerical values5-2	22
5.4.2 Indirect setting method by devices	23

6. POSITIONING CONTROL

6.1 Basics of Positioning Control	
6.1.1 Positioning speed	
6.1.2 Positioning speed at the interpolation control	6- 2
6.1.3 Control units for 1 axis positioning control	6- 7
6.1.4 Control units for interpolation control	6- 7
6.1.5 Control in the control unit "degree"	6- 9
6.1.6 Stop processing and restarting after stop	6-12
6.1.7 Acceleration/deceleration processing	6-18
6.2 1 Axis Linear Positioning Control	6-22
6.3 2 Axes Linear Interpolation Control	6-25
6.4 3 Axes Linear Interpolation Control	6-30
6.5 4 Axes Linear Interpolation Control	6-36
6.6 Auxiliary Point-Specified Circular Interpolation Control	6-41
6.7 Radius-Specified Circular Interpolation Control	6-46
6.8 Central Point-Specified Circular Interpolation Control	6-52
6.9 Helical Interpolation Control	6-58
6.9.1 Circular interpolation specified method by helical interpolation	6-59
6.10 1 Axis Fixed-Pitch Feed Control	6-79
6.11 Fixed-Pitch Feed Control Using 2 Axes Linear Interpolation	6-83
6.12 Fixed-Pitch Feed Control Using 3 Axes Linear Interpolation	6-87
6.13 Speed Control (I)	6-91
6.14 Speed Control (II)	6-96
6.15 Speed/Position Switching Control	6-99
6.15.1 Speed/position switching control start	6-99
6.15.2 Re-starting after stop during control	6-107
6.16 Speed-Switching Control	6-112

5- 1 to 5-26

6- 1 to 6-256

6.16.1 Speed-switching control start, speed-switching points and end specification	6-112
6.16.2 Specification of speed-switching points using repetition instructions	6-118
6.17 Constant-Speed Control	6-124
6.17.1 Specification of pass points by repetition instructions	6-128
6.17.2 Speed-switching by instruction execution	6-133
6.17.3 1 axis constant-speed control	6-138
6.17.4 2 to 4 axes constant-speed control	6-142
6.17.5 Constant speed control for helical interpolation	6-149
6.17.6 Pass point skip function	6-154
6.17.7 FIN signal wait function	6-156
6.18 Position Follow-Up Control	6-166
6.19 Speed Control with Fixed Position Stop	6-173
6.20 Simultaneous Start	6-178
6.21 JOG Operation	6-181
6.21.1 JOG operation data	6-181
6.21.2 Individual start	6-182
6.21.3 Simultaneous start	6-187
6.22 Manual Pulse Generator Operation	6-190
6.23 Home Position Return	6-196
6.23.1 Home position return data	
6.23.2 Home position return by the proximity dog type 1	6-207
6.23.3 Home position return by the proximity dog type 2	6-210
6.23.4 Home position return by the count type 1	6-212
6.23.5 Home position return by the count type 2	6-214
6.23.6 Home position return by the count type 3	6-216
6.23.7 Home position return by the data set type 1	6-218
6.23.8 Home position return by the data set type 2	6-219
6.23.9 Home position return by the dog cradle type	6-220
6.23.10 Home position return by the stopper type 1	
6.23.11 Home position return by the stopper type 2	6-227
6.23.12 Home position return by the limit switch combined type	
6.23.13 Home position return by the scale home position signal detection type	6-231
6.23.14 Home position return by the dogless home position signal reference type	6-234
6.23.15 Home position return retry function	
6.23.16 Home position shift function	6-245
6.23.17 Condition selection of home position set	6-249
6.23.18 Servo program for home position return	
6.24 High-Speed Oscillation	6-254

7. AUXILIARY AND APPLIED FUNCTIONS

7.1 M-code Output Function	7- 1
7.2 Backlash Compensation Function	
7.3 Torque Limit Function	7- 6
7.4 Skip Function in which Disregards Stop Command	7- 9
7.5 Cancel of the Servo Program	7-11
7.5.1 Cancel/start	7-12
7.6 Synchronous Encoder	7-13
7.7 Speed-Torque Control	7-14

7- 1 to 7-48

7.7.1 Speed-torque control data	7-16
7.7.2 Operation of speed-torque control	
7.8 Acceleration/Deceleration Time Change Function	7-42

APPENDICES

APP-1 to APP-104

APPENDIX 1 Error Codes Stored Using the Motion CPU	APP- 1
APPENDIX 1.1 Servo program setting errors (Stored in SD517)	APP- 3
APPENDIX 1.2 Minor errors	APP- 8
APPENDIX 1.3 Major errors	APP-26
APPENDIX 1.4 Servo errors	APP-31
APPENDIX 2 Example Programs	APP-66
APPENDIX 2.1 Reading M-code	APP-66
APPENDIX 2.2 Reading error code	APP-67
APPENDIX 3 Setting Range for Indirect Setting Devices	APP-68
APPENDIX 4 Processing Times of the Motion CPU	APP-70
APPENDIX 5 Device List	APP-73
APPENDIX 6 Compatible Devices with SSCNET	APP-84
APPENDIX 6.1 Servo driver VCI series manufactured by Nikki Denso Co., Ltd	APP-84
APPENDIX 6.2 Inverter FR-A700 series	APP-95

About Manuals

The following manuals are also related to this product.

In necessary, order them by quoting the details in the tables below.

Related Manuals

(1) Motion controller

Manual Name	Manual Number (Model Code)
Q173D(S)CPU/Q172D(S)CPU Motion controller User's Manual This manual explains specifications of the Motion CPU modules, Q172DLX Servo external signal interface module, Q172DEX Synchronous encoder interface module, Q173DPX Manual pulse generator interface module, Power supply modules, Servo amplifiers, SSCNETIL cables and Synchronous encoder, and the maintenance/inspection for the system, trouble shooting and others.	IB-0300133 (1XB927)
Q173D(S)CPU/Q172D(S)CPU Motion controller Programming Manual (COMMON) This manual explains the Multiple CPU system configuration, performance specifications, common parameters, auxiliary/applied functions, error lists and others.	IB-0300134 (1XB928)
Q173D(S)CPU/Q172D(S)CPU Motion controller (SV13/SV22) Programming Manual (Motion SFC) This manual explains the functions, programming, debugging, error lists for Motion SFC and others.	IB-0300135 (1XB929)
Q173D(S)CPU/Q172D(S)CPU Motion controller (SV13/SV22) Programming Manual (REAL MODE) This manual explains the servo parameters, positioning instructions, device lists, error lists and others.	IB-0300136 (1XB930)
Q173D(S)CPU/Q172D(S)CPU Motion controller (SV22) Programming Manual (VIRTUAL MODE) This manual explains the dedicated instructions to use the synchronous control by virtual main shaft, mechanical system program create mechanical module, servo parameters, positioning instructions, device lists, error lists and others.	IB-0300137 (1XB931)
Q173DSCPU/Q172DSCPU Motion controller (SV22) Programming Manual (Advanced Synchronous Control) This manual explains the dedicated instructions to use the synchronous control by synchronous control parameters, device lists, error lists and others.	IB-0300198 (1XB953)
Q173D(S)CPU/Q172D(S)CPU Motion controller Programming Manual (Safety Observation) This manual explains the details, safety parameters, safety sequence program instructions, device lists and error lists and others for safety observation function by Motion controller.	IB-0300183 (1XB945)
Motion controller Setup Guidance (MT Developer2 Version1) This manual explains the items related to the setup of the Motion controller programming software MT Developer2.	IB-0300142 ()

(2) PLC

Manual Name	Manual Number (Model Code)
QCPU User's Manual (Hardware Design, Maintenance and Inspection) This manual explains the specifications of the QCPU modules, power supply modules, base units, extension cables, memory card battery, and the maintenance/inspection for the system, trouble shooting, error codes and others.	SH-080483ENG (13JR73)
QnUCPU User's Manual (Function Explanation, Program Fundamentals) This manual explains the functions, programming methods and devices and others to create programs with the QCPU.	SH-080807ENG (13JZ27)
QCPU User's Manual (Multiple CPU System) This manual explains the Multiple CPU system overview, system configuration, I/O modules, communication between CPU modules and communication with the I/O modules or intelligent function modules.	SH-080485ENG (13JR75)
QnUCPU User's Manual (Communication via Built-in Ethernet Port) This manual explains functions for the communication via built-in Ethernet port of the CPU module.	SH-080811ENG (13JZ29)
MELSEC-Q/L Programming Manual (Common Instruction) This manual explains how to use the sequence instructions, basic instructions, application instructions and micro computer program.	SH-080809ENG (13JW10)
MELSEC-Q/L/QnA Programming Manual (PID Control Instructions) This manual explains the dedicated instructions used to exercise PID control.	SH-080040 (13JF59)
MELSEC-Q/L/QnA Programming Manual (SFC) This manual explains the system configuration, performance specifications, functions, programming, debugging, error codes and others of MELSAP3.	SH-080041 (13JF60)
I/O Module Type Building Block User's Manual This manual explains the specifications of the I/O modules, connector, connector/terminal block conversion modules and others.	SH-080042 (13JL99)
MELSEC-L SSCNETII/H Head Module User's Manual This manual explains specifications of the head module, procedures before operation, system configuration, installation, wiring, settings, and troubleshooting.	SH-081152ENG (13JZ78)

(3) Servo amplifier

Manual Name	Manual Number (Model Code)	
SSCNETII/H interface MR-J4- B Servo amplifier Instruction Manual This manual explains the I/O signals, parts names, parameters, start-up procedure and others for MR-J4- B Servo amplifier.	SH-030106 (1CW805)	
SSCNETII/H interface Multi-axis AC Servo MR-J4W-DB Servo amplifier Instruction Manual This manual explains the I/O signals, parts names, parameters, start-up procedure and others for Multi-axis AC Servo MR-J4WD-DB Servo amplifier.	SH-030105 (1CW806)	
SSCNETII interface MR-J3-□B Servo amplifier Instruction Manual This manual explains the I/O signals, parts names, parameters, start-up procedure and others for MR-J3-□B Servo amplifier.	SH-030051 (1CW202)	
SSCNETII interface 2-axis AC Servo Amplifier MR-J3W-□B Servo amplifier Instruction Manual This manual explains the I/O signals, parts names, parameters, start-up procedure and others for 2-axis AC Servo Amplifier MR-J3W-□B Servo amplifier.	SH-030073 (1CW604)	
SSCNETII Compatible Linear Servo MR-J3-DB-RJ004 Instruction Manual This manual explains the I/O signals, parts names, parameters, start-up procedure and others for Linear Servo MR-J3-DB-RJ004 Servo amplifier.	SH-030054 (1CW943)	
SSCNETII Compatible Fully Closed Loop Control MR-J3-□B-RJ006 Servo amplifier Instruction Manual This manual explains the I/O signals, parts names, parameters, start-up procedure and others for Fully Closed Loop Control MR-J3-□B-RJ006 Servo amplifier.	SH-030056 (1CW304)	
SSCNETII Interface Direct Drive Servo MR-J3-□B-RJ080W Servo amplifier Instruction Manual This manual explains the I/O signals, parts names, parameters, start-up procedure and others for Direct Drive Servo MR-J3-□B-RJ080W Servo amplifier.	SH-030079 (1CW601)	
SSCNETI interface Drive Safety integrated MR-J3- B Safety Servo amplifier Instruction Manual This manual explains the I/O signals, parts names, parameters, start-up procedure and others for safety integrated MR-J3- B Safety Servo amplifier.	SH-030084 (1CW205)	

Manual Page Organization

The symbols used in this manual are shown below.

	Symbol	Description
Γ	QDS	Symbol that indicates correspondence to only Q173DSCPU/Q172DSCPU.
	QD	Symbol that indicates correspondence to only Q173DCPU(-S1)/Q172DCPU(-S1).

MEMO

1. OVERVIEW

1.1 Overview

This programming manual describes the positioning control parameters, positioning dedicated devices and positioning method required to execute positioning control in the Motion controller (SV13/22 real mode).

The following positioning control is possible in the Motion controller (SV13/22 real mode).

Applicable CPU	Number of positioning control axes	
Q173DSCPU		
Q173DCPU (-S1)	Up to 32 axes	
Q172DSCPU	Up to 16 axes	
Q172DCPU (-S1)	Up to 8 axes	

In this manual, the following abbreviations are used.

Generic term/Abbreviation	Description
Q173D(S)CPU/Q172D(S)CPU or	Q173DSCPU/Q172DSCPU/Q173DCPU/Q172DCPU/Q173DCPU-S1/
Motion CPU (module)	Q172DCPU-S1 Motion CPU module
	Q172DLX Servo external signals interface module/
Q172DLX/Q172DEX/Q173DPX/	Q172DEX Synchronous encoder interface module ^(Note-1) /
Q173DSXY or Motion module	Q173DPX Manual pulse generator interface module/
	Q173DSXY Safety signal module
MR-J4(W)-□B	Servo amplifier model MR-J4-□B/MR-J4W-□B
MR-J3(W)-□B	Servo amplifier model MR-J3-□B/MR-J3W-□B
AMP or Servo amplifier	General name for "Servo amplifier model MR-J4-⊡B/MR-J4W-⊡B/MR-J3-⊡B/ MR-J3W-⊡B"
QCPU, PLC CPU or PLC CPU module	QnUD(E)(H)CPU/QnUDVCPU
Multiple CPU system or Motion system	Abbreviation for "Multiple PLC system of the Q series"
CPUn	Abbreviation for "CPU No.n (n= 1 to 4) of the CPU module for the Multiple CPU system"
Operating system software	General name for "SW7DNC-SV□Q□/SW8DNC-SV□Q□"
SV13	Operating system software for conveyor assembly use (Motion SFC) : SW8DNC-SV13Q□
SV22	Operating system software for automatic machinery use (Motion SFC) : SW8DNC-SV22Q□
Programming software package	General name for MT Developer2/GX Works2/GX Developer/MR Configurator
MELSOFT MT Works2	Abbreviation for "Motion controller engineering environment MELSOFT MT Works2"
MT Developer2 ^(Note-2)	Abbreviation for "Motion controller programming software MT Developer2 (Version 1.00A or later)"
GX Works2 Abbreviation for "Programmable controller engineering software MELSOFT GX Works2 (Version 1.15R or later)"	
GX Developer	Abbreviation for "MELSEC PLC programming software package GX Developer (Version 8.48A or later)"
MR Configurator□ ^(Note-2)	General name for "MR Configurator/MR Configurator2"

Generic term/Abbreviation	Description
MR Configurator	Abbreviation for "Servo setup software package MR Configurator (Version C0 or later)"
MR Configurator2	Abbreviation for "Servo setup software package MR Configurator2 (Version 1.01B or later)"
Serial absolute synchronous encoder or Q171ENC-W8/Q170ENC	Abbreviation for "Serial absolute synchronous encoder (Q171ENC-W8/Q170ENC)"
SSCNETI/H ^(Note-3) SSCNETII ^(Note-3)	High speed synchronous network between Motion controller and servo amplifier
SSCNETII(/H) ^(Note-3)	General name for SSCNETII/H, SSCNETII
Absolute position system	General name for "system using the servomotor and servo amplifier for absolute position"
Battery holder unit	Battery holder unit (Q170DBATC)
Intelligent function module	General name for module that has a function other than input or output, such as A/D converter module and D/A converter module.
SSCNETI/H head module ^(Note-3)	Abbreviation for "MELSEC-L series SSCNETII/H head module (LJ72MS15)"

(Note-1): Q172DEX can be used in SV22.

(Note-2): This software is included in Motion controller engineering environment "MELSOFT MT Works2". (Note-3): SSCNET: <u>Servo System Controller NET</u>work REMARK

For information about each module, design method for program and parameter, refer to the following manuals relevant to each module.

Item		Reference Manual	
Motion CPU module/Motion unit		Q173D(S)CPU/Q172D(S)CPU Motion controller User's Manual	
PLC CPU, peripheral devices for sequence program design, I/O modules and intelligent function module		Manual relevant to each module	
Operation met	hod for MT Developer2	Help of each software	
SV13/SV22	 Multiple CPU system configuration Performance specification Design method for common parameter Auxiliary and applied functions (common) Design method for Motion SFC program Design method for Motion SFC parameter Motion dedicated PLC instruction Design method for safety observation parameter 	Q173D(S)CPU/Q172D(S)CPU Motion controller Programming Manual (COMMON) Q173D(S)CPU/Q172D(S)CPU Motion controller (SV13/SV22) Programming Manual (Motion SFC) Q173D(S)CPU/Q172D(S)CPU Motion controller	
	Design method for user made safety sequence program	Programming Manual (Safety Observation)	
SV22	Design method for mechanical system	Q173D(S)CPU/Q172D(S)CPU Motion controller (SV22)	
(Virtual mode)	program	Programming Manual (VIRTUAL MODE)	
SV22			
(Advanced synchronous control)	Design method for synchronous control parameter	Q173DSCPU/Q172DSCPU Motion controller (SV22) Programming Manual (Advanced Synchronous Control)	

- When designing the system, provide external protective and safety circuits to ensure safety in the event of trouble with the Motion controller.
- There are electronic components which are susceptible to the effects of static electricity mounted on the printed circuit board. When handling printed circuit boards with bare hands you must ground your body or the work bench.
- Do not touch current-carrying or electric parts of the equipment with bare hands.
- Make parameter settings within the ranges stated in this manual.
- Use the program instructions that are used in programs in accordance with the conditions stipulated in this manual.
- Some devices for use in programs have fixed applications: they must be used in accordance with the conditions stipulated in this manual.

1.2 Features

1.2.1 Performance Specifications

(1) Motion control specifications

	(1)		•	047000011/040	047000011/01/
Item		Q173DSCPU	Q172DSCPU	Q173DCPU(-S1)	Q172DCPU(-S1)
Number of control ax	sv13	Up to 32 axes 0.22ms/ 1 to 4 axes 0.44ms/ 5 to 10 axes 0.88ms/ 11 to 24 axes 1.77ms/25 to 32 axes	Up to 16 axes 0.22ms/ 1 to 4 axes 0.44ms/ 5 to 10 axes 0.88ms/ 11 to 16 axes	Up to 32 axes 0.44ms/ 1 to 6 axes 0.88ms/ 7 to 18 axes 1.77ms/19 to 32 axes	Up to 8 axes 0.44ms/ 1 to 6 axes 0.88ms/ 7 to 8 axes
Operation cycle (default)	SV22	0.44ms/ 1 to 6 axes 0.88ms/ 7 to 16 axes 1.77ms/17 to 32 axes	0.44ms/ 1 to 6 axes 0.88ms/ 7 to 16 axes	0.44ms/ 1 to 4 axes 0.88ms/ 5 to 12 axes 1.77ms/13 to 28 axes 3.55ms/29 to 32 axes	0.44ms/ 1 to 4 axes 0.88ms/ 5 to 8 axes
Interpolation function	s	Linear		s), Circular interpolation (2 lation (3 axes)	axes),
Control modes		PTP(Point to Point) control, Speed control, Speed-position control, Fixed-pitch feed, Constant speed control, Position follow-up control, Speed control with fixed position stop, Speed switching control, High-speed oscillation control, Speed-torque control, Synchronous control (SV22 (Virtual mode switching method/Advanced synchronous control method))		PTP(Point to Point) control, Speed control, Speed-position control, Fixed-pitch feed, Constant speed control, Position follow-up control, Speed control with fixed position stop, Speed switching control, High-speed oscillation control, Synchronous control (SV22)	
Acceleration/deceleration/	ation control	Trapezoidal acceleration/deceleration.			
Compensation		Backlash	compensation, Electronic	gear, Phase compensation (SV22)	
Programming langua	ige	Motion SFC, Dedicated instruction, Mechanical support language (SV22) (Note-1)		Motion SFC, Dedicated instruction, Mechanical support language (SV22)	
Servo program capa	city			steps	
Number of positionin	g points	32	00 points (Positioning data	can be designated indirec	tly)
Peripheral I/F		USB/RS-232/Ethernet (Via PLC CPU) PERIPHERAL I/F (Motion CPU)		USB/RS-232/Ethernet (Via PLC CPU) PERIPHERAL I/F (Motion CPU) (Note-2)	
Home position return function Proximity dog type (2 types), Count type (3 type) Data set type (2 types), Dog cradle type, Stopper type (2 types), Limit switch combined type, Scale home position signal detection type Dogless home position signal reference type		es), Dog cradle type, Limit switch combined on signal detection type, o signal reference type	Proximity dog type (2 type Data set type (2 type Stopper type (2 types), type, Scale home positi	es), Count type (3 types), es), Dog cradle type, Limit switch combined on signal detection type	
		Home position	, ,	ded, home position shift fur	nction provided
JOG operation functi Manual pulse genera operation function		Prov Possible to connect 3 modules (Q173DPX use) Possible to connect 1 module (Built-in interface in Motion CPU use) ^(Note-3)		Possible to connect 3 m	nodules (Q173DPX use)
Synchronous encode function ^(Note-4)	er operation	Possible to connect 1 (Q172DEX + Q173DP Motion CPU + V + Via servo amplif	X + Built-in interface in ia device ^(Note-5)	Possible to connect 12 modules (SV22 use) (Q172DEX + Q173DPX)	Possible to connect 8 modules (SV22 use) (Q172DEX + Q173DPX)
M-code function				on provided	

lte	Item Q173DSCPU Q172DSCPU Q173DCPU(-S1) Q172DCPL				Q172DCPU(-S1)	
01/40		Number of output points 32 points				
	SV13	Watch data: Motion control data/Word device				
		Virtual mode switching me	ethod:			
Limit switch outp	out	Number of output points 32 points				
function	SV/22	Advanced synchronous control method:		Number of outpu	t points 32 points	
	SV22	Number of output points 64 points × 2 settings		Watch data: Motion control data/Word device		
		Output timing compensation				
		Watch data: Motion control	ol data/Word device			
ROM operation	function	Provided				
Multiple CPU sy control ^(Note-5)	nchronous	Prov	ided	Nc	None	
		Q172DLX, External input	signals (FLS/RLS/DOG)			
External input si	gnal	of servo		Q172DLX or Exte		
	-	Built-in interface in Moti	on CPU (DI), Bit device	(FLS/RLS/DOG)	of servo amplifier	
		Prov	ided			
High-speed read	ling function	(Via built-in interfa	ce in Motion CPU,	Prov		
(Note-7)		Via input	module,	· ·	e, Via tracking of	
		Via tracking of Q1	72DEX/Q173DPX)	Q172DEX/	Q173DPX)	
		Moti	on controller forced stop (E	MI connector, System set	ting),	
Forced stop			Forced stop termina	al of servo amplifier		
		Total 25	6 points	Total 25	6 pointo	
Number of I/O p	oints	(Built-in interface in Motio	on CPU (Input 4 points) +		6 points odule)	
		I/O module + Intellig	ent function module)	(1011)	odule)	
	Mark datastian	Continuous de	etection mode,			
	Mark detection mode setting	Specified number	of detection mode,			
		Ring buf	fer mode			
Mark detection	Mark detection	Built-in interface in Motion CPU (4 points), None		ıe		
function	signal	Bit device, DOG/CHAN	GE signal of Q172DLX	_X		
	Mark detection setting	32 se	ttings			
Clock function			Provided			
Oit. f		Prov	rided	Prov	rided	
Security function	1	(Protection by software security key or password)		(Protection b	y password)	
All clear function	1		Prov	ided		
Remote operation	on		Remote RUN/STOP	, Remote latch clear		
•		Up to 6 d				
Optional data	SSCNET <u>I</u> I/H	(Communication data	a: Up to 6 points/axis)	NC	ne	
monitor			Up to 3 c	lata/axis		
function	SSCNET		(Communication data	: Up to 3 points/axis)		
		Motion buffering method		Motion buffering method		
Digital oscillosco	pe function	(Real-time waveform can be displayed)		(Real-time waveform can be displayed)		
U		Sampling data: Word 16CH, Bit 16CH		Sampling data: Word 4CH, Bit 8CH		
AL 1.4			Made compatible by setting			
Absolute position system (Possible to select the absolute data method or incremental method for each ax						
SSCNET	Communication method			SSCNETI		
communication (Note-8)	Number of lines	2 lines (Note-9)	1 line ^(Note-9)	2 lines	1 line	
Driver communication function (Note-10)		Provided		None		

Motion control specifications (continued)

Item		Q173DSCPU Q172DSCPU Q173DCPU(-S1)			Q172DCPU(-S1)
Nhumber of	Q172DLX	4 modules usable	2 modules usable	4 modules usable	1 module usable
Motion related	Q172DEX	6 modules usable			4 modules usable
	Q173DPX	4 modules usable (Note-11)			3 modules usable (Note-11)
		Up to 8 stations usable (Up to 4 stations/line)	Up to 4 stations usable	Unu	sable

Motion control specifications (continued)

(Note-1): SV22 virtual mode only

(Note-2): Q173DCPU-S1/Q172DCPU-S1 only

(Note-3): When the manual pulse generator is used via the built-in interface in Motion CPU, the Q173DPX cannot be used.

(Note-4): Any incremental synchronous encoder connected to the built-in interface in Motion CPU will automatically be assigned an Axis No. one integer greater than the number of encoders connected to any Q172DEX modules and Q173DPX modules.

(Note-5): SV22 advanced synchronous control only

(Note-6): Servo amplifier (MR-J4-DB-RJ) only

(Note-7): This cannot be used in SV22 advanced synchronous control.

(Note-8): The servo amplifiers for SSCNET cannot be used.

(Note-9): SSCNETI and SSCNETI/H cannot be combined in the same line.

For Q173DSCPU, SSCNETI or SSCNETI/H can be set every line.

(Note-10): Servo amplifier (MR-J3-□B/MR-J4-□B) only.

(Note-11): When using the incremental synchronous encoder (SV22 use), you can use above number of modules.

When connecting the manual pulse generator, you can use only 1 module.

MEMO

1.3 Restrictions by the Software's Version

There are restrictions in the function that can be used by the version of the operating system software and programming software. The combination of each version and a function is shown in Table1.1.

	Operating system softw	are version (Note-1), (Note-2)	
Function	Q173DSCPU/Q172DSCPU	Q173DCPU(-S1)/Q172DCPU(-S1)	
Checking Motion controller's serial number and operating system software version in GX Developer	_	00D	
Advanced S-curve acceleration/deceleration			
(Except constant-speed control (CPSTART) of servo		00H	
program.)			
Direct drive servo		00H	
MR-J3-□B-RJ080W	—	UOH	
Servo amplifier display servo error code (#8008+20n)	_	00H	
0.44ms fixed-cycle event task	_	00H	
444µs coasting timer (SD720, SD721)	_	00H	
Synchronous encoder current value monitor in real mode	_	00H	
Display of the past ten times history in current value history	_	00H	
monitor		0011	
Amplifier-less operation		00H	
Servo instruction (Home position return (ZERO), high			
speed oscillation (OSC)) and manual pulse generator	—	00H	
operation in mixed function of virtual mode/real mode			
Advanced S-curve acceleration/deceleration in constant-		00K	
speed control (CPSTART) of servo program.			
External input signal (DOG) of servo amplifier in home			
position return of count type and speed/position switching	—	00G	
		0011	
Communication via PERIPHERAL I/F		00H	
Motion SFC operation control instruction	_	00L	
Type conversion (DFLT, SFLT)			
Vision system dedicated function (MVOPEN, MVLOAD,		00L	
MVTRG, MVPST, MVIN, MVFIN, MVCLOSE, MVCOM)			
Home position return of scale home position signal detection type	_	00L	
Real time display function in digital oscilloscope function		00N	

Programming software version				
MELSOFT MT Work	ks2 (MT Developer2)	MR Configurator2	MR Configurator	Section of reference
Q173DSCPU/Q172DSCPU	Q173DCPU(-S1)/Q172DCPU(-S1)	Wit Conliguratorz	Witt Conliguration	
_	_	_	_	(Note-2)
1.39R	1.06G	_	_	Section 4.3.3 Section 6.1.7
1.39R	1.06G	1.01B	C2	
_	_	—	—	Section 3.3
1.39R	1.06G			(Note-3)
_	_			(Note-5)
	_	_	_	(Note-4)
1.39R	1.06G	_	—	(Note-5)
_	_	_	_	(Note-5)
1.39R	1.09K	_	_	(Note-4)
1.39R	1.09K	—	—	Section 6.17.3 Section 6.17.4
1.39R	1.15R	_	_	
1.39R	1.15R	—	—	(Note-5)
1.39R	1.15R	—	—	(Note-3)
 1.39R	1.15R	_	_	(Note-3)
1.39R	1.15R	_	_	Section 6.23.13
 1.39R	1.17T	_	_	

—: There is no restriction by the version.

(Note-1): SV13/SV22 is the completely same version.

(Note-2): The operating system software version can be confirmed in the operating system software (CD-ROM), MT Developer2 or

GX Works2/GX Developer. (Refer to "Q173D(S)CPU/Q172D(S)CPU Motion controller Programming Manual (COMMON) Section 1.3, 1.4".)

(Note-3): Q173D(S)CPU/Q172D(S)CPU Motion controller (SV13/SV22) Programming Manual (Motion SFC)

(Note-4): Q173D(S)CPU/Q172D(S)CPU Motion controller (SV22) Programming Manual (VIRTUAL MODE)

(Note-5): Q173D(S)CPU/Q172D(S)CPU Motion controller Programming Manual (COMMON)

(Note-6): Q173D(S)CPU/Q172D(S)CPU Motion controller Programming Manual (Safety Observation)

(Note-7): Q173DSCPU/Q172DSCPU Motion controller (SV22) Programming Manual (Advanced Synchronous Control)

		Operating system softw	vare version (Note-1), (Note-2)	
Function		Q173DSCPU/Q172DSCPU	Q173DCPU(-S1)/Q172DCPU(-S1)	
Rapid stop deceleration time setting error	invalid function	_	00S	
Vision system dedicated function (MVOU	T)		00S	
Motion SFC operation control instruction Program control (IF - ELSE - IEND, SELE SEND, FOR -NEXT, BREAK)	ECT -CASE -	_	00R	
Display format depending on the error set information of motion error history device	0		00S	
Product information list device (#8736 to #	#8751)		00S	
Safety observation function			00S	
Feed current value update command (M3 speed control (I)	212+20n) valid in	00B	Not support	
External forced stop input ON latch (SM50	,06)	00B	00S	
Operation method (SD560)		00B	Not support	
Advanced synchronous control		00B	Not support	
Limit switch output function expansion		00B	Not support	
Driver communication function (SSCNET)	Ш)	00C	Not support	
Intelligent function module support		00C	Not support	
SSCNETI/H head module connection		00C	Not support	
Cam auto-generation (CAMMK) easy stro	oke ratio cam	00C	Not support	
Acceleration/deceleration time change fur	nction	00C	Not support	
Home position return of dogless home position signal reference type		00C	Not support	
Setting range expansion of backlash compensation amount		00C	Not support	
Multiple CPU synchronous control		00C	Not support	
Cam axis length per cycle change during control	synchronous	00C	Not support	
Servo driver VCI series	SSCNET		00L	
manufactured by Nikki Denso Co., Ltd.	SSCNETI/H	00D	Not support	
Inverter FR-A700 series				
Synchronous encoder via servo amplifier		00D	Not support	
Driver communication function (SSCNET)	Ш/Н)	00D	Not support	

Table 1.1 Restrictions by the Software's Version (continued)

	Programming software version			
MELSOFT MT Wo	rks2 (MT Developer2)	MR Configurator2	MR Configurator	Section of reference
Q173DSCPU/Q172DSCPU	Q173DCPU(-S1)/Q172DCPU(-S1)	WIN Conliguratorz	MIX Conliguiator	
_	_	_		Section 4.3.1
1.39R	1.39R	—		(Note-3)
1.39R	1.39R	_	_	(Note-3)
_	_	_		(Note-3)
_	_	_	_	Section 3.3
1.39R	1.39R		_	(Note-6)
_	Not support	_	_	Section 6.13
_	_	—	_	(Note-5)
_	Not support	—	_	(Note-5)
1.47Z	Not support	_	_	(Note-7)
1.47Z	Not support	_	_	(Note-5)
_	Not support	_	_	(Note-5)
1.56J	Not support	_	_	(Note-5)
1.56J	Not support	—		(Note-5)
1.56J	Not support	—		(Note-3)
1.56J	Not support	—		Section 7.8
1.56J	Not support	_	—	Section 6.23.14
1.56J	Not support	_	_	Section 7.2
1.56J	Not support	_	_	(Note-7)
1.56J	Not support	_	_	(Note-7)
1.34L	1.15R	_	_	Appendix 6.1
1.56J	Not support	_		Appendix 6.1
1.34L	1.15R	_	_	Appendix 6.2
1.68W	Not support	_	Not support	(Note-7)
1.68W	Not support	_	Not support	(Note-5)

-: There is no restriction by the version.

(Note-1): SV13/SV22 is the completely same version.

(Note-2): The operating system software version can be confirmed in the operating system software (CD-ROM), MT Developer2 or

GX Works2/GX Developer. (Refer to "Q173D(S)CPU/Q172D(S)CPU Motion controller Programming Manual (COMMON) Section 1.3, 1.4".)

(Note-3): Q173D(S)CPU/Q172D(S)CPU Motion controller (SV13/SV22) Programming Manual (Motion SFC)

(Note-4): Q173D(S)CPU/Q172D(S)CPU Motion controller (SV22) Programming Manual (VIRTUAL MODE)

(Note-5): Q173D(S)CPU/Q172D(S)CPU Motion controller Programming Manual (COMMON)

(Note-6): Q173D(S)CPU/Q172D(S)CPU Motion controller Programming Manual (Safety Observation)

(Note-7): Q173DSCPU/Q172DSCPU Motion controller (SV22) Programming Manual (Advanced Synchronous Control)

1.4 Programming Software Version

The programming software versions that support Motion CPU are shown below.

	1 8 8		• •	
Motion CPU	MELSOFT MT Work	s2 (MT Developer2)	MD Oanfauratan	
	SV13/SV22	SV43	MR Configurator2	MR Configurator
Q173DSCPU	1.39R ^(Note-1)		1.10L	Not support
Q172DSCPU	1.39R ^(Note-1)		1.10L	Not support
Q173DCPU-S1	1.00A ^(Note-2)	1.03D ^(Note-3)	1.00A	C0 ^(Note-4)
Q172DCPU-S1	1.00A ^(Note-2)	1.03D ^(Note-3)	1.00A	C0 (Note-4)
Q173DCPU	1.00A	1.03D	1.00A	C0 ^(Note-4)
Q172DCPU	1.00A	1.03D	1.00A	C0 ^(Note-4)

(Note-1): Use version 1.47Z or later to use advanced synchronous control method.

(Note-2): Use version 1.12N or later to communicate via PERIPHERAL I/F.

(Note-3): Use version 1.23Z or later to communicate via PERIPHERAL I/F.

(Note-4): Use version C1 or later to use MR Configurator combination with MT Developer2.

2. POSITIONING CONTROL BY THE MOTION CPU

2.1 Positioning Control by the Motion CPU

The following positioning controls are possible in the Motion CPU.

- Q173DSCPU/Q173DCPU(-S1): Up to 32 axes
- Q172DSCPU : Up to 16 axes
- Q172DCPU(-S1) : Up to 8 axes

There are following five functions as controls toward the servo amplifier/servomotor.

- (1) Servo operation by the positioning instructions.
 - There are following two methods for execution of the positioning instruction.
 - (a) Programming using the motion control step "K" of Motion SFC.
 - The starting method of Motion SFC program is shown below.
 - 1) Motion SFC start request of PLC CPU
 - 2) Automatic start setting of Motion SFC program
 - (Note): Step "K" of the positioning instruction cannot be programmed to NMI task and event task.
 - 3) Start by the Motion SFC program
 - (b) Execution of servo program by the servo program start request of PLC CPU.
- (2) JOG operation by each axis command signal of Motion CPU.
- (3) Manual pulse generator operation by the positioning dedicated device of Motion CPU.
- (4) Speed change, torque limit value change, torque limit value individual change and target position change during positioning control by the Motion dedicated PLC instruction and Motion dedicated function of operation control step "F".
 - (Note): Refer to the "Q173D(S)CPU/Q172D(S)CPU Motion controller (SV13/SV22)Programming Manual (Motion SFC)" for the Motion dedicated PLC instruction.
- (5) Current value change by the Motion dedicated PLC instruction or servo instructions.

2 POSITIONING CONTROL BY THE MOTION CPU

[Execution of the Motion SFC program start (D(P).SFCS instruction)]

Positioning control is executed by starting the Motion SFC program specified with D(P).SFCS instruction of the PLC CPU in the Motion CPU. (The Motion SFC program can also be started automatically by parameter setting.) An overview of the starting method using the Motion SFC is shown below.


_ . _ . _ . _


		Motion CPU	
Motion SFC	program		
	START	Motion SFC program No.15 (Set by D(P).SFCS instruction.)	
F10		Once execution type operation control step Command which performs numerical operation and bit operation.	
G100		"WAIT" Command which transits to the next step by formation of transition condition Gn.	
K100		Motion control step Command which performs starting of the servo program "Kn", etc.	
G101			
→	END	\supset	i → Servo
Positioning	control param	eters	
System se	ettings	 System data such as axis allocations 	Serv
Fixed para	ameters	 Fixed data by the mechanical system, etc. 	
Servo par	ameters	Data by the specifications of the connected servo amplifier	
Paramete	rs block	Data required for the acceleration, deceleration of the positioning control, etc.	
:	sition return data	 Data required for the home position return 	
Home po:			· · · · · · · · · · · · · · · · · · ·
	ation data	— Data required for the JOG operation	

2 POSITIONING CONTROL BY THE MOTION CPU


[Execution of the positioning control (Motion SFC program)]

The positioning control is executed using the servo program specified with the Motion SFC program in the Motion CPU system. An overview of the positioning control is shown below.



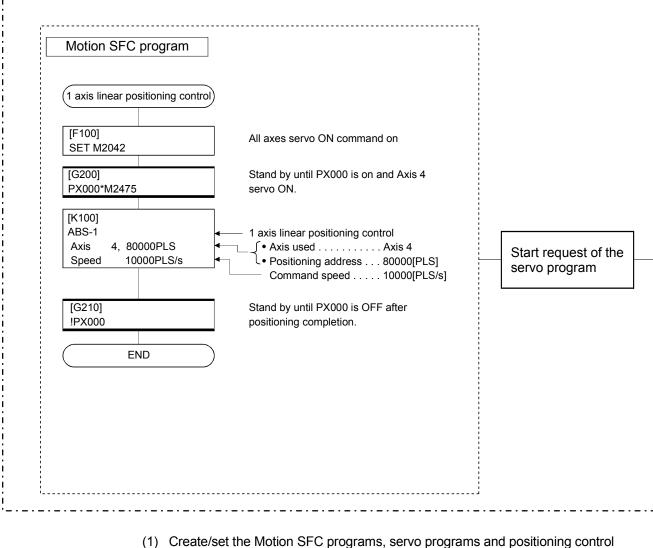


- parameters using a programming software package.
- (2) Specify the servo program started by the Motion SFC program.
- (3) Perform the specified positioning control using the specified with servo program.

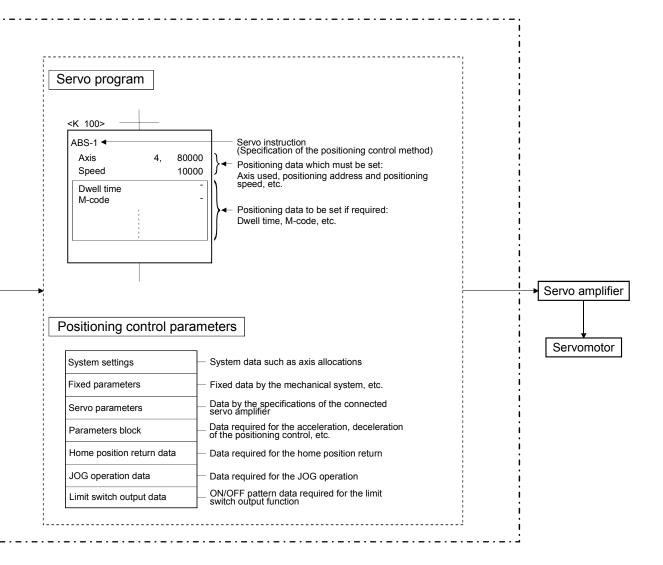


2 POSITIONING CONTROL BY THE MOTION CPU

[Execution of the servo program start (D(P).SVST instruction)]

Positioning control is executed by starting the specified servo program toward the axis specified with D(P).SVST instruction of PLC CPU in the Motion CPU. An overview of the starting method using the servo program is shown below.

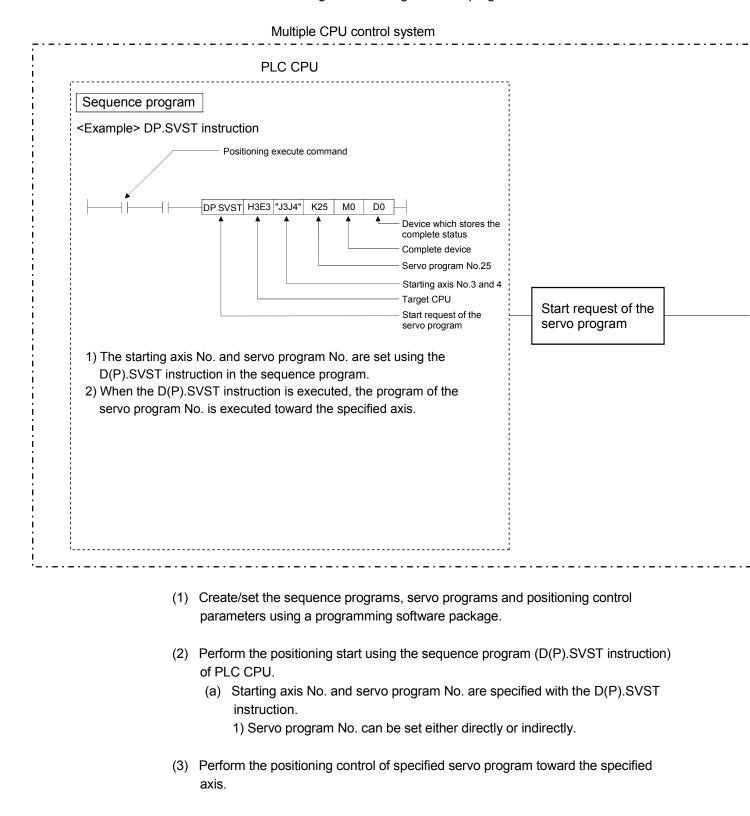


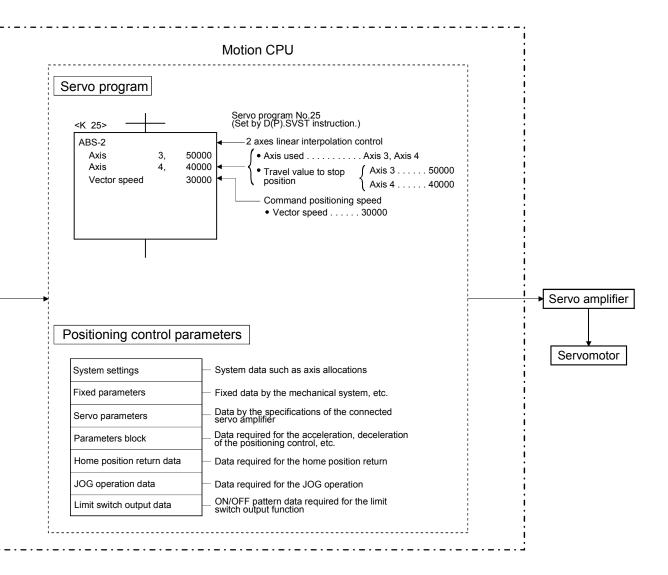

[Execution of the JOG operation]


JOG operation of specified axis is executed using the Motion SFC program in the Motion CPU. JOG operation can also be executed by controlling the JOG dedicated device of specified axis.

An overview of JOG operation is shown below.

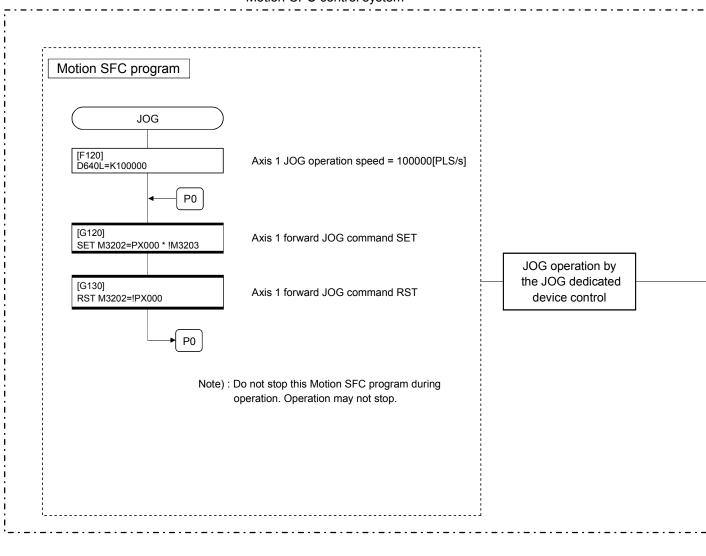

Motion CPU control system


- Create/set the Motion SFC programs, positioning control parameters using a programming software package.
- (2) Set the JOG speed to the JOG speed setting register for each axis using the Motion SFC program.
- (3) Perform the JOG operation while the JOG start command signal is ON in the Motion SFC program.

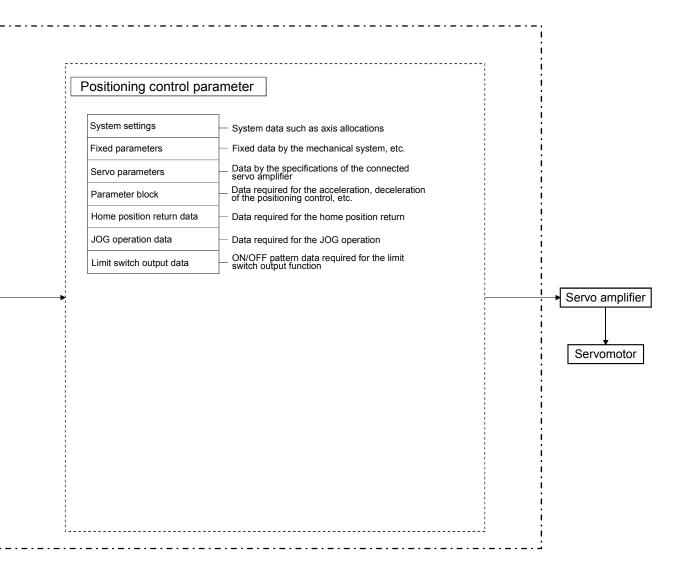


[Executing Manual Pulse Generator Operation]

When the positioning control is executed by the manual pulse generator connected to the Q173DPX, manual pulse generator operation must be enabled using the Motion SFC program.

An overview of manual pulse generator operation is shown below.

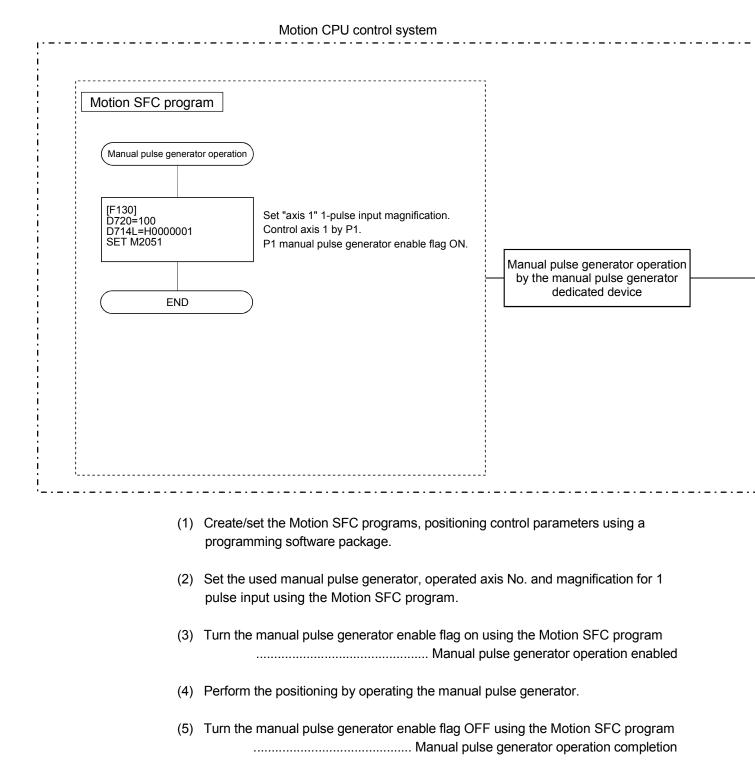

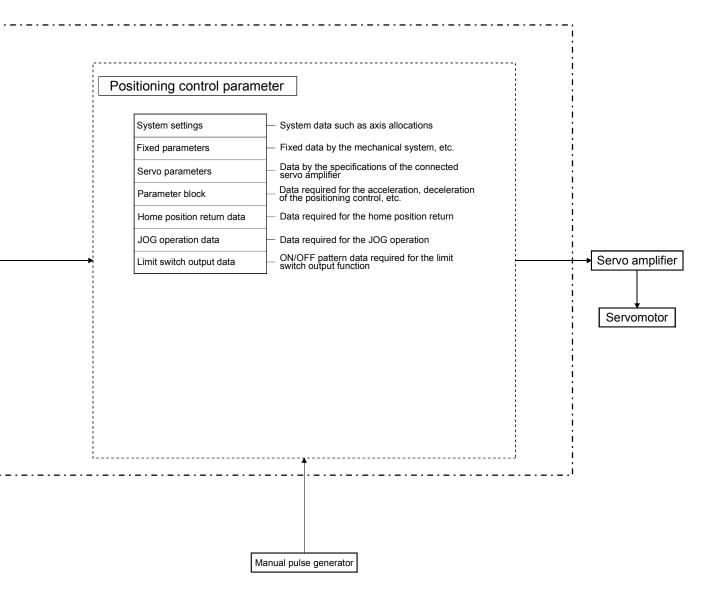

(1) Positioning control parameters

There are following seven types as positioning control parameters. Parameter data can be set and corrected interactively using MT Developer2.

	Item	Description	Reference
1	System settings	Multiple system settings, Motion modules and axis No., etc. are set.	Section 4.1
2	Fixed parameters	Data by such as the mechanical system are set for every axis. They are used for calculation of a command position at the positioning control.	Section 4.2
3	Servo parameters	Data by such as the servo amplifier and motor type with connected servomotor are set for every axis. They are set to control the servomotors at the positioning control.	(Note-1)
4	Home position return data	Data such as the direction, method and speed of the home position return used at the positioning control are set for every axis.	Section 6.23.1
5	JOG operation data	Data such as the JOG speed limit value and parameter block No. used at the JOG operation are set for every axis.	Section 6.21.1
6	Parameter block	Data such as the acceleration, deceleration time and speed control value at the positioning control are set up to 64 parameter blocks. They are set with the servo program, JOG operation data and home position return data, and it is used to change easily the acceleration/deceleration processing (acceleration/deceleration time and speed limit value) at the positioning control.	Section 4.3
7	Limit switch output data	Output device, watch data, ON section, output enable/disable bit and forced output bit used for the limit output function for every limit output are set.	(Note-2)

(Note-1): Refer to Section 3.3 of the "Q173D(S)CPU/Q172D(S)CPU Motion controller Programming Manual (COMMON)".

(Note-2): Refer to Section 4.1 of the "Q173D(S)CPU/Q172D(S)CPU Motion controller Programming Manual (COMMON)".

(2) Servo program

The servo program is used for the positioning control in the Motion SFC program. The positioning control by servo program is executed using the Motion SFC program and Motion dedicated PLC instruction (Servo program start request (D(P).SVST)).

It comprises a program No., servo instructions and positioning data. Refer to Chapter 5 for details.

- Program No. It is specified using the Motion SFC program and Motion dedicated PLC instruction.
- Servo instruction It indicates the type of positioning control.
- Positioning data It is required to execute the servo instructions.

The required data is fixed for every servo instruction.

(3) Motion SFC program

Motion SFC program is used to execute the operation sequence or transition control combining "Start", "Step", "Transition", or "End" to the servo program. The positioning control, JOG operation and manual pulse generator operation by the servo program can be executed. Refer to the "Q173D(S)CPU/Q172D(S)CPU Motion controller (SV13/SV22) Programming Manual (Motion SFC)" for details.

(4) Sequence program

The positioning control by the servo program can be executed using the Motion dedicated PLC instruction of sequence program. Refer to the "Q173D(S)CPU/Q172D(S)CPU Motion controller (SV13/SV22) Programming Manual (Motion SFC)" for details.

MEMO

3. POSITIONING DEDICATED SIGNALS

The internal signals of the Motion CPU and the external signals to the Motion CPU are used as positioning signals.

(1) Internal signals

The following five devices of the Motion CPU are used as the internal signals of the Motion CPU.

- Internal relay (M) M2000 to M3839 (1840 points)
- Special relay (SM)SM0 to SM2255 (2256 points)
- Data register (D)D0 to D799 (800 points)
- Motion register (#) #8000 to #8751 (752 points)
- Special register (SD)SD0 to SD2255 (2256 points)

(2) External signals

The external input signals to the Motion CPU are shown below.

- Upper/lower limit switch input The upper/lower limit of the positioning

- Proximity dog signalON/OFF signal from the proximity dog.
- Speed/position switching signal Signal for switching from speed to position.
- Manual pulse generator input Signal from the manual pulse generator.

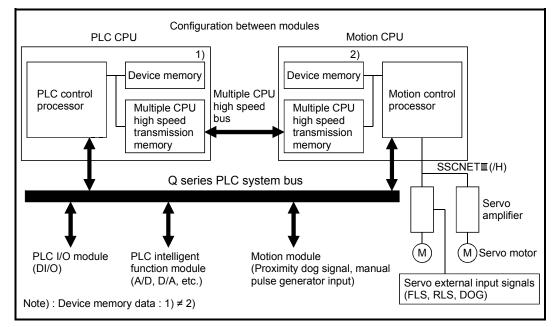


Fig.3.1 Flow of the internal signals/external signals

The positioning dedicated devices are shown below.

It indicates the device refresh cycle of the Motion CPU for status signal with the positioning control, and the device fetch cycle of the Motion CPU for command signal with the positioning control.

Item		Q173DSCPU	Q172DSCPU	Q173DCPU(-S1)	Q172DCPU(-S1)
Number of control axes		Up to 32 axes	Up to 16 axes	Up to 32 axes	Up to 8 axes
Operation cycle	SV13	0.22ms/ 1 to 4 axes 0.44ms/ 5 to 10 axes 0.88ms/ 11 to 24 axes 1.77ms/ 25 to 32 axes	0.22ms/ 1 to 4 axes 0.44ms/ 5 to 10 axes 0.88ms/ 11 to 16 axes	0.44ms/ 1 to 6 axes 0.88ms/ 7 to 18 axes 1.77ms/ 19 to 32 axes	0.44ms/ 1 to 6 axes 0.88ms/ 7 to 8 axes
(Default)	SV22	0.44ms/ 1 to 6 axes 0.88ms/ 7 to 16 axes 1.77ms/ 17 to 32 axes	0.44ms/ 1 to 6 axes 0.88ms/ 7 to 16 axes	0.44ms/ 1 to 4 axes 0.88ms/ 5 to 12 axes 1.77ms/ 13 to 28 axes 3.55ms/ 29 to 32 axes	0.44ms/ 1 to 4 axes 0.88ms/ 5 to 8 axes

The operation cycle of the Motion CPU is shown below.

REMARK

In the positioning dedicated signals, "n" in "M3200+20n", etc. indicates a value corresponding to axis No. such as the following tables.

Axis No.	n	Axis No.	n	Axis No.	n	Axis No.	n
1	0	9	8	17	16	25	24
2	1	10	9	18	17	26	25
3	2	11	10	19	18	27	26
4	3	12	11	20	19	28	27
5	4	13	12	21	20	29	28
6	5	14	13	22	21	30	29
7	6	15	14	23	22	31	30
8	7	16	15	24	23	32	31

• Calculate as follows for the device No. corresponding to each axis. (Example) For axis 32

M3200+20n (Stop command)=M3200+20×31=M3820

M3215+20n (Servo OFF command)=M3215+20×31=M3835

• The range (n=0 to 15) of axis No.1 to 16 is valid in the Q172DSCPU.

• The range (n=0 to 7) of axis No.1 to 8 is valid in the Q172DCPU(-S1).

3.1 Internal Relays

M8191

SV13 SV22 Virtual mode switching method Advanced synchronous control method Device Purpose Device Device No Purpose Purpose No. No. M0 MO M0 User device User device User device to (2000 points) to (2000 points) to (2000 points) M2000 M2000 Common device Common device M2000 Common device (320 points) (320 points) (320 points) to to to M2320 Unusable M2320 Unusable M2320 Unusable (80 points) (80 points) (80 points) to to to M2400 M2400 Axis status M2400 (20 points \times 32 axes) Axis status Axis status (20 points × 32 axes) Real mode : Each axis (20 points × 32 axes) to to to Virtual mode : Output module M3040 Unusable M3040 Unusable M3040 Unusable (32 points) to (32 points) to (32 points) to M3072 M3072 M3072 Common device Common device Common device (Command signal) (Command signal) (Command signal) to to to (64 points) (64 points) (64 points) M3136 M3136 M3136 Unusable Unusable Unusable (64 points) to (64 points) (64 points) to to M3200 M3200 Axis command signal M3200 Axis command signal (20 points × 32 axes) Axis command signal to (20 points imes 32 axes) to Real mode : Each axis to (20 points imes 32 axes) Virtual mode : Output module M3840 M3840 Unusable M3840 (160 points) to M4000 Virtual servomotor axis status (Note-1) to (20 points × 32 axes) M4640 Synchronous encoder axis status (4 points imes 12 axes) to Unusable (Note-1) M4688 User device (112 points) User device to to Virtual servomotor axis command signal ^(Note-1) to (4352 points) (4352 points) M4800 to (20 points \times 32 axes) M5440 Synchronous encoder axis command signal to (4 points × 12 axes) M5488

(1) Internal relay list

User device (Note-3)

M8191

(2704 points)

to

M8191

3 POSITIONING DEDICATED SIGNALS

	SV13	SV22						
Dovioc		Vi	rtual mode switching method	Advan	ced synchronous control method			
Device No.	Purpose	Device	Purpose	Device	Purpose			
		No.	- p	No.				
M8192		M8192		M8192	System area			
				to	(1608 points) QDSK Ver			
				M9800	Command generation axis status			
				to	(20 points × 32 axes) QDS(Ver			
				M10440	Synchronous encoder axis status			
				to	(10 points × 12 axes) QDS(Ver			
				M10560	Output axis status			
				to	(10 points × 32 axes) QDS(Ver			
				M10880	Synchronous control signal			
				to	[St.380] (32 points) @DSK @@D			
				M10912	Synchronous analysis complete			
	System area			to	signal [St.381] (32 points)			
				M10944	Unusable			
				to	(16 points) QDS Ver			
			System area	M10960	Command generation axis			
to	(4096 points)	to	(4096 points)	to	command signal			
				10	(20 points × 32 axes)			
				M11600	Synchronous encoder axis			
				to	command signal			
					(4 points × 12 axes) QDS(Ver			
				M11648				
				to	(32 points) QDS Ver			
				M11680	Output axis command signal (10 points \times 32 axes)			
				to M12000				
				WT2000	Synchronous control start signal [Rq.380]			
				to	(32 points) (25% (Ver.)			
				M12032	Synchronous analysis request			
					signal [Rq.381]			
				to	(32 points) QDS(Ver.)			
				M12064				
				to	Unusable (224 points)			
M12287		M12287		M12287				

Internal relay list (Continued)

It can be used as a user device.

(Note-1): It can be used as a user device in the SV22 real mode only.

Γ

Total number of user device points	
• SV13	: 6352 points
 SV22 virtual mode switching method 	: 6352 points : 4704 points ^(Note)
SV22 advanced synchronous control me	thod : 6352 points QDS (Ver.)
(Note): Up to 6096 points can be used whe	

Ver. Refer to Section 1.3 for the software version that supports this function.

Axis No.	Device No.					Signal name		
1	M2400 to M2419							_
2	M2420 to M2439							
3	M2440 to M2459				Signal name	Refresh cycle	Fetch cycle	Signal direction
4	M2460 to M2479		0	Positionin	ig start complete			
5	M2480 to M2499		1	Positionin	ig complete		/	
6	M2500 to M2519		2	In-position	n		/	
7	M2520 to M2539		3	Comman	d in-position	Operation cycle	/	
8	M2540 to M2559		4	Speed co	ntrolling			
9	M2560 to M2579		5	Speed/pc	sition switching latch			
10	M2580 to M2599		6	Zero pass	6			
11	M2600 to M2619		7	Error dete	ection	Immediate		
12	M2620 to M2639		8	Servo err	or detection	Operation cycle		Status signal
13	M2640 to M2659		9	Home po	sition return request	Main cycle		
14	M2660 to M2679		10	Home po	sition return complete	Operation cycle		
15	M2680 to M2699		11		FLS			
16	M2700 to M2719		12	External	RLS	Main cycle		
17	M2720 to M2739		13	signals	STOP	Main Cycle		
18	M2740 to M2759		14		DOG/CHANGE			
19	M2760 to M2779		15	Servo rea	ıdy	Operation cycle	/	
20	M2780 to M2799		16	Torque lir	niting	Operation cycle	/	
21	M2800 to M2819		17	Unusable	!	—		—
22	M2820 to M2839			Virtual mo	ode continuation	At virtual mode		
23	M2840 to M2859		18	operation	disable warning	transition		Status signal
24	M2860 to M2879	╎┟		(SV22) ^{(N}		uansiuon		Status signal
25	M2880 to M2899		19	M-code o	utputting	Operation cycle	\checkmark	
26	M2900 to M2919							
27	M2920 to M2939							
28	M2940 to M2959							
29	M2960 to M2979							
30	M2980 to M2999							
31	M3000 to M3019							
32	M3020 to M3039							

(2) Axis status list

(Note-1): It is unusable in the SV13/SV22 real mode and SV22 advanced synchronous control.

POINT	
(1) The followi	ng range is valid.
• Q172DS0	CPU : Axis No.1 to 16
• Q172DCI	PU(-S1): Axis No.1 to 8
(2) The followi	ng device area can be used as a user device.
• Q172DS0	CPU : 17 axes or more
• Q172DCI	PU(-S1): 9 axes or more
However, v	when the project of Q172DSCPU/Q172DCPU(-S1) is replaced with
Q173DSC	PU/Q173DCPU(-S1), this area cannot be used as a user device.

Axis No.	Device No.			Signal name		
1	M3200 to M3219					_
2	M3220 to M3239					Signal
3	M3240 to M3259	Ì	Signal name	Refresh cycle	Fetch cycle	direction
4	M3260 to M3279	C	Stop command		On another souls	
5	M3280 to M3299	1	Rapid stop command		Operation cycle	
6	M3300 to M3319	2	Forward rotation JOG start command			
7	M3320 to M3339	3	Reverse rotation JOG start command		Main cycle	Command
8	M3340 to M3359	4	Complete signal OFF command			signal
9	M3360 to M3379		Speed/position switching enable		One retien evelo	
10	M3380 to M3399	5	command		Operation cycle	
11	M3400 to M3419	6	Unusable	_		—
12	M3420 to M3439	7	Error reset command			
13	M3440 to M3459	ε	Servo error reset command		Main cycle	Command
14	M3460 to M3479	ç	External stop input disable at start			signal
15	M3480 to M3499	,	command		At start	
16	M3500 to M3519	1				
17	M3520 to M3539	1	Unusable	_	_	
18	M3540 to M3559	1	2 Feed current value update command		At start	
19	M3560 to M3579	1	Address clutch reference setting			
20	M3580 to M3599	1	command (SV22 only) (Note-1)		At virtual mode	
21	M3600 to M3619	1	Cam reference position setting		transition	
22	M3620 to M3639	1	command (SV22 only) (Note-1)			Command
23	M3640 to M3659	1			Operation cycle	signal
24	M3660 to M3679	1	6 Gain changing command		Operation cycle (Note-2)	
25	M3680 to M3699	1	7 PI-PID switching command			
26	M3700 to M3719	1	3 Control loop changing command		Operation cycle	
27	M3720 to M3739	1	9 FIN signal	/	Operation cycle	
28	M3740 to M3759					
29	M3760 to M3779					
30	M3780 to M3799					
31	M3800 to M3819					
32	M3820 to M3839					

(3) Axis command signal list

(Note-1): It is unusable in the SV13/SV22 real mode and SV22 advanced synchronous control. (Note-2): Operation cycle 7.1[ms] or more: Every 3.5[ms]

POINT
(1) The following range is valid.
Q172DSCPU : Axis No.1 to 16
• Q172DCPU(-S1): Axis No.1 to 8
(2) The following device area can be used as a user device.
Q172DSCPU : 17 axes or more
Q172DCPU(-S1): 9 axes or more
However, when the project of Q172DSCPU/Q172DCPU(-S1) is replaced with
Q173DSCPU/Q173DCPU(-S1), this area cannot be used as a user device.

Device No.	Signal name	Refresh cycle	Fetch cycle	Signal direction	Remark (Note-7)	Device No.		Signal name	Refresh cycle	Fetch cycle	Signal direction	Remark (Note-7)
M2000	PLC ready flag		Main cycle	Command signal	M3072	M2055					dirocaciti	
M2001 M2002 M2003 M2004 M2005	Axis 1 Axis 2 Axis 3 Axis 4 Axis 5			Jighti		M2056 M2057 M2058 M2059 M2060	Unusable (6 points		_	_	_	_
M2006 M2007 M2008 M2009 M2010 M2011 M2012 M2013 M2014 M2015 M2016 M2017 M2018 M2019 M2020 M2021 M2020 M2021 M2020 M2021 M2022 M2023 M2025 M2026 M2027 M2028 M2029 M20201 M20202 M20203 M20204	Axis 6 Axis 7 Axis 8 Axis 9 Axis 10 Axis 11 Axis 11 Axis 12 Axis 13 Axis 14 Axis 15 Axis 16 Axis 17 Axis 18 Axis 18 Axis 18 Axis 19 Axis 20 Axis 20 Axis 21 Axis 22 Axis 23 Axis 24 Axis 25 Axis 26 Axis 27 Axis 28 Axis 20 Axis 27 Axis 28 Axis 20 Axis 27 Axis 28 Axis 20 Axis 30 Axis 30	Operation cycle		Status signal (Note-1), (Note-3), (Note-4)		M2061 M2062 M2063 M2064 M2066 M2066 M2067 M2068 M2070 M2071 M2073 M2074 M2075 M2076 M2073 M2074 M2075 M2076 M2077 M2078 M2079 M2080 M2081 M2082 M2083 M2084 M2085 M2086 M2087	Axis 1 Axis 2 Axis 3 Axis 4 Axis 5 Axis 6 Axis 7 Axis 8 Axis 10 Axis 11 Axis 12 Axis 13 Axis 14 Axis 15 Axis 16 Axis 17 Axis 18 Axis 20 Axis 22 Axis 23 Axis 24 Axis 26 Axis 26	Speed change accepting flag	Operation cycle		Status signal (Note-1), (Note-2), (Note-3), (Note-4)	
M2033 M2034	Unusable (2 points)		_	-	-	M2088 M2089	Axis 28 Axis 29					
M2035	Motion error history clear request flag		Main cycle	Command signal	M3080	M2090	Axis 30					
M2036 M2037	Unusable (2 points)	_	_	-	-	M2091 M2092	Axis 31 Axis 32					
M2038	Motion SFC debugging flag	At debugging mode transition		Status signal		M2093						
M2039	Motion error detection flag Speed switching point specified	Immediate		Command	140070	M2094	-					
M2040	flag		At start	signal Status	M3073	M2095						
M2041	System setting error flag	Operation cycle		signal	142074	M2096						
M2042 M2043	All axes servo ON command Real mode/virtual mode switching request (SV22) (Note-5)		Operation cycle At virtual mode transition	Command signal	M3074 M3075	M2097 M2098	Unusable (8 points		_	_	_	_
M2044	Real mode/virtual mode switching status (SV22) (Note-5)					M2099						
M2045	Real mode/virtual mode switching error detection signal (SV22) (Note-5)	At virtual mode transition		Status signal		M2100						
M2046	Out-of-sync warning (SV22) (Note-5)		/			M2101	Axis 1			/		
M2047	Motion slot fault detection flag JOG operation simultaneous	Operation cycle	/	Command		M2102	Axis 2					
M2048	start command		Main cycle	signal	M3076	M2103	Axis 3					
M2049	All axes servo ON accept flag	Operation cycle		Status signal		M2104		Synchronous			Status	
M2050	Unusable Manual pulse generator 1	/	_	_	-	M2105	Axis 5	encoder current value changing flag (Note-5), (Note-6)	Operation cycle		signal (Note-2),	
M2051	enable flag Manual pulse generator 2			Command	M3077	M2106	Axis 6	(1vote-5), (Note-6)			(Note-4)	
M2052	enable flag		Main cycle	signal	M3078	M2107	Axis 7					
M2053	Manual pulse generator 3 enable flag	/			M3079	M2108	Axis 8					
M2054	Operation cycle over flag	Operation cycle		Status signal		M2109	Axis 9			/		

(4) Common device list

Device	Signal name	Refresh cycle	Fetch cycle	Signal	Remark (Note-7)	Device	Signal name	Refresh cycle	Fetch cycle	Signal	Remark (Note-7)
M2111	Axis 10 Synchronous Axis 11 encoder current value changing flag (Note-5), (Note-6)	Operation cycle		direction Status signal (Note-2), (Note-4)		No. M2179 M2180 M2181				direction	
M2113 M2114 M2115 M2116 M2117 M2118 M2120 M2120 M2121 M2122 M2123 M2124 M2125 M2126 M2127	Unusable (15 points)	_	_	_	_	M2182 M2183 M2184 M2185 M2186 M2187 M2188 M2189 M2190 M2191 M2193 M2194 M2195 M2196					
M2139 M2140 M2141 M2142 M2143 M2144 M2145 M2146 M2147 M2148 M2149 M2150 M2151 M2152 M2153 M2155 M2156 M2157	Axis 2 Axis 3 Axis 4 Axis 5 Axis 6 Axis 7 Axis 7 Axis 7 Axis 7 Axis 7 Axis 8 Axis 7 Axis 10 Axis 11 Axis 11 Axis 12 Axis 13 Axis 14 Axis 15 Axis 16 Axis 16 Axis 17 decelerating flag Axis 19 Axis 20 Axis 21 Axis 21 Axis 22 Axis 23 Axis 24 Axis 25 Axis 26 Axis 27 Axis 28 Axis 29 Axis 20 Axis 22 Axis 23 Axis 24 Axis 27 Axis 28 Axis 29 Axis 30	Operation cycle		Status signal (Note-1), (Note-2), (Note-3), (Note-4)		M2197 M2198 M2198 M2199 M2200 M2201 M2202 M2203 M2204 M2205 M2206 M2207 M2208 M2201 M2201 M2202 M2203 M2204 M2205 M2206 M2207 M2210 M2211 M2212 M2212 M2213 M2214 M2217 M2218 M2219 M22210 M2212 M2212 M2212 M2212 M2221 M2221 M2222 M2222 M2223 M2224 M2225 M2226	Unusable (45 points) (Note-8)				_
M2159 M2160 M2161 M2163 M2163 M2164 M2165 M2166 M2167 M2168	Axis 31 Axis 32 Unusable (19 points) (Note-8)	_	_	_	_	M2233 M2234 M2235 M2236 M2237 M2238 M2239 M2240 M2241 M2242 M2243 M2244 M2245 M2246	Unusable (16 points)	 Operation cycle	_	Status signal (Note-1), (Note-2), (Note-3), (Note-4)	_

Common device list (Continued)

Device No.		Signal name	Refresh cycle	Fetch cycle	Signal direction	Remark (Note-7)	Device No.	Signal name	Refresh cycle	Fetch cycle	Signal direction	Remark (Note-7)
M2248 M2249 M2250 M2251 M2253 M2253 M2254 M2256 M2257 M2258 M2259 M2260 M2261 M2261 M2262 M2262 M2262 M2266	Axis 21 Axis 22 Axis 23 Axis 24 Axis 25 Axis 26 Axis 27	Speed change "0" accepting flag	Operation cycle		Status signal (Note-1), (Note-2), (Note-2)		M2284 M2285 M2286 M2287 M2288 M2289 M2290 M2291 M2292 M2293 M2294 M2295 M2296 M2297 M2298 M2297 M2298 M2290 M2291 M2292 M2293 M2294 M2295 M2296 M2297 M2298 M2290 M2201 M2301	Axis 13 Axis 14 Axis 15 Axis 16 Axis 17 Axis 18 Axis 20 Axis 21 Axis 22 Control loop monitol Axis 23 Axis 24 Axis 25 Axis 26 Axis 27 Axis 28 Axis 29 Axis 30 Axis 31	Operation cycle		Status signal (Note-1), (Note-2), (Note-3), (Note-4)	
M2267 M2268 M2269 M2270 M2271 M2272 M2273 M2273 M2274 M2275 M2276 M2276 M2277 M2278 M2278 M2278 M2281 M2281 M2281	Axis 28 Axis 29 Axis 30 Axis 31 Axis 32 Axis 1 Axis 32 Axis 4 Axis 5 Axis 6 Axis 7 Axis 8 Axis 9 Axis 10 Axis 11	Control loop monitor status			(Note-4)			Axis 32 Unusable (16 points)	_	_	_	_

Common device list (Continued)

(Note-1): The range of axis No.1 to 16 is valid in the Q172DSCPU.

(Note-2): The range of axis No.1 to 8 is valid in the Q172DCPU(-S1).

(Note-3): Device area of 17 axes or more is unusable in the Q172DSCPU.

(Note-4): Device area of 9 axes or more is unusable in the Q172DCPU(-S1).

(Note-5): It is unusable in the SV22 advanced synchronous control.

(Note-6): It is unusable in the real mode.

(It can be used in the real mode for the version (Refer to Section 1.3) that supports "synchronous encoder current value monitor in real mode".)

(Note-7): It can also be ordered the device of a remark column.

(Note-8): These devices can be used as the clutch statuses.

The clutch status can also be set as the optional device at the clutch parameter.

Refer to Chapter 7 of the "Q173D(S)CPU/Q172D(S)CPU Motion controller (SV22) Programming Manual (VIRTUAL MODE)" for details.

Device No.	Signal name	Refresh cycle	Fetch cycle	Signal direction	Remark (Note-1), (Note-2)
M3072	PLC ready flag	/	Main cycle		M2000
M3073	Speed switching point specified flag		At start	Command signal	M2040
M3074	All axes servo ON command		Operation cycle		M2042
M3075	Real mode/virtual mode switching request (SV22) ^(Note-3)		At virtual mode transition		M2043
M3076	JOG operation simultaneous start command		Main cycle		M2048
M3077	Manual pulse generator 1 enable flag				M2051
M3078	Manual pulse generator 2 enable flag				M2052
M3079	Manual pulse generator 3 enable flag	/			M2053
M3080	Motion error history clear request flag	/			M2035
M3081 to M3135	Unusable ^(Note-4) (55 points)	_	_	_	_

(5) Common device list (Command signal)

(Note-1): The state of a device is not in agreement when the device of a remark column is turned ON/OFF directly. In addition, when the request from a data register and the request from the above device are performed simultaneously, the request from the above device becomes effective.

(Note-2): It can also be ordered the device of a remark column.

(Note-3): It is unusable in the SV22 advanced synchronous control.

(Note-4): Do not use it as a user device. It can be used as a device that performs automatic refresh because of area for the reserve of command signal.

POINT


The device of a remark column turns ON by OFF to ON of the above device, and turns OFF by ON to OFF of the above device.

The command signal cannot be turned ON/OFF by the PLC CPU in the automatic refresh because the statuses and commands are mixed together in M2000 to M2053. Use the above devices in the case.


And, it can also be turned ON/OFF by the data register. (Refer to Section 3.2.3.)

3.1.1 Axis statuses

- (1) Positioning start complete signal (M2400+20n) Status signal
 - (a) This signal turns on with the start completion for the positioning control of the axis specified with the servo program. It does not turn on at the starting using JOG operation or manual pulse generator operation.
 It can be used to read a M-code at the positioning start.
 (Refer to Section 7.1.)
 - (b) This signal turns off at leading edge of complete signal OFF command (M3204+20n) or positioning completion.

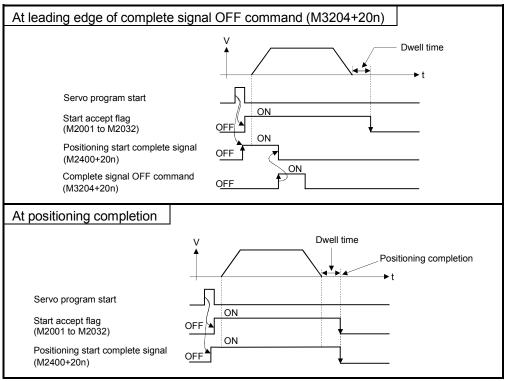


- (2) Positioning complete signal (M2401+20n) Status signal
 - (a) This signal turns on with the completion of the command output to positioning address for the axis specified with the servo program. It does not turn on at the start or stop on the way using home position return, JOG operation, manual pulse generator operation or speed control. It does not turn on at the stop on the way during positioning. It can be used to read a M-code at the positioning completion. (Refer to Section 7.1.)
 - (b) This signal turns off at leading edge of complete signal OFF command (M3204+20n) or positioning start.

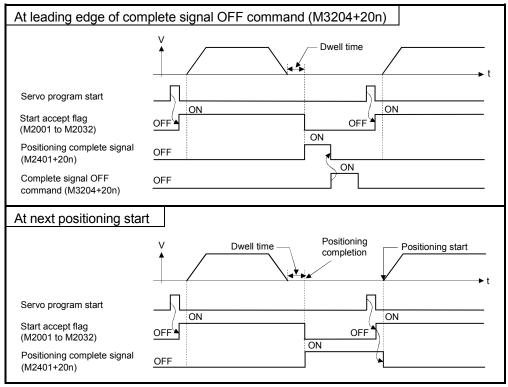

(c) The positioning complete signal turns ON by the execution of servo program even if the travel value of the axis specified with the servo program is set to "0".

The deviation counter value is not considered, so that the positioning complete signal (M2401+20n) turns on with the completion of the command output to positioning address. Use the positioning complete signal (M2401+20n) together with the in-position signal (M2402+20n) to confirm the positioning completion of servo axis in the final instruction under program.


- (3) In-position signal (M2402+20n) Status signal
 - (a) This signal turns on when the number of droop pulses in the deviation counter becomes below the "in-position range" set in the servo parameters. It turns off at positioning start.

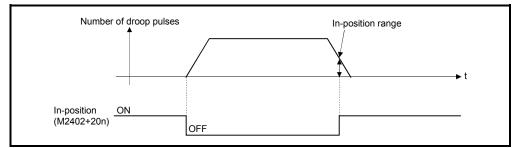


- (b) An in-position check is performed in the following cases.
 - When the servo power supply is turned on.
 - After the automatic deceleration is started during positioning control.
 - After the deceleration is started with the JOG start signal OFF.
 - During the manual pulse generator operation.
 - After the proximity dog ON during a home position return.
 - After the deceleration is started with the stop command.
 - When the speed change to a speed "0" is executed.
- (4) Command in-position signal (M2403+20n) Status signal
 - (a) This signal turns on when the absolute value of difference between the command position and feed current value becomes below the "command inposition range" set in the fixed parameters.

This signal turns off in the following cases.

- Positioning control start
- Home position return
- Speed control
- JOG operation
- Manual pulse generator operation
- (b) Command in-position check is continually executed during position control. This check is not executed during speed control or speed control in the speed/position switching control.

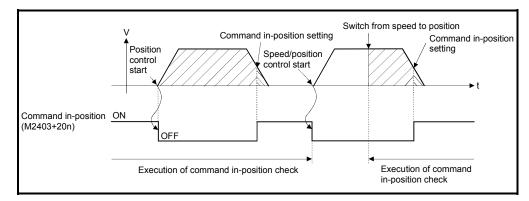

- (5) Speed controlling signal (M2404+20n) Status signal
 - (a) This signal turns on during speed control, and it is used as judgement of during the speed control or position control.
 It is turning on while the switching from speed control to position control by the external CHANGE signal at the speed/position switching control.
 - (b) This signal turns off at the power supply on and during position control.

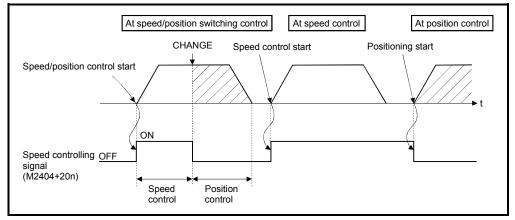

(c) It does not turn on at the speed control mode in speed-torque control.


(6) Speed/position switching latch signal (M2405+20n)

..... Status signal

(a) This signal turns on when the control is switched from speed control to position control.

It can be used as an interlock signal to enable or disable changing of the travel value in position control.

- (b) The signal turns off at the following start.
 - Position control
 - Speed/position control
 - Speed control
 - JOG operation
 - Manual pulse generator operation

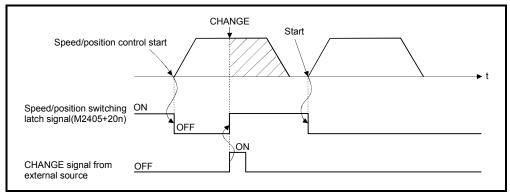

(7) Zero pass signal (M2406+20n) Status signal This signal turns on when the zero point is passed after the power supply on of the servo amplifier.
Once the zero point has been passed, it remains on state until the Multiple CPU system has been reset.
However, in the home position return method of proximity dog type, count type, dog cradle type, limit switch combined type, scale home position signal detection type, or dogless home position signal reference type, this signal turns off once at

the home position return start and turns on again at the next zero point passage.

- (8) Error detection signal (M2407+20n) Status signal
 - (a) This signal turns on with detection of a minor error or major error, and it is used as judgement of the error available/not available. The applicable error code (Note-1) is stored in the minor error code storage register with detection of a minor error. (Refer to Section 3.2.1) The applicable error code (Note-1) is stored in the major error code storage register with detection of a major error. (Refer to Section 3.2.1)
 - (b) This signal turns off when the error reset command (M3207+20n) turns on.

E	Error detectionON
Error detection signal (M2407+20n)	
Error reset command (M3207+20n)	OFF

REMARK

(Note-1): Refer to APPENDIX 1 for the error codes with detection of major/minor errors.

- (9) Servo error detection signal (M2408+20n) Status signal
 - (a) This signal turns on when an error occurs at the servo amplifier side (except for errors cause of alarms and emergency stops) ^(Note-1), and it is used as judgement of the servo error available/not available.
 When an error is detected at the servo amplifier side, the applicable error code ^(Note-1) is stored in the servo error code storage register. (Refer to Section 3.2.1)
 - (b) This signal turns off when the servo error reset command (M3208+20n) turns on or the servo power supply turns on again.

Servo e	error detectionON
Servo error detection signal (M2408+20n)	OFF ON
Servo error reset command (M3208+20n)	

REMARK

(Note-1): Refer to APPENDIX 1.4 for the error codes on errors detected at the servo amplifier side.

(10) Home position return request signal (M2409+20n)

..... Status signal

This signal turns on when it is necessary to confirm the home position address.

- (a) When not using an absolute position system
 - 1) This signal turns on in the following cases:
 - Multiple CPU system power supply on or reset
 - Servo amplifier power supply on
 - Home position return start (Unless a home position return is completed normally, the home position return request signal does not turn off.)
 - 2) This signal turns off by the completion of home position return.
- (b) When using an absolute position system
 - 1) This signal turns on in the following cases:
 - When not executing a home position return once after system start.
 - Home position return start (Unless a home position return is completed normally, the home position return request signal does not turn off.)
 - Erase of an absolute data in Motion CPU according to causes, such as battery error
 - Servo error [2025] (absolute position erase) occurrence
 - Servo error [2143] (absolute position counter warning) occurrence
 - Servo error [2913] (encoder counter error) occurrence
 - Major error [1201], [1202], [1203], or [1204] occurrence
 - When the "rotation direction selection" of servo parameter is changed.
 - 2) This signal turns off by the completion of the home position return.

≜CAUTION

When using the absolute position system function, on starting up, and when the Motion controller or absolute value motor has been replaced, always perform a home position return. In the case of the absolute position system, use the sequence program to check the home position return request before performing the positioning control.
 Failure to observe this could lead to an accident such as a collision.

(11) Home position return complete signal (M2410+20n) Status signal (a) This signal turns on when the home position return operation using the servo program has been completed normally. (b) This signal turns off at the positioning start, JOG operation start and manual pulse generator operation start. (c) If the home position return of proximity dog, dog cradle or stopper type using the servo program is executed during this signal on, the "continuous home position return start error (minor error: 115)" occurs and it cannot be start the home position return. (12) FLS signal (M2411+20n) (Note-1) Status signal (a) This signal is controlled by the ON/OFF state for the upper stroke limit switch input (FLS) of the Q172DLX/servo amplifier and bit device Upper stroke limit switch input OFF FLS signal: ON Upper stroke limit switch input ON FLS signal: OFF (b) The state for the upper stroke limit switch input (FLS) when the FLS signal is ON/OFF is shown below. 1) Q172DLX use (Note-2) FLS signal : ON FLS signal : OFF Q172DLX Q172DLX FLS FI S FI S СОМ сом 2) Servo amplifier input use (Note-3) FLS signal : ON FLS signal : OFF Servo amplifier Servo amplifier FLS FLS DI1 DI1

3) Bit device use (Note-1) QDS

DICOM

The set bit device is the FLS signal.

(Note-1): Refer to the "Q173D(S)CPU/Q172D(S)CPU Motion controller Programming Manual (COMMON)" for an external signal and bit device.

DICOM


+


(Note-2): Refer to the "Q173D(S)CPU/Q172D(S)CPU Motion controller User's Manual" for a pin configuration.

(Note-3): Refer to the "Servo Amplifier Instruction Manual" for a pin configuration.


(c) "Normally open contact input" and "Normally closed contact input" of the servo data setting can be selected.


- (13) RLS signal (M2412+20n) (Note-1)..... Status signal
 - (a) This signal is controlled by the ON/OFF state for the lower stroke limit switch input (RLS) of the Q172DLX/servo amplifier and bit device
 - Lower stroke limit switch input OFF RLS signal: ON
 - · Lower stroke limit switch input ON RLS signal: OFF
 - (b) The state of the lower stroke limit switch input (RLS) when the RLS signal is ON/OFF is shown below.
 - 1) Q172DLX use (Note-2)





2) Servo amplifier input use ^(Note-3)

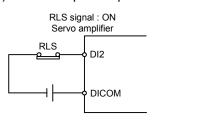



3) Bit device use (Note-1) QDS

The set bit device is the RLS signal.

- (Note-1): Refer to the "Q173D(S)CPU/Q172D(S)CPU Motion controller Programming Manual (COMMON)" for an external signal and bit device.
- (Note-2): Refer to the "Q173D(S)CPU/Q172D(S)CPU Motion controller User's Manual" for a pin configuration.

(Note-3): Refer to the "Servo Amplifier Instruction Manual" for a pin configuration.

(c) "Normally open contact input" and "Normally closed contact input" of the servo data setting can be selected.


- (14) STOP signal (M2413+20n) (Note-1)......Status signal
 - (a) This signal is controlled by the ON/OFF state for the stop signal input (STOP) of the Q172DLX and bit device .
 - Stop signal input of the Q172DLX OFF STOP signal: OFF
 - Stop signal input of the Q172DLX ON STOP signal: ON
 - (b) The state of the stop signal input (STOP) when the STOP signal input is ON/OFF is shown below.
 - 1) Q172DLX use (Note-2)



2) Bit device use (Note-1) QDS

The set bit device is the STOP signal.


- (Note-1): Refer to the "Q173D(S)CPU/Q172D(S)CPU Motion controller Programming Manual (COMMON)" for an external signal and bit device.
- (Note-2): Refer to the "Q173D(S)CPU/Q172D(S)CPU Motion controller User's Manual" for a pin configuration.
- (c) "Normally open contact input" and "Normally closed contact input" of the servo data setting can be selected.
- (15) DOG/CHANGE signal (M2414+20n)^(Note-1) Status signal
 - (a) This signal turns on/off by the proximity dog input (DOG) of the Q172DLX/ servo amplifier/input(DI) of built-in interface in Motion CPU@sk/bit device@sk at the home position return.
 This signal turns on/off by the speed/position switching input (CHANGE) of the Q172DLX/proximity dog input (DOG) of servo amplifier/input (DI) of built-in interface in Motion CPU@sk/bit device@sk at the speed/position switching control. (Note-2) (There is no CHANGE signal in the servo amplifier.)
 - (b) The state of the speed/position switching input (CHANGE) when the CHANGE signal is ON/OFF is shown below.

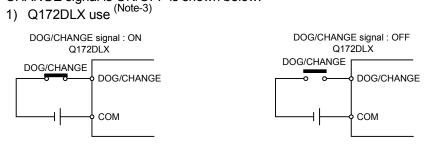



2) Servo amplifier input use (Note-4)

3) Built-in interface in Motion CPU use^(Note-3)

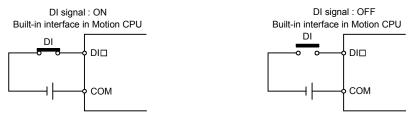

4) Bit device use (Note-1)

The set bit device is the DOG/CHANGE signal.

- (Note-1): Refer to the "Q173D(S)CPU/Q172D(S)CPU Motion controller Programming Manual (COMMON)" for an external signal and bit device.
- (Note-2): When using the Q173DCPU(-S1)/Q172DCPU(-S1), the external input signal (DOG) of servo amplifier can also be used in the speed/position switching control. (Refer to Section 1.3 for the software version that supports this function.)
- (Note-3): Refer to the "Q173D(S)CPU/Q172D(S)CPU Motion controller User's Manual" for a pin configuration.


(Note-4): Refer to the "Servo Amplifier Instruction Manual" for a pin configuration.

(c) When using the Q172DLX/built-in interface in Motion CPU, "Normally open contact input" and "Normally closed contact input" of the system setting can be selected.

When using the proximity dog input (DOG) of servo amplifier/bit device, "Normally open contact input" and "Normally closed contact input" of the servo data setting can be selected.

- (16) Servo ready signal (M2415+20n) Status signal
 - (a) This signal turns on when the servo amplifiers connected to each axis are in the READY state.
 - (b) This signal turns off in the following cases.
 - M2042 is off
 - Servo amplifier is not mounted
 - Servo parameter is not set
 - · It is received the forced stop input from an external source
 - Servo OFF by the servo OFF command (M3215+20n) ON
 - Servo error occurs


Refer to "APPENDIX 1.4 Servo errors" for details.

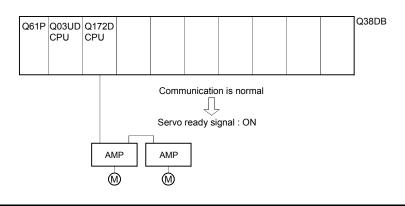

POINT

When the part of multiple servo amplifiers connected to the SSCNET \mathbf{II} (/H) becomes a servo error, only an applicable axis becomes the servo OFF state.

- (17) Torque limiting signal (M2416+20n) Status signal This signal turns on while torque limit is executed. The signal toward the torque limiting axis turns on
- (18) M-code outputting signal (M2419+20n) Status signal(a) This signal turns during M-code is outputting.
 - (b) This signal turns off when the stop command, cancel signal, skip signal or FIN signal are inputted.

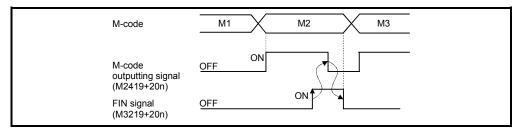


POINTS

- (1) The FIN signal and M-code outputting signal are both for the FIN signal wait function.
- (2) The FIN signal and M-code outputting signal are effective only when FIN acceleration/deceleration is designated in the servo program. Otherwise, the FIN signal wait function is disabled, and the M-code outputting signal does not turn on.

3.1.2 Axis command signals

- (1) Stop command (M3200+20n) Command signal
 - (a) This command is a signal which stop a starting axis from an external source and becomes effective at leading edge of signal. (An axis for which the stop command is turning on cannot be started.)

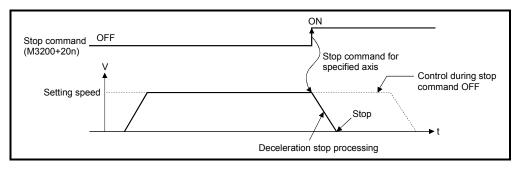

(b) The details of stop processing when the stop command turns on are shown below. (Refer to Section 6.13 or 6.14 for details of the speed control.)

Control details	Processing at the turning stop command on				
during execution	During control	During deceleration stop processing			
Positioning control	•				
Speed control (I, I)	The axis decelerates to a stop in the	The deceleration stop processing is continued.			
JOG operation	deceleration time set in the parameter				
Speed control with	block or servo program.	continuou.			
fixed position stop					
Manual pulse	An immediate stop is executed without	_			
generator operation	deceleration processing.				
Home position return	(1) The axis decelerates to a stop in the deblock.(2) A "stop error during home position returned in the stop of the stop	•			
	stored in the minor error storage register for each axis.				
Speed-torque control	The speed commanded to servo amplifier is "0". The mode is switched to position control mode when "Zero	_			
QDS	speed" turns ON, and the operation	_			
	stops.				


(c) The stop command in a dwell time is invalid. (After a dwell time, the start accept flag (M2001+n) turns OFF, and the positioning complete signal (M2401+20n) turns ON.)

POINT

If it is made to stop by turning on the stop command (M3200+20n) during a home position return, execute the home position return again.

If the stop command is turned on after the proximity dog ON in the proximity dog type, execute the home position return after move to before the proximity dog ON by the JOG operation or positioning.

- (2) Rapid stop command (M3201+20n) Command signal
 - (a) This command stops a starting axis rapidly from an external source and becomes effective at leading edge of signal. (An axis for which the rapid stop command is turning on cannot be started.)

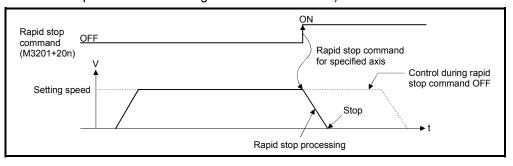

(b) The details of stop processing when the rapid stop command turns on are shown below.

Control details	Processing at the turning rapid stop command on			
during execution	During control	During deceleration stop processing		
Position control				
Speed control (I, I)	The axis decelerates to a rapid stop	Deceleration processing is stopped and rapid stop processing is executed.		
JOG operation	deceleration time set in the parameter			
Speed control with	block or servo program.			
fixed position stop				
Manual pulse	An immediate stop is executed without			
generator operation	deceleration processing.	—		
Home position return	 (1) The axis decelerates to a stop in the rapid stop deceleration time set in the parameter block. (2) A "stop error during home position return" error occurs and the error code [203] is stored in the minor error storage register for each axis. 			
Speed-torque control	The speed commanded to servo amplifier is "0". The mode is switched to position control mode when "Zero speed" turns ON, and the operation stops.	—		

(c) The rapid stop command in a dwell time is invalid. (After a dwell time, the start accept flag (M2001+n) turns OFF, and the positioning complete signal (M2401+20n) turns ON.)

POINT

If it is made to stop rapidly by turning on the rapid stop command (M3201+20n) during a home position return, execute the home position return again. If the rapid stop command turned on after the proximity dog ON in the proximity dog type, execute the home position return after move to before the proximity dog ON by the JOG operation or positioning.


- (3) Forward rotation JOG start command (M3202+20n)/Reverse rotation JOG start command (M3203+20n) Command signal
 - (a) JOG operation to the address increase direction is executed while forward rotation JOG start command (M3202+20n) is turning on.
 When M3202+20n is turned off, a deceleration stop is executed in the deceleration time set in the parameter block.
 - (b) JOG operation to the address decrease direction is executed while reverse rotation JOG start command (M3203+20n) is turning on.
 When M3203+20n is turned off, a deceleration stop is executed in the deceleration time set in the parameter block.

POINT

Take an interlock so that the forward rotation JOG start command (M3202+20n) and reverse rotation JOG start command (M3203+20n) may not turn on simultaneously.

(4) Complete signal OFF command (M3204+20n)

 (a) This command is used to turn off the positioning start complete signal (M2400+20n) and positioning complete signal (M2401+20n).

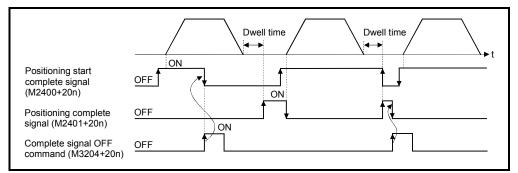


POINT


Do not turn the complete signal OFF command on with a PLS instruction. If it is turned on with a PLS instruction, it cannot be turned off the positioning start complete signal (M2400+20n) and the positioning complete signal (M2401+20n). Be sure to turn OFF the complete signal OFF, command after confirming the positioning start complete signal (M2400+20n) and positioning complete signal (M2401+20n) are OFF. (5) Speed/position switching enable command (M3205+20n)

..... Command signal


- (a) This command is used to make the CHANGE signal (speed/position switching signal) effective from an external source.
 - ON Control switches from speed control to position control when the CHANGE signal turned on.
 - OFF Control does not switch from speed to position control even if the CHANGE signal turns on.

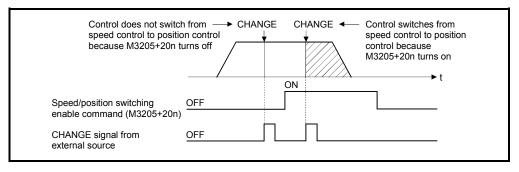

(6) Error reset command (M3207+20n) Command signal This command is used to clear the minor/major error code storage register of an axis for which the error detection signal has turn on (M2407+20n: ON), and reset the error detection signal (M2407+20n).

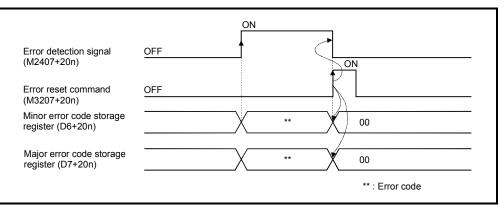

(7) Servo error reset command (M3208+20n) Command signal This command is used to clear the servo error code storage register (D8+20n) of an axis for which the servo error detection signal has turn on (M2408+20n: ON), and reset the servo error detection signal (M2408+20n).

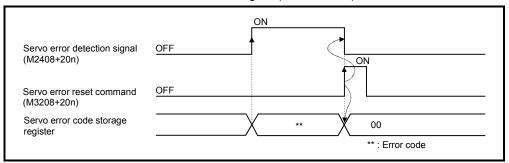

REMARK

Refer to APPENDIX 1 for details on the minor error code, major error code and servo error code storage registers.

(8) External stop input disable at start command (M3209+20n)

..... Command signal

- This signal is used to set the external stop signal input valid or invalid.
- · ON External stop input is set as invalid, and even axes which stop input is turning on can be started.
- OFF External stop input is set as valid, and axes which stop input is turning on cannot be started.

POINT

When it stops an axis with the external stop input after it starts by turning on the external stop input disable at start command (M3209+20n), switch the external stop input from OFF \rightarrow ON (if the external stop input is turning on at the starting, switch it from $ON \rightarrow OFF \rightarrow ON$).

(9) Feed current value update request command (M3212+20n)

..... Command signal

This signal is used to set whether the feed current value will be cleared or not at the starting in speed/position switching control or speed control (I).

- ON The feed current value is not cleared at the starting. The feed current value is updated from the starting.
 - In speed control (I), the software stroke limit is valid.
- OFF The feed current value is cleared at the starting.

In speed/position switching control, the feed current value is updated from the starting.

In speed control (I), "0" is stored in the feed current value. QDS Ver.!

POINT

When it starts by turning on the feed current value update request command (M3212+20n), keep M3212+20n on until completion of the positioning control. If M3212+20n is turned off on the way, the feed current value may not be reliable.



Ver. : Refer to Section 1.3 for the software version that supports this function.

- (10) Servo OFF command (M3215+20n) Command signal This command is used to execute the servo OFF state (free run state).
 M3215+20n: OFF Servo ON
 - M3215+20n: ON Servo OFF (free run state)

Execute this command after positioning completion because it becomes invalid during positioning.

 Turn the power supply of the servo amplifier side off before touching a servomotor, such as machine adjustment.

- (11) Gain changing command (M3216+20n) Command signal This signal is used to change the gain of servo amplifier in the Motion controller by the gain changing command ON/OFF.
 - ON..... Gain changing command ON
 - OFF Gain changing command OFF

Refer to the "Servo amplifier Instruction Manual" for details of gain changing function.

(12) PI-PID switching command (M3217+20n)

..... Command signal

This signal is used to change the PI-PID switching of servo amplifier in the Motion controller by the PI-PID switching command ON/OFF.

- ON.....PI-PID switching command ON(PID control)
- OFF PI-PID switching command OFF(PI control)


Refer to the "Servo amplifier Instruction Manual" for details of PI-PID switching function.

(13) Control loop changing command (M3218+20n)

..... Command signal

When using the fully closed loop control servo amplifier, this signal is used to change the fully closed loop control/semi closed loop control of servo amplifier in the Motion controller by the control loop changing command ON/OFF.

- ON..... During fully closed loop control
- OFF During semi closed loop control

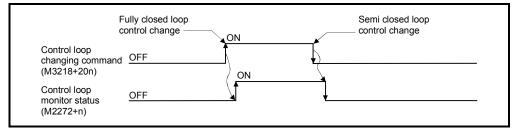

Refer to the "Servo amplifier Instruction Manual" for details of control loop changing function.

POINTS

- (1) When the servo amplifier is not started (LED: "AA", "Ab", "AC", "Ad" or "AE"), if the control loop changing command is turned ON/OFF, the command becomes invalid.
- (2) When the following are operated during the fully closed loop, it returns to the semi closed loop control.
 - (a) Power supply OFF or reset of the Multiple CPU system
 - (b) Wire breakage of the SSCNET**I** cable between the servo amplifier and Motion controller
 - (c) Control circuit power supply OFF of the servo amplifier
- (14) FIN signal (M3219+20n) Command signal When a M-code is set in a servo program, transit to the next block does not execute until the FIN signal changes as follows: OFF → ON → OFF. Positioning to the next block begins after the FIN signal changes as above.

It is valid, only when the FIN acceleration/deceleration is set and FIN signal wait function is selected.

	<k 0=""> —</k>		_	Point <u>1 WAIT 2</u>
Point	CPSTART2 Axis Axis Speed	1 2	10000	M-code 10
1	FIN ABS-2		10000	M-code outputting signal (M2419+20n)
2	Axis Axis M-code	1, 2,	200000 200000 10	FIN signal (M3219+20n)
2	ABS-2 Axis Axis M-code	1, 2,	300000 250000	Timing Chart for Operation Description 1. When the positioning of point 1 starts, M-code 10 is output and
3	ABS-2 Axis Axis	1, 2.	11 350000 300000	the M-code outputting signal turns on.2. FIN signal turns on after performing required processing in the
4	M-code ABS-2 Axis	2,	400000 12	Motion SFC program. Transition to the next point does not execute until the FIN signal turns on.
	Axis CPEND	1, 2,	400000 400000	When the FIN signal turns on, the M-code outputting signal turns off.
				When the FIN signal turns off after the M-code outputting signal turns off, the positioning to the next point 2 starts.

POINTS

- (1) The FIN signal and M-code outputting signal are both signal for the FIN signal wait function.
- (2) The FIN signal and M-code outputting signal are valid only when FIN acceleration/deceleration is designated in the servo program. Otherwise, the FIN signal wait function is disabled, and the M-code outputting signal does not turn on.

3.1.3 Common devices


POINTS

(1) Internal relays for positioning control are not latched even within the latch range.(2) The range devices allocated as internal relays for positioning control cannot be used by the user even if their applications have not been set.

- (1) PLC ready flag (M2000) Command signal
 (a) This signal informs the Motion CPU that the PLC CPU is normal.
 - 1) The positioning control, home position return, JOG operation or manual pulse generator operation using the servo program which performs the Motion SFC program when the M2000 is ON.
 - The above 1) control is not performed even if the M2000 is turned on during the test mode [TEST mode ON flag (SM501): ON] using MT Developer2.
 - (b) The setting data such as the fixed parameters, servo parameters and limit switch output data can be changed using MT Developer2 when the M2000 is OFF only.

The above data using MT Developer2 cannot be written when the M2000 is ON.

- (c) The following processing are performed when the M2000 turns OFF to ON.1) Processing details
 - Clear the M-code storage area of all axes.
 - Turn the PCPU READY complete flag (SM500) on. (Motion SFC program can be executed.)
 - Start to execute the Motion SFC program of the automatic starting from the first.
 - If there is a starting axis, an error occurs, and the processing in above (c) 1) is not executed.

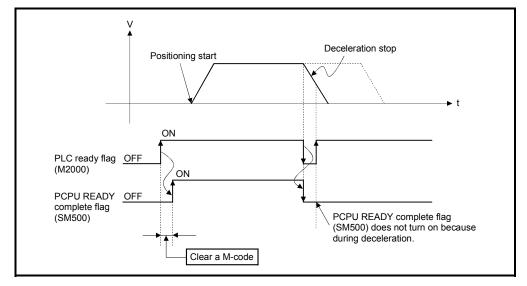

 The processing in above (c) 1) is not executed during the test mode. It is executed when the test mode is cancelled and M2000 is ON.

- (d) The following processes are performed when the M2000 turns ON to OFF.
 - 1) Processing details
 - Turn the PCPU READY complete flag (SM500) off.
 - Deceleration stop of the starting axis.
 - Stop to execute the Motion SFC program.
 - Turn all points of the real output PY off.
- (e) Operation at STOP to RUN

Set the condition in which the PLC ready flag (M2000) turns ON. Select the following either.

- M2000 turns ON by switching from STOP to RUN. (Default) Condition in which the M2000 turns from OFF to ON.
 - Move the RUN/STOP switch from STOP to RUN.
 - Turn ON the Multiple CPU system's power supply with the RUN/STOP switch set to RUN.

Condition in which the M2000 turns from ON to OFF

- Move the RUN/STOP switch from RUN to STOP.
- M2000 turns ON by switching from STOP to RUN and by setting "1" in the setting register.


Condition in which the M2000 turns from OFF to ON

• Set "1" in the setting register (D704) of the PLC ready flag or turn ON the PLC ready flag (M3072) with the RUN/STOP switch set to RUN. (The Motion CPU detects the change from "0" to "1" in the lowest bit of D704.)


Condition in which the M2000 turns from ON to OFF

- Set "0" in the setting register (D704) of the PLC ready flag or turn OFF the PLC ready flag (M3072) with the RUN/STOP switch set to RUN. (The Motion CPU detects the change from "1" to "0" in the lowest bit of D704.)
- Move the RUN/STOP switch from RUN to STOP.
- (2) Start accept flag (M2001 to M2032) Status signal
 - (a) This flag turns on when the servo program is started. The start accept flag corresponding to an axis specified with the servo program turns on.
 - (b) The ON/OFF processing of the start accept flag is shown below.
 - When the servo program is started using the Motion SFC program or Motion dedicated PLC instruction (D(P).SVST), the start accept flag corresponding to an axis specified with the servo program turns on and it turns off at the positioning completion. This flag also turns off when it is made to stopping on the way.

(When it is made to stop on the way by the speed change to speed "0", this flag remains on.)

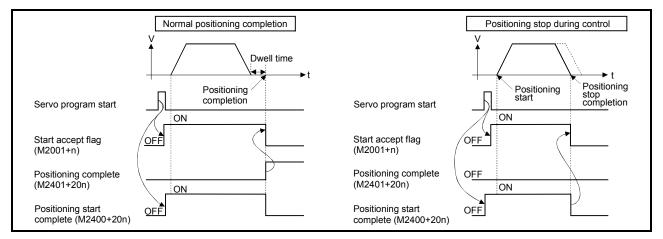

- 2) This flag turns on at the positioning control by turning on the JOG start command (M3202+20n or M3203+20n), and turns off at the positioning stop by turning off the JOG start command.
- This flag turns on during the manual pulse generator enable (M2051 to M2053: ON), and turns off at the manual pulse generator disable (M2051 to M2053: OFF).
- This flag turns on during a current value change by the CHGA instruction of servo program or Motion dedicated PLC instruction (D(P).CHGA), and turns off at the completion of the current value change.



Axis No.	Device No.						
1	M2001	9	M2009	17	M2017	25	M2025
2	M2002	10	M2010	18	M2018	26	M2026
3	M2003	11	M2011	19	M2019	27	M2027
4	M2004	12	M2012	20	M2020	28	M2028
5	M2005	13	M2013	21	M2021	29	M2029
6	M2006	14	M2014	22	M2022	30	M2030
7	M2007	15	M2015	23	M2023	31	M2031
8	M2008	16	M2016	24	M2024	32	M2032

The start accept flag list is shown below.

(Note): The following range is valid. • Q172DSCPU : Axis No.1 to 16


• Q172DCPU(-S1): Axis No.1 to 8

- Do not turn the start accept flags ON/OFF in the user side.
 - If the start accept flag is turned off using the Motion SFC program or MT Developer2 while this flag is on, no error will occur but the positioning operation will not be reliable. Depending on the type of machine, it might operate in an unanticipated operation.
 - If the start accept flag is turned on using the Motion SFC program or MT Developer2 while this flag is off, no error will occur but the "start accept on error" will occur at the next starting and cannot be started.
 - (3) Motion error history clear request flag (M2035)

...... Command signal This flag is used to clear the backed-up Motion error history (#8640 to #8735). The Motion error history is cleared at leading edge of M2035. After detection of leading edge of M2035, the Motion error history is cleared, and then the M2035 is automatically turned OFF.

- (4) Motion SFC debugging flag (M2038) Status signal This flag turns on when it switches to the debug mode of the Motion SFC program using MT Developer2. It turns off with release of the debug mode.

- (6) Speed switching point specified flag (M2040) Command signal This flag is used when the speed change is specified at the pass point of the constant speed control.
 - (a) By turning M2040 on before the starting of the constant speed control (before the servo program is started), control with the change speed can be executed from the first of pass point.
 - OFF Speed is changed to the specified speed from the pass point of the constant speed control.
 - ON Speed has been changed to the specified speed at the pass point of the constant speed control.

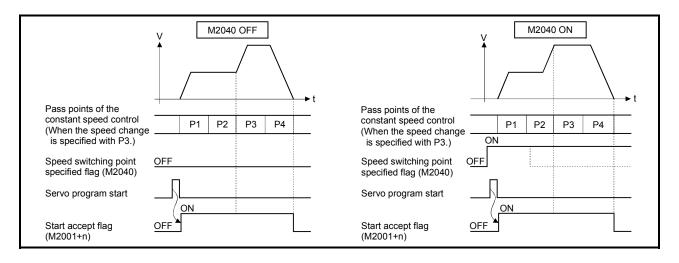

- (7) System setting error flag (M2041) Status signal This flag inputs the "system setting data" set by MT Developer2 and performs an adjustment check with a real mounting state (main base unit/extension base units) at Multiple CPU system's power supply on or reset.
 - ON Error
 - OFF Normal
 - (a) When an error occurs, the 7-segment LED at the front side of Motion CPU shows the system setting error.

The error contents can be confirmed using the monitor of MT Developer2.

(b) When M2041 is ON, positioning cannot be started. Remove an error factor, and turn the Multiple CPU system's power supply on again or reset.

REMARK


Even if the module which is not set as the system setting of MT Developer2 is installed in the slot, it is not set as the object of an adjustment check. And, the module which is not set as the system setting cannot be used in the Motion CPU.

(8) All axes servo ON command (M2042) Command signal This command is used to enable servo operation.
 (a) Servo operation enabled M2042 turns on while the servo OFF command

(M3215+20n) is off and there is no servo error.

- (b) Servo operation disable M2042 is off
 - The servo OFF command (M3215+20n) is on
 - Servo error state
 - Forced stop

Execute this command after positioning completion because it becomes invalid during positioning.

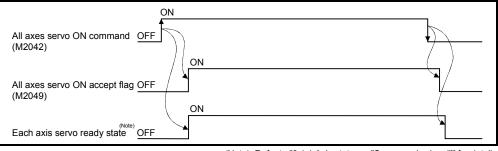

(Note): Refer to "3.1.1 Axis statuses "Servo ready signal"" for details.

POINT

When M2042 turns ON, it is not turned off even if the Motion CPU is set in the STOP state.

M2042 turns OFF by the forced stop of Motion CPU.

- (9) Motion slot fault detection flag (M2047) Status signal This flag is used as judgement of which modules installed in the slot of Motion management are "normal" or "abnormal".
 - ON Installed module is abnormal
 - OFF Installed module is normal

The module information at the power supply on and after the power supply ON are always checked, and errors are detected.

- (a) When M2047 turns OFF in operation, the operating axis decelerates to a stop.
- (b) When an error occurs, the 7-segment LED at the front side of Motion CPU shows the system setting error.

The error contents can be confirmed using the monitor of MT Developer2.

(c) When M2047 is ON, positioning cannot be started. Remove an error factor, and turn the Multiple CPU system's power supply on again or reset.

(10) JOG operation simultaneous start command (M2048)

..... Command signal

- (a) When M2048 turns on, JOG operation simultaneous start based on the JOG operation execution axis set in the JOG operation simultaneous start axis setting register (D710 to D713).
- (b) When M2048 turns OFF, the operating axis decelerates to a stop.
- (11) All axes servo ON accept flag (M2049) Status signal This flag turns on when the Motion CPU accepts the all axes servo ON command (M2042).

Since the servo ready state of each axis is not checked, confirm it in the servo ready signal (M2415+20n).

<u>ON</u>	
All axes servo ON command OFF (M2042)	
All axes servo ON accept flag OFF (M2049)	
Each axis servo ready state OFF	

(Note): Refer to "3.1.1 Axis statuses "Servo ready signal"" for details.

(12) Manual pulse generator enable flag (M2051 to M2053)

..... Command signal

This flag set the enabled or disabled state for positioning with the pulse input from the manual pulse generators connected to P1 to P3 ^(Note) of the Q173DPX.

- ON Positioning control is executed by the input from the manual pulse generators.
- OFF Positioning control cannot be executed by the manual pulse generators because of the input from the manual pulse generators is ignored.

Default value is invalid (OFF).


REMARK

(Note): Refer to the "Q173D(S)CPU/Q172D(S)CPU User's Manual" for P1 to P3 connector of the Q173DPX.

- (13) Operation cycle over flag (M2054) Status signal This flag turns on when the time concerning motion operation exceeds the operation cycle of the Motion CPU setting (SD523). Perform the following operation, in making it turn off.
 - Turn the power supply of the Multiple CPU system on to off
 - Reset the Multiple CPU system
 - Reset using the user program
 - [Error measures]
 - 1) Change the operation cycle into a large value in the system setting.
 - 2) The number of instruction completions of an event task or NMI task in the Motion SFC program.
- (14) Speed change accepting flag (M2061 to M2092)

..... Status signal

This flag turns on during speed change by the control change (CHGV) instruction (or Motion dedicated PLC instruction (D(P).CHGV)) of the Motion SFC program.

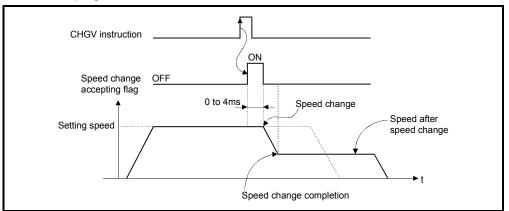

Axis No.	Device No.						
1	M2061	9	M2069	17	M2077	25	M2085
2	M2062	10	M2070	18	M2078	26	M2086
3	M2063	11	M2071	19	M2079	27	M2087
4	M2064	12	M2072	20	M2080	28	M2088
5	M2065	13	M2073	21	M2081	29	M2089
6	M2066	14	M2074	22	M2082	30	M2090
7	M2067	15	M2075	23	M2083	31	M2091
8	M2068	16	M2076	24	M2084	32	M2092

The speed change accepting flag list is shown below.


(Note): The following range is valid. • Q172DSCPU : Axis No.1 to 16


• Q172DCPU(-S1) : Axis No.1 to 8

REMARK

In the SV22 virtual mode, the flag is that of the virtual servomotor axis.

- (15) Automatic decelerating flag (M2128 to M2159) Status signal This signal turns on while automatic deceleration processing is performed during the positioning control or position follow-up control.
 - (a) This flag turns on while automatic deceleration to the command address at the position follow-up control, but it turns off if the command address is changed.
 - (b) This signal turns on while automatic deceleration processing is performed during execution of positioning to final point while in constant speed control.

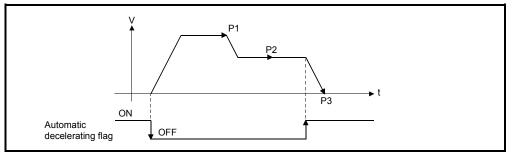

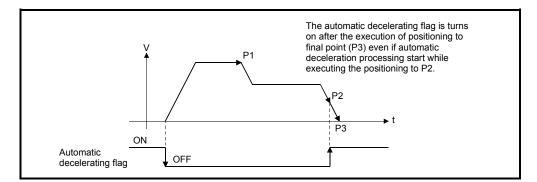


POINT

Set a travel value in which automatic deceleration processing can be started at the final positioning point, therefore the automatic decelerating flag turns on at the start point of automatic deceleration processing after this final point.

- (c) The signal turns off when all normal start complete commands became achieve.
- (d) The automatic decelerating flag (M2128 to M2159) might be turned ON even during acceleration at advanced S-curve acceleration/deceleration.

- (e) In any of the following cases, this flag does not turn off.
 - When deceleration due to JOG signal off
 - During manual pulse generator operation
 - During deceleration due to stop command or stop cause occurrence
 - When travel value is 0

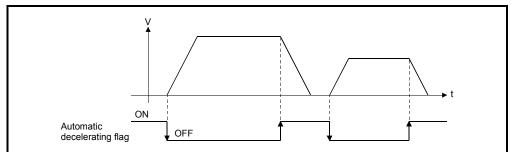

The automatic decelerating flag list is shown below.

Axis No.	Device No.						
1	M2128	9	M2136	17	M2144	25	M2152
2	M2129	10	M2137	18	M2145	26	M2153
3	M2130	11	M2138	19	M2146	27	M2154
4	M2131	12	M2139	20	M2147	28	M2155
5	M2132	13	M2140	21	M2148	29	M2156
6	M2133	14	M2141	22	M2149	30	M2157
7	M2134	15	M2142	23	M2150	31	M2158
8	M2135	16	M2143	24	M2151	32	M2159

(Note): The following range is valid. • Q172DSCPU : Axis No.1 to 16

• Q172DCPU(-S1) : Axis No.1 to 8


REMARK

In the SV22 virtual mode, the flag is that of the virtual servomotor axis.

(16) Speed change "0" accepting flag (M2240 to M2271)

This flag turns on while a speed change request to speed "0" or negative speed

change request is being accepted. It turns on when the speed change request to speed "0" or negative speed change request is accepted during a start. After that, this signal turns off when a speed change is accepted or on completion of a stop due to a stop cause.

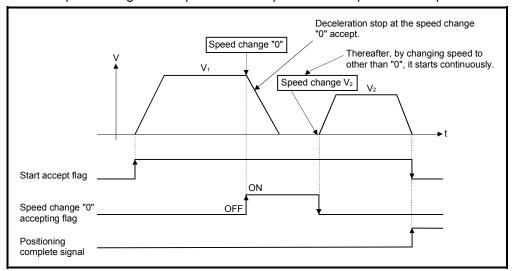

The speed change "0" accepting flag list is shown below.

Axis No.	Device No.						
1	M2240	9	M2248	17	M2256	25	M2264
2	M2241	10	M2249	18	M2257	26	M2265
3	M2242	11	M2250	19	M2258	27	M2266
4	M2243	12	M2251	20	M2259	28	M2267
5	M2244	13	M2252	21	M2260	29	M2268
6	M2245	14	M2253	22	M2261	30	M2269
7	M2246	15	M2254	23	M2262	31	M2270
8	M2247	16	M2255	24	M2263	32	M2271

(Note): The following range is valid. • Q172DSCPU : Axis No.1 to 16


• Q172DCPU(-S1): Axis No.1 to 8

REMARK


- (1) Even if it has stopped, when the start accept flag (M2001 to M2032) is ON state, the state where the request of speed change "0" is accepted is indicated. Confirm by this speed change "0" accepting flag.
- (2) During interpolation, the flags corresponding to the interpolation axes are set.
- (3) In any of the following cases, the speed change "0" request is invalid.
 - After deceleration by the JOG signal off
 - During manual pulse generator operation
 - After positioning automatic deceleration start
 - After deceleration due to stop cause
- (4) During the SV22 virtual mode, the flag is that of the virtual servomotor axis.


- (a) The flag turns off if a speed change request occurs during deceleration to a stop due to speed change "0".

(b) The flag turns off if a stop cause occurs after speed change "0" accept.

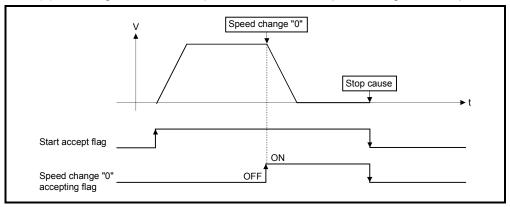

(c) The speed change "0" accepting flag does not turn on if a speed change "0" occurs after an automatic deceleration start.

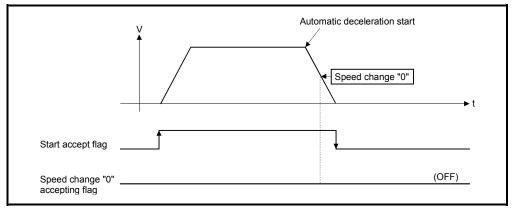

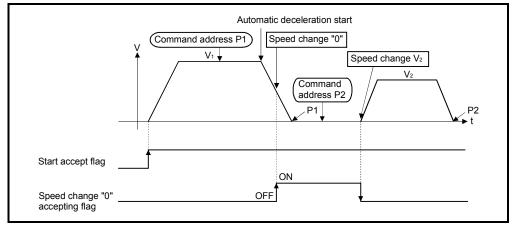

(d) Even if it is speed change "0" after the automatic deceleration start to the "command address", speed change "0" accepting flag turns on.

REMARK

It does not start, even if the "command address" is changed during speed change "0" accepting.


(17) Control loop monitor status (M2272 to M2303)

When using the fully closed loop control servo amplifier, this signal is used to

check the fully closed loop control/semi closed loop control of servo amplifier.

- ON During fully closed loop control
- OFF During semi closed loop control

It can be changed the fully closed loop control/semi closed loop control of servo amplifier in the Motion controller by the control loop changing command ON/OFF.

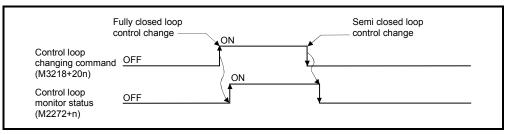

The Control loop monitor status list is shown below.

Axis No.	Device No.						
1	M2272	9	M2280	17	M2288	25	M2296
2	M2273	10	M2281	18	M2289	26	M2297
3	M2274	11	M2282	19	M2290	27	M2298
4	M2275	12	M2283	20	M2291	28	M2299
5	M2276	13	M2284	21	M2292	29	M2300
6	M2277	14	M2285	22	M2293	30	M2301
7	M2278	15	M2286	23	M2294	31	M2302
8	M2279	16	M2287	24	M2295	32	M2303

(Note): The following range is valid.

• Q172DSCPU : Axis No.1 to 16

• Q172DCPU(-S1): Axis No.1 to 8

3.2 Data Registers

	SV13		S\	/22	
Device		Vi	rtual mode switching method	Advan	ced synchronous control method
No.	Purpose	Device No.	Purpose	Device No.	Purpose
D0 to	Axis monitor device (20 points \times 32 axes)	D0 to	Axis monitor device (20 points \times 32 axes) Real mode : Each axis Virtual mode : Output module	D0 to	Axis monitor device (20 points \times 32 axes)
D640 to	Control change register (2 points \times 32 axes)	D640 to	Control change register (2 points × 32 axes)	D640 to	Control change register (2 points \times 32 axes)
D704	Common device	D704	Common device	D704	Common device
to	(Command signal) (54 points)	to	(Command signal) (54 points)	to	(Command signal) (54 points)
D758	Unusable	D758	Unusable	D758	Unusable
to	(42 points)	to	(42 points)	to	(42 points)
D800		D800 to	Virtual servomotor axis monitor device $^{(Note-1)}$ (10 points \times 32 axes)	D800	
to	User device (7392 points)	D1120 to D1240 to	Synchronous encoder axis monitor device (10 points \times 12 axes) Cam axis monitor device ^(Note-1) (10 points \times 32 axes)	to	User device (7392 points)
D8191		D1560 to D8191	User device (6632 points)	D8191	
	/		/	D8192	User device
				to	(2048 points) QDS (Ver.)
				D10240	System area
				to D12280	(2040 points) CDSK Ver Servo input axis monitor device
				to	(10 points × 32 axes)
				D12600 to	Command generation axis monitor device (20 points × 32 axes)
				D13240 to	Synchronous encoder axis monitor device
					(20 points × 12 axes) QDS(Ver.)
				D13480 to	Unusable (120 points) @DSK VerD
/	/	/	/	D13600 to	Output axis monitor device (30 points × 32 axes)
				D14560 to D14599	Unusable (40 points) @DSK @@

(1) Data register list

Ver. Refer to Section 1.3 for the software version that supports this function.

	SV13		SV	/22	
Device		Vii	tual mode switching method	Advan	ced synchronous control method
No.	Purpose	Device No.	Purpose	Device No.	Purpose
	/		/	D14600	Servo input axis control device
				to	(2 points × 32 axes)
				D14664	Unusable
				to	(16 points)
				D14680	Command generation axis control
				to	device
					(4 points × 32 axes)
				D14808	
			· · · · · ·	to	(12 points) QDSK Ver
				D14820	Synchronous encoder axis control device
				to	(10 points \times 12 axes) QDS (
				D14940	Unusable
				to	(60 points) QDS (Ver.)
/	/		/	D15000	Output axis control device
				to	(150 points × 32 axes)
				D19800	Unusable
				to	(24 points) QDS Ver
/		\vee		D19823	

Data register list (Continued)

It can be used as a user device.

(Note-1): It can be used as a user device in the SV22 real mode only.

POINT

- Total number of user device points • SV13
- - SV22 virtual mode switching method
- : 7392 points : 6632 points ^(Note)
- SV22 advanced synchronous control method : 9440 points @DS(Ver)
- (Note): Up to 7272 points can be used when not using it in the virtual mode.

Ver.! : Refer to Section 1.3 for the software version that supports this function.

Axis No.	Device No.			Signal name			
1	D0 to D19						
2	D20 to D39		Oireach a seas s	Defre ek evele		1.1 14	Signal
3	D40 to D59		Signal name	Refresh cycle	Fetch cycle	Unit	direction
4	D60 to D79	0	E a d anna a trachas				
5	D80 to D99	1	Feed current value		/	Command	
6	D100 to D119	2	Deel europhiselise	One settion availa	/	unit	
7	D120 to D139	3	Real current value	Operation cycle	/		
8	D140 to D159	4				PLS	
9	D160 to D179	5	Deviation counter value			PLS	
10	D180 to D199	6	Minor error code	Immediate			
11	D200 to D219	7	Major error code	Immediate		—	
12	D220 to D239	8	Servo error code	Main cycle			Monitor
13	D240 to D259	9	Home position return re-			PLS	device
14	D260 to D279	9	travel value	Operation evalu		PL3	
15	D280 to D299	10	Travel value after proximity	Operation cycle		Command	
16	D300 to D319	11	dog ON			unit	
17	D320 to D339	12	Execute program No.	At start			
18	D340 to D359	13	M-code	Operation cycle			
19	D360 to D379	14	Torque limit value			%	
20	D380 to D399	15	Data set pointer for constant-	At start/during start	/		
21	D400 to D419		speed control	At start during start	/		
22	D420 to D439	16	Unusable (Note-1)				
23	D440 to D459	17	Grusable	—			
24	D460 to D479	18	Real current value at stop	Operation cycle		Command	Monitor
25	D480 to D499	19	input	operation cycle		unit	device
26	D500 to D519						
27	D520 to D539						
28	D540 to D559						
29	D560 to D579						
30	D580 to D599						
31	D600 to D619						
32	D620 to D639						

(2) Axis monitor device list

(Note-1): It can be used as the travel value change register. The travel value change register can be set to the device optionally in the servo program. Refer to Section 6.15 for details.

 POINT

 (1) The following range is valid.

 • Q172DSCPU

 : Axis No.1 to 16

 • Q172DCPU(-S1): Axis No.1 to 8

 (2) The following device area can be used as a user device.

 • Q172DSCPU

 : 17 axes or more

 • Q172DCPU(-S1):

 9 axes or more

 However, when the project of Q172DSCPU/Q172DCPU(-S1) is replaced with Q173DSCPU/Q173DCPU(-S1), this area cannot be used as a user device.

3 POSITIONING DEDICATED SIGNALS

	1	()	Control change reg				
Axis No.	Device No.			Signal name			
1	D640, D641						
2	D642, D643						Signal
3	D644, D645		Signal name	Refresh cycle	Fetch cycle	Unit	direction
4	D646, D647	0	100 second softlines		A b c b c d	Command	Command
5	D648, D649	1	JOG speed setting		At start	unit	device
6	D650, D651						
7	D652, D653						
8	D654, D655						
9	D656, D657						
10	D658, D659						
11	D660, D661						
12	D662, D663						
13	D664, D665						
14	D666, D667						
15	D668, D669						
16	D670, D671						
17	D672, D673						
18	D674, D675						
19	D676, D677						
20	D678, D679						
21	D680, D681						
22	D682, D683						
23	D684, D685						
24	D686, D687						
25	D688, D689						
26	D690, D691						
27	D692, D693						
28	D694, D695						
29	D696, D697						
30	D698, D699						
31	D700, D701						
32	D702, D703						

(3) Control change register list

POINT	
(1) The followi	ng range is valid.
• Q172DS0	CPU : Axis No.1 to 16
• Q172DCI	PU(-S1): Axis No.1 to 8
(2) The followi	ng device area can be used as a user device.
• Q172DS0	CPU : 17 axes or more
• Q172DCI	PU(-S1): 9 axes or more
However, v	when the project of Q172DSCPU/Q172DCPU(-S1) is replaced with
Q173DSCI	PU/Q173DCPU(-S1), this area cannot be used as a user device.

Device No.	Signal name	Refresh cycle	Fetch cycle	Signal direction	Device No.	Signal name	Refresh cycle	Fetch cycle	Signal direction
D704	PLC ready flag request				D752	Manual pulse generator 1 smoothing magnification setting register	/		
D705	Speed switching point specified flag request				D753	Manual pulse generator 2 smoothing magnification setting register		At the manual pulse generator enable flag	
D706	All axes servo ON command request		Main cycle	Command device	D754	Manual pulse generator 3 smoothing magnification setting register			Command device
D707	Real mode/virtual mode switching request (SV22) (Note-1)				D755	Manual pulse generator 1 enable flag request			
D708	JOG operation simultaneous start command request	/			D756	Manual pulse generator 2 enable flag request		Main cycle	
	Unusable	_	-	-	D757	Manual pulse generator 3 enable flag request	/		
D710 D711	JOG operation simultaneous				D758 D759				
D712	start axis setting register		At start		D760				
D713 D714	Manual pulse generator axis	/			D761 D762				
D715	1 No. setting register	/			D763				
D716	Manual pulse generator axis	/			D764				
D717 D718	2 No. setting register Manual pulse generator axis	/			D765 D766				
D719	3 No. setting register				D767				
D720	Axis 1				D768				
D721 D722	Axis 2 Axis 3				D769 D770				
D722	Axis 4				D771				
D724	Axis 5				D772				
D725	Axis 6				D773				
D726 D727	Axis 7 Axis 8				D774 D775	•			
D728	Axis 9				D776				
D729	Axis 10				D777				
D730 D731	Axis 11 Axis 12			Command device	D778 D779	Unusable (42 points)	—	—	—
D732	Axis 13		At the manual pulse generator enable flag		D780				
D733	Axis 14				D781				
D734 D735	Axis 15 Manual pulse Axis 16 generators 1 pulse				D782 D783				
D736	input magnification				D784				
D737	Axis 17 Axis 18 (Note-2), (Note-3)				D785				
D738	Axis 19				D786				
D739 D740	Axis 20 Axis 21	/			D787 D788				
D741	Axis 22	/			D789				
D742	Axis 23	/			D790				
D743	Axis 24	/			D791				
D744 D745	Axis 25 Axis 26	/			D792 D793				
D746	Axis 27	/			D794				
D747	Axis 28	/			D795				
D748	Axis 29	/			D796				
D749	Axis 30 Axis 31	//			D797				
D750 D751	Axis 31 Axis 32	V			D798 D799				
2.31			1		2.00		hla in the SV/22 ad		

(4) Common device list

(Note-1): It is unusable in the SV22 advanced synchronous control.

(Note-2): The following range is valid.

• Q172DSCPU : Axis No.1 to 16

 \bullet Q172DCPU(-S1) $\,$: Axis No.1 to 8 (Note-3): The following device area is unusable.

• Q172DSCPU : 17 axes or more

• Q172DCPU(-S1) : 9 axes or more

3.2.1 Axis monitor devices

The monitoring data area is used by the Motion CPU to store data such as the feed current value during positioning control, the real current value and the deviation counter value.

It can be used to check the positioning control state using the Motion SFC program. The user cannot write data to the monitoring data area.

Refer to "APPENDIX 4 Processing Times of the Motion CPU" for the delay time between a positioning device (input, internal relay and special relay) turning on/off and storage of data in the monitor data area.

(1) Feed current value storage register (D0+20n, D1+20n)

..... Monitor device

- (a) This register stores the target address output to the servo amplifier on the basis of the positioning address/travel value specified with the servo program.
 - 1) A part for the amount of the travel value from "0" after starting is stored in the fixed-pitch feed control.
 - The current value from address at the time of starting is stored in the speed/position switching control.
 However, the address at the time of starting varies depending on the ON/OFF state of the feed current value update command (M3212+20n) at the start.
 - M3212+20n: OFF Resets the feed current value to "0" at the start.
 - M3212+20n: ON Not reset the feed current value at the start.
 - 3) "0" is stored during speed control.
- (b) The stroke range check is performed on this feed current value data.

(2) Real current value storage register (D2+20n, D3+20n)

..... Monitor device

- (a) This register stores the real current value which took the droop pulses of the servo amplifier into consideration to the feed current value.
- (b) The "feed current value" is equal to the "real current value" in the stopped state.

- (4) Minor error code storage register (D6+20n) Monitor device
 - (a) This register stores the corresponding error code (Refer to APPENDIX 1.2.) at the minor error occurrence. If another minor error occurs after error code storing, the previous error code is overwritten by the new error code.
 - (b) Minor error codes can be cleared by an error reset command (M3207+20n).
- (5) Major error code storage register (D7+20n) Monitor device
 - (a) This register stores the corresponding error code (Refer to APPENDIX 1.3.) at the major error occurrence. If another major error occurs after error code storing, the previous error code is overwritten by the new error code.
 - (b) Major error codes can be cleared by an error reset command (M3207+20n).
- (6) Servo error code storage register (D8+20n) Monitor device
 - (a) This register stores the corresponding error code (Refer to APPENDIX 1.4.) at the servo error occurrence. If another servo error occurs after error code storing, the previous error code is overwritten by the new error code.
 - (b) Servo error codes can be cleared by an error reset command (M3208+20n).
- (7) Home position return re-travel value storage register (D9+20n) Monitor device

If the position stopped in the position specified with the travel value after proximity dog ON (Refer to Section 6.23.1) using MT Developer2 is not zero point, it made to travel to zero point by re-travel in the Motion CPU. The travel value (signed) of making it travel to zero point by re-travel at this time is stored. (Data does not change with the last value in the data setting type.) The following value is stored according to the number of feedback pulses of the motor connected.

Number of feedback pulses	Storage data
Less than 131072[PLS]	Feedback pulses ^(Note)
131072[PLS] or more, 262144[PLS] or less	1/10 of feedback pulses
More than 262144[PLS]	1/10000 of feedback pulses

(Note): Refer to the motion register (#8006+20n, #8007+20n).

(8) Travel value after proximity dog ON storage register

(D10+20n, D11+20n) Monitor device

- (a) This register stores the travel value (unsigned) from the proximity dog ON to home position return completion after the home position return start.
- (b) The travel value (unsigned) of the position control is stored at the time of speed/position switching control.

(9)	Exe	ecute program No. storage register (D12+20n)
		Monitor device
	(a)	This register stores the starting program No. at the servo program starting.
	(b)	The following value is stored in the JOG operation and manual pulse generator operation.
		1) JOG operation FFFFh
		2) Manual pulse generator operation FFFEh
		3) Speed control
		4) Torque control @DSK
		5) Continuous operation to torque control
		6) Power supply on FF00h
		7) Current value change execution
		by the Motion dedicated instruction FFE0h
	(C)	When the following control is being executed using MT Developer2 in the
		test mode, FFFDh is stored in this register.
		Home position return
(10)) M-	-code storage register (D13+20n) Monitor device
(,	, (a)	
	(0)	the positioning start.
		If M-code is not set in the servo program, the value "0" is stored.
	(b)	It does not change except positioning start using the servo program.
	(C)	The value "0" is stored at leading edge of PLC ready flag (M2000).
R	EMA	ARK
(N	lote):	Refer to the following sections for M-codes and reading M-codes.
		• M-code Section 7.1
		Reading M-code APPENDIX 2.1

(11) Torque limit value storage register (D14+20n) Monitor device This register stores the torque limit value imposed on the servo amplifier. The default value "300[%]" is stored at the power supply of servo amplifier ON.

(12) Data set pointer for constant-speed control (D15+20n)


..... Monitor device

This pointer is used in the constant-speed control when specifying positioning data indirectly and substituting positioning data during operation.


It stores a "point" that indicates which of the values stored in indirect devices has been input to the Motion CPU when positioning is being repeated by using a repetition instructions (FOR-TIMES, FOR-ON or FOR-OFF).

Use this pointer in conjunction with the updated data set pointer (controlled by the user in the Motion SFC program) - which indicates the extent to which the positioning data has been updated using the Motion SFC program - to confirm which positioning data is to be updated.

Data set pointer for constant-speed control and updated data set pointer are described here using the example servo program below.

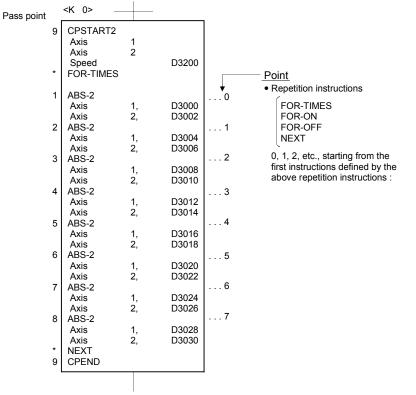

The input situation of positioning data to the Motion CPU is shown the next page by executing the 2-axes constant-speed control using above the servo program and updating the positioning data in indirect devices D3000 to D3006.

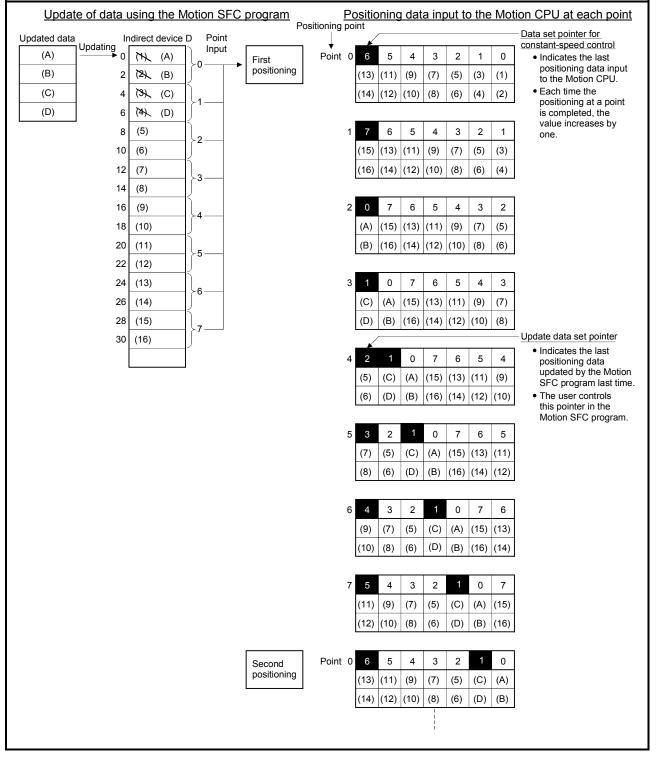

[Input situation of positioning data in the Motion CPU]

The internal processing shown above is described in the next page.

[Internal processing]

- (a) The positioning data ((1) to (14)) of points 0 to 6 is input to the Motion CPU by the starting. The last point "6" of the input data to be input is stored in the data set pointer for constant-speed control at this time.
 The "6" stored in the data set pointer for constant-speed control indicates that updating of the positioning data stored in points 0 to 6 is possible.
- (b) The positioning data ((A) to (D)) of points 0 to 1 is updated using the Motion SFC program.

The last point "1" of the positioning data to be rewritten is stored in the updated data set pointer (which must be controlled by the user in the Motion SFC program). Updating of positioning data of points 2 to 6 (data (5) to (14)) remains possible.

- (c) On completion of the positioning for point 0, the value in the data set pointer for constant-speed control is automatically incremented by one to "7". The positioning data ((1) to (2)) of point 0 is discarded and the positioning data ((15) to (16)) for point 7 is input to the Motion CPU at this time.
- (d) Hereafter, whenever positioning of each point is completed, the positioning data shifts one place.

The positioning data that can be updated is the data after that indicated by the updated data set pointer: this is the data which has not yet been input to the Motion CPU.

Even if the values of the indirect devices D8 and D10 are updated by the Motion SFC program after the positioning completion of the point 3, the positioning data of point 2 that is input to the Motion CPU will not be updated and the second positioning will be executed using the unupdated data. The data set pointer for constant-speed control has not yet been input to the Motion CPU, and indicates the positioning data which a user can update using the Motion SFC program.

POINT

Number of points that can be defined by a repeat instruction

- Create the servo program at least eight points.
- If there are less than eight points and they include pass points of few travel value, the positioning at each point may be completed, and the data input to the Motion CPU, before the data has been updated using the Motion SFC program.
- Create a sufficient number of points to ensure that data will not be input before the Motion CPU has updated the values in the indirect devices.
- (13) Real current value at STOP input storage register (D18+20n, D19+20n) Monitor device This register stores the real current value at the STOP signal (STOP) input of the Q172DLX.

3.2.2 Control change registers

This area stores the JOG operation speed data.

	Table 3.1	Data stor	age area f	or control c	change list	
Axis 1	Axis 2	Axis 3	Axis 4	Axis 5	Axis 6	Axis 7

Name	Axis 1	Axis 2	Axis 3	Axis 4	Axis 5	Axis 6	Axis 7	Axis 8
	D641, D640	D643, D642	D645, D644	D647, D646	D649, D648	D651, D650	D653, D652	D655, D654
	Axis 9	Axis 10	Axis 11	Axis 12	Axis 13	Axis 14	Axis 15	Axis 16
JOG speed	D657, D656	D659, D658	D661, D660	D663, D662	D665, D664	D667, D666	D669, D668	D671, D670
setting	Axis 17	Axis 18	Axis 19	Axis 20	Axis 21	Axis 22	Axis 23	Axis 24
register	D673, D672	D675, D674	D677, D676	D679, D678	D681, D680	D683, D682	D685, D684	D687, D686
	Axis 25	Axis 26	Axis 27	Axis 28	Axis 29	Axis 30	Axis 31	Axis 32
	D689, D688	D691, D690	D693, D692	D695, D694	D697, D696	D699, D698	D701, D700	D703, D702

(Note): The following range is valid.

• Q172DSCPU : Axis No. 1 to 16

• Q172DCPU(-S1) : Axis No. 1 to 8

(1) JOG speed setting registers (D640+2n, D641+2n)

..... Command device

(a) This register stores the JOG speed at the JOG operation.

(b) Setting range of the JOG speed is shown below.

Unit	m	m	inc	ch	degr	ee	Pl	S
Item	Setting range	Unit	Setting range	Unit	Setting range	Unit (Note-1)	Setting range	Unit
JOG speed	1 to	×10 ⁻²	1 to	imes10 ⁻³	1 to	×10 ⁻³	1 to	[PLS/s]
JOG speed	600000000	[mm/min]	600000000	[inch/min]	2147483647	[degree/min]	2147483647	[FL3/5]

(Note-1): When the "speed control $10 \times$ multiplier setting for degree axis" is set to "valid" in the fixed parameter, the unit is " $\times 10^{2}$ [degree/min]".

- (c) The JOG speed is the value stored in the JOG speed setting registers at leading edge of JOG start signal.
 Even if data is changed during JOG operation, JOG speed cannot be changed.
- (d) Refer to Section 6.21 for details of JOG operation.

3.2.3 Common devices

(1) Common bit device SET/RST request register (D704 to D708, D755 to D757) Command device Because cannot be turn on/off in every bit from the PLC CPU, the bit device is assigned to data register (D), and each bit device turns on with the lowest rank bit 0 to 1 and each bit device becomes off with 1 to 0. The details of request register are shown below.
(Defer to Section "2.1.2 Common devices" for the bit device M2000 to M2052.)

(Refer to Section "3.1.3 Common devices" for the bit device M2000 to M2053.)

No.	Function	Request register	Bit device	Remark (Note-1)
1	PLC ready flag	D704	M2000	M3072
2	Speed switching point specified flag	D705	M2040	M3073
3	All axes servo ON command	D706	M2042	M3074
4	Real mode/virtual mode switching request (SV22) ^(Note-2)	D707	M2043	M3075
5	JOG operation simultaneous start command	D708	M2048	M3076
6	Manual pulse generator 1 enable flag	D755	M2051	M3077
7	Manual pulse generator 2 enable flag	D756	M2052	M3078
8	Manual pulse generator 3 enable flag	D757	M2053	M3079


Details	of the	request	register
Details		request	register

(Note-1): It can also be ordered the device of a remark column. (Note-2):It is unusable in the SV22 advanced synchronous control.

(2) JOG operation simultaneous start axis setting registers (D710 to


D713) Command device

(a) These registers set the axis No. and direction which start simultaneously the JOG operation.

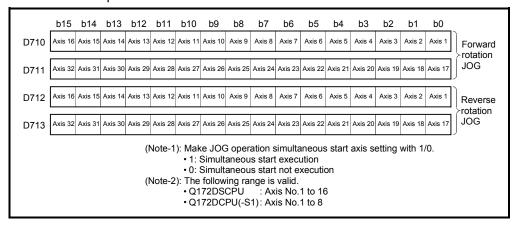

(b) Refer to Section 6.21.3 for details of the JOG operation simultaneous start.

- (3) Manual pulse generator axis No. setting registers (D714 to D719) Command device
 - (a) These registers stores the axis No. controlled with the manual pulse generator.

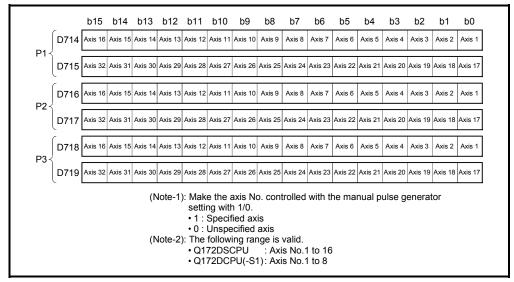

- (b) Refer to Section 6.22 for details of the manual pulse generator operation.
- (4) Manual pulse generator 1-pulse input magnification setting registers (D720 to D751) Command device
 - (a) These register set the magnification (1 to 10000) per pulse of number of the input pulses from manual pulse generator at the pulse generator operation.

1-pulse input magnification setting register	Axis No.	Setting range	1-pulse input magnification setting register	Axis No.	Setting range	
D720	Axis 1		D736	Axis 17		
D721	Axis 2		D737	Axis 18		
D722	Axis 3		D738	Axis 19		
D723	Axis 4		D739	Axis 20		
D724	Axis 5		D740	Axis 21		
D725	Axis 6		D741	Axis 22		
D726	Axis 7		D742	Axis 23		
D727	Axis 8	4.1. 40000	D743	Axis 24	1 to 10000	
D728	Axis 9	1 to 10000	D744	Axis 25	1 to 10000	
D729	Axis 10		D745	Axis 26		
D730	Axis 11		D746	Axis 27		
D731	Axis 12		D747	Axis 28		
D732	Axis 13		D748	Axis 29		
D733	D733 Axis 14		D749	Axis 30		
D734	Axis 15		D750	Axis 31		
D735	Axis 16		D751	Axis 32		

(Note): The following range is valid.

• Q172DSCPU : Axis No. 1 to 16

• Q172DCPU(-S1) : Axis No. 1 to 8

(b) Refer to Section 6.22 for details of the manual pulse generator operation.


- (5) Manual pulse generator smoothing magnification setting registers (D752 to D754) Command device
 - (a) These registers set the smoothing time constants of manual pulse generators.

Manual pulse generator smoothing magnification setting register	Setting range
Manual pulse generator 1 (P1): D752	
Manual pulse generator 2 (P1): D753	0 to 59
Manual pulse generator 3 (P1): D754	

(b) When the smoothing magnification is set, the smoothing time constant is as indicated by the following expression.

Smoothing time constant (t) = (smoothing magnification + 1) \times 56.8 [ms]

(c) Operation

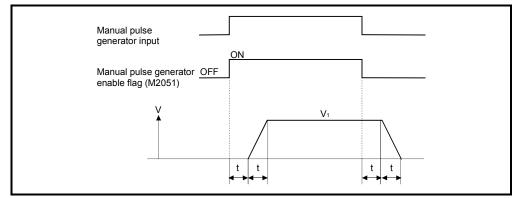

 $\label{eq:V1} \begin{array}{l} \mbox{Output speed (V_1) [PLS/s] = (Number of input pulses/s) \times (Manual pulse generator 1-pulse input magnification setting)} \end{array}$

Travel value (L) =	Travel value)×	Number of input pulses)×	Manual pulse generator 1-pulse	
--------------------	--------------	----	------------------------	----	--------------------------------	--

REMARK

(1) The travel value per pulse of the manual pulse generator is shown below.

• Setting unit _____ mm :0.1[µm] inch :0.00001[inch] degree :0.00001[degree] PLS :1[PLS]

(2) The smoothing time constant is 56.8[ms] to 3408[ms].

3.3 Motion Registers (#)

There are motion registers (#0 to #12287) in the Motion CPU. #8000 to #8639 are used as the monitor device, #8640 to #8735 are used as the Motion error history device and #8736 to #8751 are used as the product information list device. Refer to the "Q173D(S)CPU/Q172D(S)CPU Motion Controller (SV13/SV22) Programming Manual (Motion SFC)" for details of the motion registers and Motion error history device.


Monitor devices (#8000 to #8639) Information for each axis is stored in the monitor devices. The details of the storage data are shown below.

Axis No.	Device No.	Signal name								
1	#8000 to #8019				-					
2	#8020 to #8039		Signal name	Defreeb evelo	Signal direction					
3	#8040 to #8059		Signal name	Refresh cycle	Signal direction					
4	#8060 to #8079	0	Servo amplifier type	When the servo amplifier power-on						
5	#8080 to #8099	1	Motor current	Operation cycle 1.7[ms] or less : Operation cycle						
6	#8100 to #8119	2	Motor speed	Operation cycle 1.7[ms] of less . Operation cycle Operation cycle 3.5[ms] or more : 3.5[ms]						
7	#8120 to #8139	3	Motor speed							
8	#8140 to #8159	4	Command speed	Operation cycle						
9	#8160 to #8179	5	Command speed							
10	#8180 to #8199	6	Home position return re-	At home position return re-travel	Monitor device					
11	#8200 to #8219	7	travel value							
12	#8220 to #8239	8	Servo amplifier display servo							
13	#8240 to #8259	0	error code	Main cycle						
14	#8260 to #8279	9	Parameter error No. QDS							
15	#8280 to #8299	10	Servo status1	Operation cycle 1.7[ms] or less : Operation cycle						
16	#8300 to #8319	11	Servo status2	operation cycle 1.7[ins] of less . Operation cycle 3.5[ms] or more : 3.5[ms]						
17	#8320 to #8339	12	Servo status3							
18	#8340 to #8359	13								
19	#8360 to #8379	14								
20	#8380 to #8399	15								
21	#8400 to #8419	16	Unusable	_	_					
22	#8420 to #8439	17								
23	#8440 to #8459	18								
24	#8460 to #8479	19								
25	#8480 to #8499									
26	#8500 to #8519									
27	#8520 to #8539									
28	#8540 to #8559									
29	#8560 to #8579									
30	#8580 to #8599									
31	#8600 to #8619									
32	#8620 to #8639									


(a)	Servo amplifier type (#8000+20n) Monitor device				
	This register stores the servo amplifier type for each axis at the servo				
	amplifier power supply ON.				
	• 0 Unused				
	• 256 MR-J3-□B				
	MR-J3W-□B (For 2-axis type)				
	• 257 MR-J3-□B-RJ006 (For fully closed loop control)				
	MR-J3-□B Safety (For drive safety servo)				
	• 258 MR-J3-□B-RJ004 (For Linear servo motor)				
	• 263 MR-J3-□B-RJ080W (For direct drive motor) Ver				
	• 4096 MR-J4-□B @DS(
	MR-J4W-□B (For 2-axis type, 3-axis type)				
	• 4352 VCII series (Note-1) (Nikki Denso Co., Ltd. make) (Note-2)				
	• 4354 VCI series (For Linear servo motor) (Note-2)				
	(Nikki Denso Co., Ltd. make) Ver				
	• 4359 VCI series (For direct drive motor) (Note-2)				
	(Nikki Denso Co., Ltd. make) Ver				
	• 16640 FR-A700 series (Inverter) Ver				
	(Note-1): When connecting SSCNETⅢ/H				
	(Note-2): When connecting SSCNETⅢ				
	It is not cleared even if the servo amplifier power supply turns OFF.				
(b)	Motor current (#8001+20n) Monitor device				
()	This register stores the motor current ($\times 0.1[\%]$) (signed) read from the servo				
	amplifier.				
(C)	Motor speed (#8002+20n, #8003+20n) Monitor device				
	This register stores the motor speed (\times 0.1[r/min]) (signed) read from the				
	servo amplifier.				
	The motor speed ($ imes$ 0.1[mm/s]) (signed) is stored at linear servo use.				
<i>(</i>))					
(d)	Command speed (#8004+20n, #8005+20n) Monitor device				
	This register stores the speed (signed) at which command value to the servo				
	amplifier for every operation cycle is converted into [PLS/s].				
(e)	Home position return re-travel value (#8006+20n, #8007+20n)				
	Monitor device				
	If the position stopped in the position specified with the travel value after				
	proximity dog ON using MT Developer2 is not zero point, it made to travel to				
	zero point by re-travel in the Motion CPU. The travel value (signed) of				
	making it travel to zero point by re-travel at this time is stored.				
	(Data does not change with the last value in the data setting type.)				

Ver. : Refer to Section 1.3 for the software version that supports this function.

(f) Servo amplifier display servo error code (#8008+20n)

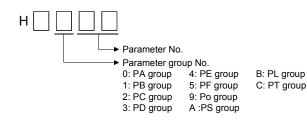


Ver. : Refer to Section 1.3 for the software version that supports this function.

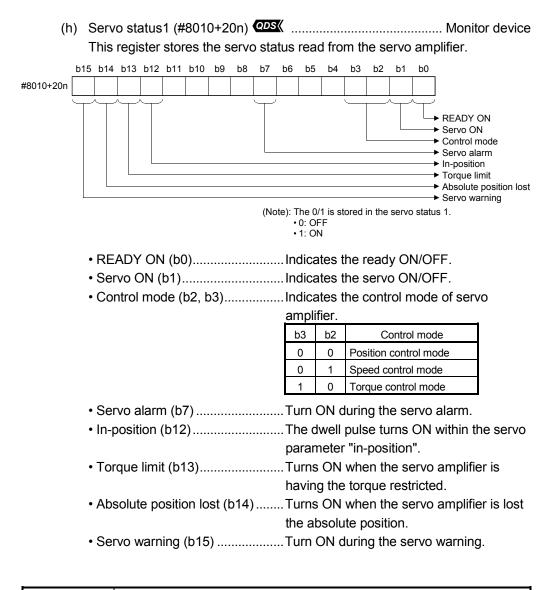

POINT

Servo warning (b15) turns ON during Motion controller forced stop or servo forced stop.

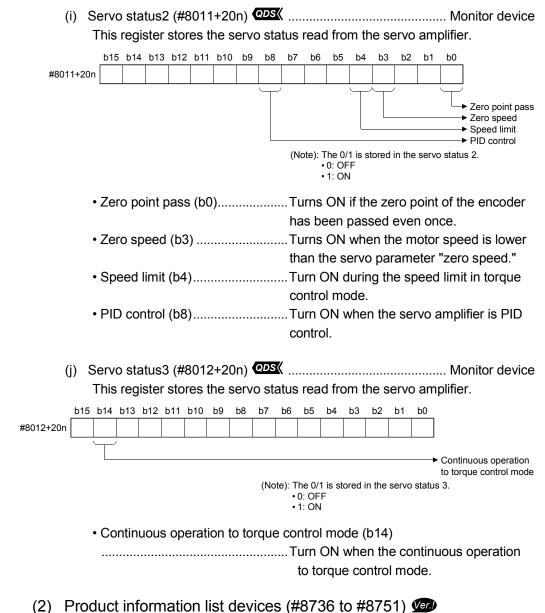

Product information list devices (#8736 to #8751) Ver
 The operating system software version and serial number of Motion CPU is stored in ASCII code.

The product information list devices are shown below.

Device No.	Signal name	Refresh cycle	Fetch cycle	Signal direction
#8736				
to	Operating system software version			
#8743		At 20102 02		Manitan dayiaa
#8744		At power on		Monitor device
to	Motion CPU module serial number			
#8751				

Ver. Refer to Section 1.3 for the software version that supports this function.

(a) Operating system software version (#8736 to #8743) Monitor device The operating system software version of Motion CPU displayed on the system monitor (product information list) of GX Works2/GX Developer is stored in ASCII code.

Device No.																
	#87	736	#87	737	#8	738	#8	739	#87	740	#87	741	#8	742	#8	743
	Low	High														
ASCII code	20H	53H	56H	32H	32H	6AH	20H	20H	56H	45H	52H	33H	30H	30H	41H	20H
Character	J	S	V	2	2	j	J	l	V	Е	R	3	0	0	А	

(Example) Operating system software version: "SV22j VER300A"

□ : Space.

(b) Motion CPU module serial number (#8744 to #8751) Monitor device The serial number of Motion CPU displayed on the system monitor (product information list) of GX Works2/GX Developer is stored in ASCII code. (Example) Serial number: "A7Z123015"

								Devic	e No.								
	#87	#8744		#8745		#8746		#8747		#8748		#8749		#8750		#8751	
	Low	High	Low	High	Low	High	Low	High	Low	High	Low	High	Low	High	Low	High	
ASCII code	41H	37H	5AH	31H	32H	33H	30H	31H	35H	20H	20H	20H	20H	20H	20H	20H	
Character	А	7	Z	1	2	3	0	1	5	L		L	L	L		Γ	

□ : Space.

POINT

Refer to the "Q173D(S)CPU/Q172D(S)CPU Motion Controller User's Manual" or "Q173D(S)CPU/Q172D(S)CPU Motion Controller Programming Manual (COMMON)" for checking of the operating system software version and serial number.

3.4 Special Relays (SM)

There are 2256 special relay points of SM0 to SM2255 in the Motion CPU. Of these, devices in a Table 3.2 are used for the positioning control. The special relay list used for the positioning control is shown below. (Refer to "Q173D(S)CPU/Q172D(S)CPU Motion controller Programming Manual (COMMON)" for the application of special relays except below.)


	Γ	able	3.2	Special	relay list
--	---	------	-----	---------	------------

Device No.	Signal name	Refresh cycle	Fetch cycle	Signal type
SM500	PCPU READY complete flag	Main mala	/	
SM501	TEST mode ON flag	Main cycle		
SM502	External forced stop input flag	Operation cycle		
SM503	Digital oscilloscope executing flag	Main cycle		Statua aignal
SM506	External forced stop input ON latch flag 🕬	Operation cycle		
SM508	Amplifier-less operation status flag			Status signal
SM510	TEST mode request error flag			
SM512	Motion CPU WDT error flag	Main cycle		
SM513	Manual pulse generator axis setting error flag		/	
SM516	Servo program setting error flag		/	

- (1) PCPU READY complete flag (SM500) Status signal This flag is used as judgement of the normal or abnormal in the Motion CPU side using the sequence program.
 - (a) The fixed parameters, servo parameters and limit switch output data are checked at leading edge of PLC ready flag (M2000), and if error is not detected, this flag turns on.

The servo parameters are written to the servo amplifiers and the M-codes are cleared.

(b) This flag turns off when the PLC ready flag (M2000) turns off.

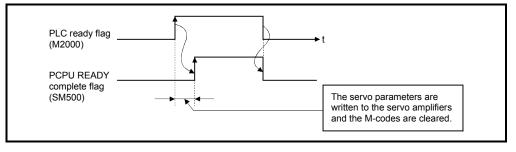

Ver. : Refer to Section 1.3 for the software version that supports this function.

- (2) TEST mode ON flag (SM501) Status signal
 - (a) This flag is used as judgement of during the test mode or not using MT Developer2.

Use it for an interlock, etc. at the starting of the servo program using the Motion SFC program.

- OFF.....Except the test mode
- ON.....During the test mode
- (b) If the test mode is not executed in the test mode request from MT Developer2, the TEST mode request error flag (SM510) turns on.
- (3) External forced stop input flag (SM502) Status signal This flag is used to check the external forced stop input signal ON/OFF.
 - OFF External forced stop input ON
 - ON External forced stop input OFF

POINTS

(1) If the forced stop signal is input during positioning, the feed current value is advanced within the rapid stop deceleration time set in the parameter block. At the same time, the servo OFF state is established because the all axes servo ON command (M2042) turns off.

When the rapid stop deceleration time has elapsed after input of the forced stop signal, the feed current value returns to the value at the point when the emergency stop was initiated.

- (2) If the forced stop is reset before the emergency stop deceleration time has elapsed, a servo error occurs.
- (4) Digital oscilloscope executing flag (SM503) Status signal This flag is used to check the state of execution for the digital oscilloscope.
 - OFF Digital oscilloscope has stopped.
 - ONDigital oscilloscope is executing.
- (5) External forced stop input ON latch flag (SM506)

..... Status signal

This flag turns on when an external forced stop input is detected. After that, it remains ON even if the external forced stop input is cancelled. Reset the external forced stop input ON latch flag using the Motion SFC program.

- OFF External forced stop input is not detected.
- ON External forced stop input is detected.

Ver. : Refer to Section 1.3 for the software version that supports this function.

- (6) Amplifier-less operation status flag (SM508) Status signal This flag is used to check the state of amplifier-less operation.
 - OFF During normal operation
 - ON During amplifier-less operation
- (7) TEST mode request error flag (SM510) Status signal(a) This flag turns on when the test mode is not executed in the test mode
 - request using MT Developer2.
 - (b) When SM510 turns on, the error contents are stored in the test mode request error information (SD510, SD511).
- (8) Motion CPU WDT error flag (SM512) Status signal This flag turns on when a WDT error (watchdog timer error) is detected of the Motion CPU self-diagnosis function. When the Motion CPU detects a WDT error, it executes an immediate stop without deceleration of the operating axes. If the Motion CPU WDT error flag has turn on, reset the Multiple CPU system. If SM512 remains on after resetting, there is a fault at the Motion CPU side. The error cause is stored in the "Motion CPU WDT error cause (SD512)". (Refer to Section 3.5.)
- (9) Manual pulse generator axis setting error flag (SM513)

..... Status signal

- (a) This flag is use as judgement of normal or abnormal setting of the manual pulse generator axis No. setting registers (D714 to D719).
 - OFFD714 to D719 is normal
 - ON.....D714 to D719 is abnormal
- (b) This flag turns ON by turning ON the manual pulse generator enable flag (M2051 to M2053) with the manual pulse generator axis P1 to P3 unused after setting the manual pulse generator interface module (Q173DPX) in the system setting.
- (c) When SM513 turns on, the error contents are stored in the manual pulse generator axis setting error information (SD513 to SD515).
- (10) Servo program setting error flag (SM516) Status signal This flag is used as judgement of normal or abnormal for the servo program positioning data.
 - OFF.....Normal
 - ON Abnormal

3.5 Special Registers (SD)

There are 2256 special register points of SD0 to SD2255 in the Motion CPU. Of these, devices in a Table 3.3 are used for the positioning control. The special register list used for the positioning control is shown below. (Refer to the "Q173D(S)CPU/Q172D(S)CPU Motion controller Programming Manual (COMMON)" for the applications of special registers except below.)

Device No.	Signal name	Refresh cycle	Fetch cycle	Signal direction	
SD200	State of switch				
SD500	Real mode axis information register (SV22)	Main cycle	/		
SD501	(Note-1)		/		
SD502		At power supply on/			
SD503	Servo amplifier loading information	operation cycle			
SD504					
SD505	Real mode/virtual mode switching error information (SV22)	At virtual mode transition			
SD506	Information (SV22)		/		
SD508	SSCNET control (status)	Main cycle			
SD510		At test made request			
SD511	Test mode request error information	At test mode request			
SD512	Motion CPU WDT error cause	At Motion CPU		Monitor device	
		WDT error occurrence	. /		
SD513	Manual pulse generator axis setting error	At the manual pulse generator			
SD514	information	enable flag			
SD515			. /		
SD516	Error program No.	At start			
SD517	Error item information	/ court			
SD522	Motion operation cycle	Operation cycle			
SD523	Operation cycle of the Motion CPU setting	At power supply on			
SD524	Maximum Motion operation cycle	Operation cycle			
SD550	System acting array information ODS	At System setting error			
SD551	System setting error information	occurrence	/		
SD560	Operation method QDS Ver	At power supply on	/		
SD803	SSCNET control (command)		Main cycle	Command device	

(Note-1): It is unusable in the SV22 advanced synchronous control.

Ver. Refer to Section 1.3 for the software version that supports this function.


- b15 b14 b13 b12 b11 b10 b9 b8 b7 b6 b5 b4 b3 b2 b1 b0 SD200 Switch state of CPU • 0 : RUN • 1 : STOP No used
- (1) State of switch (SD200) Monitor device The switch state of CPU is stored in the form of the following.

(2) Real mode axis information register (SD500, SD501)

..... Monitor device

This signal is used to store the information used as a real mode axis at the time of switching from real mode to virtual mode.

The real mode axis information does not change at the time of switching from virtual mode to real mode.

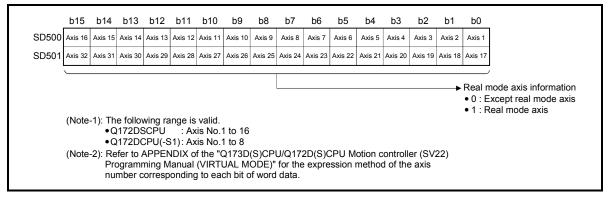


(3) Servo amplifier loading information (SD502, SD503)

..... Monitor device

The mounting status of the servo amplifier is checked at the power supply on or reset of the Multiple CPU system and its results are stored in this device. If communication with servo amplifier stops, it is reset.

The mounting status of changed axis after the power supply on is stored.

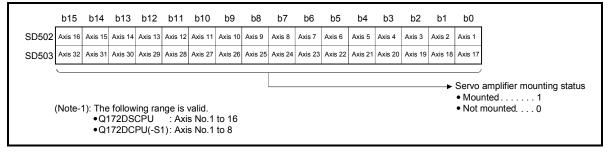

(a) Servo amplifier mounting status

1) Mounting status

- Mounted The servo amplifier is normal. (Communication with the servo amplifier is normal.)
- Not mounted The servo amplifier is not mounted. The servo amplifier power is off.

Normal communication with the servo amplifier is

- not possible due to a connecting cable fault, etc.
- 2) The system settings and servo amplifier mounting status are shown below.

	Servo amplifier						
System Settings	Mounted	Not mounted					
Used (axis No. setting)	1 is stored	0 is stored					
Unused	0 is stored						


- (4) SSCNET control (status) (SD508) Monitor device SD508 stores the executing state for connect/disconnect of SSCNET communication and start/release of amplifier-less operation.
 - 0 Command accept waiting
 - -1 Execute waiting
 - -2 Executing

Refer to the "Q173D(S)CPU/Q172D(S)CPU Motion controller Programming Manual (COMMON)" for details of the SSCNET control function.

(5) Test mode request error information (SD510, SD511)

..... Monitor device

If there are operating axis at a test mode request using MT Developer2, a test mode request error occurs, the test mode request error flag (SM510) turns on, and the during operation/stop data of each axis are stored.

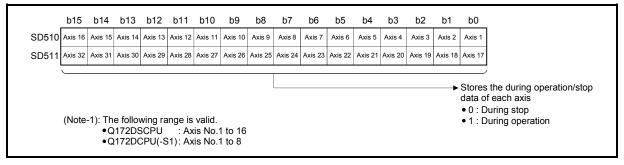

(6) Motion CPU WDT error cause (SD512) Monitor device


	Luchara and affles among	
I his register is lised as	lundement of the error	CONTENTS IN THE MINTION C.P.L
	judgement of the choi	contents in the Motion CPU.

Error code	Error cause	Operation when error occurs	Action to take
1	S/W fault 1		Reset the Multiple CPU system.
2	Operation cycle time over	All axes stop immediately, after which operation cannot be started.	 If the an operation cycle time over reoccurs after resetting, or a main cycle is lengthened (more than 1.0[s]), 1) Change the operation cycle into a large value in the system setting. 2) Reduce the number of command execution of the event task or NMI task in the system setting.
4	WDT error		Reset the Multiple CPU system.
300	S/W fault 3		If the error reoccurs after resetting, explain the error symptom
303	S/W fault 4		and get advice from our sales representative.
304	RIO WDT error		

(7) Manual pulse generator axis setting error information

(SD513 to SD515) Monitor device The setting information is checked at leading edge of manual pulse generator enable signal, if an error is found, the following error information is stored into SD513 to SD515 and the manual pulse generator axis setting error flag (SM513) turns on.

If there is an unused setting error for the manual pulse generator axis, a correspondence bit of SD513 turns ON.

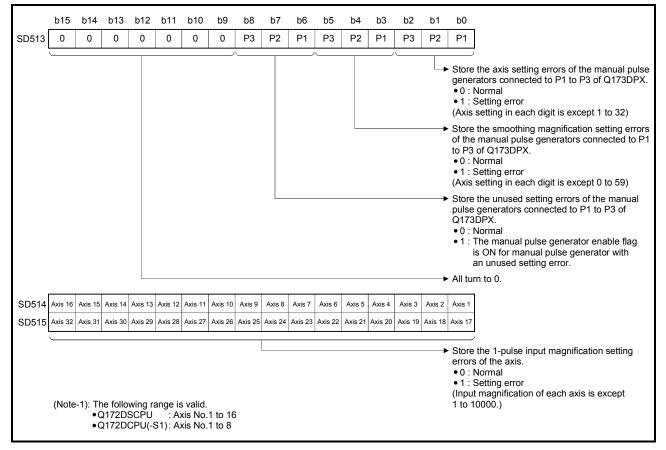

- (8) Error program No. (SD516) Monitor device
 - (a) When the servo program error occurs at the servo program start, the servo program setting error flag (SM516) turns on and the error servo program No. (0 to 4095).
 - (b) If an error occurs in another servo program when error program No. has been stored, the program No. of the new error is stored.
- (9) Error item information (SD517) Monitor device When the servo program error occurs at the servo program start, the servo program setting error flag (SM516) turns on and the error code corresponds to the error setting item is stored. Refer to APPENDIX 1.1 for details of servo program setting errors.
- (10) Motion operation cycle (SD522) Monitor device The time which motion operation took for every motion operation cycle is stored in [µs] unit.
- (11) Operation cycle of the Motion CPU setting (SD523) Monitor device

The setting operation cycle is stored in [μ s] unit. When the "Default Setting" is set in the system setting, the operation cycle corresponding to the number of setting axes. When "0.2[ms]@X/0.4[ms] / 0.8[ms] / 1.7[ms] / 3.5[ms] / 7.1[ms] / 14.2[ms]@X" is set in the system setting, the operation cycle corresponding to each setting.

(Note): If the servo amplifiers of 9 axes or more are connected to one SSCNETI line, it does not support an operation cycle of 0.4[ms].
0.8[ms] is used as the real operation cycle, even if 0.4[ms] is set in the system setting.

(12) Maximum Motion operation cycle (SD524)

(13) System setting error information (SD550,SD551)

..... Monitor device

The error code and error individual information are stored at the system setting error occurrence.

Refer to the "Q173D(S)CPU/Q172D(S)CPU Motion controller Programming Manual (COMMON)" for details of the system setting errors.

- - 0 Virtual mode switching method
 - 1 Advanced synchronous control method
- (15) SSCNET control (command) (SD803) Command device SD803 is required for connect/disconnect of SSCNET communication and start/release of amplifier-less operation.
 - 0 No command
 - 1 to 32 Disconnect command of SSCNET communication
 - -10 Re-connect command of SSCNET communication
 - -20 Start command 1 of amplifier-less operation (EMI invalid)
 - -21 Start command 2 of amplifier-less operation (EMI valid)
 - -25 Release command of amplifier-less operation
 - -2..... Execute command

Refer to the "Q173D(S)CPU/Q172D(S)CPU Motion controller Programming Manual (COMMON)" for details of the SSCNET control function.

Ver. : Refer to Section 1.3 for the software version that supports this function.

MEMO

4. PARAMETERS FOR POSITIONING CONTROL

4.1 System Settings

In the Multiple CPU system, the common system parameters and individual parameters are set for each CPU and written to each CPU.

- (1) The base settings, Multiple CPU settings and Motion slot settings are set in the common system parameter setting.
- (2) The following are set in the individual parameter setting.
 - System basic setting
 - SSCNET setting QDS
 - CPU name setting
 - Built-in Ethernet port setting
 - CPU setting
 - Manual pulse generator/synchronous encoder setting
 ODS
 - Servo amplifier setting
 - High-speed read setting
 - Optional data monitor setting
 - Mark detection setting
 QDSK
- (3) The data setting and correction can be performed in dialog form using MT Developer2.
 (Refer to the "Q173D(S)CPU/Q172D(S)CPU Motion Controller Programming

Manual (COMMON)" for details of the setting contents.)

4.2 Fixed Parameters

- (1) The fixed parameters are set for each axis and their data is fixed based on the mechanical system, etc.
- (2) The fixed parameters are set using MT Developer2.
- (3) The fixed parameters to be set are shown in Table 4.1.

					Setting	g range							
No.	Item	mm		inch		degree	e	PLS		Initial value	Units	Remarks	Section
		Setting range	Units	Setting range	Units	Setting range	Units	Setting range	Units				
1	Unit setting	0	_	1	_	2	_	3	_	3	_	• Set the command unit for each axis at the positioning control.	-
2	(Y)Number ofNumber ofpulses perndrotationid(AP)			1 to	21474	83647[PLS]				20000		 Set the number of feedback pulses per motor rotation based on the mechanical system. 	4.2.1
3	Travel value per rotation (AL)	0.1 to 214748364.7		0.00001 to 21474.83647		0.00001 to 21474.83647		1 to 2147483647		20000		Set the travel value per motor based on the mechanical system.	4.2.1
4	Backlash compensation amount ^(Note)	0 to 6553.5		0 to 0.65535		0 to 0.65535		0 to 65535		0	PLS	 Set the backlash amount of the machine. Every time of the positioning direction changes at the positioning, compensation by the backlash compensation amount is executed. 	7.2
5	Upper stroke limit ^(Note)	-214748364.8 to 214748364.7	μm	-21474.83648 to 21474.83647	inch	0 to 359.99999	degree	-2147483648 to 2147483647	PLS	2147483647		Set the upper limit for the machine travel range.	40.0
6	Lower stroke limit ^(Note)	-214748364.8 to 214748364.7		-21474.83648 to 21474.83647		0 to 359.99999		-2147483648 to 2147483647		0		Set the lower limit for the machine travel range.	4.2.3
7	Command in- position range (Note)	0.1 to 214748364.7		0.00001 to 21474.83647		0.00001 to 359.99999		1 to 2147483647		100		Set the position at which the command in-position signal (M2403+20n) turns on [(positioning address) - (current value)].	4.2.4
8	Speed control 10×multiplier setting for degree axis	_	_	_	_	Invalid/Valid	_	_	_	Invalid	_	 Set whether the positioning control is executed with a value 10×multiplier the speed of a command speed setting, when a control unit is degree axis. 	4.2.5

Table 4.1	Fixed	parameter	list
-----------	-------	-----------	------

(Note): The display of the possible setting range changes according to the electronic gear value at Q173DCPU(-S1)/Q172DCPU(-S1).

4.2.1 Number of pulses/travel value per rotation

The "Electronic gear function" adjusts the actual machine movement amount and number of pulse output to servo amplifier according to the parameter set in the Motion CPU.

It is defined by the "Number of pulses per rotation" and "Travel value per revolution".

POINTS

- (1) The mechanical system error of the command travel value and real travel value is rectified by adjustment the "electronic gear".
- (2) The value of less than 1 pulse that cannot be execute an output when the machine travels is incremented in the Motion CPU, and a total incremented output is performed when the total incremented value becomes more than 1 pulse.
- (3) The total incremented value of less than 1 pulse that cannot be execute an output is cleared and it is referred to as "0" at the home position return completion, current value change completion, speed-switching control start (except the feed current value update) and fixed-pitch feed control start. (When the total incremented value is cleared, the error occurs to the feed machine value only a part to have been cleared.)
- (4) Set the electronic gear within the following range.

 $0.001 \leq \frac{\text{Number of pulses per rotation (AP)}}{\text{Travel value per rotation (AL)}} \leq 20000$

(1) Number of pulses/travel value per rotation

Number of pulses (AP)/travel value (AL) per rotation is an item which determines how many rotations (number of pulses per rotation) of the servomotor in order to make it a machine as the travel value ordered by the program.

The position control toward the servomotor is controlled with the number of feedback pulses of the encoder connected to the servomotor in the servo amplifier.

The control content of the Motion CPU is shown below.


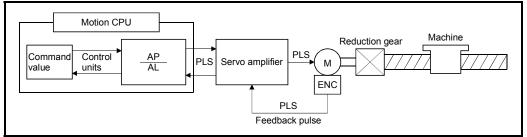


Fig. 4.1 Control content of the Motion CPU

For example, suppose that the servomotor was connected to the ball screw. Because the travel value (Δ S) of machine per motor rotation is [mm] / [inch] unit, the travel value (positioning address) set in the program is commanded in [mm] / [inch] unit. However, the servomotor is positioning controlled by the servo amplifier in pulse unit.

Therefore, AP/AL is set so that the following expression of relations may be materialized in order to convert the travel value of [mm] / [inch] unit set in the program into a pulse.

Number of pulses per motor rotation = AP Travel value of machine per motor rotation = AL



(There is a range which can be set in the numerical value set as AP/AL, so it is necessary to make the setting range of AP/AL the value calculated from the above expression (reduced) of relations.)

Example of the real setting is shown below.

(Note): Refer to this section (2) for the setting at linear servo.

(a) For ball screw

When the ball screw pitch is 20[mm], the servomotor is HF-KP (262144[PLS/rev]) and direct connection (No reduction gear) is set.




Fig. 4.2 For ball screw

First, find how many millimeters the load (machine) will travel (AL) when the servomotor runs for one rotation (AP).

AP (Number of pulses per motor rotation) = 262144[PLS] AL (Travel value of machine per rotation)

= Ball screw pitch × Reduction ratio

= 20[mm]

Substitute this for the above expression (1).

$$\frac{AP}{AL} = \frac{262144[PLS]}{20[mm]}$$

Although it becomes above, when a control unit is set to [mm] unit, the minimum unit of the command value in a program is 0.1[µm] and converted from 20[mm] (20.0000[mm]) to 20000.0[µm].

 $\frac{AP}{AL} = \frac{262144[PLS]}{20000.0[\mu m]}$

The travel value per motor rotation in this example is 0.000076[mm]. For example, when ordering the travel value of 19[mm], it becomes 249036.8[PLS] and the fraction of 0.8[PLS]. At this time, the Motion CPU orders the travel value of 249036[PLS] to the servomotor and the fraction is memorized in the Motion CPU.

Positioning is performed by seasoning the travel value with this fraction at the next positioning.

(2) Number of pulses/travel value at linear servo use

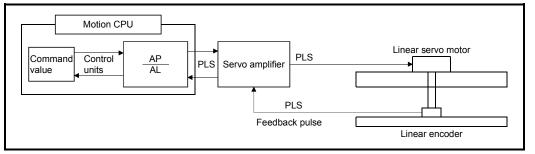


Fig. 4.3 Linear servo use

Calculate the number of pulses (AP) and travel value (AL) for the linear encoder in the following conditions.

Linear encoder resolution = $\frac{\text{Number of pulses (AP)}}{\text{Travel value (AL)}}$

Linear encoder resolution: 0.05[µm]

 $\frac{\text{Number of pulses (AP) [PLS]}}{\text{Travel value (AL) [µm]}} = \frac{1}{0.05} = \frac{20}{1.0}$

Set the number of pulses in "Number of pulses per rotation", and the movement amount in "Travel value per rotation" in the actual setting.

(Note): Set the same value as the value set in the fixed parameter to the servo parameter "PS02 (Linear encoder resolution setting Numerator)" and "PS03 (Linear encoder resolution setting Denominator)".
 Refer to the "Servo amplifier Instruction Manual" for details.

	· .
Servo amplifier type	Instruction manual name
MR-J4-⊟B	SSCNETⅢ/H interface MR-J4-□B Servo amplifier Instruction Manual (SH-030106)
	SSCNETII/H interface Multi-axis AC Servo MR-J4W-□B Servo amplifier Instruction
MR-J4W-⊟B	Manual (SH-030105)
MR-J3-□B-RJ004	SSCNETIII Compatible Linear Servo MR-J3-□B-RJ004 Instruction Manual (SH-030054)


4.2.2 Backlash compensation amount

- (1) Backlash compensation amount can be set within the following range. (Refer to Section "7.2 Backlash Compensation Function" for details.)
 (Note): The following restriction does not apply to versions compatible with the setting range expansion of backlash compensation amount.
- $0 \leq \frac{Backlash \ compensation \ amount \ \times \ Number \ of \ pulses \ per \ rotation \ (AP)}{Travel \ value \ per \ rotation \ (AL)} \ (=A) \leq 65535 [PLS]$
 - (2) The servo error may occur depending on the type of the servo amplifier (servomotor) or operation cycle even if the backlash compensation amount which fulfill the above condition.

Set the backlash compensation amount within the following range in order for servo error may not occur.

 $A \leq \frac{Maximum motor speed [r/min] \times 1.2 \times Encoder resolution [PLS] \times Operation cycle [ms]}{60[s] \times 1000[ms]} [PLS]$

4.2.3 Upper/lower stroke limit value



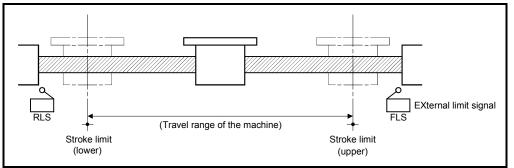


Fig. 4.4 Travel range at the upper/lower stroke limit value setting

Ver. : Refer to Section 1.3 for the software version that supports this function.

(1) Stroke limit range check

The stroke limit range is checked at the following start or during operation.

Operation start	Check	Remarks			
 Position follow-up control Constant-speed control Speed switching control Positioning control Fixed-pitch feed control 	Check	 It is checked whether the feed current value is within the stroke limit range or not at the positioning start. If it outside the range, a minor error occurs (error code: 106) and positioning is not executed. If the interpolation path exceeds the stroke limit range during circular interpolation start, a minor error occurs (error codes: 207, 208) and deceleration stop is executed. If the current value exceeds the stroke limit range, deceleration stop is executed. 			
Speed control (I) Speed control (II)	Not check	• The current value becomes "0", and operation continues until the external limit signal (FLS, RLS, STOP) is received.			
 Speed/position switching control (including restart) 		• It is checked after the switch to position control.			
JOG operation		• When the current value is executed a deceleration stop from current command speed, if the current value exceeds the stroke limit range, a minor error occurs (error code: 207), and deceleration stop is made before a stroke limit. Travel to the direction that returns the axis into the stroke range is possible.			
Manual pulse generator operation	Check	 If the current value exceeds the stroke limit range, a minor error occurs (error code: 207), and it stops at stroke limit. In this case, a deceleration stop is not made. Travel to the direction that returns the axis into the stroke range is possible. 			
Speed-torque control		• If the current feed value exceeds the stroke limit range, a minor error occurs (error code: 207), and the mode is switched to position control.			

POINTS

- (1) Besides setting the upper/lower stroke limit value in the fixed parameters, the range of mechanical system can also be controlled by using the external limit signals (FLS, RLS).
- (2) When the external limit signal turns off, a deceleration stop is executed."Deceleration time" and "Rapid stop deceleration time" can be used in the parameter block for deceleration stop time.


(2) Setting range of upper/lower stroke limit value (SV13 only) Upper/lower stroke limit value can be set within the following range.

 $-2147483648 \leq \text{Upper/lower stroke limit value} \times \frac{\text{Number of pulses per rotation (AP)}}{\text{Travel value per rotation (AL)}} \leq 2147483647$

(3) Stroke limit invalid setting

The unlimited length feed is possible by setting the stroke limit to invalid even the control unit is "other than degree axis" (mm, inch, PLS). When "(Upper stroke limit) = (Lower stroke limit)" is set as the upper and lower stroke limit is set in the fixed parameter, the stroke limit becomes invalid and the unlimited length feed is possible.

Refer to Section 6.1.5 for details of degree axis.

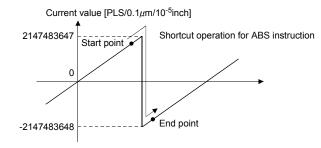

POINTS

(1)	If the current feed value and real current value exceeds 2147483647
	[PLS/0.1µm/10 ⁻⁵ inch], it is controlled with -2147483648[PL_S/0.1µm/10 ⁻⁵ inch].
	If those values are less than -2147483648[PLS/0.1µm/10 ⁻⁵ inch], it is controlled
	with 2147483647[PLS/0.1µm/10 ⁻⁵ inch].

- (2) If the absolute position command (ABS instruction) is set when the stroke limit is invalid, it is controlled as shortcut operation.
- (3) The circular interpolation and helical interpolation (other than linear axis) including axis that the stroke limit is set to invalid cannot be executed.
 A minor error (error code: 107 to 109) will occur, and operation does not start.
- (4) If the stroke limit is set to invalid for axis of unit (PLS, mm, inch) in the real mode or real mode axis, the ABSinstruction cannot be executed unit (PLS, mm, inch) when the absolute method is set as end point address in the speedswitching control (VSTART).

A minor error (error code: 119) will occur, and operation does not start.


- (5) The high-speed oscillation function cannot be used in the axis that set the stroke limit invalid.
- (6) When executing a speed change to negative speed for the axis with stroke limit set to invalid, the operations below occur based on the control mode being executed.

Control mode	Operation		
Speed control (I)			
Speed control (II)	Negative speed-change accept.		
Home position return	Minor error (error code: 301) occurs and speed change is ignored.		
Speed-position control			
Position follow-up control	Miner and America de 205) and an education		
Speed control with fixed position stop	Minor error (error code: 305) occurs and speed change is ignored.		
Speed-position switching			
JOG operation			
Manual pulse generator operation	Cread shares is imposed		
Speed-torque control	Speed change is ignored.		
Others	Minor error (error code: 310) occurs and speed change is ignored.		

4.2.4 Command in-position range

The command in-position is the difference between the positioning address (command position) and feed current value.

Once the value for the command in-position has been set, the command in-position signal (M2403+20n) turns on when the difference between the command position and the feed current value enters the set range [(command position - feed current value) \leq (command in-position range)].

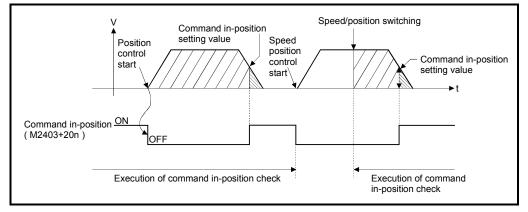

The command in-position range check is executed continuously during position control.

(1) Command in-position can be set within the following range.(a) Q173DSCPU/Q172DSCPU use


 $1 \leq Command in-position range \leq 2147483647$

- (b) Q173DCPU(-S1)/Q172DCPU(-S1) use
 - $1 \leq Command \text{ in-position range} \times \frac{Number \text{ of pulses per rotation (AP)}}{Travel value per rotation (AL)} \leq 32767$

4.2.5 Speed control 10×multiplier setting for degree axis


The setting range of command speed is 0.001 to 2147483.647[degree/min] normally in the axis of control unit [degree]. However, when the "speed control $10 \times$ multiplier setting for degree axis" is set to "valid" in the fixed parameter the speed setting range increases $10 \times$ multiplier "0.01 to 21474836.47[degree/min]".


- (1) When the "speed control 10× multiplier setting for degree axis" is set to "valid", the positioning control is executed by the speed increased 10× multiplier command speed set in the servo program or servo parameter, and speed limit value.
- (2) In the interpolation control for the axis of "control unit [degree] and [except degree]", if the interpolation control unit of parameter block is set as [degree]," the positioning control is executed by the speed increased 10×multiplier command speed and speed limit value.
- (3) When the "speed control 10 × multiplier setting for degree axis" is set as "valid", 2 figures below the decimal point of ***.** [degree/min] is displayed on the screen of MT Developer2.

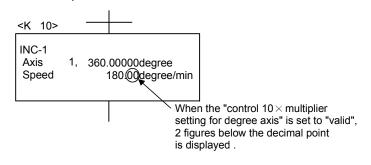

- (4) Speed setting range in the interpolation operation is shown below.
 - (a) Vector speed specification/Long-axis speed specification If the "speed control 10 × multiplier setting for degree axis" is set to "valid" even by one axis among interpolation axes, the speed setting range is "0.01 to 21474836.47[degree/min] ".
 - (b) Reference-axis speed specification If the "speed control 10 × multiplier setting for degree axis" is set to "valid" in the specified reference axis, the speed setting range is "0.01 to 21474836.47[degree/min] ".

4 PARAMETERS FOR POSITIONING CONTROL

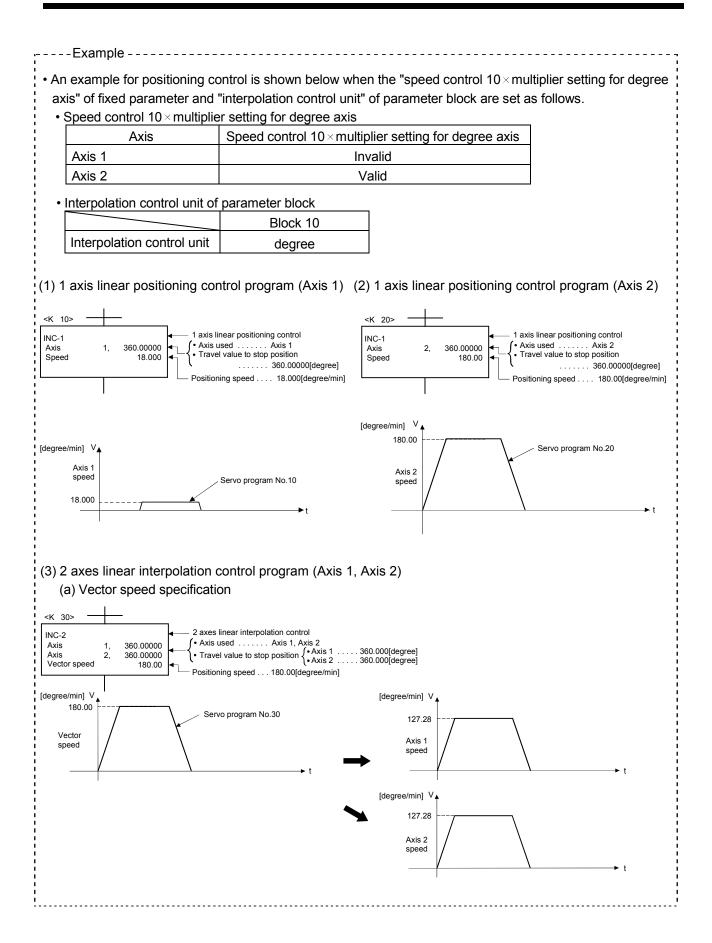

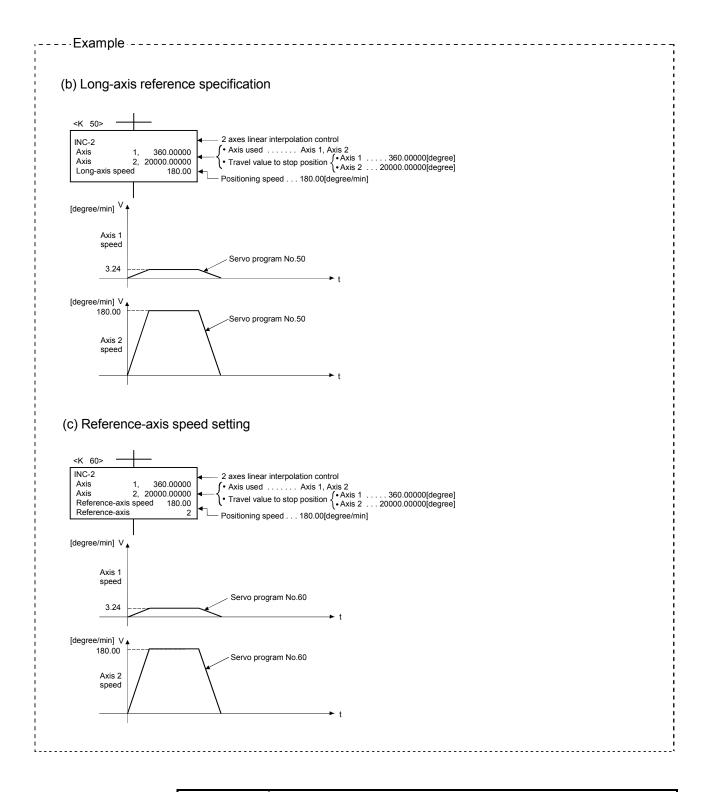

POINTS

When a speed change is executed by the Motion dedicated PLC instruction (D(P).CHGV) or Motion SFC program (CHGV instruction) after setting the "speed control 10 × multiplier setting for degree axis is valid", the positioning control is executed by the speed increased 10 × multiplier setting value.

4.3 Parameter Block

- (1) The parameter blocks serve to make setting changes easy by allowing data such as the acceleration/deceleration control to be set for each positioning processing.
- (2) A maximum 64 blocks can be set as parameter blocks.
- (3) Parameter blocks can be set using MT Developer2.
- (4) Parameter block to be set are shown in Table 4.2.

						Sottir	ng range							
No.		Item	mm		inch	Setti	degree		PLS		Initial	Units	Remarks	Section
INO.		item	Setting range	Linita	Setting range	Linita			Setting range	Linito	value	Units	Remarks	Section
1		erpolation ttrol unit	0		1		2		3		3		 Set the units for compensation control. It can be also used as the units for the command speed and allowable error range for circular interpolation set in the servo program. 	6.1.4
2	Spe valı	eed limit ue	0.01 to 6000000.00	mm/ min	0.001 to 600000.000	inch/ min	0.001 to 2147483.647 (Note-1)	degree/ min	1 to 2147483647	PLS/ s	200000	PLS/s	 Set the maximum speed for positioning/home position return. If the positioning speed or home position return speed setting exceeds the speed limit value, control is executed at the speed limit value. 	
3	Acc time	celeration e				1 to 6	5535[ms]				1000	ms	 Set the time taken to reach the speed limit value from the positioning start. 	4.3.1
4	Dec time	celeration e				1 to 6	5535[ms]				1000	ms	 Set the time taken to stop from the speed limit value. 	
5		oid stop eleration time				1 to 6	5535[ms]				1000	ms	• Set the time taken to stop from the speed limit value at rapid stop.	
6	S-c	urve ratio		0 to 100[%]							0	%	 Set the S-curve ratio for S-pattern processing. When the S-curve ratio is 0[%], trapezoidal acceleration/deceleration processing is executed. 	4.3.2
	ration	Acceleration/ deceleration system				ve acco	eleration/decele	eration			Trapezoid/ S-curve	_	 Set the control method for acceleration/deceleration. 	
7	Advanced S-curve acceleration/deceleration	ratio 0.0 to 100.0[%] Deceleration section 1						20.0	%	Set the ratio for advanced S- curve acceleration/ deceleration processing.	4.3.3			

Table 4.2 Parameter Block Setting List

		Setting range											
No.	Item	mm		inch		degree	9	PLS		Initial value	Units	Remarks	Section
		Setting range	Units	Setting range	Units	Setting range	Units	Setting range	Units				
8	Torque limit				1 to '	1000[%]				300	%	 Set the torque limit value in 	_
Ŭ	value				1 10	1000[/0]				500	70	the servo program.	
9	Deceleration processing on STOP input		0 : Deceleration stop is executed based on the deceleration time. 1 : Deceleration stop is executed based on the rapid stop deceleration time.							0		 Set the deceleration processing when external signals (STOP, FLS, RLS) are input. 	_
10	Allowable error range for circular interpolation	0 to 10000.0	μm	0 to 1.00000	inch	0 to 1.00000	degree	0 to 100000	PLS	100	PLS	• Set the permissible range for the locus of the arc and the set end point coordinates.	4.3.4

Table 4.2 Parameter Block Setting List (Continued)

(Note-1): When the "speed control 10×multiplier setting for degree axis" is set to "valid", the setting range is 0.01 to 21474836.47[degree/min]. However, setting range of 0.001 to 2147483.647[degree/min] is displayed in the parameter block setting screen of MT Developer2.


POINTS

- (1) Parameter blocks are specified in the home position return data, JOG operation data or servo program.
- (2) The various parameter block data can be changed using the servo program. (Refer to Section 5.3.)

POINTS

- (3) The data set in the parameter block is used in the positioning control, home position return and JOG operation.
 - (a) The parameter block No. used in the positioning control is set using MT Developer2 at the creating of the servo program. If it is not set, control is executed with the contents of parameter block No.1.

Also, it is possible to set parameter block data individually in the servo program. [Servo program editor screen]

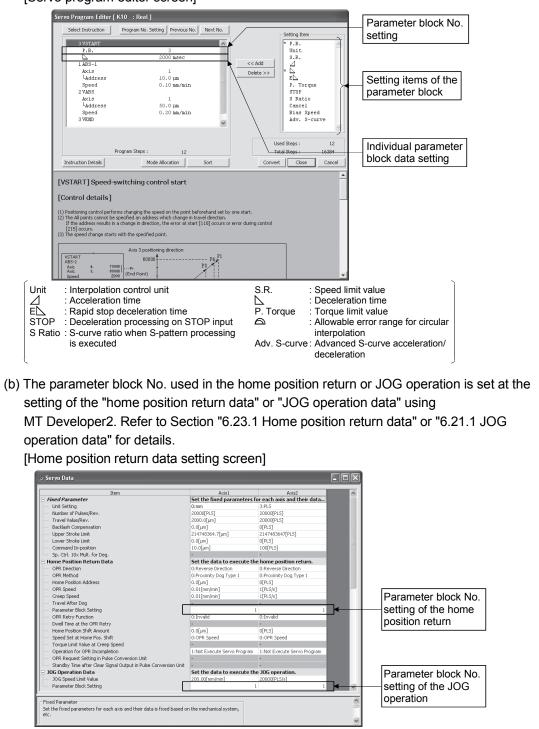


POINTS (4) The processing method of acceleration/deceleration is set by the acceleration/deceleration method and S-curve ratio set in the parameter block. (a) Set "Trapezoid/S-curve" as acceleration/deceleration method to execute the trapezoidal acceleration/deceleration or S-curve acceleration/deceleration. Set 0[%] as S-curve ratio to execute the trapezoidal acceleration/deceleration, and set 1 to 100[%] to execute the S-curve acceleration/deceleration. (b) Set "Advanced S-curve" to execute the Advanced S-curve acceleration/ deceleration. At this time, the S-curve ratio is invalid. Parameter block Acceleration/deceleration system S-curve ratio[%] Trapezoidal acceleration/deceleration 0 Trapezoid/S-curve S-curve acceleration/deceleration 1 to 100 Advanced S-curve acceleration/deceleration Advanced S-curve _ (c) When the FIN acceleration/deceleration (Fixed acceleration/deceleration time method) is set in the constant speed control, the setting for advanced S-curve acceleration/ deceleration is invalid.

4.3.1 Relationships between the speed limit value, acceleration time, deceleration time and rapid stop deceleration time

The speed limit value is the maximum speed at the positioning/home position return. The acceleration time is the time taken to reach the set speed limit value from the start of positioning.


The deceleration time and rapid stop deceleration time are the time taken to effect a stop from the set speed limit value.

Accordingly, the actual acceleration time, deceleration time, and rapid stop deceleration time are faster, because the positioning speed is faster than the speed limit value.

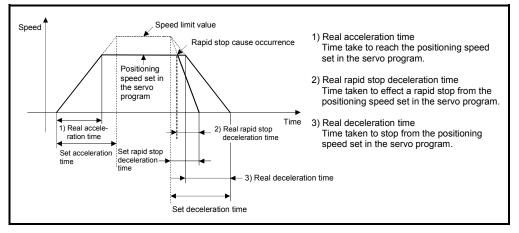

Set a short time than the deceleration time for the rapid stop deceleration time.


- (1) Deceleration time < Rapid stop deceleration time
 - (a) The error code [51] is stored in the error item information (SD517) at start, and the servo program setting error flag (SM516) is turned ON. When the rapid stop cause occurs during deceleration, the axis decelerates to a stop in the deceleration time.




- (b) The large value than deceleration time can be set as rapid stop deceleration time by turning ON the rapid stop deceleration time setting error invalid flag (SM805). Ver
 - Turn ON the rapid stop deceleration time setting error invalid flag (SM805) before operation to use the rapid stop deceleration time setting error invalid.

(The setting value is input at start.)

2) For the advanced S-curve acceleration/deceleration, operation is controlled with either small value of setting value for rapid stop deceleration time and deceleration time even if the rapid stop deceleration time setting error invalid flag (SM805) turns ON.

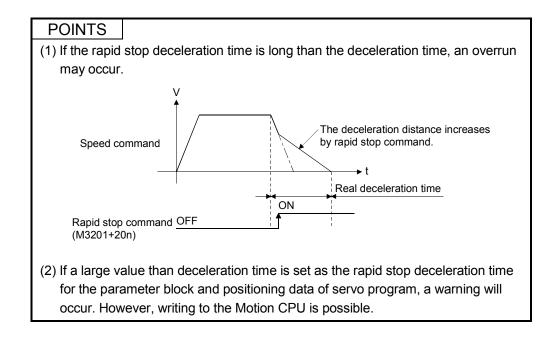

(2) Rapid stop deceleration time ≤ Deceleration time When the rapid stop cause occurs during deceleration, the axis decelerates to a stop in the rapid stop time.



Refer to Section 4.3.3 for acceleration time, deceleration time and rapid stop deceleration time of the advanced S-curve acceleration/deceleration processing.

Ver. : Refer to Section 1.3 for the software version that supports this function.

4.3.2 S-curve ratio

S-curve ratio can be set as the acceleration/deceleration processing method for S-curve acceleration/deceleration processing.


(Refer to Section 6.1.7 for details of S-curve acceleration/deceleration processing.) Setting range of the S-curve ratio is 0 to 100[%].

If it is set outside the range, an error occurs at the start and control is executed with the S-curve ratio set as 0[%] (Trapezoidal acceleration/deceleration).


Errors are set in the error item information (SD517).

Setting of the S-curve ratio enables acceleration/deceleration processing to be executed gently.

The graph for S-curve acceleration/deceleration is a sine curve as shown below.

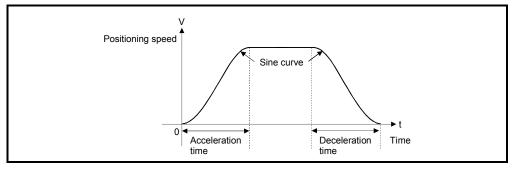


As shown below, the S-curve ratio setting serves to select the part of the sine curve to be used as the acceleration/deceleration curve.

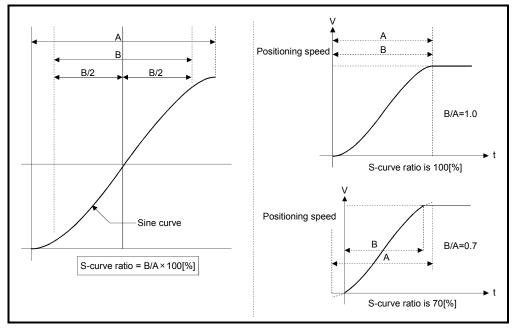

4.3.3 Advanced S-curve acceleration/deceleration

Processing for smooth acceleration/deceleration can be executed by using the advanced S-curve acceleration/deceleration function. The acceleration section is set as a sine curve as shown in the diagram below.

Each section of acceleration/deceleration is set as a ration using the advanced S-curve acceleration/deceleration setting.

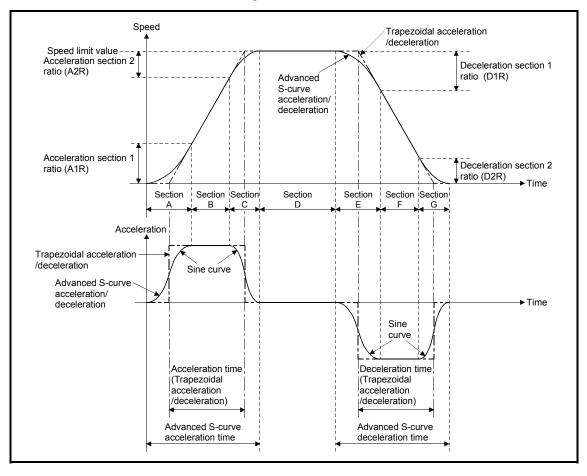

Ver. : Refer to Section 1.3 for the software version that supports this function.

Γ			0	perati	on
	Section	Section Processing			Rapid stop
А	Acceleration section 1	At the start of acceleration, acceleration continuously changes in a sinusoidal manner until reaching the maximum acceleration for trapezoidal acceleration/deceleration. Set this section in acceleration section 1 ratio (A1R).			
В	Maximum acceleration section	The maximum acceleration for trapezoidal acceleration/deceleration	0	_	_
с	Acceleration section 2	At the end of acceleration, acceleration continuously changes in a sinusoidal manner until reaching zero acceleration. Set this section in acceleration section 2 ratio (A2R).			
D	Constant-speed section	The specified control positioning speed	I	I	—
E	Deceleration section 1	At the start of acceleration, deceleration continuously changes in a sinusoidal manner until reaching the maximum negative acceleration for trapezoidal acceleration/deceleration. Set this section in deceleration section 1 ratio (D1R).			
F	Maximum negative acceleration section	The same maximum negative acceleration for trapezoidal acceleration/deceleration	_	0	0
G	Deceleration section 2	At the end of deceleration, deceleration continuously changes in a sinusoidal manner until reaching zero acceleration. Set this section in deceleration section 2 ratio (D2R).			

Set the following parameters in the parameter block.

				Op	peratio	on
ltem	Abbre- viation	Setting range	Processing	Acceleration	Deceleration	Rapid stop
		mm 0.01 to 6000000.0				
Speed limit value	S.R.	inch 0.001 to 600000.00 degree 0.001 to 2147483.647[d	(Neto 1) • Maximum speed at positioning/home position return	0	0	0
		degree 0.001 to 2147483.647[di PLS 1 to 214748364	<u> </u>			
Acceleration time	AT		Time to reach the speed limit value (S.R.) after positioning start. (During trapezoidal acceleration)	0	-	_
Deceleration time	DT	1 to 65535[ms]	 Time to stop from the speed limit value (S.R.). (During trapezoidal deceleration) 	—	0	_
Rapid stop deceleration time	ET		 Time to stop from the speed limit value (S.R.) at rapid stop. (Trapezoidal deceleration) 	_	_	0
Acceleration section 1 ratio	A1R	0.0 to 100.0[%]	 Ratio of speed limit value (S.R.) to acceleration peak from zero acceleration. 	0	_	—
Acceleration section 2 ratio	A2R	(A1R + A2R ≤ 100.0	• Ratio of speed limit value (S.R.) to zero acceleration from acceleration peak.	0	_	—
Deceleration section 1 ratio	D1R	0.0 to 100.0[%]	 Ratio of speed limit value (S.R.) to negative acceleration peak from zero acceleration. 	—	0	0
Deceleration section 2 ratio	D2R	(D1R + D2R ≤ 100.0		_	0	0

(Note-1): When the "speed control 10×multiplier setting for degree axis" is set to "valid", the setting range is 0.01 to 21474836.47[degree/min].

POINTS

The acceleration time to reach the command speed and the travel value during acceleration changes by setting the Acceleration section 1 ratio and acceleration section 2 ratio. The deceleration time to stop from the commanded speed and the travel value during deceleration changes by setting the deceleration section 1 ratio and deceleration section 2 ratio.

(1) There are patterns (below pattern 1 to 4 respectively) that depends on the positioning speed of the acceleration pattern/deceleration pattern of advanced Scurve acceleration/deceleration.


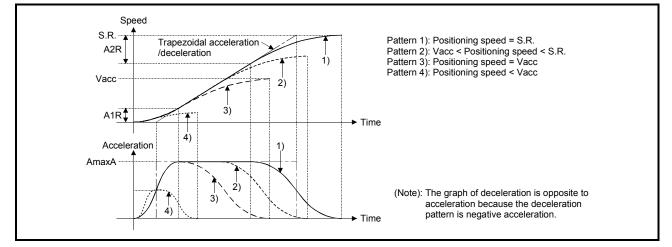


Fig.4.5 Acceleration pattern

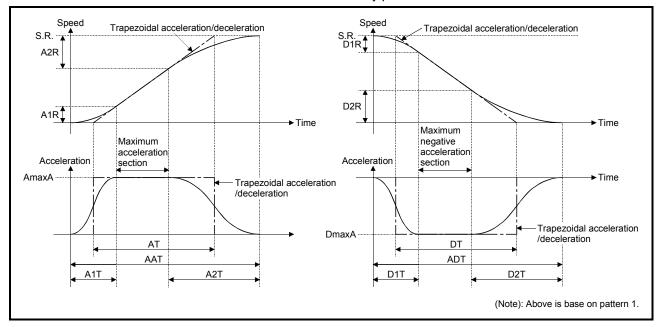

The maximum acceleration and advanced S-curve acceleration time/ deceleration time are calculated by parameters.

Fig.4.6 Maximum acceleration, advanced S-curve acceleration time/deceleration time

				0	peration	on
ltem	Abbre- viation	Description	Calculation expression	Acceleration	Deceleration	Rapid stop
Maximum acceleration	AmaxA	Maximum acceleration Same acceleration as trapezoidal acceleration/deceleration	S.R. ÷ AT	0		—
Maximum negative acceleration	DmaxA		S.R. ÷ DT	_	0	—
Maximum negative acceleration at rapid stop	EmaxA	Same negative acceleration as trapezoidal acceleration/ deceleration	S.R. ÷ ET	_		0
Advanced S-curve acceleration time (Note-1)	AAT	 Time to reach the speed limit value (S.R.) after positioning start. (At advanced S-curve acceleration/deceleration) It can be lengthened more than trapezoidal acceleration/ deceleration by using A1R or A2R. 	AT × (100.0 + A1R + A2R) ÷ 100.0			_
Advanced S-curve deceleration time (Note-1)	ADT	• Time to stop from the speed limit value (S.R.) at (rapid stop)	DT × (100.0 + D1R + D2R) ÷ 100.0		0	—
Advanced S-curve rapid stop deceleration time (Note-1)	AET	 deceleration. (Advanced S-curve acceleration/deceleration) It can be lengthened more than trapezoidal acceleration/ deceleration by using D1R or D2R. 	ET × (100.0 + D1R + D2R) ÷ 100.0	_		0
Time of acceleration section 1	A1T	Time to reach acceleration peak from zero acceleration.	AT \times (A1R \div 100.0) \times 2	0	_	—
Time of acceleration section 2	A2T	Time to reach zero acceleration from acceleration peak.	AT \times (A2R \div 100.0) \times 2	0	I	—
Time of deceleration section 1	D1T	 Time to reach negative acceleration peak from zero acceleration. 	DT × (D1R ÷ 100.0) × 2	_	0	—
Time of deceleration section 2	D2T	 Time to reach zero acceleration from negative acceleration peak. 	DT × (D2R \div 100.0) × 2	_	0	—
Velocity when "AAT=A1T+A2T"	Vacc	 The velocity when total acceleration is only "A1T+A2T". (No maximum acceleration section) 	S.R. × (A1R + A2R) ÷ 100.0	0	_	—
Velocity when "ADT=D1T+D2T"	Vdac	 The velocity when total acceleration is only "D1T+D2T". (No maximum deceleration section) 	S.R. × (D1R + D2R) ÷ 100.0	_	0	—

(Note-1): The actual acceleration time, actual deceleration time and actual rapid stop deceleration time are shortened when the positioning speed is less than the speed limit value.

The actual acceleration/deceleration time for each pattern (Fig.4.5 pattern 1 to 4) based on positioning speed is shown below.

[Actual acceleration time]

	Pattern	Positioning speed	Description	Actual acceleration time	Actual maximum acceleration
High	1)	Positioning speed = S.R.	 It accelerates with the acceleration section 1, maximum acceleration section and acceleration section 2. 	AAT	
	2)	Vacc < Positioning speed < S.R.	Maximum acceleration section is short than pattern 1.	ection is short AAT - (S.R Positioning speed) AmaxA	
	3)	Positioning speed = Vacc	 It accelerates with only acceleration section 1 and acceleration section 2. (No maximum acceleration section) 	A1T + A2T	
► Low	4)	Positioning speed < Vacc	 Maximum acceleration and acceleration increase/decrease time of acceleration section 1 and 2 are shortened. (No maximum acceleration section) 	$(A1T + A2T) \times \sqrt{(Positioning speed/Vacc)}$	AmaxA × √(Positioning speed/Vacc)

[Actual deceleration time]

	Pattern	Positioning speed	Description	Actual Deceleration time	Negative actual maximum acceleration
High	1)	Positioning speed = S.R.	• It accelerates with the deceleration section 1, maximum negative acceleration section and deceleration section 2.	ADT	
	2)	Vdac < Positioning speed < S.R.	Maximum negative acceleration section is shortened than pattern 1.	ADT - (<u>S.R Positioning speed)</u> DmaxA	DmaxA
	3)	Positioning speed = Vdac	 It decelerates with only deceleration section 1 and deceleration section 2. (No maximum negative acceleration section) 	D1T + D2T	
Low	4)	Positioning speed < Vdac	 Maximum acceleration of deceleration section 1 and deceleration section 2, and negative acceleration increase/decrease time are shortened. (No maximum deceleration section) 	(D1T + D2T) × √(Positioning speed/Vdac)	DmaxA × √(Positioning speed/Vdac)

- (2) When the positioning speed is slower than the speed limit value, adjust the acceleration in the following procedure.
 - (a) Shorten time of maximum acceleration section. (Fig.4.5 Pattern 2, 3)
 - (b) Reduce maximum acceleration and acceleration increase/decrease time of acceleration section 1 and 2. (Fig.4.5 Pattern 4)

(3) Advanced S-curve acceleration/deceleration time is calculated as a function of the acceleration/deceleration time set in the parameter block by using the parameter setting of advanced S-curve acceleration/deceleration as shown below.

block

	e
Condition	Advanced S-curve acceleration time
Acceleration section 1 ratio (A1R) = Acceleration section 2 ratio (A2R) = 0.0	Same as acceleration time of the parameter bloc (Trapezoidal acceleration processing)
Acceleration section 1 ratio (A1R) or Acceleration section 2 ratio (A2R) \neq 0.0	Longer acceleration time compared with the parameter block.

Acceleration section 1 ratio (A1R) + Acceleration section 2 ratio (A2R) = 100.0 Double the acceleration time of the parameter block.

Advanced S-curve acceleration time

Advanced S-curve deceleration time

Condition	Advanced S-curve deceleration time
Deceleration section 1 ratio (D1R) = Deceleration section 2 ratio (D2R) = 0.0	Same as deceleration time of the parameter block (Trapezoidal acceleration processing)
Deceleration section 1 ratio (D1R) or Deceleration section 2 ratio (D2R) \neq 0.0	Longer deceleration time compared with the parameter block.
Deceleration section 1 ratio (D1R) + Deceleration section 2 ratio (D2R) = 100.0	Double the deceleration time of the parameter block.


- (4) Deceleration processing is executed by using the deceleration section 1 ratio (D1R) and deceleration section 2 ratio (D2R) at rapid stop deceleration.
- (5) When the FIN acceleration/deceleration (Fixed acceleration/deceleration time method) is set in the constant-speed control, the setting for advanced S-curve acceleration/deceleration is invalid. However, advanced S-curve acceleration/ deceleration can be used regardless whether the speed switching point specified flag (M2040) is ON or OFF.
- (6) Advanced S-curve acceleration/deceleration control is enabled at home position return operation. When executing a home position return using a proximity dog, the movement amount to decelerate to creep speed is different compared to trapezoid acceleration/deceleration and s-curve acceleration/deceleration. This is to ensure

smoothness of acceleration/deceleration. For this reason, the stop position (zero point) upon completion of home position return is different to when trapezoid acceleration/deceleration and s-curve acceleration/deceleration is used.

POINTS

Set the advanced S-curve acceleration/deceleration setting using the parameter block on the following screen of MT Developer2. The Advanced S-curve Acceleration time and maximum acceleration are displayed by setting acceleration section 1 ratio, acceleration section 2 ratio and the acceleration time. The advanced S-curve deceleration time and advanced S-curve rapid stop deceleration time, maximum negative acceleration and maximum negative at rapid stop are displayed by setting deceleration section 1 ratio, deceleration section 2 ratio and deceleration time

[Advanced S-curve acceleration/deceleration setting screen (Acceleration setting)]

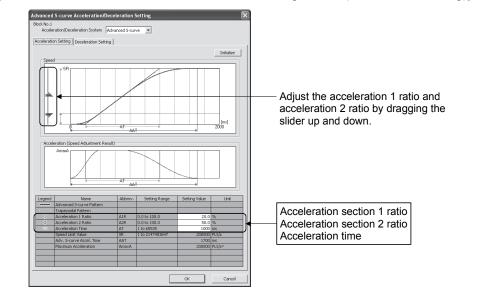


[Error]

In the following cases, the servo program setting error [45] to [50] will occur, and controls will be executed as trapezoidal acceleration/deceleration (A1R = A2R = D1R = D2R = 0.0).

- Acceleration section 1 ratio is outside the range of 0.0 to 100.0[%].
- Acceleration section 2 ratio is outside the range of 0.0 to 100.0[%].
- Deceleration section 1 ratio is outside the range of 0.0 to 100.0[%].
- Deceleration section 2 ratio is outside the range of 0.0 to 100.0[%].
- "Acceleration section 1 ratio + Acceleration section 2 ratio" > 100.0[%]
- "Deceleration section 1 ratio + Deceleration section 2 ratio" > 100.0[%]

[Program]

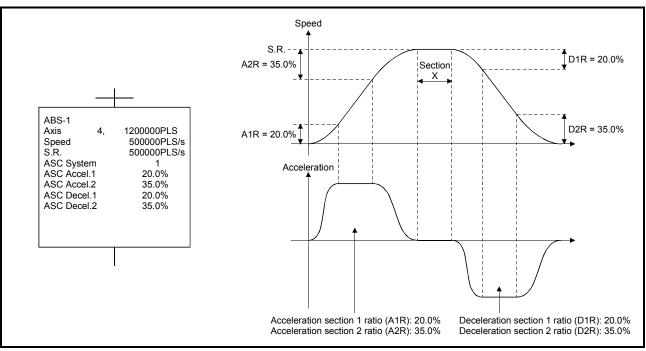

A sample servo program using the advanced S-curve acceleration/deceleration is shown below.

POINTS


When the advanced S-curve acceleration/deceleration is set, the travel value (section X above) at the commanded speed is different than when using trapezoidal acceleration/deceleration (A1R=A2R=D1R=D2R=0.0).

[Operation]

(1) Stop processing

When the stop command turns ON during acceleration, the acceleration is decreased until it reaches zero according to acceleration section 2 ratio setting. Therefore, the speed will continue to increase for a while before deceleration stop processing is executed.

(Deceleration is smooth.)

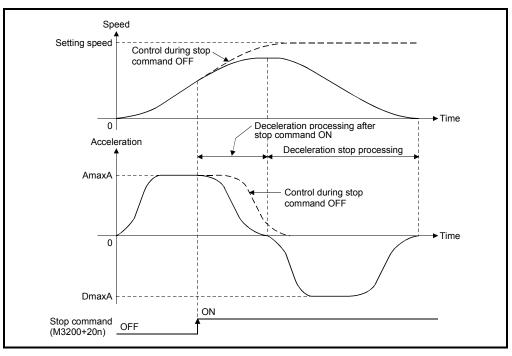

POINTS


When the stop command turns ON during acceleration processing of advanced Scurve acceleration/deceleration, in order to maintain smoothness of acceleration, the speed will continue to increase until acceleration reaches zero. Use the rapid stop command if an increase in speed is not desired.

(2) Rapid stop processing

(a) Rapid stop during acceleration


When the rapid stop command turns ON during acceleration, acceleration immediately goes to zero, and rapid stop deceleration processing is executed.

(Deceleration is abrupt.)

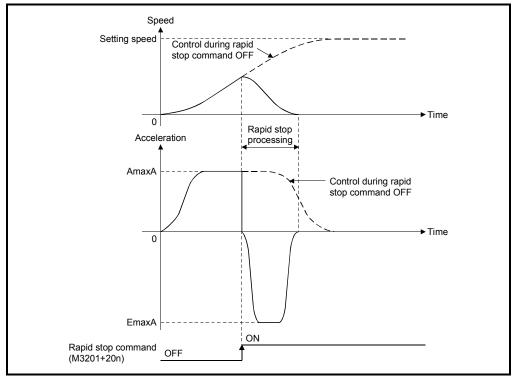

(b) Rapid stop during deceleration

When the rapid stop command turns ON during deceleration, the negative acceleration is decreased, and the rapid stop deceleration processing is executed.

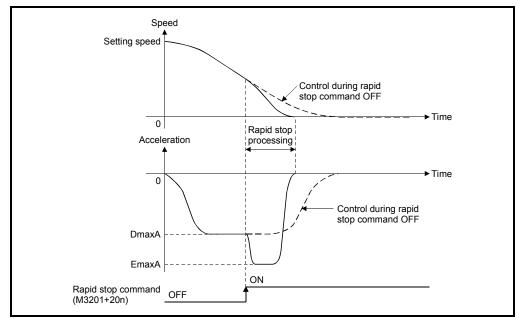


POINTS

When the rapid stop command turns ON during deceleration stop processing of advanced S-curve acceleration/deceleration, timing may be such that a rapid stop will take longer than the advanced S-curve deceleration.

In this case, the advanced S-curve deceleration stop processing will automatically continue instead of using the rapid stop processing.

(3) Speed change processing

Operation in which a speed change is executed during each section of acceleration is shown below.

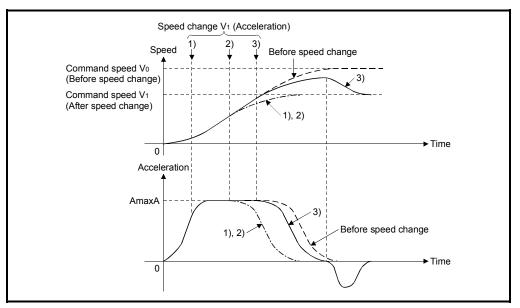

Pattern	Speed change command	Acceleration/deceleration processing at speed change	Operation
1)		Acceleration section 1 (Increasing acceleration section)	 Length of maximum acceleration section is adjusted to reach speed V1 at acceleration end.
2)		Maximum acceleration section	The acceleration is decreased until the acceleration reaches zero.
3)	Speed change V1 (Acceleration)	Maximum acceleration section (When the speed change occurs in situations where V ₀ will surpass V ₁ during the decreasing acceleration section.)	 The maximum acceleration section is interrupted, and the acceleration is decreased until the acceleration reaches zero. The deceleration processing is executed to reach speed V1.

(4) Speed control with fixed position stop processing

The "fixed position stop acceleration/deceleration time" set in the servo program is used during acceleration/deceleration processing when a positioning start, speed change request (CHGV) or fixed position stop command ON occurs. It operates in the fixed acceleration/deceleration time method.


(a) Acceleration/deceleration processing in the fixed acceleration/deceleration time method

Actual acceleration time, deceleration time and maximum acceleration are shown below.

Acceleration time	Specified acceleration time (AT) \times (100.0 + A1R + A2R) \div 100.0
Deceleration time	Specified deceleration time (DT) × (100.0 + D1R + D2R) \div 100.0
Maximum acceleration	Speed difference ÷ Specified acceleration/deceleration time

(b) Acceleration processing from zero speed and deceleration processing to zero speed (fixed time method)


Operation for positioning to fixed position stop command position at servo program start is shown below.

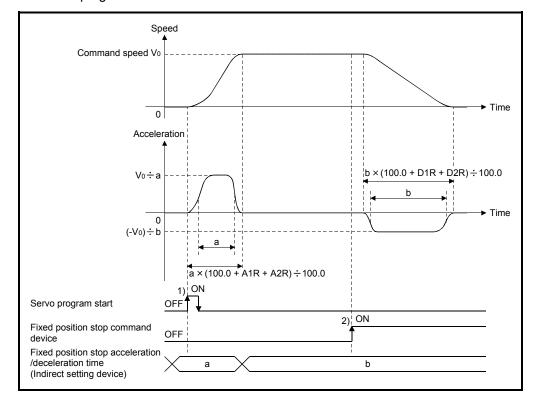

Speed change command	Speed difference	Acceleration/ deceleration time	Maximum acceleration	Operation
1) Servo program start (Acceleration from speed 0 to Vo)	Vo	а	V₀÷a	Actual acceleration time "a × (100.0 + A1R + A2R) \div 100.0"
2) Positioning to fixed position stop command position (Deceleration from speed Vo to 0)	-V0	b	(-V₀) ÷ b	Actual deceleration time "b × (100.0 + D1R + D2R) ÷ 100.0"

(5) Speed change (fixed time method)

Operation in which a speed change during deceleration is executed is shown below.

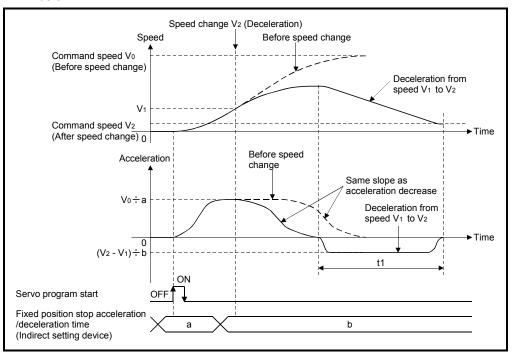


Speed change command	Speed difference	Acceleration/ deceleration time	Maximum acceleration	Operation
Deceleration from speed Vo to 0	(V2 - V1)	D	(V2 - V1) ÷ b	 (a) The acceleration is decreased until the acceleration becomes from acceleration to"0" at speed change. This inclination of acceleration section 2 (acceleration decrease section) is calculated based on the acceleration/deceleration time before speed change. (b) Deceleration processing is executed. (Note): The acceleration time "t1" is lengthened than "b × (100.0 + D1R + D2R) ÷ 100.0", because the acceleration continues until the acceleration reaches zero after a speed change.

POINTS

When a speed change is executed during decreasing acceleration of avanced S-curve acceleration/deceleration, in order to maintain smoothness of acceleration, the speed will continue to increase until acceleration reaches zero. Therefore, the time for speed change is lengthened.

(6) Automatic decelerating flag (M2128 to M2159)

When the automatic deceleration processing is started during acceleration, the acceleration is decreased according to the acceleration section 2 ratio setting until the acceleration reaches zero. Therefore, the speed increases for a while before deceleration stop processing is executed. (Deceleration is smooth.)

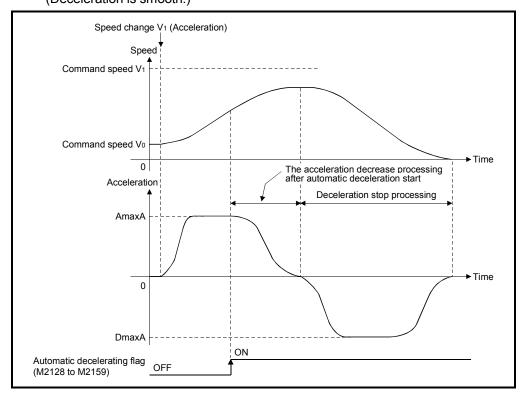

POINTS

When the automatic deceleration processing is started during acceleration processing of advanced S-curve acceleration/deceleration, in order to maintain smoothness of acceleration, the speed will continue to increase until acceleration reaches zero.

4.3.4 Allowable error range for circular interpolation

The locus of the arc calculated from the start point address and central point address may not coincide with the set end point address for the central-specified control. The allowable error range for circular interpolation sets the allowable range for the error between the locus of the arc determined by calculation and the end point address. If the error is within the allowable range, circular interpolation to the set end point address is executed while also executing error compensation by means of spiral interpolation.

If it exceeds the setting range, an error occurs at the start and positioning does not start. Such an error are set the applicable axis or minor error code area.

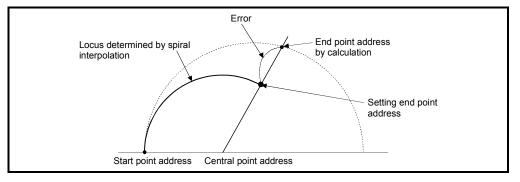


Fig. 4.7 Spiral Interpolation

4.4 Expansion Parameters **QDS**

- (1) The expansion parameters are data to execute the following operation by the parameters set in each axis.
 - Monitor individually the positive and negative direction torque limit value.
 - Change the acceleration/deceleration time when changing speed.
- (2) The expansion parameters are set using MT Developer2.
- (3) The expansion parameters to be set are shown in Table 4.3.

						Setting	range		-				Indirec	t setting					
No.	lte	em	mn Setting range	Units Setting Units Setting Units Set				PLS Setting range	S Units	Initial value	Units	Valid/ invalid	Number of words	Remarks	Section				
1	Positive direct limit value mo (Note-1)	•	_									_	0	1	• Set the device to monitor the positive torque limit value.	4.4.1			
2	Negative direc limit value mo (Note-1)					_	_				_	_	0	1	• Set the device to monitor the negative torque limit value.	4.4.1			
3	Acceleration/	Acceleration/ deceleration time change enable device (Note-1)				-	_				_	_	0	Bit	Set the device to enable the change of acceleration/ deceleration time at a speed change request.				
4	deceleration time change parameter	New acceleration time value device (Note-1)			_						_	_	0	1	• Set the device to set the change value of acceleration time.	4.2.2			
5		New deceleration time value device (Note-1)				-	-				_	_	0	1	• Set the device to set the change value of deceleration time.				

Table 4.3 Expansion parameter list

(Note-1): This setting can be omitted.

Ver.! : Refer to Section 1.3 for the software version that supports this function.

(4) Indirect setting of expansion parameter

- (a) Word devices for indirect setting
 - The word devices for indirect setting are the data registers (D), link registers (W), Motion registers (#) and Multiple CPU area device ($U\Box$ \G).

Word devices except the above devices cannot be used.

The usable setting range of word devices are shown below.

Word devices	Setting range
D	0 to 8191
W	0 to 1FFF
#	0 to 9215
U⊟\G	10000 to (10000+p-1) ^{(Note-1) (Note-2)}

(Note-1): "p" indicates the user setting area points of the Multiple CPU high speed transmission area for each CPU.

(Note-2): Positive direction torque limit value monitor device and negative direction torque limit value monitor device can use the device of the self CPU only.

(b) Bit devices for indirect setting

The bit devices for indirect setting are the input (X), output (Y), internal relay (M), link relay (B), annunciator (F) and Multiple CPU area device ($U\Box\G$). Bit devices except the above devices cannot be used.

The usable setting range of bit devices are shown below.

Bit device	Setting range
Х	0000 to 1FFF ^(Note-1)
Y	0000 to 1FFF
М	0 to 8191
В	0000 to 1FFF
F	0 to 2047
U⊟\G	10000.0 to (10000+p-1).F ^(Note-2)

(Note-1): The range of "PXn+4 to PXn+F" cannot be used (fixed at 0) for the input device

(PXn+0 to PXn+F) allocated to the built-in interface in Motion CPU (DI). (n: First input No.)

(Note-2): "p" indicates the user setting area points of the Multiple CPU high speed transmission area for each CPU.

- (c) Input of expansion parameter
 - The positive direction torque limit value monitor device and negative direction torque limit value monitor device input the monitor value in the specified word device for every operation cycle.
 - 2) The acceleration/deceleration time change parameter inputs the data of the specified device at request of speed change.

POINT

Refer to Chapter 2 of the "Q173D(S)CPU/Q172D(S)CPU Motion controller Programming Manual (COMMON)" for the user setting area points of the Multiple CPU high speed transmission area.

4.4.1 Positive direction torque limit value monitor device/negative direction torque limit value monitor device

The positive direction torque limit value monitor device and negative direction torque limit value monitor device are set for every axis, and the positive and negative direction torque limit value are monitored (0.1 to 1000.0[%]) individually.

- Positive direction torque limit value monitor device Set the device to monitor the positive torque limit value. The positive torque limit value (forward rotation (CCW) driving, reverse rotation (CW) regenerative torque limit value) to command the servo amplifier is stored. The default value "300.0[%]" is stored at the power supply of servo amplifier ON.
- (2) Negative direction torque limit value monitor device Set the device to monitor the negative torque limit value. The negative torque limit value (reverse rotation (CW) driving, forward rotation (CCW) regenerative torque limit value) to command the servo amplifier is stored. The default value "300.0[%]" is stored at the power supply of servo amplifier ON.

POINT

The positive torque limit value is stored in the torque limit value storage register (D14+20n) in 1[%] unit. (The negative torque limit value is not stored.)

4.4.2 Acceleration/deceleration time change parameter

The acceleration/deceleration time change parameter arbitrarily changes the acceleration/deceleration time at speed change, when changing speed with the Motion dedicated function (CHGV) of Motion SFC program (and also the Motion dedicated PLC instruction (D(P). CHGV)).

(1) Acceleration/deceleration time change enable device

Set the device to enable the change of acceleration/deceleration time at a speed change request.

The following describes the operation for ON and OFF of the acceleration/ deceleration time change enable device.

- ON Speed change is executed at a speed change request by changing the acceleration/deceleration time values in the new acceleration time value device and new deceleration time value device.
- OFF Does not change acceleration/deceleration time at a speed change request.

(2) New acceleration time value device

Set the device to set the change value when changing the acceleration time at a speed change request.

The following change values are set in the new acceleration time value device.

O..... Acceleration time change is disabled, and speed

- change is maintained at the current acceleration time.
- 1 to 65535[ms]..... If a speed change request is executed when the acceleration/deceleration time change enable device is ON, speed change is executed by changing the acceleration time to the set value.

(3) New deceleration time value device

Set the device to set the change value when changing the deceleration time at a speed change request.

The following change values are set in the new deceleration time value device.

O..... Deceleration time change is disabled, and speed change is maintained at the current deceleration time.

• 1 to 65535[ms]..... If a speed change request is executed when the acceleration/deceleration time change enable device is ON, speed change is executed by changing the deceleration time to the set value.

Ver. : Refer to Section 1.3 for the software version that supports this function.

POINT

- (1) When the setting of acceleration/deceleration time change enable device is omitted, change of acceleration/deceleration time at a speed change request is not executed. When changing acceleration/deceleration time at a speed change, set this parameter.
- (2) When the setting of new acceleration time value device and new deceleration time value device is omitted, change of acceleration/deceleration time of the omitted devices is not executed.

MEMO

5. SERVO PROGRAMS FOR POSITIONING CONTROL

Servo programs specify the type of the positioning data required to execute the positioning control in the Multiple CPU system.

This chapter describes the configuration and setting method of the servo programs. Refer to Chapter "6 POSITIONING CONTROL" for details of the servo program.

5.1 Servo Program Composition Area

This section is described the composition of servo programs and the area in which stores the servo program.

5.1.1 Servo program composition

A servo program is composed a program No., servo instructions and positioning data. When a program No. and the required servo instructions are specified using MT Developer2, the positioning data required to execute the specified servo instructions can be set.

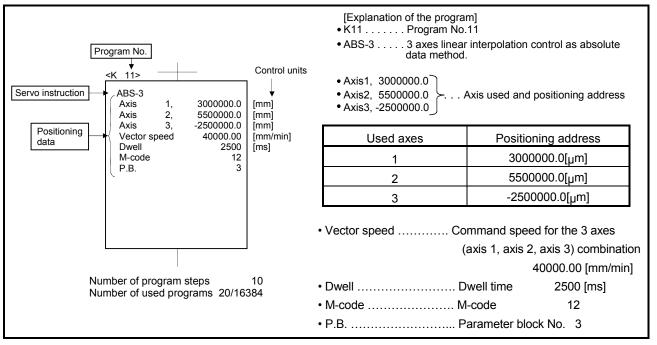


Fig. 5.1 Composition example of servo program

- (1) Program No. This No. is specified using the Motion SFC program. Any No. in the range of 0 to 4095 can be set.
- (2) Servo instruction Type of positioning control is indicated. Refer to Section 5.2 for details.

(3) Positioning data This is the data required to execute servo instructions. The data required to execute is fixed for each servo

instruction.

Refer to Section 5.3 for details.

The follows applies for the servo program shown in Figure 5.1:

 Axis used and positioning address

Data which must be set in order to execute the servo instruction.

- Command speed
- Dwell timeM-code

• P.B.

Data which will be set to default

- \downarrow values for control if not set.
 - igcap Control is executed using the data
- (parameter block) \int of parameter block 3 (P.B.3).

5.1.2 Servo program area

(1) Servo program area

This area is an internal memory of the Multiple CPU system which store the servo program created using MT Developer2. This area is an internal RAM.

(2) Servo program capacity

The servo program area has a capacity of 16384 steps.

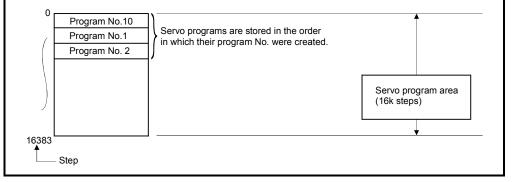


Fig. 5.2 Servo program area

POINT

If the servo program area has insufficient capacity, execute the multiple positioning control operations with one program by indirect setting of the positioning data used in the servo program. (Refer to Section 5.4.2 for details of indirect setting.)

5.2 Servo Instructions

The servo instructions used in the servo programs are shown below. Refer to Chapter 6 for details of the servo instruction. Refer to Chapter 7 of the "Q173D(S)CPU/Q172D(S)CPU Motion Controller (SV13/SV22) Programming Manual (Motion SFC)" for details of the current value change control (CHGA, CHGA-E, CHGA-C).

(1) Guide to servo instruction list

Table. 5.1 Guide to Servo Instruction List

3)										4) 5) 1													6) 1												7) 1)					8) ≜		
				k No.		Comn	1	M-code	value	T	Radius J		Pitch		Amplitude 50	Frequency	Note-1) ON S	al unit	value		sitioni		Pa			ation statio	ac	Adv	ance	ed S∘ 1/deo	curve	e	dition	n No.	peed	Cancel	Othe dixs	Τ.		ation	time of the second	dote	
	sitioning ontrol	Instructi symbo		Parameter block No.	Address	Command speed	Dwel	Ŵ	Torque limit value	Auxiliary point	æ	Central point	,	Starting angle	Amp	Frequ	Reference axis No.	Interpolation control unit	Speed limit value	Acceleration time	Deceleration time	Rapid stop deceleration time	Torque limit value	Deceleration processing	at stop input Allowable error range for	circular interpolation	Acceleration/deceleration	system Acceleration section 1	Acceleration contion 2		Deceleration section 1 ratio	Deceleration section 2 ratio	Repeat condition	Program No	Command speed	0		FIN acceleration/deceleration		Fixed position stop acceler	/de celeration time	Nu	umber of steps
			Virtual enable	0		0		0		0	0		S .	-	-	-	0	-	0	0	0	0	-	-	. (С	0	0	0	0	0	0	0	0			> -		-	
			Number of step Number of indirect words	1	1 1	2 2		1	1	1	1				1	1	1	1	2	1	1	1	1	1		1 1 2 1	1	1 ·	1	1	1	1	1 (Note-2) 1/ 1(B)	1	2	2 Note-2 1(B			-	2 · 81 ·	1 [∙] 1 1(1 82]	
		ABS-																					Δ			2		2 2	2	Δ	\triangle	Δ	1(B)				, .(5	2	.,			-	
10	1 axis	INC-1	I Incremental 1-axis positioning		0														\triangle		\bigtriangleup	\triangle	Δ	-	-	Z		_				Δ				\triangle							4 to 17
on control	2 axis	ABS-2	2 Absolute 2-axes linear	\triangle	0	0	\triangle										0	\triangle	\triangle	\triangle	\triangle	\triangle		-	_			_	_	\triangle	\triangle	\triangle											5 to 20
9			, ,														0			-					2	2		_			Δ	Δ				Δ					1	1	
)																																											
Νι	Number Description																																										
	1)	Ir	nstruction symbol		Giv	es	the	se	ervo	o ir	st	ruct	io	ns	us	sab	ole	in	se	rvc	o p	ro	gra	am	ıs.																		
	,	P	Processing		Giv	es	the	pr	00	ess	sin	g oi	utli	ine	es (of	the	e s	erv	'o i	ns	tru	ict	ior	٦S.																		
	 (a) Indicates positioning data which can be set in servo instructions. ○: Item which must be set (Data which cannot execute the servo instruction unless it sets.) ○: Item which is set when required (Data which will be controlled by the default value unless it sets.) (b) Allows direct or indirect designation (except axis No.) 1) Direct designation : Set with numerical value. 2) Indirect designation : Set with word device. • Servo program execution is controlled using the preset word device contents. • Each setting item may either be 1 or 2 word data. • For 2 word data, set the start device No. (c) Number of steps As there are more setting items, there are more number of instruction steps. (The number of steps is displayed when a servo program is created.) 																																										
	3)	lt	ems common to th	ne s	serv	o ii	nsti	uc	tio	ns																																	
	4)	lt	ems set in circular	int	erp	ola	tior	n st	art	ing	l S	ervo	o p	oro	gra	am	IS																										
	5)	lt	ems set for high-s	pee	ed c	osci	llat	ion																																			
	6)		et when changing The parameter bloc		•								lt v	alı	ue	wł	ner	۱n	ot	set	:) d	lata	as	set	in	th	es	ser	vo	р	rog	Ira	m	to	со	ntr	ol.						
	7)	S	Setting items other	tha	in th	ne d	con	۱m	on,	ci	rcı	ular	ar	nd	ра	Irai	me	ete	r b	loc	k i	ter	ns	6 (I	te	ms	to	be	e s	set	Va	ary	/ w	ith	th	e s	sei	vc) ir	nst	ruc	tio	n.)
	8)	lr	ndicates the number	er o	of st	tep	s o	fea	ach	i se	erv	'o ir	st	ruo	ctio	on.																											

(2) Servo instruction list

The servo instructions that can be used in servo programs and the positioning data set in the servo instruction are shown in Table 5.2. Refer to Section 5.3 for details of the positioning data set in the servo instructions.

										P	osition	ing da	ta						
						r	С	ommo	n	r			Arc/H	lelical			OSC		
	ositioning control	Instruction symbol		Processing	Parameter block No.	Axis	Address/travel value	Command speed	Dwell time	M -code	Torque limit value	Auxiliary point	Radius	Central point	Pitch	Starting angle	Amplitude	Frequency	
				Virtual enable	0	\bigcirc	\circ	0	0	0	_	0	0	0	0	_	—	—	
				Number of steps	1	1	1	1	1	1	1	1	1	1	1	1	1	1	
				Number of indirect words	1	_	2	2	1	1	1	2	2	2	1	2	2	2	
	1 axis	ABS-1	Absolute	e 1-axis positioning		0	0	0											
	1 0/13	INC-1	Increme	ntal 1-axis positioning		0	0	0	\triangle	\triangle									
Linear interpolation control	2 axes	ABS-2	Absolute	2-axes linear interpolation		0	0	0											
olation		INC-2	Increme	ntal 2-sxes linear interpolation		0	0	0	Δ	Δ									
ır interp	3 axes	ABS-3	Absolute	e 3-axes linear interpolation		0	0	0	\triangle	\triangle									
Linea		INC-3	Increme	ntal 3-axes linear interpolation		0	0	0											
	4 axes	ABS-4	Absolute	e 4-axes linear interpolation		0	0	0	\triangle	Δ									
		INC-4		ntal 4-axes linear interpolation		0	0	0											
	Auxiliary point-	ABS	circular i	e auxiliary point-specified nterpolation		0	0	0				0							
	specified		circular i	ntal auxiliary point-specified nterpolation		0	0	0				0							
ō		ABS	interpola	e radius-specified circular ation less than CW 180° e radius-specified circular		0	0	0	\triangle	\triangle			0						
Circular interpolation control		ABS	interpola	tion CW 180° or more		0	0	0	\triangle	\triangle			0						
rpolatio		ABS	interpola	e radius-specified circular ation less than CCW 180°		0	0	0					0						
lar inter	Radius-	ABS	interpola	e radius-specified circular ation CCW 180° or more		0	0	0	\bigtriangleup	\triangle			0						
Circul	specified		interpola	ntal radius-specified circular ation less than CW 180°		0	0	0	\triangle	\triangle			0						
			interpola	ntal radius-specified circular ation CW 180° or more		0	0	0		\triangle			0						
			interpola	ntal radius-specified circular ation less than CCW 180°		0	0	0					0						
				ntal radius-specified circular ation CCW 180° or more	\triangle	0	0	0	\triangle	\triangle			0						

Table 5.2	Servo	instruction list
10010-0.2	00100	

	1									P	osition	ing da	ita		1									
(Note-1)	it	е	е	b	e		aramet ठ+=				Advar	iced S	-curve	9		Ġ	p (j		Others		ш	c o	р	
Reference axis No.	Interpolation control unit	Speed limit value	Acceleration time	Deceleration time	Rapid stop deceleration time	Torque limit value	Deceleration processing at stop input	Allowable error range for circular interpolation	S-curve ratio	Acceleration/deceleration system	Acceleration section 1 a	Acceleration section 2 op/uo ratio ap/	Deceleration section 1 30 and	Deceleration section 2 loi ratio	Repeat condition	Program No.	Command speed (constant speed)	Cancel	Skip	FIN acceleration/deceleration	WAIT-ON/OFF	Fixed position stop acceleration /deceleration time	Fixed position stop	Number of steps
0	_	0	0	0	0	—	—	0	0	0	0	0	0	0	0	0	0	0	0	0	0	—	_	
1	1	2	1	1	1	1	1	1	1	1	1	1	1	1	1 (Note-2)	1	2	2	2	1	2	1	1	
1	1	2	1	1	1	1	1	2	1	1	1	1	1	1	1/ 1(B)	—	2	(Note-2) 1(B)	(Note-2) 1(B)	1	(Note-2) 1(B)	1	(Note-2) 1(B)	
		\triangle	Δ	\triangle	Δ	\triangle	Δ		Δ	\triangle	\triangle	\triangle	\triangle	Δ				Δ						4 to 17
		\bigtriangleup	\triangle	\triangle	\triangle	\triangle	\triangle		\triangle	\triangle	\triangle	\triangle	\triangle					\bigtriangleup						
0	\triangle	\bigtriangleup	\triangle				\triangle		\triangle			\triangle	\triangle					\triangle						5 to 20
0	\triangle	Δ	Δ	\triangle	\triangle	\triangle	\triangle		Δ	\triangle		\triangle	\triangle	\triangle				Δ						
0	\bigtriangleup	\bigtriangleup	\triangle		\triangle	\triangle	\triangle		\triangle			\triangle	\triangle					\bigtriangleup						7 to 21
0	\triangle	\triangle	\triangle				\triangle		Δ			\triangle	\triangle					\triangle						
0	Δ	Δ	Δ				Δ		Δ									Δ						8 to 22
0	\triangle	\bigtriangleup	\triangle				\triangle		\bigtriangleup									\triangle						
	Δ	Δ	Δ	Δ	Δ		Δ	Δ	Δ			Δ		Δ				Δ						7 to 22
	Δ	Δ	Δ				Δ	Δ	\bigtriangleup				\bigtriangleup	Δ				Δ						
	\triangle	\triangle	\triangle				\triangle	\triangle	\bigtriangleup				\triangle					\triangle						
	Δ	\triangle	Δ	\triangle	Δ	\triangle	Δ	\triangle	Δ	Δ	Δ	\triangle	\triangle	\triangle				\triangle						
	Δ	Δ	Δ	Δ	Δ	Δ	Δ	Δ	Δ			Δ		Δ				Δ						
	\triangle	\triangle	\triangle		\triangle	\triangle	\triangle	\triangle	\bigtriangleup			\triangle	\triangle	Δ				\triangle						6 to 21
	\triangle	\triangle	\triangle	\triangle	\triangle	\triangle	\triangle	\triangle	Δ	\triangle	\triangle	\triangle	\triangle	\triangle				\triangle						
	\bigtriangleup	\bigtriangleup	\triangle				\triangle	\triangle	\triangle			\triangle	\triangle					\bigtriangleup						
	\triangle	\triangle	\triangle				\triangle	\triangle										\triangle						
	\triangle	\triangle	\triangle	\triangle	\triangle	\triangle	\triangle	\triangle	\triangle	\triangle	\triangle	\triangle	\triangle	\triangle				\triangle						

 \bigcirc : Must be set. \bigtriangleup : Set if required. (Note-1) : Only reference axis speed specification. (Note-2) : (B) indicates a bit device.

									P	osition	ing da	ta						
1						С	ommo	n				Arc/H	lelical			OSC		
	ositioning control	Instruction symbol	Processing	Parameter block No.	Axis	Address/travel value	Command speed	Dwell time	M -code	Torque limit value	Auxiliary point	Radius	Central point	Pitch	Starting angle	Amplitude	Frequency	
			Virtual enable	0	0	0	0	0	0	_	0	0	0	0	_	_	_	
			Number of steps	1	1	1	1	1	1	1	1	1	1	1	1	1	1	
			Number of indirect words	1		2	2	1	1	1	2	2	2	1	2	2	2	
tion		ABS ∩.◄	Absolute central point-specified circular interpolation CW		0	0	0	\triangle	\triangle				0					
Circular interpolation control	Central point-	ABS	Absolute central point-specified circular interpolation CCW		0	0	0	\triangle	\triangle				0					
cular ir col	specified		Incremental central point-specified circular interpolation CW		0	0	0		\triangle				0					
ō			Incremental central point-specified circular interpolation CCW	Δ	0	0	0		\triangle				0					
	Auxiliary point-	ABH	Absolute auxiliary point- specified helical interpolation		0	0	0		\triangle		0			0				
	specified		Incremental auxiliary point- specified helical interpolation		0	0	0		Δ		0			0				_
		ABH	Absolute radius-specified helical interpolation less than CW 180°	Δ	0	0	0		Δ			0		0				_
		ABH	Absolute radius-specified helical interpolation CW 180° or more	Δ	0	0	0	\triangle	\triangle			0		0				
-		ABH	Absolute radius-specified helical interpolation less than CCW 180°	Δ	0	0	0		\triangle			0		0				
elical interpolation control	Radius-	ABH	Absolute radius-specified helical interpolation CCW 180° or more		0	0	0					0		0				
oolatior	specified		Incremental radius-specified helical interpolation less than CW 180°		0	0	0		\triangle			0		0				
al interp			Incremental radius-specified helical interpolation CW 180° or more		0	0	0					0		0				
Helica			Incremental radius-specified helical interpolation less than CCW 180°		0	0	0		Δ			0		0				
			Incremental radius-specified helical interpolation CCW 180° or more		0	0	0		\triangle			0		0				
		ABH ∩,◄	Absolute central point-specified helical interpolation CW		0	0	0	\triangle	\triangle				0	0				
	Central point-	ABH	Absolute central point-specified helical interpolation CCW	Δ	0	0	0	\triangle	\triangle				0	0				
	specified		Incremental central point-specified helical interpolation CW		0	0	0		\triangle				0	0				
			Incremental central point-specified helical interpolation CCW	\triangle	0	0	0	\triangle	\bigtriangleup				0	0				

Table 5.2 Servo instruction list (continued)

										P	osition	ing da	ita											
(Note-1)	ınit	lue	me	me	me			ter blo				iced S			ion	Ö	ed)		Others d S K		Ħ	ion me	top	
Reference axis No	Interpolation control unit	Speed limit value	Acceleration time	Deceleration time	Rapid stop deceleration time	Torque limit value	Deceleration processing at stop input	Allowable error range for circular interpolation	S-curve ratio	Acceleration/deceleration system	Acceleration section 1	Acceleration section 2 00 ratio 00	Deceleration section 1 00 00 00 00 00 00 00 00 00 00 00 00 0	Deceleration section 2 0	Repeat condition	Program No.	Command speed (constant speed)	Cancel	S	FIN acceleration/deceleration	WAIT-ON/OFF	Fixed position stop acceleration /deceleration	Fixed position stop	Number of steps
0	1	0 2	0	0	0	_	1	0 1	0	0	0	0	0	0	0	0	○ 2	0	0 2	0	0 2	-	1	
1	1	2	1	1	1	1	1	2	1	1	1	1	1	1	(Note-2) 1/ 1(B)	_	2	2 (Note-2) 1(B)	(Note-2) 1(B)	1	(Note-2) 1(B)	1	(Note-2) 1(B)	
	\triangle	\triangle	\triangle	Δ	Δ	Δ	\triangle	\triangle	\triangle	Δ	\triangle	Δ	\triangle	Δ				\triangle						
	\triangle	\triangle	\triangle					\triangle	\triangle		\triangle		\triangle					\triangle						
	\bigtriangleup	\triangle	\triangle					\triangle	\bigtriangleup				\triangle					\bigtriangleup						7 to 22
	\bigtriangleup	\triangle	\bigtriangleup						\triangle									\triangle						
	\bigtriangleup	\bigtriangleup	\bigtriangleup						\bigtriangleup		\triangle							\bigtriangleup						40.4- 07
	\triangle	\triangle	\triangle	Δ	Δ	Δ	\triangle		\bigtriangleup	Δ	\triangle	\triangle	\triangle	Δ				\triangle						10 to 27
	\bigtriangleup	\bigtriangleup	\bigtriangleup						\bigtriangleup		\triangle							\bigtriangleup						
	\bigtriangleup	\triangle	\triangle	\triangle	\triangle	\triangle	\triangle		\bigtriangleup	\triangle	\triangle	\triangle	\triangle	\triangle				\bigtriangleup						
	\triangle	\triangle	\triangle	Δ	\triangle	\triangle			\bigtriangleup		Δ	\triangle	\triangle					\triangle						
	\bigtriangleup	\bigtriangleup	\bigtriangleup						\bigtriangleup		\triangle							\bigtriangleup						9 to 26
	\bigtriangleup	\triangle	\triangle						\bigtriangleup		\triangle	\triangle	\triangle					\bigtriangleup						
	Δ	Δ	Δ	Δ					\bigtriangleup	Δ								\triangle						
	Δ	\triangle	Δ	Δ	Δ	Δ	Δ		\bigtriangleup	Δ	Δ	Δ	Δ	Δ				\triangle						
	\bigtriangleup	\triangle	\triangle	\triangle					\bigtriangleup		\triangle		\triangle					\triangle						
	\bigtriangleup	\bigtriangleup	\bigtriangleup	Δ					\bigtriangleup									\bigtriangleup						
	\bigtriangleup	\bigtriangleup	\bigtriangleup	\triangle	\triangle	\triangle			\bigtriangleup		\triangle	\triangle	\triangle					\bigtriangleup						10 to 27
	\bigtriangleup	\triangle	\triangle	\triangle	\triangle	\triangle	\triangle		\bigtriangleup	\triangle	\bigtriangleup	\triangle	\triangle					\bigtriangleup						
	\triangle	\triangle	\triangle	\triangle	\triangle	\triangle	\triangle		\triangle	\triangle	\triangle	\triangle	\triangle	\triangle				\bigtriangleup						

 \bigcirc : Must be set. \bigtriangleup : Set if required. (Note-1) : Only reference axis speed specification. (Note-2) : (B) indicates a bit device.

										Р	osition	ing da	ta						
						1	С	ommo	on	1	1		Arc/H	lelical	1		OSC		
	ositioning control	Instruction symbol		Processing	Parameter block No.	Axis	Address/travel value	Command speed	Dwell time	M -code	Torque limit value	Auxiliary point	Radius	Central point	Pitch	Starting angle	Amplitude	Frequency	
				Virtual enable	0	0	0	0	0	0	_	0	0	0	0	_	_	_	
				Number of steps	1	1	1	1	1	1	1	1	1	1	1	1	1	1	
				Number of indirect words	1	—	2	2	1	1	1	2	2	2	1	2	2	2	
feed	1 axis	FEED-1	1-axis fiz	ked-pitch feed start		0	0	0	\bigtriangleup	\triangle									
Fixed-pitch feed	2 axes	FEED-2		near interpolation ch feed start		0	0	0											
Fixe	3 axes	FEED-3		near interpolation ch feed start		0	0	0											
Speed control (I)	Forward rotation	VF	rotation		Δ	0		0		\triangle									
Sp	Reverse rotation	VR	rotation			0		0											
Speed control (II)	Forward rotation	VVF	rotation		Δ	0		0		Δ	Δ								
sp cont	Reverse rotation	VVR	rotation		Δ	0		0		Δ	Δ								
sition	Forward rotation	VPF	forward	oosition control rotation start	\triangle	0	0	0											
Speed-position control	Reverse rotation	VPR		position control rotation start	Δ	0	0	0	Δ	\triangle	Δ								
ŝ	Restart	VPSTART	Speed-p	position control restart		0													
		VSTART	Speed-s	witching control start	Δ														
		VEND	Speed-s	witching control end															
		ABS-1	Onerda			0	0	0											
		ABS-2	point ad	witching control end dress		0	0	0											
Spee contro	d-switching	ABS-3				0	0	0											
CONT		INC-1	Travely	alue up to speed-switching		0	0	0		\triangle	\triangle								
		INC-2		and point		0	0	0	\triangle	\triangle									
		INC-3	Speed-s	witching point		0	0	0											
		VABS	absolute	e specification witching point			0	0											
		VINC		ntal specification			0	0		\triangle	\triangle								

Table 5.2 Servo instruction list (continued)

											P	osition	ning da	ita											
	(Note-1) Ö	lit	a	e	ЭГ	Je			ter blo .ੁਰ ਨੁ				nced S			uc	ö	d) ¢		Others . ਉ		μ	n e	dc	
-	Reference axis No.	Interpolation control unit	Speed limit value	Acceleration time	Deceleration time	Rapid stop deceleration time	Torque limit value	Deceleration processing at stop input	Allowable error range for circular interpolation	S-curve ratio	Acceleration/deceleration system	Acceleration section 1 ratio	Acceleration sect	Deceleration section 1 ratio	Deceleration section 2 ratio	Repeat condition	Program No.	Command speed (constant speed)	Cancel	Skip	FIN acceleration/deceleration	WAIT-ON/OFF	Fixed position stop acceleration /deceleration	Fixed position stop	Number of steps
-	0	1	0 2	0	0	0 1	1	— 1	0 1	0	○ 1	0	0 1	0	○ 1	0	0	0 2	<u> </u>	0 2) 1	○ 2	— 1	1	
Ī	1	1	2	1	1	1	1	1	2	1	1	1	1	1	1	(Note-2) 1/ 1(B)	_	2	(Note-2) 1(B)	(Note-2) 1(B)	1	(Note-2) 1(B)	1	(Note-2) 1(B)	
			\triangle	\triangle	\triangle	Δ	Δ	Δ		\triangle	Δ	\triangle	Δ	Δ	Δ				\triangle						4 to 17
		\triangle	\triangle	\bigtriangleup	\triangle					\bigtriangleup		\triangle		\triangle					\bigtriangleup						5 to 19
		\triangle	\triangle	\bigtriangleup	\triangle	\triangle	\triangle	\triangle		\triangle		\triangle		\triangle					\triangle						7 to 21
			\triangle	\triangle	\triangle	Δ	Δ	Δ		\triangle	Δ	Δ	Δ	\triangle	Δ				\triangle						
			\bigtriangleup	\bigtriangleup	\triangle	\triangle	\triangle	\triangle		\bigtriangleup		\bigtriangleup		\triangle					\bigtriangleup						3 to 15
-			Δ	Δ	Δ	Δ	Δ			Δ	Δ		Δ	Δ	Δ				\triangle						24-40
			Δ	\bigtriangleup	Δ		Δ			Δ	Δ	Δ	Δ	Δ	Δ				\triangle						3 to 16
			\bigtriangleup	\bigtriangleup	\bigtriangleup	\triangle	\triangle	\triangle		\bigtriangleup	\bigtriangleup	\bigtriangleup	\bigtriangleup	\bigtriangleup	\triangle				\bigtriangleup						4 to 18
			Δ	\bigtriangleup	\triangle														\triangle						4 10 10
																			\bigtriangleup						2 to 4
		\triangle	\triangle	\bigtriangleup	\bigtriangleup					\bigtriangleup									\bigtriangleup						1 to 13
																									1
_																			\triangle						4 to 9
																			\triangle						5 to 10
_																			\triangle						7 to 12
																			\bigtriangleup						4 to 9
																			\bigtriangleup						5 to 10
																			\triangle						7 to 12
-																									4 to 6

 \bigcirc : Must be set. \bigtriangleup : Set if required. (Note-1) : Only reference axis speed specification. (Note-2) : (B) indicates a bit device.

									Р	osition	ing da	ita						
					1	С	ommo	on		1		Arc/H	lelical	1		OSC		
Positioning control	Instruction symbol		Processing	Parameter block No.	Axis	Address/travel value	Command speed	Dwell time	M -code	Torque limit value	Auxiliary point	Radius	Central point	Pitch	Starting angle	Amplitude	Frequency	
				0	0	0	0	0	0		0	0	0	0				
			Virtual enable Number of steps	1	1	1	1	1	1	1	1	1	1	1	1	1	1	
			Number of indirect words	1	_	2	2	1	1	1	2	2	2	1	2	2	2	
		Speed o	control with fixed position stop		0	0	0											
Forward with fixed rotation rotation rotation		-	e specification		0	0	0	Δ	Δ		·							
Position follow-up control	PFSTART	Position	follow-up control start		0	0	0		Δ									
	CPSTART1	1-axis co	onstant-speed control start	Δ	0		0											1
	CPSTART2	2-axes o	constant-speed control start	\triangle	0		0											
	CPSTART3	3-axes o	constant-speed control start	\triangle	0		0											
	CPSTART4	4-axes o	constant-speed control start	\triangle	0		0											
	ABS-1				0	0			\triangle	\triangle								
	ABS-2				0	0			\triangle	\triangle								
	ABS-3				0	0			\bigtriangleup	\triangle								
	ABS-4				0	0			\bigtriangleup	\triangle								
	ABS				0	0			\bigtriangleup		0							
	ABS		nt-speed control passing point e specification		0	0			\bigtriangleup	\bigtriangleup		0						
Constant-speed					0	0			\bigtriangleup	\bigtriangleup		0						
control	ABS				0	0			\bigtriangleup	\bigtriangleup		0						
	ABS	4			0	0			\triangle	\bigtriangleup		0						
	ABS	_			0	0			\bigtriangleup	\bigtriangleup			0					
	ABS			<u> </u>	0	0							0					
	ABH	1			0	0					0			0				
	ABH	1			0	0						0		0				
	ABH	Correte	t an and control section as int		0	0			\triangle	\triangle		0		0				
	ABH		nt-speed control passing point bsolute specification		0	0			\triangle	\triangle		0		0				
	ABH	1			0	0				\triangle		0		0				
	ABH 🔍	-		<u> </u>	0	0							0	0				
	ABH				0	0			\triangle	\triangle			0	0				

Table 5.2 Servo instruction list (continued)

										P	osition	ing da	ita											
(Note-1)	ınit	lue	me	me	me			ter blo				iced S			ion	No.	ed)		Others diys		Ш	ion me	top	
Reference axis No.	Interpolation control unit	Speed limit value	Acceleration time	Deceleration time	Rapid stop deceleration time	Torque limit value	Deceleration processing at stop input	Allowable error range for circular interpolation	S-curve ratio	Acceleration/deceleration system	Acceleration section 1	Acceleration section 2 op/uoi ratio ap/	Deceleration section 1 00 00 00 00 00 00 00 00 00 00 00 00 0	Deceleration section 2 01 ratio	Repeat condition	Program No.	Command speed (constant speed)	Cancel	S	FIN acceleration/deceleration	WAIT-ON/OFF	Fixed position stop acceleration /deceleration time	Fixed position stop	Number of steps
0	_	0	0	0	0	—	—	0	0	0	0	0	0	0	0	0	0	0	0	0	0	_	_	
1	1	2	1	1	1	1	1	1	1	1	1	1	1	1	1 (Note-2)	1	2	2	2	1	2	1	1	
1	1	2	1	1	1	1	1	2	1	1	1	1	1	1	1/ 1(B)	—	2	(Note-2) 1(B)	(Note-2) 1(B)	1	(Note-2) 1(B)	1	(Note-2) 1(B)	
		\bigtriangleup							\triangle									\bigtriangleup				0	0	6 to 19
		\bigtriangleup							Δ		\bigtriangleup	\bigtriangleup	\bigtriangleup	\bigtriangleup				\bigtriangleup				0	0	61019
		\bigtriangleup	\bigtriangleup	\bigtriangleup					\triangle									\bigtriangleup						4 to 16
		\triangle	\triangle	\bigtriangleup		\triangle	\triangle		\triangle	\triangle	\triangle	\triangle	\triangle	\triangle				\bigtriangleup		\bigtriangleup				3 to 15
	\triangle	\triangle	\triangle	\triangle	\triangle	\triangle	\triangle	\triangle	\bigtriangleup	\triangle	\triangle	\triangle	\triangle	\triangle				\bigtriangleup		\bigtriangleup				3 to 17
	\bigtriangleup	\bigtriangleup	\triangle	\bigtriangleup				\bigtriangleup	\bigtriangleup	\triangle	\bigtriangleup	\bigtriangleup	\bigtriangleup	\triangle				\bigtriangleup		\bigtriangleup				
	\triangle	\triangle	\triangle	Δ	Δ	\triangle	Δ	\triangle	Δ	Δ	\triangle	Δ	\triangle	Δ				\triangle		\triangle				4 to17
																	\bigtriangleup		\bigtriangleup		\bigtriangleup			2 to 10
																	\triangle		\triangle		\triangle			3 to 11
																	\triangle		\triangle		\triangle			4 to 12
																	\triangle		\bigtriangleup		\bigtriangleup			5 to 13
																	\triangle		\bigtriangleup		\triangle			5 to 14
																	\triangle		\triangle		\triangle			
																	\bigtriangleup		\bigtriangleup		\triangle			4 to 13
																	\bigtriangleup		\bigtriangleup		\bigtriangleup			
																	\triangle		\triangle		\triangle			
																	\bigtriangleup		\bigtriangleup		\triangle			5 to 14
																	\bigtriangleup		\bigtriangleup		\bigtriangleup			
																					Δ.			9 to 14
																	\triangle		\triangle		\triangle			
																	\triangle		\triangle		Δ			8 to 13
																	\triangle		Δ					
																			Δ					
																	\triangle		\triangle		Δ			9 to 14
	1																\triangle		\triangle		\triangle	1	1	

 \bigcirc : Must be set. \bigtriangleup : Set if required. (Note-1) : Only reference axis speed specification. (Note-2) : (B) indicates a bit device.

									P	osition	ing da							_
				<u> </u>			ommo					Arc/H				OSC		
Positioning control	Instruction symbol		Processing	Parameter block No.	Axis	Address/travel value	Command speed	Dwell time	M -code	Torque limit value	Auxiliary point	Radius	Central point	Pitch	Starting angle	Amplitude	Frequency	
			Virtual enable	0	0	0	0	0	0	_	0	0	0	0	_	_	_	
			Number of steps	1	1	1	1	1	1	1	1	1	1	1	1	1	1	
			Number of indirect words	1	-	2	2	1	1	1	2	2	2	1	2	2	2	
	INC-1				0	0												
	INC-2				0	0			\triangle	\triangle								
	INC-3				0	0			\triangle	\triangle								
	INC-4				0	0			\triangle	\triangle								
					0	0			\triangle	\triangle	0							
			nt-speed control passing point ntal specification		0	0			\triangle	\triangle		0						
					0	0						0						
					0	0						0						
		_			0	0						0						
Constant-speed control		_			0	0			\triangle				0					
					0	0			\triangle				0					
					0	0			\triangle		0			0				
					0	0			\triangle			0		0				
					0	0			\triangle			0		0				
		Constar helical in	nt-speed control passing point ncremental specification		0	0			\triangle			0		0				
					0	0			\triangle	\triangle		0		0				
	INH 🔿				0	0			\triangle	\triangle			0	0				
					0	0							0	0				
	CPEND	Constar	nt-speed control end					\bigtriangleup										

Table 5.2 Servo instruction list (continued)

										Po	osition	ing da	ita		1									
Reference axis No.	Interpolation control unit	Speed limit value	Acceleration time	Deceleration time	Rapid stop deceleration time		Deceleration processing at stop input	Allowable error range for a circular interpolation	S-curve ratio		elerati		Deceleration section 1 ap 5- ratio ab an 1		Repeat condition	Program No.	Command speed (constant speed)	Cancel	Others di S	FIN acceleration/deceleration	WAIT-ON/OFF	Fixed position stop acceleration /deceleration time	Fixed position stop	Number of steps
0	_	0	0	0	0	—	-	0	0	0	0	0	0	0	0	0	0	0	0	0	0	—	-	
1	1	2	1	1	1	1	1	1	1	1	1	1	1	1	1 (Note-2) 1/	1	2	2 (Note-2)	2 (Note-2)	1	2 (Note-2)	1	1 (Note-2)	
'	1	2	1	1	1	1	'	2	1	1	1	'	1	1	1(B)	_		1(B)	1(B)	-	1(B)	'	1(B)	
																								2 to 10
																								3 to 11
																								4 to 12
																	Δ.				Δ			5 to 13
																								5 to 14
																	\bigtriangleup		\bigtriangleup		Δ			4 to 13
																	\triangle		\triangle		\bigtriangleup			
																	\triangle		\triangle		\triangle			5 to 14
																	\triangle		\triangle		\triangle			· ·
																			Δ		Δ			9 to 14
																			Δ		Δ			
																	\triangle		\triangle		\bigtriangleup			8 to 13
																	\triangle		\triangle		\bigtriangleup			0.010
																			\bigtriangleup		\bigtriangleup			
																	\triangle		\bigtriangleup		\bigtriangleup			9 to 14
																			Δ					0.011
																								1 to 2

○ : Must be set. △ : Set if required.
 (Note-1) : Only reference axis speed specification.
 (Note-2) : (B) indicates a bit device.

									Ρ	osition	ing da	ita						
						С	ommo	on				Arc/⊦	lelical			OSC		
Positioning control	Instruction symbol		Processing	Parameter block No.	Axis	Address/travel value	Command speed	Dwell time	M -code	Torque limit value	Auxiliary point	Radius	Central point	Pitch	Starting angle	Amplitude	Frequency	
			Virtual enable	0	0	0	0	0	0	_	0	0	0	0	_	_	_	-
			Number of steps	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1
			Number of indirect words	1	_	2	2	1	1	1	2	2	2	1	2	2	2	
Repetition of	FOR-TIMES																	
same control (used in speed	FOR-ON	Repeat	range start setting															
switching control, constant-speed	FOR-OFF]
control)	NEXT	Repeat	range end setting															
Simultaneous start	START	Simultar	neous start															
Home position return	ZERO	Home po	osition return start		0													
High speed oscillation	OSC	High-spe	eed oscillation	Δ	0				Δ						0	0	0	
	CHGA		otor/Virtual Servomotor Shaft Value Change		0	0												
Current value change	CHGA-E	Encoder	current value change		0	0												
	CHGA-C	CAM sh	aft current value change		0	0												

Table 5.2 Servo instruction list (continued)

						Dr		tor blo	alı	Po	osition	ning da	ita						Others					
Reference axis No.	Interpolation control unit	Speed limit value	Acceleration time	Deceleration time	Rapid stop deceleration time	Torque limit value	Deceleration processing at stop input	Allowable error range for a circular interpolation	S-curve ratio			Acceleration section 2 pp or ratio 6 pp 0 S			Repeat condition	Program No.	Command speed (constant speed)	Cancel	dixs	FIN acceleration/deceleration	WAIT-ON/OFF	Fixed position stop acceleration /deceleration time	Fixed position stop	Number of steps
0	_	0	0	0	0		—	\bigcirc	0	0	0	0	0	0	0	0	0	0	\bigcirc	0	0	_	_	
1	1	2	1	1	1	1	1	1	1	1	1	1	1	1	1	1	2	2	2	1	2	1	1	
1	1	2	1	1	1	1	1	2	1	1	1	1	1	1	(Note-2) 1/ 1(B)	_	2	(Note-2) 1(B)	(Note-2) 1(B)	1	(Note-2) 1(B)	1	(Note-2) 1(B)	
															0 0 0									2
																								3
																0								2 to 3
																								2
						Δ												\bigtriangleup						5 to 10
																								3

 $\bigcirc:$ Must be set. $\bigtriangleup:$ Set if required. (Note-1) : Only reference axis speed specification. (Note-2) : (B) indicates a bit device.

5.3 Positioning Data

The positioning data set in the servo programs is shown in Table 5.3.

Table 5.3 Positioning data

		1	Evelor - time		Default	Setting value using MT Developer2 Setting range				
	Name			Explanation		mm	inch	degree	PLS	
	Parameter block No.		• Set based on which parameter block deceleration processing at the acceleration/ deceleration processing and STOP input.		1					
	Axis		 Set the starting axis. It becomes the interpolation starting axis No. at the interpolation. 		_					
		Absolute data method	Address	Set the positioning address as an absolute method with an absolute address.	Ι	-214748364.8 to 214748364.7 [µm]	-21474.83648 to 21474.83647	0 to 359.99999	-2147483648 to 2147483647	
	Ine			Set the positioning address as an		Exc	ept for speed/pos	ition switching cor	ntrol	
	Address/travel value	Incremental data method	Travel value	incremental data method with a travel value. Travel direction is indicated by the sign. Only positive settings can be	_	-214748364.7 to 214748364.7 [µm]	-21474.83647 to 21474.83647	-21474.83647 to 21474.83647	-2147483647 to 2147483647	
Settings				made at the speed/position control. Positive : Forward rotation (address increase direction) Negative: Reverse rotation (address decrease direction)		0 to 214748364.7 [µm]	0 to 21474.83647	0 to 21474.83647	0 to 2147483647	
Common Settings	Command speed		 Sets the positioning speed. Units for speed are the "control units" set in the parameter block. It becomes the vector speed/long-axis reference speed/reference axis speed at the interpolation starting. (PTP control only) 		_	0.01 to 6000000.00 [mm/min]	0.001 to 600000.000 [inch/min]	0.001 to 2147483.647 [degree/min] (Note-5)	1 to 2147483647 [PLS/s]	
	Dwell time		 Set the time until outputs the positioning complete signal (M2401+20n) after positioning to positioning address. 		0[ms]					
	M-code		 Set the M-code. Set for each point at the speed-switching control and constant-speed control. Updated it at the start or specified point. 		0	0 to 32767				
	Torque limit value		 Set the torque limit value. The torque limit is performed based on the parameter block data at the start. The speed- switching control can be set for each point and the setting torque limit values can be performed with the specified point. 		Torque limit setting valued [%] in the parameter block	1 to 1000[%]				

Setting value using the Motion SFC program (Indirect setting)					ct setting	Processing at the setting error		
mm	Setting	range degree	PLS	Possible/ not possible	Number of used words	Error item information (Stored in SD517) (Note-4)	Control using default value	Not start
	1 tc	64		0	1	1	0	
-				×	_	_		
-2147483648 to 2147483647 (×10 ⁻¹ [μm])	-2147483648 to 214748647 ([×] 10 ⁻⁵ [inch])	0 to 35999999 (× 10 ⁻⁵ [degree])	-2147483648 to 2147483647					0
Ex -2147483647 to 2147483647 (×10 ⁻¹ [μm])	ccept for speed/pos -2147483647 to 214748647 (×10 ⁻⁵ [inch])	tion switching cont -2147483647 to 214748647 (×10 ⁻⁵ [inch])	rol -2147483647 to 2147483647	0	2	n03 ^(Note-1)		
0 to 2147483647 ([×] 10 ⁻¹ [µm])	Speed/position s 0 to 2147483647 (× 10 ⁻⁵ [inch])	witching control 0 to 2147483647 (\times 10 ⁻⁵ [degree])	0 to 2147483647			_		
1 to 60000000 (× 10 ⁻² [mm/min])	1 to 60000000 (×10 ⁻³ [inch/min])	1 to 2147483647 (×10 ⁻³ [degree/min]) (Note-5)	1 to 2147483647 [PLS/s]	0	2	4) (Note-2)	O (Note-3)
	00[ms]		0	1	5	0		
	0 to 3	2767		0	1	6	0	
1 to 1000[%]				0	1	7	0	

(Note-1): The "n" in n03, n08, n09 and n10, indicates the axis No. (1 to 32).

(Note-2): When an error occurs because the speed limit value is exceeded, it is controlled at the speed limit value.

(Note-3): Applies when the command speed is "0".

(Note-4): If there are multiple errors in the same program, the latest error item information is stored.

(Note-5): When the "speed control 10 × multiplier setting for degree axis" is set to "valid", the setting range is 0.01 to 21474836.47 [degree/min].

Name		Name	Explanation	Default	Setting				
		Naille	Explanation	Default value	mm	mm inch degree		PLS	
	Auxiliary point	Absolute data method	 Set at the auxiliary point-specified circular interpolation. 		-214748364.8 to 214748364.7 [μm]	-21474.83648 to 21474.83647	0 to 359.99999	-2147483648 to 2147483647	
		Incremental data method		—	-214748364.7 to 214748364.7 [µm]	-21474.83647 to 21474.83647	-21474.83647 to 21474.83647	-2147483647 to 2147483647	
rpolation	Radius	Absolute data method	 Set at the radius-specified circular interpolation. The sitting ranges depending on the 		0.1 to 429496729.5 [µm]	0.00001 to 42949.67295	0 to 359.99999	1 to 4294967295	
Circular Interpolation		Incremental data method	positioning method is shown to the right.	_	0.1 to 214748364.7 [µm]	0.00001 to 21474.83647	0.00001 to 21474.83647	1 to 2147483647	
Ō	Central point	Absolute data method	 Set at the central point-specified circular interpolation. 	_	-214748364.8 to 214748364.7 [µm]	-21474.83648 to 21474.83647	0 to 359.99999	-2147483648 to 2147483647	
		Incremental data method			-214748364.7 to 214748364.7 [µm]	-21474.83647 to 21474.83647	-21474.83647 to 21474.83647	-2147483647 to 2147483647	
	Numl	per of pitches	Set at the helical interpolation.			0 to	999		
		olation ol unit	• It can be set only items to be changed of the specified parameter block data.	3	0	1	2	3	
	Speed limit value		Refer to Section 4.3 "Parameter Block" for details of each data.	200000 [PLS/s]	0.01 to 6000000.00 [mm/min]	0.001 to 600000.000 [inch/min]	0.001 to 2147483.647 [degree/min] (Note-5)	1 to 2147483647 [PLS/s]	
	Acceleration time			1000[ms]					
	Deceleration time		1000[ms]						
	Rapid stop deceleration time			1000[ms]	1 to 65535[ms]				
	S-curve ratio			0[%]					
ır block	Advanced S-curve eleration/deceleration	Acceleration/ deceleration system		0	0: Trapezoidal acceleration/deceleration/ S-curve acceleration/deceleration 1: Advanced S-curve acceleration/deceleration				
Parameter block		Acceleration section 1 ratio		20.0[%]					
Ра	dvanced leration/d	Acceleration section 2 ratio		20.0[%]					
	acc	Deceleration section 1 ratio		20.0[%]					
		Deceleration section 2 ratio		20.0[%]		0.0 to 1	00.0[%]		
	Torque limit value Deceleration processing on STOP input		300[%]						
			0	0: Deceleration 1: Deceleration					
	Allowable error range for circular interpolation			100[PLS]	0 to 10000.0 [µm]	0 to 1.00000	0 to 1.00000	0 to 100000	

Table 5.3 Positioning data (Continued)

Setting valu	SFC program (Indi	rect setting)	Indirect setting		Processing at the setting error			
-	range		Possible/	Number of	Error item information			
mm	inch	degree	PLS	not possible	used words	(Stored in SD517) (Note-4)	Control using default value	Not start
-2147483648 to 2147483647 (×10 ⁻¹ [μm])	-2147483648 to 2147483647 ([×] 10 ⁻⁵ [inch])	0 to 35999999 (× 10⁵[degree])	-2147483648 to 2147483647	0	2×2	n08 ^(Note-1)		
-2147483647 to 2147483647 ([×] 10 ⁻¹ [μm])	-2147483647 to 214748647 ([×] 10 ⁻⁵ [inch])	-2147483647 to 214748647 ([×] 10 ⁻⁵ [inch])	-2147483647 to 2147483647	0		nua		
1 to 4294967295 ([×] 10 ⁻¹ [µm])	1 to 4294967295 ([×] 10 ^{⁻5} [inch])	0 to 35999999 (× 10 ⁻⁵ [degree])	1 to 4294967295	0	2	n09 ^(Note-1)		0
1 to 2147483647 ([×] 10 ⁻¹ [μm])	1 to 2147483647 ([×] 10 ⁻⁵ [inch])	1 to 2147483647 ([×] 10 ⁻⁵ [degree])	1 to 2147483647	0	2	109		0
-2147483648 to 2147483647 ([×] 10 ⁻¹ [μm])	-2147483648 to 2147483647 ([×] 10 ⁻⁵ [inch])	0 to 35999999 (× 10 ⁻⁵ [degree])	-2147483648 to 2147483647	0	2×2	n10 ^(Note-1)		
-2147483647 to 2147483647 (×10 ⁻¹ [μm])	-2147483647 to 214748647 ([×] 10 ⁻⁵ [inch])	-2147483647 to 214748647 ([×] 10 ⁻⁵ [inch])	-2147483647 to 2147483647	0	2~2	mo		
	0 to			0	1	28		
0	1	2	3	0	1	11		
1 to 600000000 ([×] 10 ⁻² [mm/min])	1 to 60000000 (× 10 ⁻³ [inch/min])	1 to 2147483647 (×10 ⁻³ [degree/min]) (Note-5)	1 to 2147483647 [PLS/s]	0	2	12		
	1 to 655	535[ms]		0	1	13		
	1 to 655	535[ms]		0	1	14		
	1 to 655	535[ms]		0	1	15		
	0 to 1	00[%]		0	1	21		
S-c	pezoidal acceleratio urve acceleration/d anced S-curve acc	eceleration	ion ^(Note-6)	0	1	—		
	0.0 to 1			0	1	45, 49	0	
	0.0 to 1	00.0[%]		0	1	46, 49		
	0.0 to 1	00.0[%]		0	1	47, 50		
	00.0[%]		0	1	48, 50			
1 to 1000[%]					1	16		
 0: Deceleration to a stop in accordance with the deceleration time 1: Deceleration to a stop in accordance with the rapid stop deceleration time (Note-6) 				0	1	_		
 1 to 100000 ([×] 10 ⁻¹ [μm])	1 to 100000 ([×] 10 ^{⁻5} [inch])	1 to 100000 (× 10 ⁻⁵ [degree])	1 to 100000 [PLS]	0	2	17		

(Note-1): The "n" in n03, n08, n09 and n10, indicates the axis No. (1 to 32).

(Note-4): If there are multiple errors in the same program, the latest error item information is stored.

(Note-5): When the "speed control 10 \times multiplier setting for degree axis" is set to "valid", the setting range is 0.01 to 21474836.47 [degree/min].

(Note-6): Only bit0 is valid. If the value outside the range is set, the state except bit0 is ignored.

_								
				Setting	g value using MT	Developer2		
	Name	Explanation	Default					
	Humo	Experience	value	mm	inch	degree	PLS	
	Repeat condition (Number of repetitions)	(Number of instruction and NEXT instruction.			1 to 3	32767		
	Repeat condition (ON/OFF)	Set the repeat conditions between FOR-ON/OFF instruction and NEXT instruction.	—		X, Y, M, E	3, F, U⊟\G		
	Program No.	Set the program No. for simultaneous start.	_		0 to	4095		
	Command speed (constant-speed)	Set the speed for points on the way in the servo program.	_	0.01 to 6000000.00 [mm/min]	0.001 to 600000.000 [inch/min]	0.001 to 2147483.647 [degree/min] (Note-5)	1 to 2147483647 [PLS/s]	
	Cancel	Set to stop execution of a servo program by deceleration stop by turning on the specified bit device in the servo program.	_	X, Y, M, B, F, UD\G				
Others	Skip	Set to cancel positioning to pass point and execute the positioning to the next point by turning on the specified bit device during positioning at each pass point for constant-speed control instruction.	_		X, Y, M, E	3, F, U⊡\G		
	FIN acceleration/ deceleration	Set to execute positioning to each pass point for constant-speed control instruction by turning on the FIN signal.		1 to 5000[ms]				
	WAIT-ON/OFF	Set to make state of the waiting for execution by constant-speed control and execute the positioning immediately by turning on/off the command bit device.	_	X, Y, M, B, F, U⊡\G				
	Fixed position stop acceleration/ deceleration time	Acceleration/deceleration time used in the starting of speed control with fixed position stop, speed change request (CHGV) or fixed position stop command ON.	_	1 to 65535[ms]				
	Fixed position stop	Command bit device of fixed position stop is set.	—	X, Y, M, B, F, U⊡\G				

Table 5.3 Positioning data (Continued)

Setting value using the Motion SFC program (Indirect setting)					ct setting	Processing	at the setting erro	r
mm		range degree	PLS	Possible/ not possible	Number of used words	Error item information (Stored in SD517) (Note-4)	Control using default value	Not start
	1 to 3	2767		0	1	18	Control by K1	
	_					_		
	0 to 4	4095		0	1	19		0
1 to 60000000 (× 10 ⁻² [mm/min]) 1 to 60000000 (× 10 ⁻³ [inch/min]) 1 to 2147483647 (× 10 ⁻³ [degree/min]) 1 to 2147483647 I to 2147483647 [degree/min])				0	2	4	⊖ ^(Note-2)	⊖ ^(Note-3)
_				_	_	_		
_				_	_	_		
1 to 5000[ms]				0	1	13	Control by 1000[ms]	
_				_	_	_		
1 to 65535[ms]			0	1	13	Control by 1000[ms]		
	_	_		—	—	_		

(Note-2): When an error occurs because the speed limit value is exceeded, it is controlled at the speed limit value.

(Note-3): Applies when the command speed is "0".

(Note-4): If there are multiple errors in the same program, the latest error item information is stored.

(Note-5): When the "speed control 10 × multiplier setting for degree axis is set to "valid", the setting range is 0.01 to 21474836.47 [degree/min].

5.4 Setting Method for Positioning Data


This section describes how to set the positioning data used in the servo program. There are two ways to set positioning data, as follows:

- (1) Setting by specifying numerical values ... Refer to Section 5.4.1
- (2) Indirect setting by devices Refer to Section 5.4.2

"Setting by specifying numerical values" and "indirect setting by word devices" can be used together in one servo program.

5.4.1 Setting method by specifying numerical values

In the setting method by specifying numerical values, each positioning data is set by a numerical value, and it becomes fixed data.



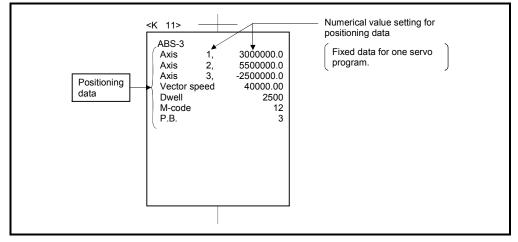



Fig. 5.3 Setting example of positioning data by specifying numerical value

5.4.2 Indirect setting method by devices

In the indirect setting method ^(Note-1) by devices, the device No. is specified to the positioning data specified with the servo program.

By using the contents (data) of specified device using the Motion SFC program (Automatic refresh, etc.), multiple positioning controls can be executed in one servo program.

The device used in the indirect setting is the device of the Motion CPU but the device of the PLC CPU.

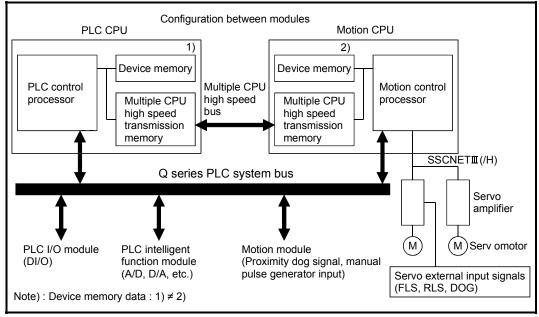

The device memory composition of the Motion CPU and PLC CPU is shown below.

(Note-1): Device memory in the Motion CPU.

(1) Word devices for indirect setting

The word devices for indirect setting are the data registers (D), link registers (W), motion registers (#) and Multiple CPU area device (U \Box \G). Word devices except the above devices cannot be used.

The usable setting range of word devices is shown below.

Word device	Setting range
D	0 to 8191
W	0 to 1FFF
#	0 to 7999
U⊟\G	10000 to (10000+p-1) ^(Note-1)

(Note-1): "p" indicates the user setting area points of the Multiple CPU high speed transmission area for each CPU.

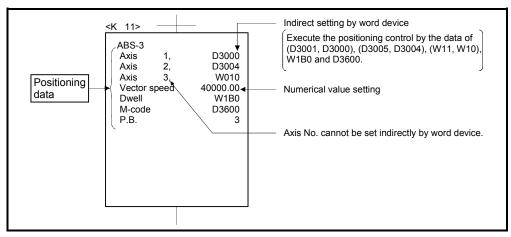


Fig. 5.4 Example of indirect setting by word device for positioning data

(2) Bit devices for indirect setting

The bit devices for indirect setting are the input (X), output (Y), internal relay (M), link relay (B), annunciator (F) and Multiple CPU area device ($U\Box\G$). Bit devices except the above devices cannot be used.

The usable setting range of bit devices is shown below.

Bit device	Setting range
Х	0000 to 1FFF ^(Note-1)
Y	0000 to 1FFF
М	0 to 8191
В	0000 to 1FFF
F	0 to 2047
U⊟\G	10000.0 to (10000+p-1).F ^(Note-2)

(Note-1): The range of "PXn+4 to PXn+F" cannot be used (fixed at 0) for the input device (PXn+0 to PXn+F) allocated to the built-in interface in Motion CPU (DI). (n: First input No.)

(Note-2): "p" indicates the user setting area points of the Multiple CPU high speed transmission area for each CPU.

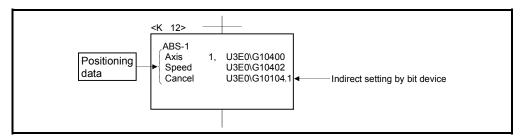


Fig. 5.5 Example of indirect setting by bit device for positioning data

(3) Inputting of positioning data

In indirect setting by word devices, the word device data is inputted when the servo program is executed using the Motion CPU.

It must be executed the start request of the servo program after data is set in the device used for indirect setting at the positioning control.

POINTS

- (1) Indirect setting by word devices of the axis No. cannot be set in the servo program.
- (2) Take an interlock condition by using a start accept flag (M2001 to M2032) not to change the device data for indirect setting until the specified axis has accepted the start command.

If the data is changed before the start command is accepted, positioning may not be controlled in a normal value.

(3) Refer to Chapter 2 of the "Q173D(S)CPU/Q172D(S)CPU Motion controller Programming Manual (COMMON)" for the user setting area points of the Multiple CPU high speed transmission area. (4) Program example that uses the Multiple CPU high speed transmission memory

Program example to control by the data transmitted from the PLC CPU to Motion CPU is shown below.

Program that starts the servo program (positioning) by the DP.SVST instruction after the data is written to the Multiple CPU high speed transmission memory (U3E0\G10000 to U3E0\G10003) from the PLC CPU (CPU No.1).

Sequence program (PLC CPU side)

M0 Instruction execution command			I3E0\G10000] Servo program K10 position command
U3E1 \G516.0			I3E0\G10002] Servo program K10 speed command
Start acce flag of CP No.2(Axis	J	—DP.SVST H3E1 "J1" K10	м100 D100]
		[RST M0 Instruction execution command
Servo program (Motion CP	U side)		ľ
[K 10: Real] 1 INC-1 Axis 1, U3E0\G1000 Speed U3E0\G1000	,		

6. POSITIONING CONTROL

This section describes the positioning control methods.

6.1 Basics of Positioning Control

This section describes the common items for positioning control, which is described in detail after Section 6.2.


6.1.1 Positioning speed

The positioning speed is set using the servo program.

Refer to Chapter 5 for details of the servo programs.

The real positioning speed is set in the positioning speed and speed limit value using the servo program is shown below:

- If the positioning speed setting is less than speed limit value, the positioning is executed with the setting positioning speed.
- If the positioning speed setting is less than speed limit value, the positioning is executed with the positioning speed.

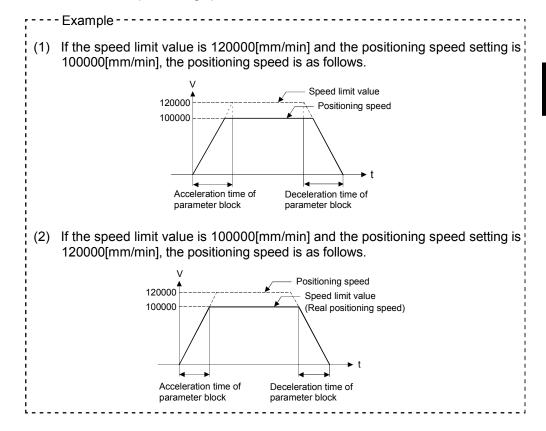

6.1.2 Positioning speed at the interpolation control

The positioning speed of the Motion CPU sets the travel speed of the control system.

(1) 1 axis linear control

Travel speed is the positioning speed of the specified axis at the 1 axis positioning control.

(2) Linear interpolation control

Positioning is controlled with the speed which had the control system specified at the interpolation control.

The positioning speed can be set using one of the following three methods at the 2 to 4 axes linear interpolation control:

- Vector speed specification
- · Long-axis speed specification

Reference-axis speed specification


Control method of the Motion CPU control for every specified method is shown below.

(a) Vector speed specification

The Motion CPU calculates the positioning speed of each axis (V1 to V2) using the travel value (D1 to D2) of each axis based on the positioning speed (V) of the setting control system.

Positioning speed of the control system is called the vector speed.

Set the vector speed and the travel value of each axis in the servo program.

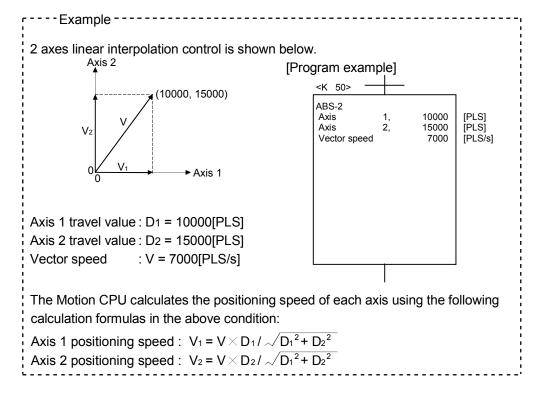


	(b)	Long-axis speed speed It is controlled based largest travel value as The Motion CPU calc using each axis trave Set the long-axis speed program.	on the positionir kis among addre ulates the position I value (D1 to D4	ss set as each ay oning speed of ot).	kis. her axes	s (V1 to V3)	
;-	Exa	mple					. 1
	Axis 1 tra Axis 2 tra Axis 3 tra Axis 4 tra Long-axis In this ex is axis 4 controlled specified The Motio positionir	hear interpolation contro- avel value: $D_1 = 10000$ avel value: $D_2 = 15000$ avel value: $D_3 = 5000$ avel value: $D_4 = 20000$ s speed : $V = 7000$ [P ample, since the reference of the largest travel valued with the positioning s with axis 4. on CPU calculates the ng speed of other axes calculation formulas:	[PLS] [Progr [PLS] [PLS] [PLS] LS/s] ence axis ue, it is peed	W. ram example] <k 51=""> ABS-4 Axis 1, Axis 2, Axis 3, Axis 4, Long-axis speed</k>	10000 15000 20000 7000	[PLS] [PLS] [PLS] [PLS] [PLS/s]	
1	Axis 2 pc	positioning speed : V_1 = positioning speed : V_2 = positioning speed : V_3 =	$D_2 / D_4 \! imes \! V$				
		The following conver	sions are perfor	med if the control	units of	each axis	
		differ. 1) Combination of ax	es set in [mm] a	nd [inch]			
		a) If the interpolat • Travel value: • Speed	ion control units Convert the trav using the formul The largest trave axis speed and		lue \times 25 ntrolled $\frac{1}{2}$ e control	i.4. with the lon led with the	- ng- e
		b) If the interpolat		are [inch]			
		• Travel value:	Convert the trav	el value of axis se a: mm setting val	-]
			axis speed and	el value axis is co the other axes are the long-axis spe	e control	led with the	e

conversion.

- 2) Discrepancy between interpolation control units and control units
 - Travel value: The travel value of each axis is converted into [PLS] unit with the electronic gear of self axis.
 - Speed : The largest travel value axis is controlled with the longaxis speed and the other axes are controlled with the speed based on the long-axis speed, as the result of conversion.


The positioning speed is converted into [PLS/s] unit as the long-axis speed with the electronic gear that the interpolation control units correspond to control units.

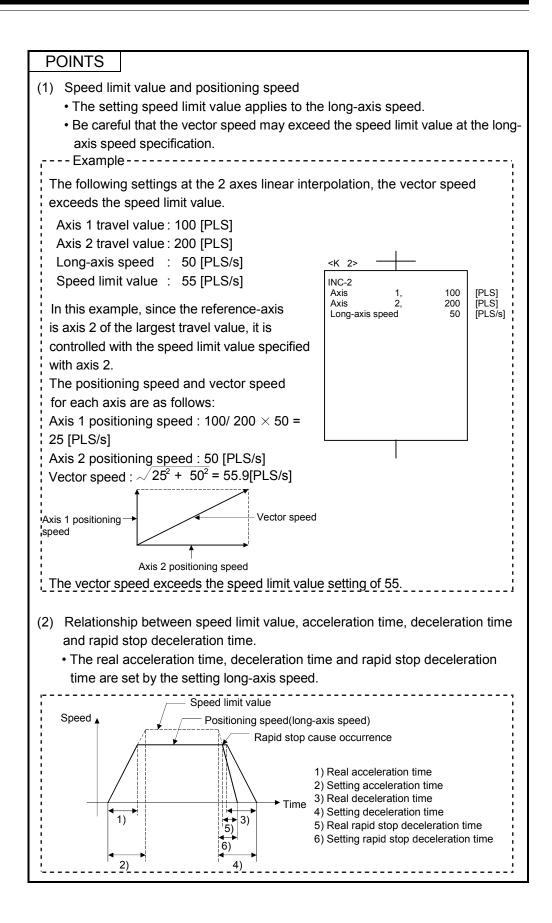


(c) Reference-axis speed specification

The Motion CPU calculates the positioning speed of other axes (V1 to V3) based on the positioning speed (reference-axis speed : V) of the setting reference-axis using each axis travel value (D1 to D4).

Set the reference-axis No., reference-axis speed and each axis travel value using the servo program.

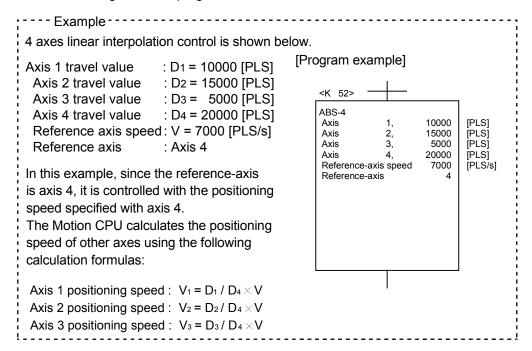


POINTS

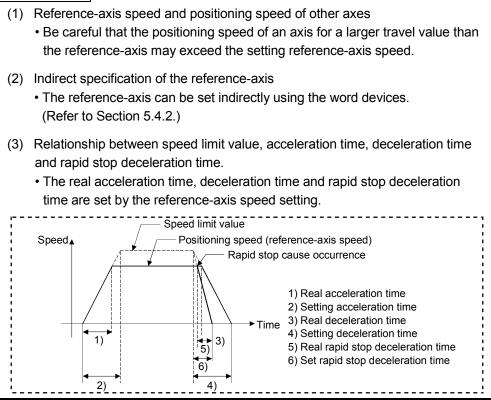

(3) Circular interpolation control

The angular speed is controlled with the setting speed at the circular interpolation control.

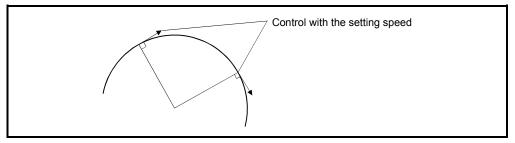

6.1.3 Control units for 1 axis positioning control

It is controlled in the control units specified with the fixed parameters at the 1 axis positioning control.

(The control unit specified with the parameter block is ignored.)

6.1.4 Control units for interpolation control

(1) The interpolation control units specified with the parameter block and the control units of the fixed parameter are checked.
 If the interpolation control units specified with the parameter block differ from the control units of a path and fixed parameter for the interpolation control units are checked.

control units of each axis fixed parameter for the interpolation control, it shown below.

	Interpolation control units in the parameter block				Starting method
	mm	inch	degree	PLS	Starting method
Normal start	There are axes w unit set in the fix [mm] and [inch].		There are axes whose control unit set in the fixed parameter is [degree].	There are axes whose control unit set in the fixed parameter is [PLS].	Positioning control starts by the interpolation control units of parameter block.
Unit mismatch (Minor error (error code: 40))		he fixed paramete			 If the control units of axes to be interpolation-controlled are the same, control starts in the preset control unit. If the control units of axes to be interpolation-controlled are different, control starts in the unit of highest priority as indicated below. Priority: PLS > degree > inch > mm <example> If axis is set to 1000[PLS] and 10.000[inch], 10.000[inch] setting is considered to be 10000[PLS].</example>

(2) The combinations of each axis control units for interpolation control are shown in the table below.

	mm	inch	degree	PLS
mm	1)	2)	3)	3)
inch	2)	1)	3)	3)
degree	3)	3)	1)	3)
PLS	3)	3)	3)	1)

Remarks

- 1): Same units
- 2): Combination of [mm] and [inch]
- 3): Unit mismatch
 - (a) Same units (1))

The position command is calculated with the setting address (travel value), positioning speed or electronic gear, the positioning is executed.

POINT

If control units for one axis are "degree" at the circular interpolation control, use "degree" also for the other axis.

- (b) Combination of [mm] and [inch] (2))
 - If interpolation control units are [mm], positioning is controlled by calculating position commands from the address, travel value, positioning speed and electronic gear, which have been converted to [mm] using the formula: inch

setting value \times 25.4 = mm setting value.


- If interpolation control units are [inch], positioning is controlled by calculating position commands from the address, travel value, positioning speed and electronic gear, which have been converted to [inch] using the formula: mm setting value ÷ 25.4 = inch setting value.
- (c) Discrepancy units (3))
 - The travel value and positioning speed are calculated for each axis.
 - a) The electronic gear converts the travel value for the axis to [PLS].b) For axis where the units match, the electronic gear converts the
 - positioning speed to units of [PLS/s]. Positioning is conducted using position commands calculated from travel values converted to [PLS] and speeds and electronic gear converted to [PLS/s].
 - If the interpolation control units match for two or more axes at the 3-axes or more linear interpolation, the positioning speed is calculated with the electronic gear for the axis with the lowest No.

6.1.5 Control in the control unit "degree"

If the control units are "degree", the following items differ from other control units.


(1) Current value address

The current addresses in the control unit "degree" are ring addresses from 0° to 360°.



- (2) Stroke limit valid/invalid setting The upper/lower limit value of the stroke limit in the control unit "degree" is within the range of 0° to 359.99999°
 - (a) Stroke limit is valid

Set the "lower limit value to upper limit value of the stroke limit" in a clockwise direction to validate the stroke limit value.

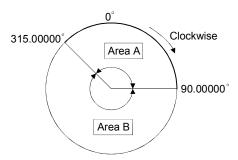

- 1) If travel range in area A is set, the limit values are as follows: a) Lower stroke limit value: 315.00000°
 - b) Upper stroke limit value: 90.00000°
- 2) If travel range in area B is set, the limit values are as follows:
 - a) Lower stroke limit lower limit value: 90.00000°
 - b) Upper stroke limit upper limit value: 315.00000°
- (b) Stroke limit is invalid

Set the "upper stroke limit value" equal to "lower stroke limit value" to invalidate the stroke limit value.

It can be controlled regardless the stroke limit settings.


POINTS

- (1) Circular interpolation including the axis which set the stroke limit as invalid cannot be executed.
- (2) When the upper/lower limit value of the axis which set the stroke limit as valid are changed, perform the home position return after that.
- (3) When the stroke limit is set as valid in the incremental data system, perform the home position return after power supply on.
- (4) Do not use the high-speed oscillation in the axis that invalidates a stroke limit of control unit "degree".
- (5) The unlimited length feed is possible by setting the stroke limit to invalid even the control unit is "other than degree axis" (mm, inch, PLS).
 (Refer to Section 4.2.3.) (CONSCIENTING AND ADDRESS)

(3) Positioning control

Positioning control method in the control unit "degree" is shown below.


- (a) Absolute data method (ABS□ instructions)
 Positioning in a near direction to the specified address is performed based on the current value.
- ----Example -----
- Positioning is executed in a clockwise direction to travel from the current value of 315.00000° to 0°.
- (2) Positioning is executed in a counter clockwise direction to travel from the current value of 0° to 315.00000°.

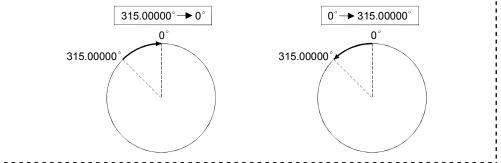

POINTS

- (1) The positioning direction of absolute data method is set a clockwise/counter clockwise direction by the setting method of stroke limit range, positioning in the shortest direction may not be possible.
 - Travel from the current value 0° to 315.00000° must be clockwise

positioning $\;$ if the lower stroke limit value is set to 0° and the upper limit value is set to 345.00000°.

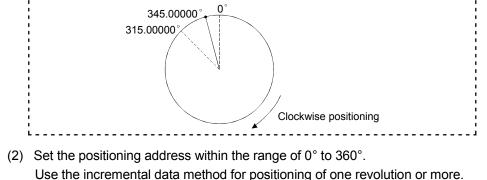

- (b) Incremental data method (INC□ instructions) Positioning by the specified travel value to the specified direction. The travel direction is set by the sign of the travel value, as follows:
 1) Positive travel valueClockwise rotation
 - 2) Negative travel value.....Counter clockwise rotation

POINT


Positioning of 360° or more can be executed in the incremental data method.

6.1.6 Stop processing and restarting after stop


This section describes the stop processing after a stop cause is input during positioning and restarting after stop.

- (1) Stop processing
 - (a) Stop processing methods
 Stop processing during positioning by stop cause are as follows.


1) Deceleration stop (Process 1)......Deceleration stop by "stop deceleration time" of parameter block.

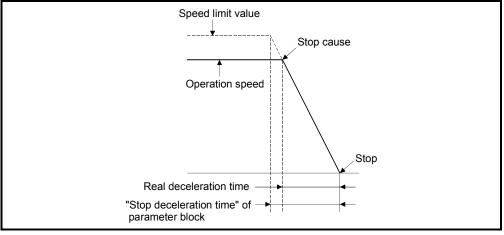


2) Rapid stop (Process 2).....Deceleration stop by "rapid stop deceleration time" of parameter block.

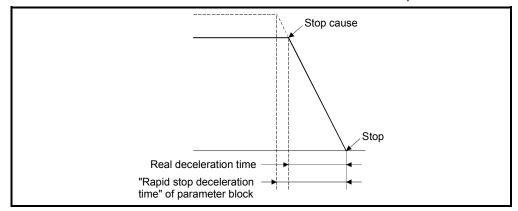

3) Immediate stop (Process 3).....Stop without deceleration processing.

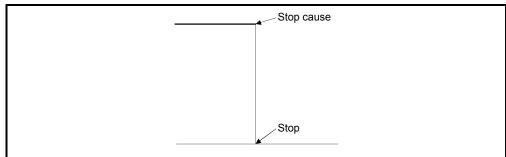

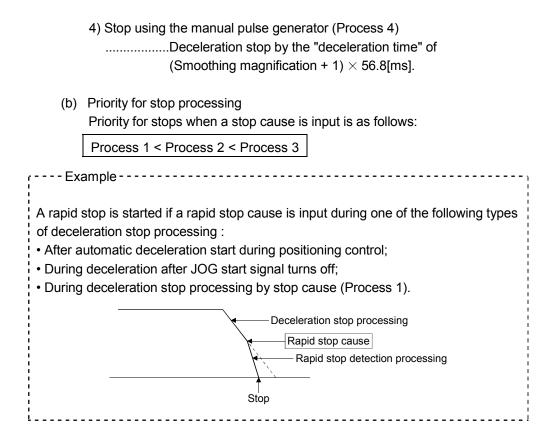

(c) Stop commands and stop causes

Some stop commands and stop causes affect individual axis and others affect all axes.

However, during interpolation control, stop commands and stop causes which affect individual axis also stop the interpolation axis.

For example, both Axis 1 and Axis 2 stop after input of a stop command (stop cause) during the Axis 1 and Axis 2 interpolation control.


		Avia	Stop processing					
No.	Stop cause	Axis classification	Positioning control	Speed control	JOG operation	Home position return	Manual pulse generator	Error processing
1	STOP signal input (STOP) of the Q172DLX ON		Process 1 or Process 2 According to deceleration processing on STOP input parameter of parameter block.					
2	Stop command "M3200 + 20n" ON		Process 1					
3	Rapid stop command "M3201 + 20n" ON	Individual	Process 2				Process 4	
4	FLS input signal OFF of Q172DLX/servo amplifier		Process 1 or P		i OT			
5	RLS input signal OFF of Q172DLX/servo amplifier		 According to oparameter of 	parameter bloc	•	OP Input		Refer to "APPENDIX 1 Error Codes Stored Using The
6	Servo error detection "M2408 +20n" ON		Process 2 (The servomotor stops with dynamic brake.)					Motion CPU"
7	PLC ready flag M2000 OFF		Process 1					
8	Deceleration stop using MT Developer2 ^(Note-1)		Process 1				Process 4	
9	Rapid stop of the all axes using MT Developer2 ^(Note-1)		Process 2			F1000035 4		
10	Motion CPU stop		Process 1					
11	Multiple CPU system reset	All axes	Process 3					—
12	Motion CPU WDT error		Process 3					SM512 (Motion CPU WDT error flag) ON
13	Other CPU WDT error		Process 1					—
14	Multiple CPU system power off		Process 3				—	
15	Forced stop		Process 3				Servo amplifier is stopped at the servo OFF.	
16	Servo amplifier power off	Individual	Process 3				Major error at the start (no servo)	
17	Speed change to speed "0"	Individual (Note-2)	Process 1				_	_

(Note-1): Test mode

(Note-2): Applies to all axes used in the servo program set in the speed "0".

(2) Re-starting after stop

- (a) If it stopped by the stop command or stop cause (except change speed to speed "0"), re-starting is not possible.
 However, it stopped by the STOP input of the Q172DLX ON, the stop command (M3200+20n) ON or the rapid stop command (M3201+20n) ON during speed/position switching control, re-starting is possible using VPSTART instruction.
- (b) If it stopped by the speed change to speed "0" using CHGV instruction, restarting is possible by executing the speed change to speed other than "0".

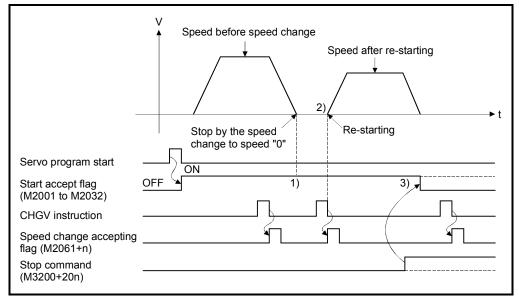


- 1) The start accept flag (M2001 to M2032) remains on after stop by the speed change to "0".
- 2) Re-starting by changing the speed again.
- However, if the start accept flag (M2001 to M2032) turns off by turning on the stop command (M3200+20n), re-starting is not possible even if make a speed change once again.


(3) Continuation of positioning control

This section describes the processing which performed servo program No. which was being performed before the stop, after stop by turning on the STOP input of the Q172DLX ON, the stop command (M3200+20n) ON or the rapid stop command (M3201+20n) ON.

(a) 1 axis linear control/2 or 3 axes linear interpolation control
 1) For ABS□ Positioning control from the stop address to target address by the target address specification.

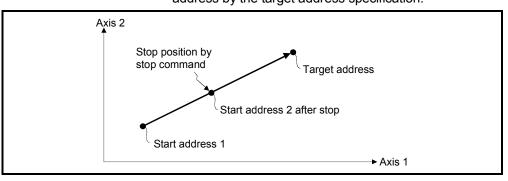


2) For INCD Positioning control of the travel value from the stop address.

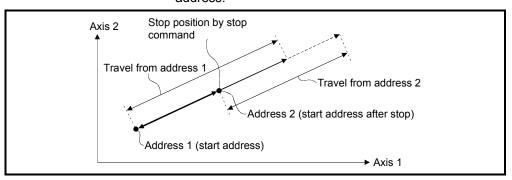

When the address 2 is moved to the same address (address which calculates with start address + specified travel value) using the INCD, the following processing using the servo program and Motion SFC program is required.

[Servo Program]


The travel value of servo program which executes the positioning from address is set indirectly by the word devices, as follows.

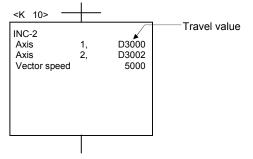

6 POSITIONING CONTROL

[Processing in the Motion SFC Program]


- 1. Transfer the start address to word devices of the Motion CPU before starting.
- 2. Calculate the target address by applying the travel value to the address before starting.
- 3. Calculate the residual travel value by subtracting the stop address from the target address.
- 4. Store the residual travel value in the servo program for travel value register.
- 5. Perform the servo program.

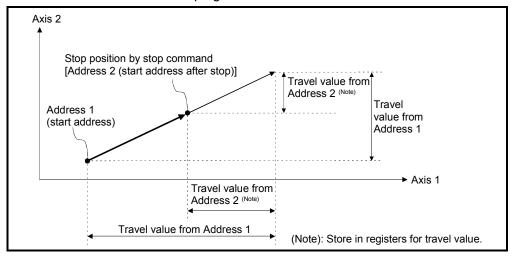

6.1.7 Acceleration/deceleration processing


Acceleration/deceleration are processed by the following three methods.

 (1) Trapezoidal acceleration/deceleration processing This is a conventional linear acceleration/deceleration processing. The acceleration/deceleration graph resembles a trapezoid, as shown in the diagram below.

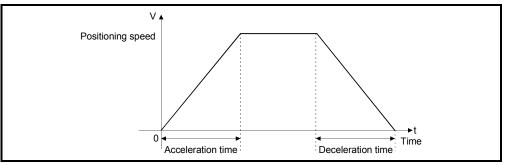


(2) S-curve acceleration/deceleration processing

S-curve ratio is set as a parameter to smoothly provide acceleration/deceleration processing than trapezoidal acceleration/deceleration processing. The acceleration/deceleration graph is a sine curve as shown in the diagram below. Set the S-curve ratio by the parameter block (Refer to Section 4.3.2) or using the servo program.

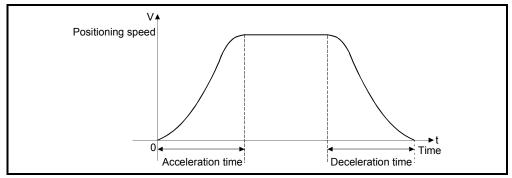


S-curve ratio set the part of the sine curve used to produce the acceleration and deceleration curve as shown in the diagram below.

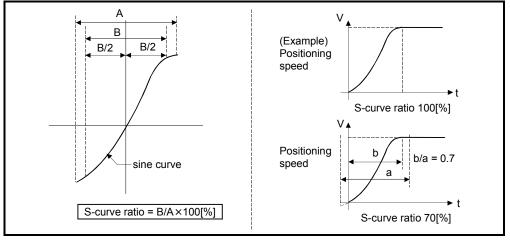

S-curve ratio can be set by the servo program is following two methods.(a) Direct specification

S-curve ratio is set directly as a numeric value from 0 to 100.

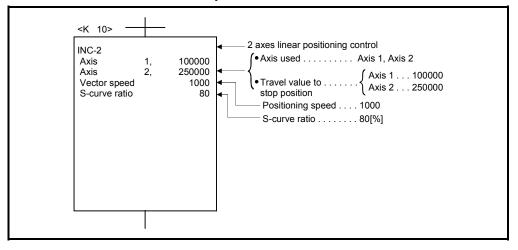

(b) Indirect specification


S-curve ratio is set by the contents of data registers. The usable data registers are shown below.

Word devices	Usable devices
D	0 to 8191
W	0 to 1FFF
#	0 to 7999
U⊟\G	10000 to (10000+p-1) (Note-1)

(Note-1): "p" indicates the user setting area points of the Multiple CPU high speed transmission area for each CPU.

Refer to Chapter 2 of the "Q173D(S)CPU/Q172D(S)CPU Motion controller


Programming Manual (COMMON)" for the user setting area points of the Multiple CPU high speed transmission area.

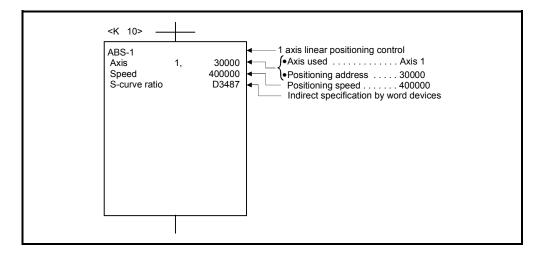

(3) Advanced S-curve acceleration/deceleration processing ver

Processing for smooth acceleration/deceleration can be executed by using the Advanced S-curve acceleration/deceleration function. The acceleration section is set as a sine curve as shown in the diagram below.

Set the advanced S-curve acceleration/deceleration by the parameter block (Refer to Section 4.3.3) or servo program.

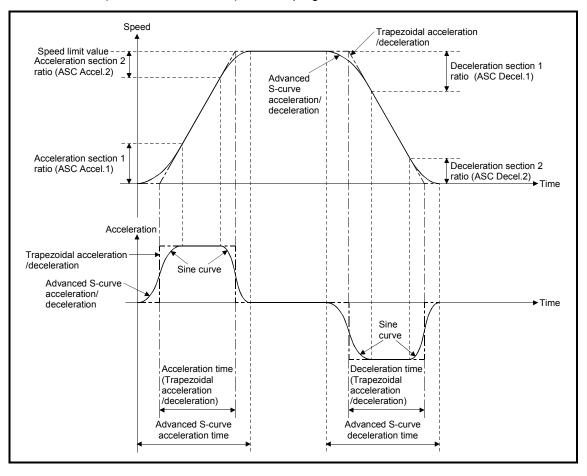

Ver. : Refer to Section 1.3 for the software version that supports this function.


Advanced S-curve acceleration/deceleration can be set by the servo program is following two methods.

(a) Direct specification

Advanced S-curve acceleration/deceleration system and advanced S-curve acceleration/deceleration ratio are set directly as a numeric value.

Setting items	Setting range				
ASC System	0: Trapezoidal/S-curve acceleration/deceleration 1: Advanced S-curve acceleration/deceleration				
ASC Accel.1					
ASC Accel.2	0.0 to 100.0[%] ^(Note)				
ASC Decel.1	0.0 to 100.0[%]				
ASC Decel.2					

(Note): ASC Accel.1 + ASC Accel.2 \leq 100.0%, ASC Decel.1 + ASC Decel.2 \leq 100.0%

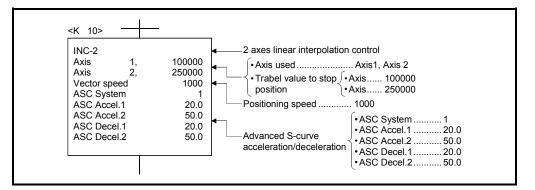

(b) Direct specification


Advanced S-curve acceleration/deceleration system and advanced S-curve acceleration/deceleration ratio is set by the contents of data registers.

Word devices	Usable devices
D	0 to 8191
W	0 to 1FFF
#	0 to 7999
U⊟\G	10000 to (10000+p-1) ^(Note-1)

(Note-1): "p" indicates the user setting area points of the Multiple CPU high speed transmission area for the each CPU.

Refer to Chapter 2 of the "Q173D(S)CPU/Q172D(S)CPU Motion controller

Programming Manual (COMMON)" for the user setting area points of the Multiple CPU high speed transmission area.

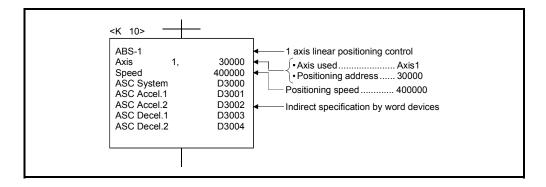

6.2 1 Axis Linear Positioning Control

Positioning control from the current stop position to the fixed position for specified axis is executed.

Positioning is controlled using ABS-1 (Absolute data method) or INC-1 (Incremental data method) servo instructions.

				Items set using MT Developer2																					
			Common								Arc		Parameter block Others									ers			
Servo instruction	Positioning method	Number of control axes	Parameter block No.	Axis	Address/travel value	Command speed	Dwell time	M-code	Torque limit value	Auxiliary point	Radius	Central point	Interpolation control unit	Speed limit value	Acceleration time	Deceleration time	Rapid Stop deceleration time	Torque limit value	Deceleration processing on stop input	Allowable error range for circular interpolation	S-curve ratio	Advanced S-curve acceleration/deceleration	Cancel	WAIT-ON/OFF	Speed change
ABS-1	Absolute				_																				
INC-1	Incremental	1		0	0	0	Δ	\triangle						\bigtriangleup	Δ	Δ	Δ	\bigtriangleup	Δ		\bigtriangleup	Δ	\triangle		Valid


 \bigcirc : Must be set \triangle : Set if required

[Control details]

Control using ABS-1 (Absolute data method)

(1) Positioning control from the current stop address (pre-positioning address) based on the home position to the specified address is executed.


(2) The travel direction is set by the current stop address and the specified address.

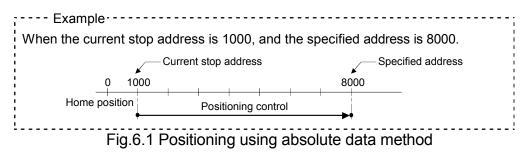

Control using INC-1 (Incremental data method)

- Positioning control of the specified travel value from the current stop position address is executed.
- (2) The travel direction is set by the sign (+/ -) of the travel value, as follows:
 - Positive travel valuePositioning control to forward direction (Address Increase direction)
 Negative travel value.....Positioning control to reverse direction

(Address decrease direction)

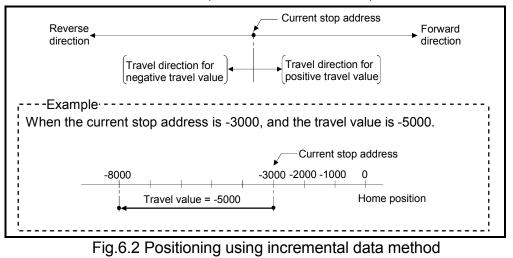


[Program]

Servo program No. 0 for positioning control is shown as the following conditions.

(1) System configuration

1 axis linear positioning control of Axis 4.

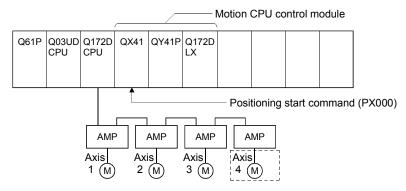


(2) Positioning operation detailsPositioning using the servo program No.0 is shown below.

In this example, Axis 4 is used in servo program No.0.




(3) Operation timing

Operation timing for the servo program No.0 is shown below.

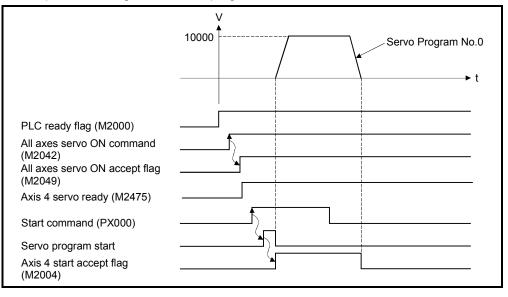


(4) Servo program

Servo program No.0 for positioning control is shown below.

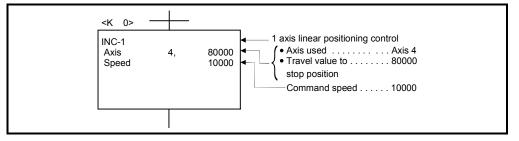

(5) Motion SFC program

Motion SFC program for which executes the servo program is shown below.

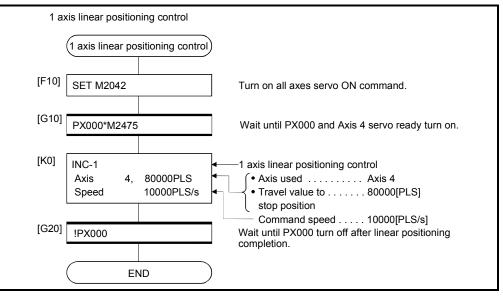

(Note): Example of the above Motion SFC program is started using the automatic start or sequence program.

6.3 2 Axes Linear Interpolation Control

Linear interpolation control from the current stop position with the specified 2 axes is executed.

ABS-2 (Absolute data method) and INC-2 (Incremental data method) servo instructions are used in the 2 axes linear interpolation control.


				Items set using MT Developer2																					
					Сс	omm	on	-		Arc			Parameter block Others										iers		
Servo instruction	Positioning method	Number of control axes	Parameter block No.	Axis	Address/travel value	Command speed	Dwell time	M-code	Torque limit value	Auxiliary point	Radius	Central point	Interpolation control unit	Speed limit value	Acceleration time	Deceleration time	Rapid Stop deceleration time	Torque limit value	Deceleration processing on stop input	Allowable error range for circular interpolation	S-curve ratio	Advanced S-curve acceleration/deceleration	Cancel	WAIT-ON/OFF	Speed change
ABS-2	Absolute			0	_	_																			
INC-2	Incremental	2	\triangle	0	0	0	\triangle	Δ					\bigtriangleup	Δ	Δ	Δ	Δ	\bigtriangleup	Δ		\triangle	Δ	Δ		Valid

 \bigcirc : Must be set \triangle : Set if required

[Control details]

Control using ABS-2 (Absolute data method)

(1) 2 axes linear interpolation from the current stop address (X1 or Y1) based on the home position to the specified address (X2 or Y2) is executed.

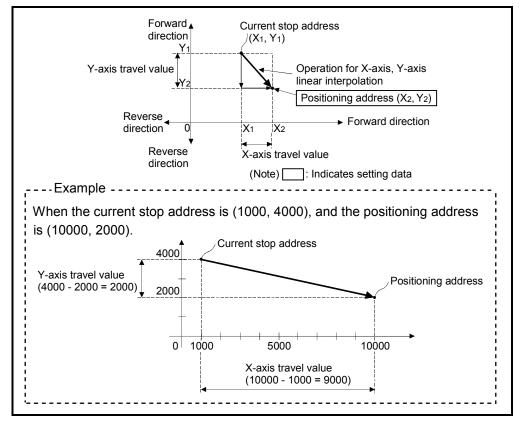

(2) The travel direction is set by the stop address (starting address) and positioning address of each axis.

Fig.6.3 Positioning using absolute data method

Control using INC-2 (Incremental data method)

- (1) Positioning control from the current stop address to the position which combined travel direction and travel value specified with each axis is executed.
- (2) The travel direction for each axis is set by the sign (+/ -) of the travel value for each axis, as follows:
 - Positive travel valuePositioning control to forward direction
 - (Address increase direction)
 - Negative travel value.....Positioning control to reverse direction
 (Address decrease direction)


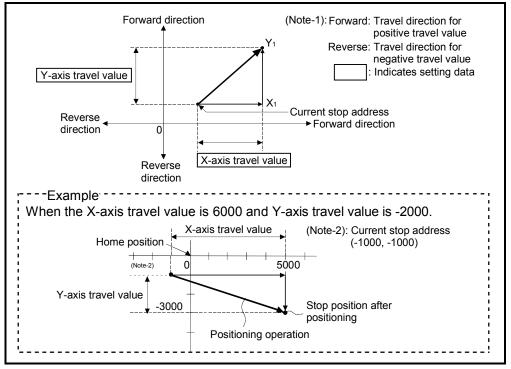


Fig.6.4 Positioning using incremental data method

[Program]

Program for 2 axes linear interpolation control is shown as the following conditions. (1) System configuration

2 axes linear interpolation control of Axis 3 and Axis 4.

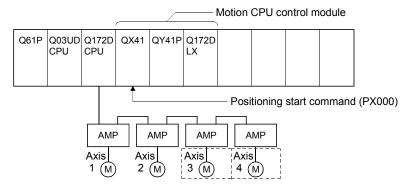


6 - 27

(2) Positioning operation details

The positioning is used the Axis 3 and Axis 4 servomotors.

The positioning operation by the Axis 3 and Axis 4 servomotors is shown in the diagram below.

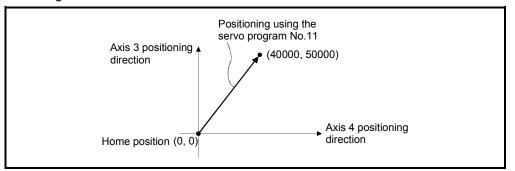

(3) Positioning conditions


(a) Positioning conditions are shown below.

	Servo Program No.
Item	No.11
Positioning speed	30000

(b) Positioning start command PX000 Leading edge (OFF \rightarrow ON)


(4) Operation timing

Operation timing for 2 axes linear interpolation control is shown below.

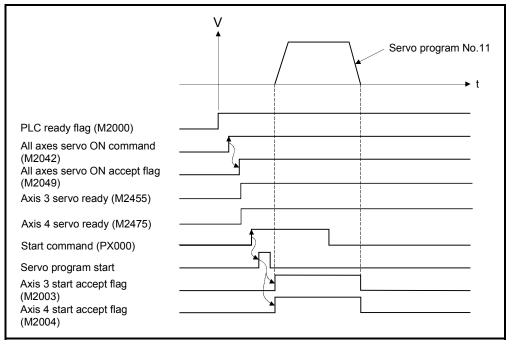


(5) Servo program

Servo program No.11 for 2 axes linear interpolation control is shown below.

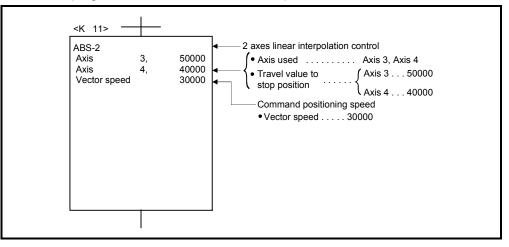

(6) Motion SFC program

Motion SFC program for which executes the servo program is shown below.

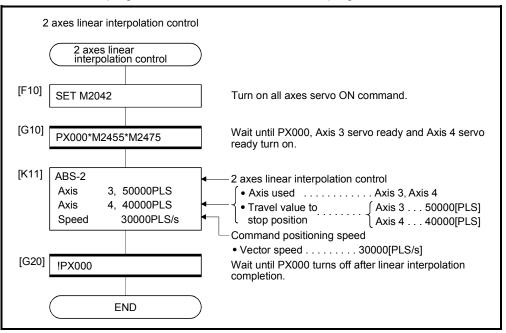

(Note): Example of the above Motion SFC program is started using the automatic start or sequence program.

6.4 3 Axes Linear Interpolation Control

		executed.																							
										Iter	ns s	et us	sing	MT I	Dev	elope	ər2								
					Сс	omm	on				Arc					Para	amet	er b	lock				Oth	iers	
Servo instruction	Positioning method	Number of control axes	Parameter block No.	Axis	Address/travel value	Command speed	Dwell time	M-code	Torque limit value	Auxiliary point	Radius	Central point	Interpolation control unit	Speed limit value	Acceleration time	Deceleration time	Rapid Stop deceleration time	Torque limit value	Deceleration processing on stop input	Allowable error range for circular interpolation	S-curve ratio	Advanced S-curve acceleration/deceleration	Cancel	WAIT-ON/OFF	Speed change
ABS-3	Absolute																								
INC-3	Incremental	3	\bigtriangleup	0	0	0		\bigtriangleup					\bigtriangleup	\bigtriangleup	\triangle	\bigtriangleup	\bigtriangleup	\bigtriangleup	\bigtriangleup		\triangle	\triangle	\bigtriangleup		Valid

Linear interpolation control from the current stop position with the specified 3 axes is executed.

 \bigcirc : Must be set \triangle : Set if required

6 POSITIONING CONTROL

[Control details]

Control using ABS-3 (Absolute data method)

- 3 axes linear interpolation from the current stop address (X1, Y1 or Z1) based on the home position to the specified positioning address (X2, Y2, Z2) is executed.
- (2) The travel direction is set by the stop address and specified address of each axis.

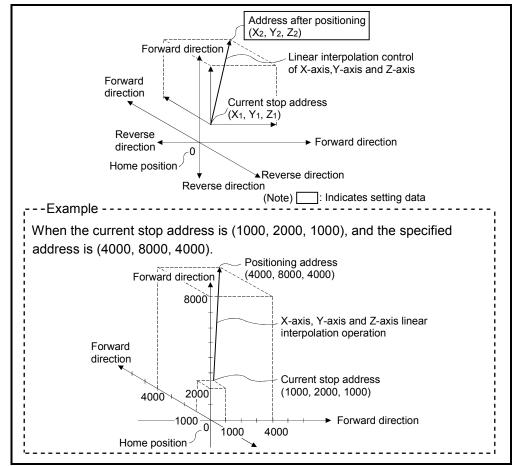


Fig.6.5 Positioning using absolute data method

Control using INC-3 (Incremental data method)

- (1) Positioning control from the current stop address to the position which combined travel direction and travel value specified with each axis is executed.
- (2) The travel direction for each axis is set by the sign (+/ -) of the travel value for each axis, as follows:
 - Positive travel valuePositioning control to forward direction
 (Address increase direction)
 - Negative travel value......Positioning control to reverse direction (Address decrease direction)

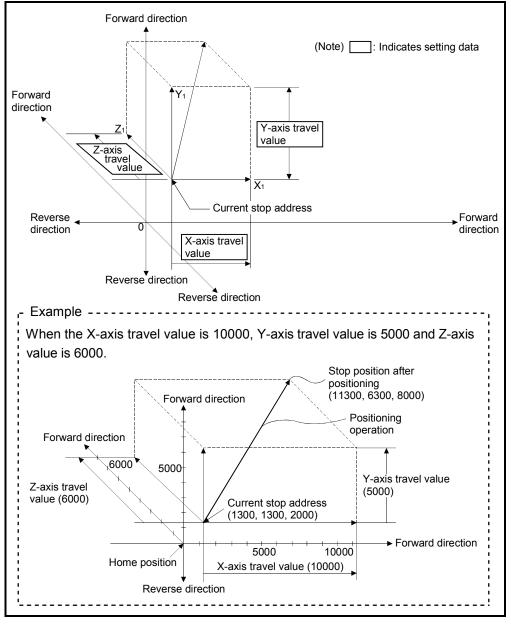



Fig.6.6 Positioning using incremental data method

6 POSITIONING CONTROL

[Program]


Program for 3 axes linear interpolation control is shown as the following conditions. (1) System configuration

3 axes linear interpolation control of Axis 1, Axis 2 and Axis 3.

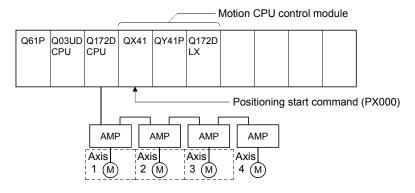

(2) Positioning operation details

The positioning is used the Axis 1, Axis 2 and Axis 3 servomotors. The positioning operation by the Axis 1, Axis 2 and Axis 3 servomotors is shown in the diagram below.

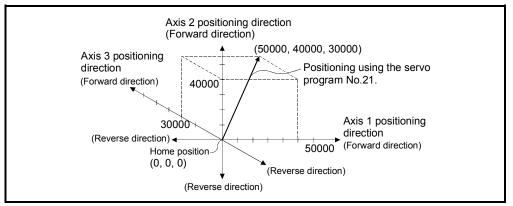

(3) Positioning conditions


(a) Positioning conditions are shown below.

	Servo Program No.
Item	No.21
Positioning method	Absolute data method
Positioning speed	1000

(b) Positioning start command PX000 Leading edge (OFF \rightarrow ON)


(4) Operation timing

Operation timing for 3 axes linear interpolation control is shown below.

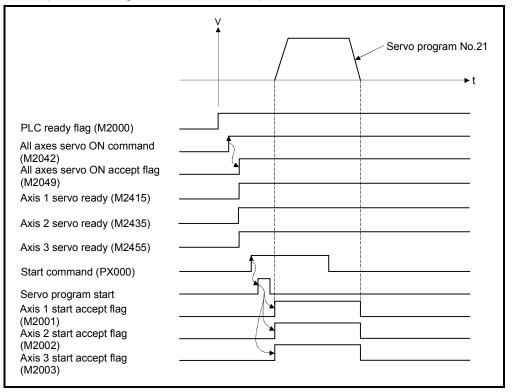

(5) Servo program


Servo program No.21 for 3 axes linear interpolation control is shown below.

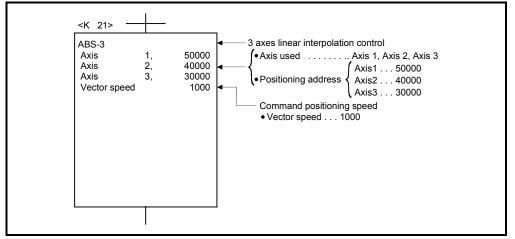

(Note): Example of the Motion SFC program for positioning control is shown next page.

(6) Motion SFC program

Motion SFC program for which executes the servo program is shown below.

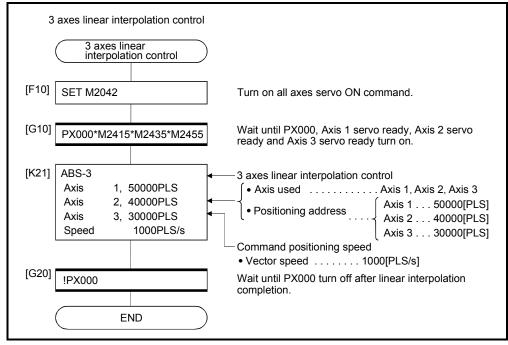

(Note): Example of the above Motion SFC program is started using the automatic start or sequence program.

6.5 4 Axes Linear Interpolation Control


positioning command of the sequence program is executed.																									
										Iter	ns s	et us	sing	MT	Dev	elop	er2						1		
					Co	mm	on				Arc					Para	ame	ter b	lock				Oth	iers	
Servo instruction	Positioning method	Number of control axes	Parameter block No.	Axis	Address/travel value	Command speed	Dwell time	M-code	Torque limit value	Auxiliary point	Radius	Central point	Interpolation control unit	Speed limit value	Acceleration time	Deceleration time	Rapid Stop deceleration time	Torque limit value	Deceleration processing on stop input	Allowable error range for circular interpolation	S-curve ratio	Advanced S-curve acceleration/deceleration	Cancel	WAIT-ON/OFF	Speed change
ABS-4	Absolute			0	0	(
INC-4	Incremental	4		0	0	0	\bigtriangleup	\triangle					\bigtriangleup	\bigtriangleup	\triangle	\bigtriangleup	\triangle	\triangle	\bigtriangleup		Δ	\bigtriangleup	\triangle		Valid

Linear interpolation control from the current stop position with 4 axes specified with the positioning command of the sequence program is executed.

 \bigcirc : Must be set \triangle : Set if required

[Control details]


Positioning control which starts and completes the 4 axes simultaneously is executed.

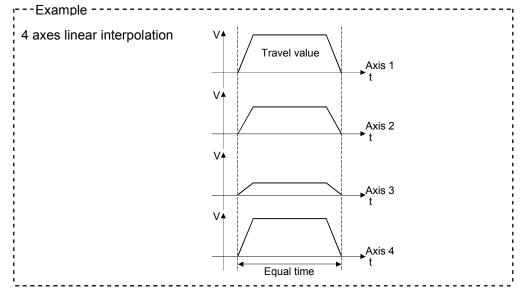

[Program]

Program for 4 axes linear interpolation control is shown as the following conditions. (1) System configuration

4 axes linear interpolation control of Axis 1, Axis 2, Axis 3 and Axis 4.

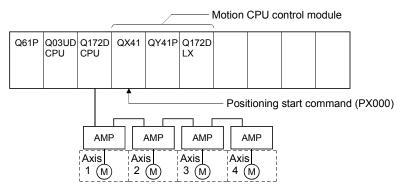

(2) Positioning operation details

The positioning is used the Axis 1, Axis 2, Axis 3 and Axis 4 servomotors. The positioning by the Axis 1, Axis 2, Axis 3 and Axis 4 servomotors is shown in the diagram below.


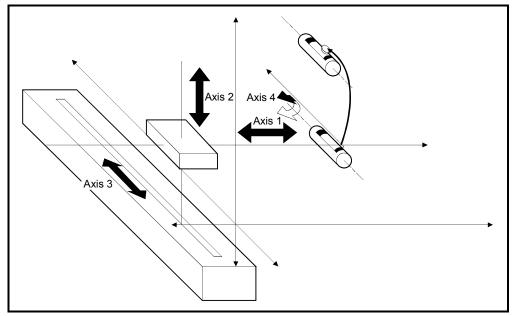


Fig.6.7 Axis configuration

6 POSITIONING CONTROL



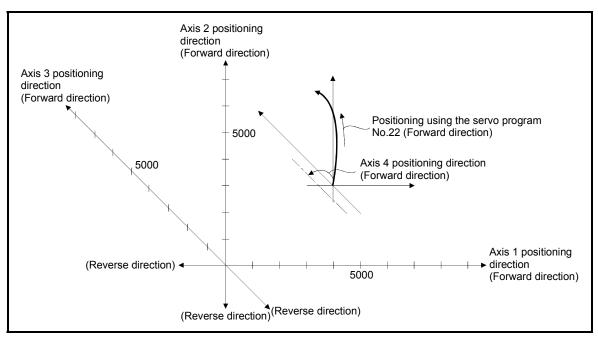

(3) Positioning conditions


(a) Positioning conditions are shown below.

11	Servo Program No.
Item	No.22
Positioning method	Incremental data method
Positioning speed	10000

(b) Positioning start command PX000 Leading edge (OFF \rightarrow ON)


(4) Operation timing

Operation timing for 4 axes linear interpolation control is shown below.

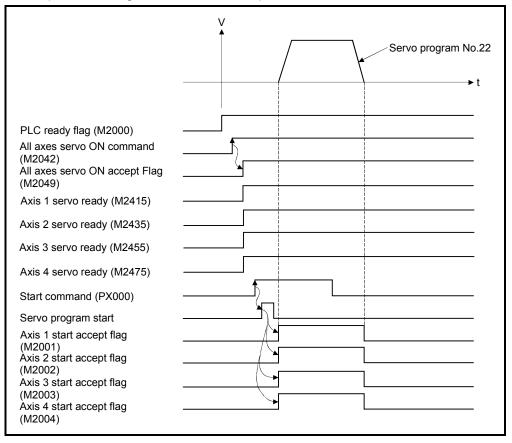

(5) Servo program


Servo program No.22 for 4 axes linear interpolation control is shown below.

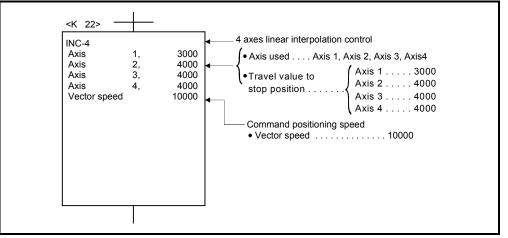

(Note): Example of the Motion SFC program for positioning control is shown next page.

(6) Motion SFC program

Motion SFC program for which executes the servo program is shown below.

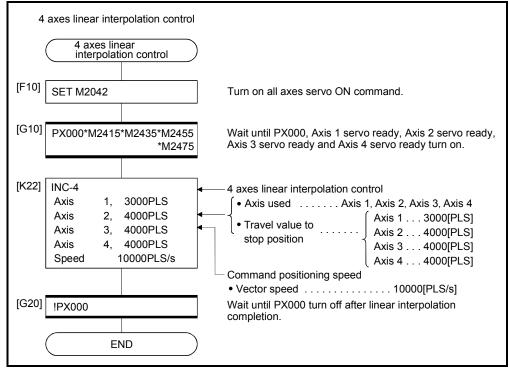

(Note): Example of the above Motion SFC program is started using the automatic start or sequence program.

6.6 Auxiliary Point-Specified Circular Interpolation Control

Circular interpolation control by specification of the end point address and auxiliary point address (a point on the arc) for circular interpolation is executed. Auxiliary point-specified circular uses $ABS \bigtriangleup$ (Absolute data method) and INC

(Incremental data method) servo instructions.

										Iter	ns s	et u	sing	MT	Dev	elop	er2								
				-	Сс	omm	on	-	-		Arc				-	Para	ame	ter b	lock				Oth	iers	
Servo instruction	Positioning method	Number of control axes	Parameter block No.	Axis	Address/travel value	Command speed	Dwell time	M-code	Torque limit value	Auxiliary point	Radius	Central point	Interpolation control unit	Speed limit value	Acceleration time	Deceleration time	Rapid Stop deceleration time	Torque limit value	Deceleration processing on stop input	Allowable error range for circular interpolation	S-curve ratio	Advanced S-curve acceleration/deceleration	Cancel	WAIT-ON/OFF	Speed change
ABS	Absolute				_	_				~															
	Incremental	2		0	0	0	\triangle	\triangle		0			\bigtriangleup		\triangle	Δ	\bigtriangleup	\bigtriangleup	\bigtriangleup	\bigtriangleup	\bigtriangleup	\bigtriangleup	\triangle		Valid

 \bigcirc : Must be set \triangle : Set if required

[Control details]

Control using ABS \dot{L}^{γ} (Absolute data method)

- (1) Circular interpolation from the current stop address (address before positioning) based on the home position through the specified auxiliary point address to the end point address is executed.
- (2) The center of the arc is the point of intersection of the perpendicular bisectors of the start point address (current stop address) to the auxiliary point address, and the auxiliary point address to the end point address.

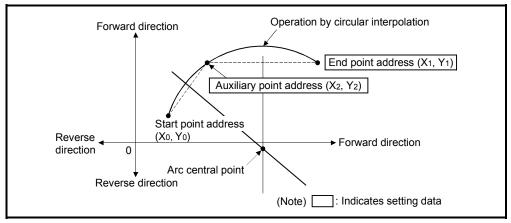


Fig.6.9 Circular interpolation control using absolute data method

- (3) The setting range of the end point address and auxiliary point address is (-2^{31}) to $(2^{31}-1)$.
- (4) The maximum arc radius is 2^{32} -1.

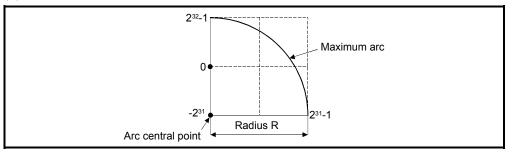


Fig.6.10 Maximum arc

Control using INC \bigwedge (Incremental data method)

- (1) Circular interpolation from the current stop address through the specified auxiliary point address to the end point address is executed.
- (2) The center of the arc is the point of intersection of the perpendicular bisectors of the start point address (current stop address) to the auxiliary point address, and the auxiliary point address to the end point address.


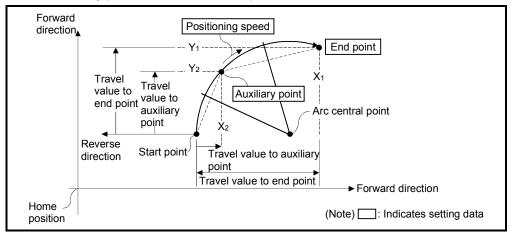


Fig.6.11 Circular interpolation control using incremental data method

(3) The setting range for the travel value to the end point address and auxiliary point address is 0 to \pm (2³¹-1).

(4) The maximum arc radius is 2³¹-1.
 If the end point and auxiliary point are set more than a radius of 2³¹-1, an error occurs at the start and error code [107] is stored in the data register.



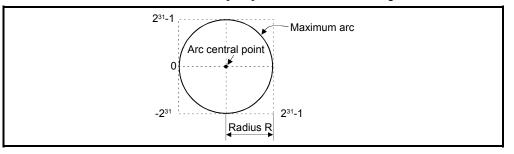


[Program]

Program for auxiliary point-specified circular interpolation control is shown as the following conditions.

(1) System configuration


Auxiliary point-specified circular interpolation control of Axis 1 and Axis 2.

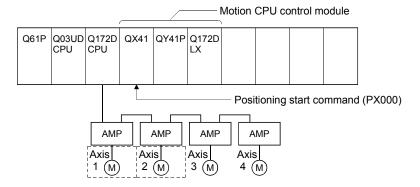

(2) Positioning details

The positioning uses the Axis 1 and Axis 2 servomotors.

The positioning by the Axis 1 and Axis 2 servomotors is shown in the diagram below.

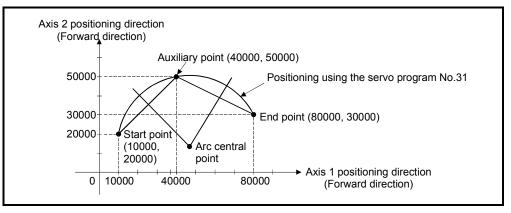

(3) Positioning conditions


(a) Positioning conditions are shown below.

16	Servo program No.
Item	No.31
Positioning method	Absolute data method
Positioning speed	1000

(b) Positioning start command PX000 Leading edge (OFF \rightarrow ON)


(4) Operation timing

Operation timing for auxiliary point-specified circular interpolation control is shown below.

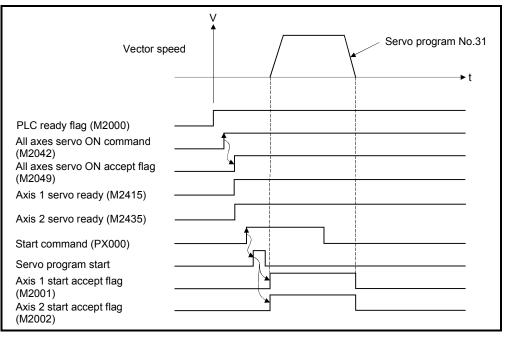

(5) Servo program


Servo program No.31 for auxiliary point-specified circular interpolation control is shown below.

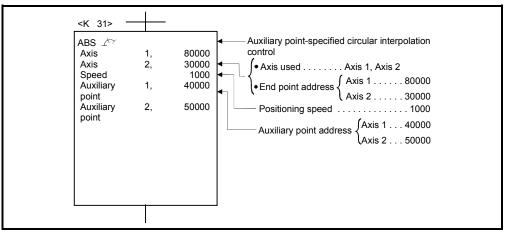

(Note): Example of the Motion SFC program for positioning control is shown next page.

(6) Motion SFC program

Motion SFC program for which executes the servo program is shown below.

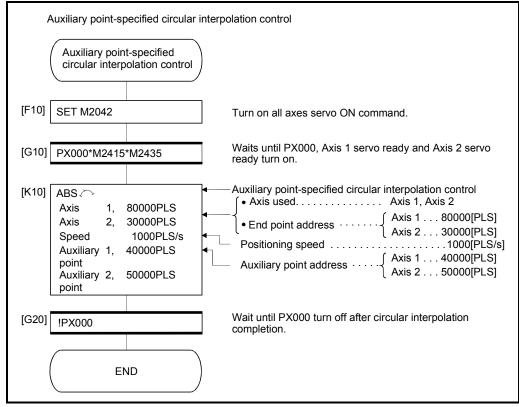

(Note): Example of the above Motion SFC program is started using the automatic start or sequence program.

6.7 Radius-Specified Circular Interpolation Control

Circular interpolation control by specification of the end point address and radius for circular interpolation is executed.

Radius-specified circular interpolation control uses ABS \frown , ABS \frown , ABS \bigcirc , ABS \bigcirc and ABS \bigcirc (Absolute data method) and INC \frown , INC \bigcirc , INC \bigcirc and INC \bigcirc (Incremental data method) servo instructions.

										Iter	ms s	et u	sing	MT	Dev	elope	er2								
					Сс	omm	ion				Arc				1	Para	amet	er b	lock				Oth	ners	
Servo instruction	Positioning method	Number of control axes	Parameter block No.	Axis	Address/travel value	Command speed	Dwell time	M-code	Torque limit value	Auxiliary point	Radius	Central point	Interpolation control unit	Speed limit value	Acceleration time	Deceleration time	Rapid Stop deceleration time	Torque limit value	Deceleration processing on stop input	Allowable error range for circular interpolation	S-curve ratio	Advanced S-curve acceleration/deceleration	Cancel	WAIT-ON/OFF	Speed change
	Absolute	2		0	0	0					0														Valid
	Incremental																								

 \bigcirc : Must be set \triangle : Set if required

6 POSITIONING CONTROL


[Control details]

Details for the servo instructions are shown in the table below.

Instruction	Rotation direction of the servomotors	Maximum controllable angle of arc	Positioning path
ABS 🔍	Clockwise		Start Positioning path point $\theta < 180^{\circ}$ End point
	CIOCKWISE	0° < θ < 180°	Radius R Central point
ABS 🖼	Counter clockwise	0 < 0 < 180	Radius R
			Start $\theta < 180^{\circ}$ End point point Positioning path
ABS 🕞	Clockwise		Positioning path $180^{\circ} \le \theta < 360^{\circ}$ Central point
			Radius R Start point End point
ABS 🕩	Counter clockwise	180° ≤ θ < 360°	Start point Radius R End point Central point
INC 🕩			180°≤θ<360° Central point Positioning path

Control using ABS (, ABS , ABS , ABS (, ABS) (Absolute data method)

- Circular interpolation from the current stop address (address before positioning) based on the home position to the specified end address with the specified radius is executed.
- (2) The center of the arc is the point of intersection of the perpendicular bisectors of the start point address (current stop address) to the end address.

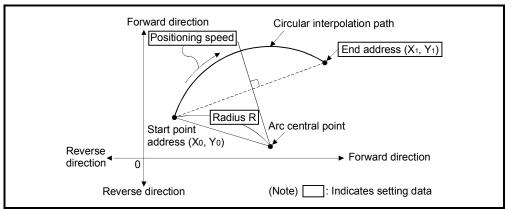



(3) The setting range of end point address is (-2^{31}) to $(2^{31}-1)$.

- (4) The setting range for the radius is 1 to $(2^{31}-1)$.
- (5) The maximum arc radius is $(2^{32}-1)$.

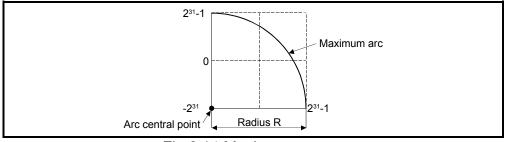


Fig.6.14 Maximum arc

Control using INC (, INC , INC , INC (, INC) (Incremental data method)

- (1) Circular interpolation from the current stop address (0, 0) to the specified end point with specified radius.
- (2) The center of the arc is the point of intersection of the perpendicular bisectors of the start point address (current stop address) to the end address.

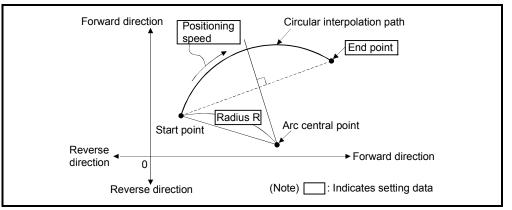


Fig.6.15 Circular interpolation control using incremental data method

- (3) Setting range of end point address is (-2^{31}) to $(2^{31}-1)$.
- (4) Setting range of radius is 1 to $(2^{31}-1)$.
- (5) Maximum arc radius is $(2^{31}-1)$.

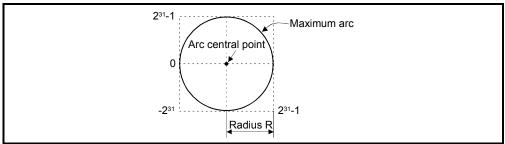



Fig.6.16 Maximum arc

[Program]

Program for radius-specified circular interpolation control is shown as the following conditions.


(1) System configuration

Radius-specified circular interpolation control of Axis 1 and Axis 2.

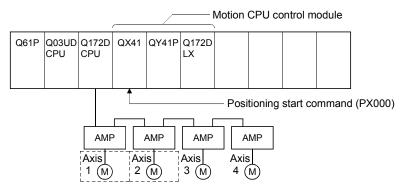

(2) Positioning operation details

The positioning uses the Axis 1 and Axis 2 servomotors. The positioning by the Axis 1 and Axis 2 servomotors is shown in the diagram below.

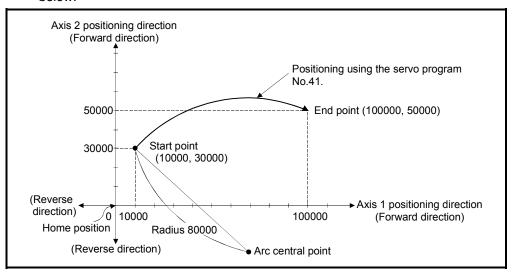

(3) Positioning conditions


(a) Positioning conditions are shown below.

H	Servo Program No.
Item	No.41
Positioning method	Absolute data method
Positioning speed	1000

(b) Positioning start command PX000 Leading edge (OFF \rightarrow ON)


(4) Operation timing

Operation timing for radius-specified circular interpolation control is shown below.

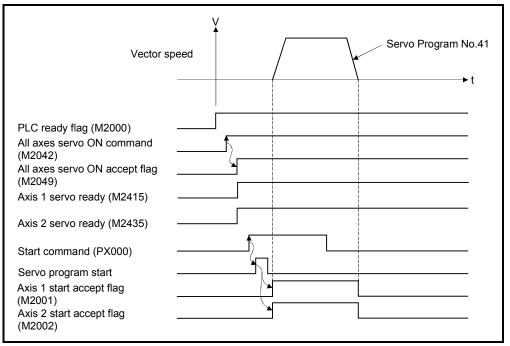

(5) Servo program


Servo program No.41 for radius-specified circular interpolation control is shown below.

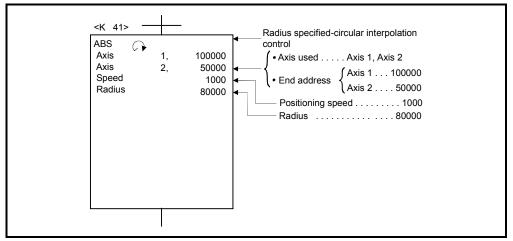

(Note): Example of the Motion SFC program for positioning control is shown next page.

(6) Motion SFC program

Motion SFC program for which executes the servo program is shown below.

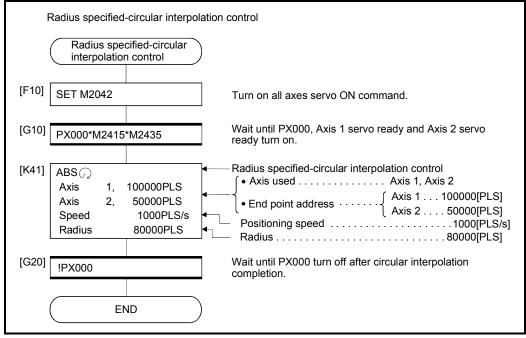

(Note): Example of the above Motion SFC program is started using the automatic start or sequence program.

6.8 Central Point-Specified Circular Interpolation Control

Circular interpolation control by specification of the end point for circular interpolation and arc central point is executed.

Central point-specified circular interpolation control uses ABS (I and ABS (I Absolute data method) and INC (I Incremental data method) servo instructions.

										lter	ns s	et u	sing	MT	Dev	elop	er2								
					Сс	omm	ion				Arc	-				Para	ame	ter b	lock				Oth	iers	
Servo instruction	Positioning method	Number of control axes	Parameter block No.	Axis	Address/travel value	Command speed	Dwell time	M-code	Torque limit value	Auxiliary point	Radius	Central point	Interpolation control unit	Speed limit value	Acceleration time	Deceleration time	Rapid Stop deceleration time	Torque limit value	Deceleration processing on stop input	Allowable error range for circular interpolation	S-curve ratio	Advanced S-curve acceleration/deceleration	Cancel	WAIT-ON/OFF	Speed change
ABS (Absolute																								
	Incremental	2		0	0	0						0	\bigtriangleup	\bigtriangleup		\bigtriangleup	\bigtriangleup	\bigtriangleup	\bigtriangleup	\bigtriangleup	\bigtriangleup				Valid

 \bigcirc : Must be set \triangle : Set if required


[Control details]


Details for the servo instructions are shown in the table below.

Instruction	Rotation direction of the servomotors	Maximum controllable angle of arc	Positioning path
ABS 🖪			Start point $0^{\circ} < \theta < 360^{\circ}$ End point
	Clockwise		Central point
ABS 🛈		0° < θ < 360°	Central point
	Counter clockwise		Start point O° <o<360° end="" point<="" td=""></o<360°>

Control using ABS (, ABS 🖼 (Absolute data method)

(1) Circular interpolation of an arc with a radius equivalent to the distance between the start point and central point, between the current stop address (address before positioning) based on the home position and the specified end point address.

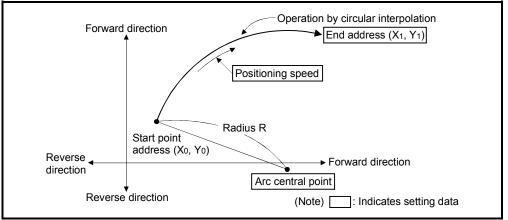



(2) Positioning control of a complete round is possible in the central point-specified circular interpolation control.


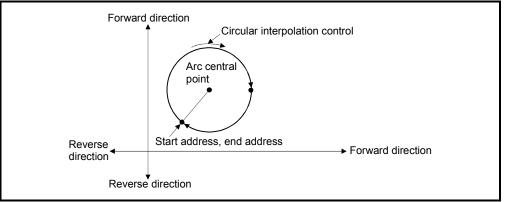



Fig.6.18 Positioning control of a complete round

(3) Setting range of end point address and arc central point is (-2^{31}) to $(2^{31}-1)$.

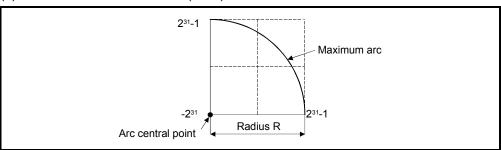


(4) The maximum arc radius is $(2^{32}-1)$.

Fig.6.19 Maximum arc



(1) Circular interpolation from the current stop address (0, 0) with a radius equivalent to the distance between the start point (0, 0) and central point.

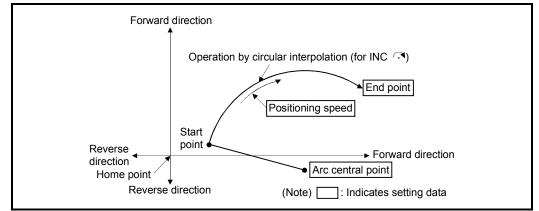



(2) Positioning control of a complete round is possible in the central point-specified circular interpolation control.

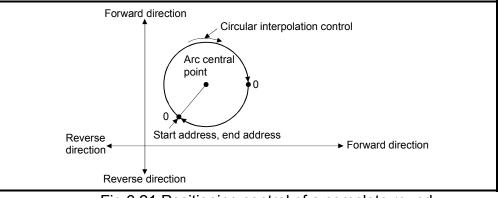


Fig.6.21 Positioning control of a complete round

- (3) Setting range of travel value to end point address and arc central point is 0 to $(2^{31}-1)$.
- (4) The maximum arc radius is (2³¹-1).
 If the end point and central point are set more than a radius of (2³¹-1), an error occurs at the start and error code [109] is stored in the data register.

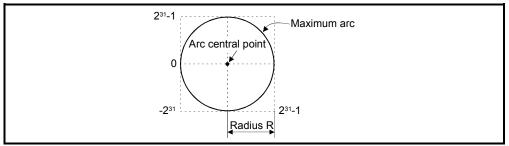



Fig.6.22 Maximum arc radius

[Program]

Program for central point-specified circular interpolation control is shown as the following conditions.


(1) System configuration

Central point-specified circular interpolation control of Axis 1 and Axis 2.

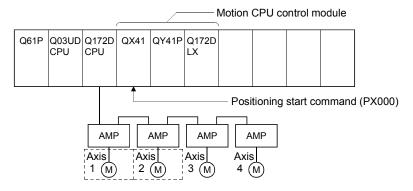

(2) Positioning operation details

The positioning uses the Axis 1 and Axis 2 servomotors. The positioning by the Axis 1 and Axis 2 servomotors is shown in the diagram below.

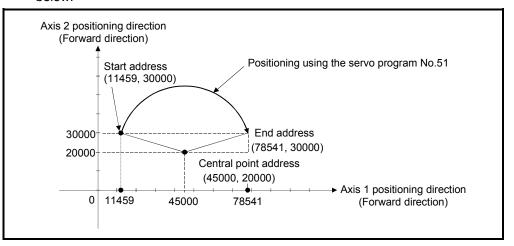

(3) Positioning conditions


(a) Positioning conditions are shown below.

lterre	Servo Program No.
Item	No.51
Positioning method	Absolute data method
Positioning speed	1000

(b) Positioning start command PX000 Leading edge (OFF \rightarrow ON)


(4) Operation timing

Operation timing for central point-specified circular interpolation is shown below.

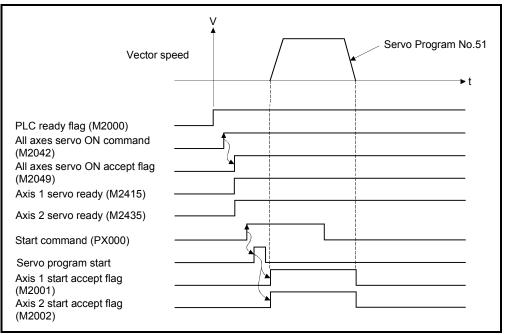

(5) Servo program


Servo program No.51 for central point-specified circular interpolation is shown below.

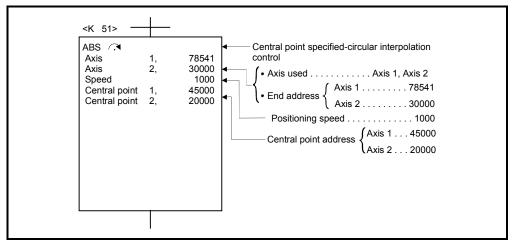

(Note): Example of the Motion SFC program for positioning control is shown next page.

(6) Motion SFC program

Motion SFC program for which executes the servo program is shown below.

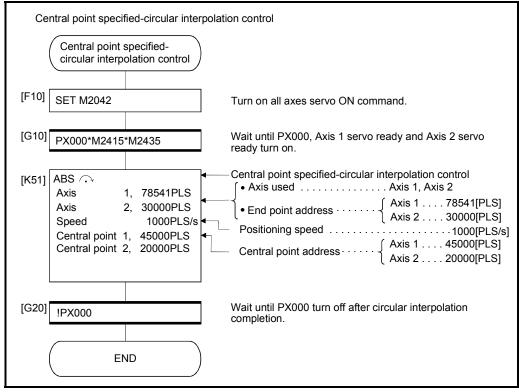

(Note): Example of the above Motion SFC program is started using the automatic start or sequence program.

6.9 Helical Interpolation Control

		circular inter	•			•					-									•					ber	of			
	I	pitches rotat	es	spi	rall	y a	nd	pe	rfor	ms	s th	e lo	ocu	s c	ont	rol	to	cor	nm	and	d p	osi	tior	۱.					
										ľ	tems	s set	usir	ng M	IT De														
				Common Arc/Helical Parameter block										Oth	ers														
Servo instruction	Positioning method	Number of control axes	Parameter block No.	Axis	Address/travel value	Command speed	Dwell time	M-code	Torque limit value	Auxiliary point	Radius	Central point	Pitch count	Interpolation control unit	Speed limit value	Acceleration time	Deceleration time	Rapid Stop deceleration time	Torque limit value	Deceleration processing on stop input	Allowable error range for circular interpolation	S-curve ratio	Advanced S-curve acceleration/deceleration	Cancel	WAIT-ON/OFF	Speed change			
ABH	Absolute																												
ABH		bsolute																											
ABH																													
ABH		4		0	0	0	\bigtriangleup	Δ			0		0	\triangle	Δ	\bigtriangleup	Δ	\triangle	\bigtriangleup	\triangle		\bigtriangleup	\bigtriangleup	\bigtriangleup					
							0					,																	
	Incremental																												
INH 🖼		3																								Valid			
INH 🕑																													
	Absolute																												
				0	0	0	\bigtriangleup	\bigtriangleup				0	0	\triangle		\bigtriangleup	\triangle	\bigtriangleup	\bigtriangleup	\bigtriangleup		\bigtriangleup	\bigtriangleup	\bigtriangleup					
	Incremental	-																											
ABH	Absolute						_																						
	Incremental			0	0	0	\bigtriangleup	Δ		0			0	\triangle	\triangle	Δ	Δ	Δ	\bigtriangleup	\triangle		\bigtriangleup	\triangle	\triangle					

The linear interpolation control with linear axis is executed simultaneously while the circular interpolation specified with any 2 axes is executed, the specified number of pitches rotates spirally and performs the locus control to command position.

 \bigcirc : Must be set \triangle : Set if required

6.9.1 Circular interpolation specified method by helical interpolation

The following method of circular interpolation is possible for the helical interpolation. The specified method of circular interpolation connected start point and end point at the seeing on the plane for which performs circular interpolation are as follows.

Servo instruction	Positioning method	Circular interpolation specified method					
ABH	Absolute	Radius-specified method					
	Incremental	less than CW180°					
ABH 坏	Absolute	Radius-specified method less than CCW180°					
	Incremental						
АВН 🕞	Absolute	Radius-specified method					
INH 🖓	Incremental	CW180° or more.					
АВН 🕑	Absolute	Radius-specified method					
INH 🕑	Incremental	CCW180° or more.					
ABH 🔿	Absolute						
INH 🔿	Incremental	Central point-specified method CW					
АВН 🍽	Absolute						
INH 😉	Incremental	Central point- specified method CCW					
ABH 🖄	Absolute						
INH 🏠	Incremental	Auxiliary point-specified method					


[Cautions]

- (1) The helical interpolation instruction can be used at the both of real mode/virtual mode.
- (2) When the travel value of linear axis is "0" is set, it can be controlled.

Condition	Operation							
Number of pitches is 0	ame control as normal circular interpolation control. Allowable error range for circular interpolation can be set.)							
Number of pitches is not 0	Linear interpolation to linear axis does not executed, circle for the number of pitches is drawn on the circle plane. (Allowable error range for circular interpolation can be set.)							

- (3) Units for linear axis have not restrictions.
- (4) Circular interpolation axis has the following restrictions.
 - When the unit of one axis is [degree] axis (with stroke range), set another axis also as [degree] axis (without stroke range).
 - The axis of [degree] unit as without stroke range cannot be set.
 - The axis as without stroke range cannot be set in the virtual mode.

	(5)	Specified the speed which executes speed change by CHGV instruction during helical interpolation operation with the vector speed of circular interpolation axis 2. If speed change is requested by specifying negative speed by CHGV instruction during helical interpolation operation, deceleration starts from the time and it is possible to return to reverse direction at the deceleration completion.
	(6)	If start point = end point, number of pitches = 1 and travel value of linear axis = 0, at the only central point-specified circular interpolation, full circle can be drawn. When the address of "start point = end point" is set at the radius-specified helical interpolation or auxiliary point-specified helical interpolation, a minor error (error code [108]) occurs at the start and cannot be start.
	(7)	When the control unit is [degree] and the stroke limit is invalid, if the helical interpolation control is executed using absolute data method, positioning in near direction to specified address based on the current value.
	(8)	Allowable error range for circular interpolation can be set.
	ABI con	H (, ABH , ABH), ABH) Absolute radius-specified helical interpolation trol
[Control details]		
	inte (X1, exe It go inte add con	e linear interpolation to other linear axis is executed performing 2 axes circular rpolation from current stop position (X0, Y0, Z0) to specified circular end address (Y1) or linear axis end point address (Z1), and the absolute helical interpolation is cuted so that it may become a spiral course. Des around on the specified circle for the specified number of pitches, the circular rpolation which had remainder specified is executed, and positioning to end liress is executed. The radius-specified circle specifies circular interpolation method nected start point and end point at the seeing on the plane for which performs ular interpolation.
	One	pration details for absolute radius specified belical interpolation are shown below

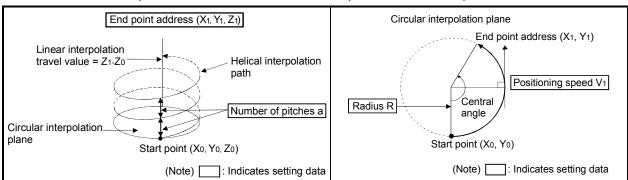


Operation details for absolute radius-specified helical interpolation are shown below.

Instruction	Rotation direction of servomotor	Controllable angle of arc	Positioning pass				
ABH (Radius-specified helical interpolation less than CW 180°	Clockwise (CW)		Start point Radius R Central point				
ABH Radius-specified helical interpolation less than CCW 180°	Counter clockwise (CCW)	0° < ⊖ < 180°	Radius R Start 0<180° End point Positioning path				
ABH Radius-specified helical interpolation CW 180° or more	Clockwise (CW)		Positioning path $180^{\circ} \le \theta \le 360^{\circ}$ Central point Start point Start point Radius R End point Central point Central point Central point Central point Central point Central point Central point Start point Positioning path				
ABH Radius-specified helical interpolation CCW 180° or more	Counter clockwise (CCW)	$180^\circ \le \Theta \le 360^\circ$					

Control details for the servo instructions are shown below.

- (1) The setting range of end point address for the both of circular interpolation axis and linear interpolation axis is (-2^{31}) to $(2^{31}-1)$.
- (2) The maximum arc radius on the circular interpolation plane is (2³¹-1). For example, the maximum arc radius for electronic gear 1:1 of unit [mm] is 214748364.7[µm].

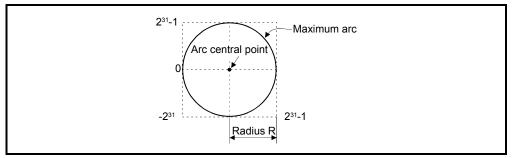


- (3) Set the command speed with the vector speed for 2 axes circular interpolation axis.
- (4) The command speed unit is specified in the parameter block.
- (5) Set the number of pitches within the range of 0 to 999. If it is set outside the setting range, the servo program setting error [28] occurs, and cannot be started.

(6) All of the circular interpolation axis, linear axis and point address, command speed, radius (2 word data above) and number of pitches (1 word data) are set indirectly by the word devices.

[Program]

(1) Servo program


Servo program No.52 for absolute radius-specified helical interpolation control is shown below.

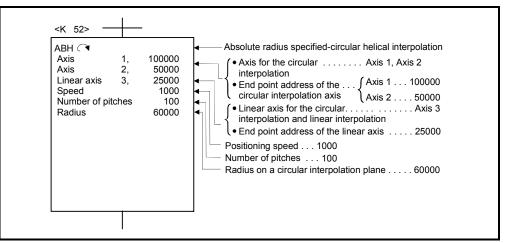

(Note): Example of the Motion SFC program for positioning control is shown next page.

(2) Motion SFC program

Motion SFC program for which executes the servo program is shown below.

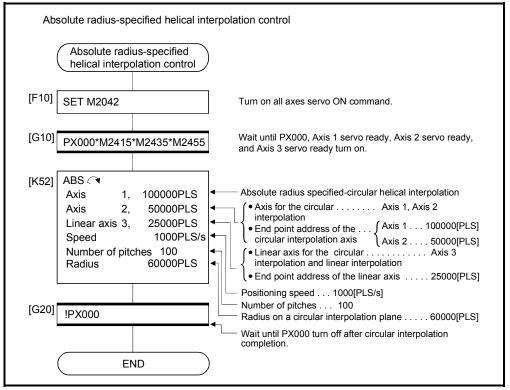

⁽Note): Example of the above Motion SFC program is started using the automatic start or sequence program.


INH (1, I)))))))))))))))))))))

[Control details]

The linear interpolation to other linear axis is executed performing circular interpolation from current stop position (start point) to specified circular relative end address (X1, Y1) or linear axis end point relative address (Z1), and the incremental helical interpolation control is executed so that it may become a spiral course. It goes around on the specified circle for the specified number of pitches, the circular interpolation which had remainder specified is executed, and positioning to end

address is executed. The radius-specified circle specifies circular interpolation method connected start point and end point at the seeing on the plane for which performs circular interpolation.

Operation details for incremental radius-specified helical interpolation are shown below.

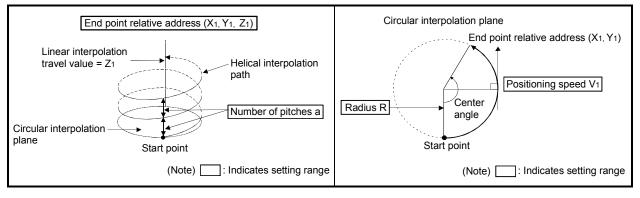


Instruction	Rotation direction of servomotor	Controllable angle of arc	Positioning pass				
INH Radius-specified helical interpolation less than CW 180°	Clockwise (CW)		Start point $\theta < 180^{\circ}$ End point Radius R Central point				
INH Radius-specified helical interpolation less than CCW 180°	Counter clockwise (CCW)	0° < θ < 180°	Radius R Start 0<180° End point Positioning path				
INH Radius-specified helical interpolation CW 180° or more	Clockwise (CW)		Positioning path $180^{\circ} \le \theta \le 360^{\circ}$ Central point Radius R Start point End point				
INH Radius-specified helical interpolation CCW 180° or more	Counter clockwise (CCW)	$180^\circ \le \Theta \le 360^\circ$	Start point Radius R End point $180^\circ \le \theta \le 360^\circ$ Central point Positioning path				

Control details for the servo instructions are shown below.

(1) The setting range of end point relative address for the both of circular interpolation axis and linear interpolation axis is 0 to $\pm (2^{31}-1)$.

The travel direction is set by the sign (+/ -) of the travel value, as follows:

- Positive travel valuePositioning control to forward direction (Address increase direction)
 Positioning control to reverse direction
- Negative travel value.....Positioning control to reverse direction
 (Address decrease direction)
- (2) The maximum arc radius on the circular interpolation plane is 2³¹-1. For example, the maximum arc radius for electronic gear 1:1 of unit [mm] is 214748364.7[µm].

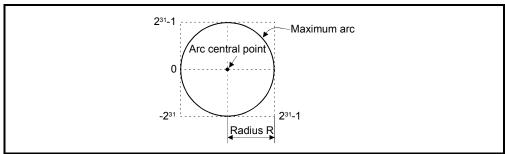


- (3) Set the command speed with the vector speed for 2 axes circular interpolation axis.
- (4) The command speed unit is specified in the parameter block.
- (5) Set the number of pitches within the range of 0 to 999. If it is set outside the setting range, the servo program setting error [28] occurs and operation does not start.
- (6) All of the circular interpolation axis, linear axis end point relative address, command speed, radius (2 word data above) and number of pitches (1 word data) are set indirectly by the word devices.

[Program]

(1) Servo program


Servo program No.53 for incremental radius-specified helical interpolation control is shown below.

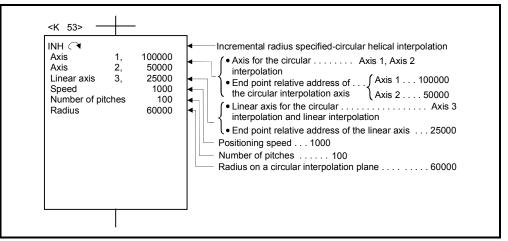

(Note): Example of the Motion SFC program for positioning control is shown next page.

(2) Motion SFC program

Motion SFC program for which executes the servo program is shown below.

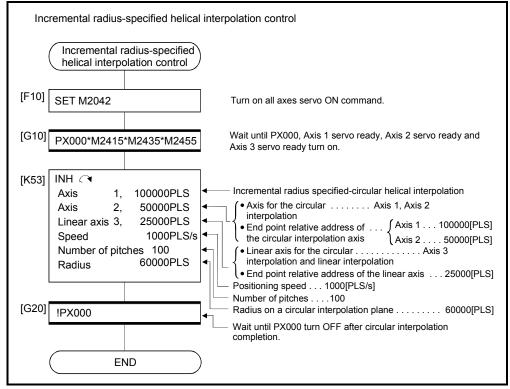


ABH A, ABH Absolute central point-specified helical interpolation control

[Control details]

The linear interpolation to other linear axis is executed performing 2 axes circular interpolation from current stop position (X0, Y0, Z0) to specified circular end address (X1, Y1) or linear axis end point address (Z1), and the absolute helical interpolation is executed so that it may become a spiral course.

It goes around on the specified circle for the specified number of pitches, the circular interpolation which had remainder specified is executed, and positioning to end address is executed. The central point-specified circle specifies circular interpolation method connected start point and end point at the seeing on the plane for which performs circular interpolation.

Operation details for absolute central point-specified helical interpolation are shown below.

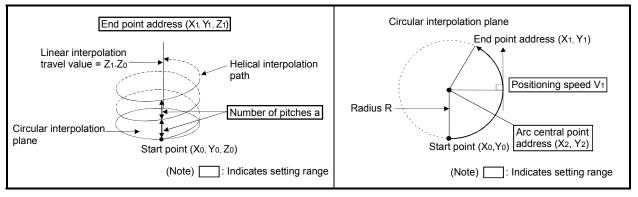


Control details for the servo instructions are shown below.

Instruction	Rotation direction of servomotor	Controllable angle of arc	Positioning pass
ABH • Central point- specified helical interpolation CW	Clockwise (CW)		Start point O°<θ≤360° End point Central point
ABH Central point- specified helical interpolation CCW	Counter clockwise (CCW)	0° < θ ≤ 360°	Central point Start point 0°<0≤360° End point Positioning path

- (1) The setting range of end point address for the both of circular interpolation axis and linear interpolation axis is (-2^{31}) to $(2^{31}-1)$.
- (2) The setting range of central point address is (-2^{31}) to $(2^{31}-1)$.


(3) The maximum arc radius on the circular interpolation plane is 2³¹-1. For example, the maximum arc radius for electronic gear 1:1 of unit [mm] is 214748364.7[µm].

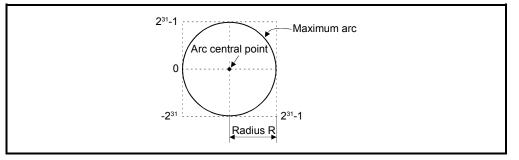

- (4) Set the command speed with the vector speed for 2 axes circular interpolation axis.
- (5) The command speed unit is specified in the parameter block.
- (6) Set the number of pitches within the range of 0 to 999. If it is set outside the setting range, the servo program setting error [28] occurs and operation does not start.
- (7) All of the circular interpolation axis, linear axis end point address, command speed, radius (2 word data above) and number of pitches (1 word data) are set indirectly by the word devices.
- (8) If start point = end point, number of pitches = 1 and travel value of linear axis = 0, at the only central point-specified circular interpolation, full circle can be drawn.

(1) Servo program


Servo program No.55 for absolute central point-specified helical interpolation control is shown below.

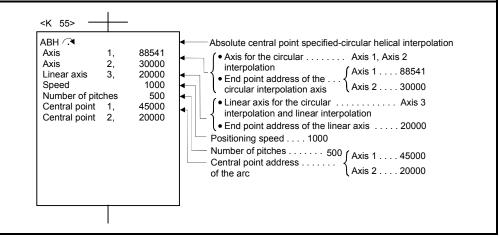

(Note): Example of the Motion SFC program for positioning control is shown next page.

(2) Motion SFC program

Motion SFC program for which executes the servo program is shown below.

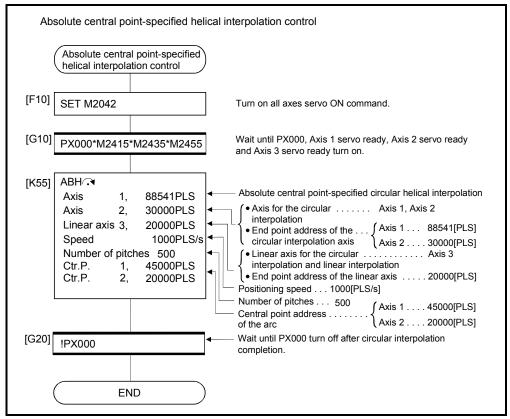


INH (I, INH) Incremental central point-specified helical interpolation control

[Control details]

The linear interpolation to other linear axis is executed performing circular interpolation from current stop position (start point) to specified circular relative end address (X1, Y1) or linear axis end point relative address (Z1), and the incremental helical interpolation control is executed so that it may become a spiral course.

It goes around on the specified circle for the specified number of pitches, the circular interpolation which had remainder specified is executed, and positioning to end address is executed. The central point-specified circle specifies circular interpolation method connected start point and end point at the seeing on the plane for which performs circular interpolation.

Operation details for incremental central point -specified helical interpolation are shown below.

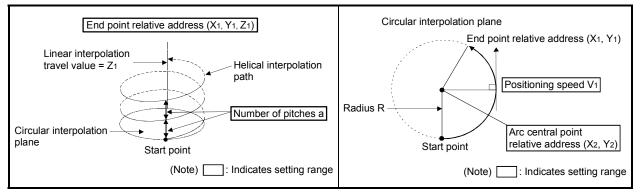


Control details for the servo instructions are shown below.

Instruction	Rotation direction	Controllable angle of	Positioning pass
Instruction	of servomotor	arc	Positioning pass
INH 🔿			Positioning path
Central point-specified	Cleakwize (CM)		Start point $0^{\circ} < \theta \le 360^{\circ}$ End point
helical interpolation	Clockwise (CW)		\sim
CW		0	Central point
INH 🍽		$0^{\circ} < \Theta \le 360^{\circ}$	Central point
Central point-specified	Counter		Start point $0^\circ < \theta \le 360^\circ$ Find point
helical interpolation	clockwise (CCW)		
CCW			Positioning path

- (1) The setting range of end point relative address for the both of circular interpolation axis and linear interpolation axis is 0 to $\pm (2^{31}-1)$.
- (2) The setting range of central point relative is 0 to \pm (2³¹-1).


(3) The maximum arc radius on the circular interpolation plane is (2³¹-1). For example, the maximum arc radius for electronic gear 1:1 of unit [mm] is 214748364.7[µm].

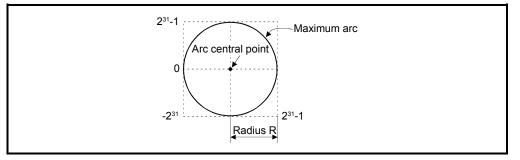

- (4) Set the command speed with the vector speed for 2 axes circular interpolation axis.
- (5) The command speed unit is specified in the parameter block.
- (6) Set the number of pitches within the range of 0 to 999. If it is set outside the setting range, the servo program setting error [28] occurs and operation does not start.
- (7) All of the circular interpolation axis, linear axis end relative address, command speed, radius (2 word data above) and number of pitches (1 word data) are set indirectly by the word devices.
- (8) If start point = end point, number of pitches = 1 and travel value of linear axis = 0, at the only central point-specified circular interpolation, full circle can be drawn.

(1) Servo program


Servo program No.56 for incremental central point-specified helical interpolation control is shown below.

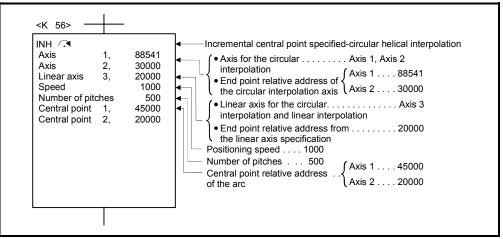

(Note): Example of the Motion SFC program for positioning control is shown next page.

(2) Motion SFC program

Motion SFC program for which executes the servo program is shown below.

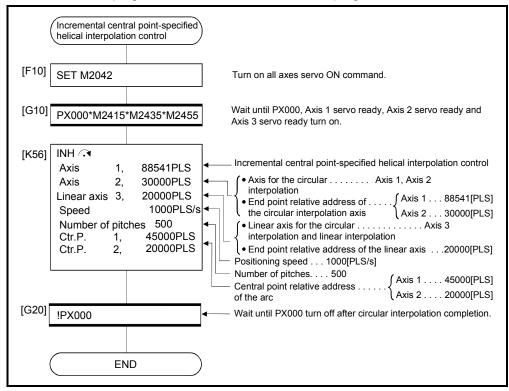


ABH A Absolute auxiliary point-specified helical interpolation control

[Control details]

The linear interpolation to other linear axis is executed performing 2 axes circular interpolation from current stop position (X0, Y0, Z0) to specified circular end address (X1, Y1) or linear axis end point address (Z1), and the absolute helical interpolation is executed so that it may become a spiral course.

It goes around on the specified circle for the specified number of pitches, the circular interpolation which had remainder specified is executed, and positioning to end address is executed. The auxiliary point-specified circle specifies circular interpolation method connected start point and end point at the seeing on the plane for which performs circular interpolation.

Operation details for absolute auxiliary point-specified helical interpolation are shown below.

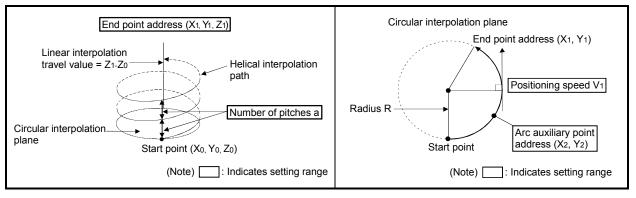


Control details for the servo instructions are shown below.

Instruction	Rotation direction of servomotor	Controllable angle of arc
ABH \dot{L}^{γ} Auxiliary point- specified helical interpolation	Clockwise (CW)/ Counter clockwise (CCW)	$0^{\circ} < \Theta \le 360^{\circ}$

- (1) The setting range of end point address for the both of circular interpolation axis and linear interpolation axis is (-2^{31}) to $(2^{31}-1)$.
- (2) The setting range of auxiliary point address is (-2^{31}) to $(2^{31}-1)$.

(3) The maximum arc radius on the circular interpolation plane is 2³¹-1. For example, the maximum arc radius for electronic gear 1:1 of unit [mm] is 214748364.7[µm].

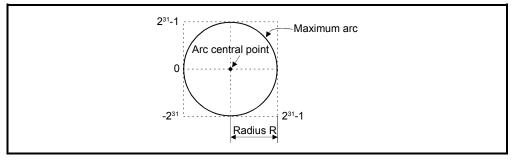


- (4) Set the command speed with the vector speed for 2 axes circular interpolation axis.
- (5) The command speed unit is specified in the parameter block.
- (6) Set the number of pitches within the range of 0 to 999. If it is set outside the setting range, the servo program setting error [28] occurs and operation does not start.
- (7) All of the circular interpolation axis, linear axis end relative address, command speed, radius (2 word data above) and number of pitches (1 word data) are set indirectly by the word devices.

[Program]

(1) Servo program


Servo program No.60 for absolute auxiliary point-specified helical interpolation control is shown below.

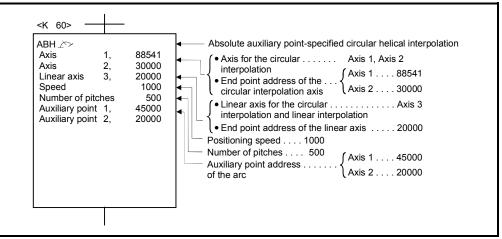

(Note): Example of the Motion SFC program for positioning control is shown next page.

(2) Motion SFC program

Motion SFC program for which executes the servo program is shown below.

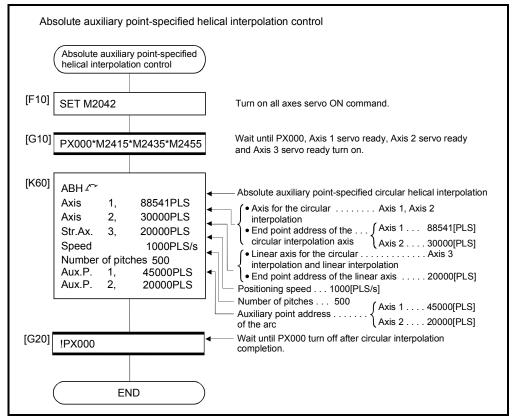

(Note): Example of the above Motion SFC program is started using the automatic start or sequence program.


INH N Incremental auxiliary point-specified helical interpolation control

[Control details]

The linear interpolation to other linear axis is executed performing circular interpolation from current stop position (start point) to specified circular relative end address (X1, Y1) or linear axis end point relative address (Z1), and the incremental helical interpolation control is executed so that it may become a spiral course.

It goes around on the specified circle for the specified number of pitches, the circular interpolation which had remainder specified is executed, and positioning to end address is executed. The auxiliary point-specified circle specifies circular interpolation method connected start point and end point at the seeing on the plane for which performs circular interpolation.

Operation details for incremental auxiliary point-specified helical interpolation are shown below.

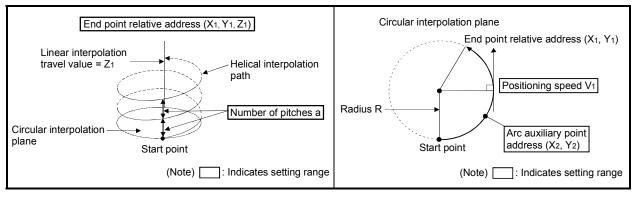


Control details for the servo instructions are shown below.

Instruction	Rotation direction of servomotor	Controllable angle of arc
INH \dot{L}^{γ} Auxiliary point- specified helical interpolation	Clockwise (CW)/ Counter clockwise (CCW)	$0^{\circ} < \Theta \le 360^{\circ}$

- (1) The setting range of end point relative address for the both of circular interpolation axis and linear interpolation axis is 0 to $\pm (2^{31}-1)$.
- (2) The setting range of auxiliary point relative is 0 to \pm (2³¹-1).

(3) The maximum arc radius on the circular interpolation plane is (2³¹-1). For example, the maximum arc radius for electronic gear 1:1 of unit [mm] is 214748364.7[µm].

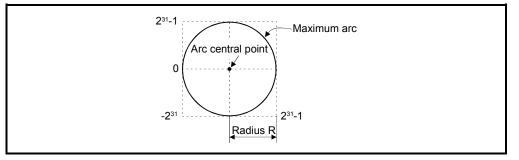


- (4) Set the command speed with the vector speed for 2 axes circular interpolation axis.
- (5) The command speed unit is specified in the parameter block.
- (6) Set the number of pitches within the range of 0 to 999. If it is set outside the setting range, the servo program setting error [28] occurs and operation does not start.
- (7) All of the circular interpolation axis, linear axis end point address, command speed, radius (2 word data above), and number of pitches (1 word data) are set indirectly by the word devices.

[Program]

(1) Servo program


Servo program No.61 for incremental auxiliary point-specified helical interpolation control is shown below.

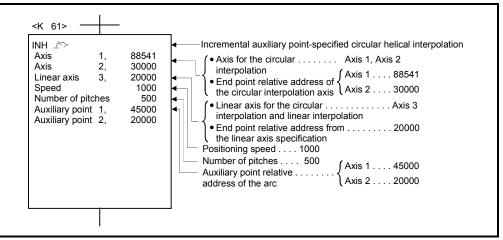

(Note): Example of the Motion SFC program for positioning control is shown next page.

(2) Motion SFC program

Motion SFC program for which executes the servo program is shown below.

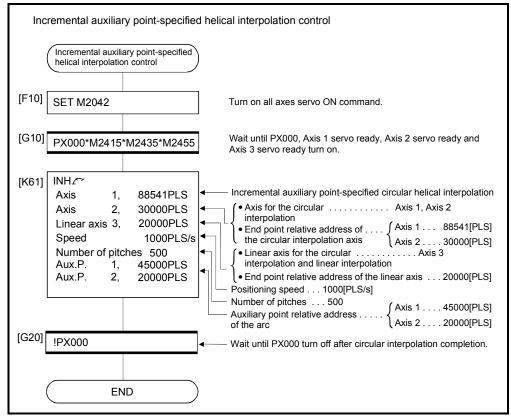

6.10 1 Axis Fixed-Pitch Feed Control

Positioning control for specified axis of specified travel value from the current stop point.

Fixed-pitch feed control uses the FEED-1servo instruction.

										Ite	ns s	et u	sing	MT	Dev	elop	er2								
				-	С	omm	ion	-			Arc					Para	ame	ter b	lock			-	Oth	ners	
Servo instruction	Positioning method	Number of control axes	Parameter block No.	Axis	Address/travel value	Command speed	Dwell time	M-code	Torque limit value	Auxiliary point	Radius	Central point	Interpolation control unit	Speed limit value	Acceleration time	Deceleration time	Rapid Stop deceleration time	Torque limit value	Deceleration processing on stop input	Allowable error range for circular interpolation		Advanced S-curve acceleration/deceleration	Cancel	WAIT-ON/OFF	Speed change
FEED-1	Incremental	1	\bigtriangleup	0	0	0	\bigtriangleup	\triangle						\bigtriangleup	\triangle	\triangle	\triangle	\bigtriangleup	\triangle		\bigtriangleup	\triangle	\triangle		Valid

 ^{○:} Must be set
 △: Set if required

[Control details]

(1) Positioning control for the specified travel value from the current stop position "0" is executed.

(2) The travel direction is set by the sign (+/-) of the travel value, as follows:

- Positive travel valuePositioning control to forward direction
 (Address increase direction)
- Negative travel value......Positioning control to reverse direction
 (Address decrease direction)

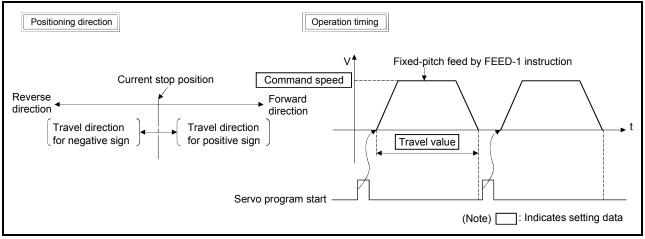



Fig.6.23 1 axis fixed-pitch feed control

POINT

Do not set the travel value to "0" for fixed-pitch feed control. If the travel value is set to "0", fixed-pitch feed completion without fixed-pitch feed. [Program]

Program for repetition 1 axis fixed-pitch feed control is shown as the following conditions.

(1) System configuration Fixed-pitch feed control of Axis 4.

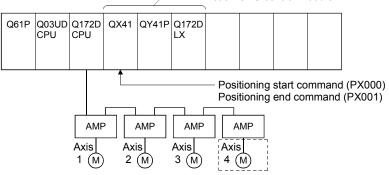


(2) Fixed-pitch feed control conditions


(a) Positioning conditions are shown below.

Item	Setting
Servo program No.	No.300
Control axis	Axis 4
Control speed	10000
Travel value	80000

- (b) Fixed-pitch feed control start command PX000 Leading edge (OFF \rightarrow ON)
- (c) Fixed-pitch feed control end command PX001 Leading edge (OFF \rightarrow ON)


(3) Operation timing



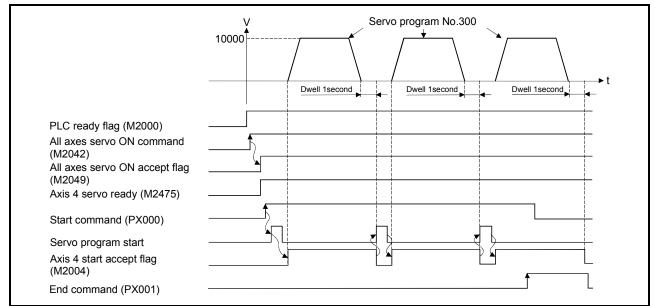

(4) Servo program


Servo program No.300 for fixed-pitch feed control is shown below.

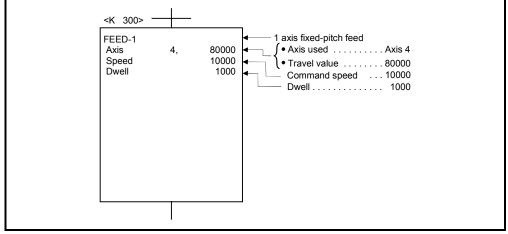

(Note): Example of the Motion SFC program for positioning control is shown next page.

(5) Motion SFC program

Motion SFC program for which executes the servo program is shown below.

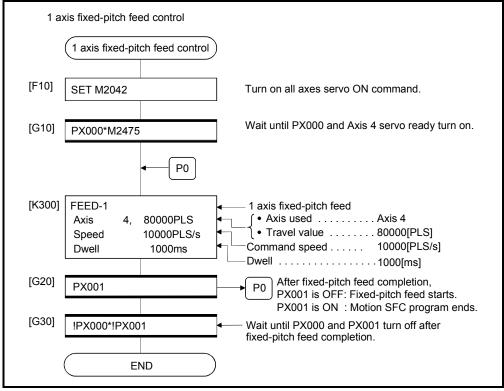

6.11 Fixed-Pitch Feed Control Using 2 Axes Linear Interpolation

Fixed-pitch feed control using 2 axes linear interpolation from the current stop position with the specified 2 axes.

Fixed-pitch feed control using 2 axes linear interpolation uses the FEED-2 servo instruction.

										Ite	ns s	et us	sing	MT	Deve	elop	er2								
					Сс	omm	on				Arc					Para	amet	ter b	lock				Oth	ners	
Servo	Positioning method	Number of control axes	Parameter block No.	Axis	Address/travel value	Command speed	Dwell time	M-code	Torque limit value	Auxiliary point	Radius	Central point	Interpolation control unit	Speed limit value	Acceleration time	Deceleration time	Rapid Stop deceleration time	Torque limit value	Deceleration processing on stop input	Allowable error range for circular interpolation	S-curve ratio	Advanced S-curve acceleration/deceleration	Cancel	WAIT-ON/OFF	Speed change
FEED-2	Incremental	2	\bigtriangleup	0	0	0		\bigtriangleup						\bigtriangleup	\bigtriangleup	\bigtriangleup	\bigtriangleup	\bigtriangleup	\bigtriangleup		\square	\triangle	\square		Valid

 $[\]bigcirc$: Must be set \triangle : Set if required

[Control details]

- Positioning control from the current stop position "0" to the position which combined travel direction and travel value specified with each axis is executed.
- (2) The travel direction for each axis is set by the sign (+/ -) of the travel value for each axis, as follows:
 - Positive travel valuePositioning control to forward direction
 (Address increase direction)
 - Negative travel value.......Positioning control to reverse direction
 - (Address decrease direction)

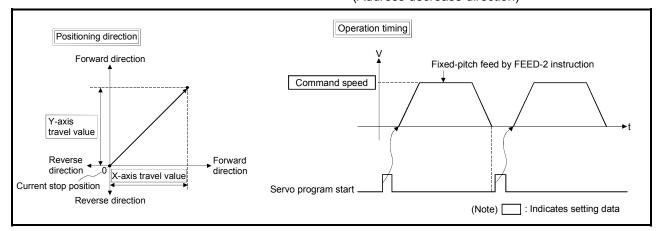


Fig.6.24 Fixed-pitch feed control using 2 axes linear interpolation

POINT

Do not set the travel value to "0" for fixed-pitch feed control.


- The following results if the travel value is set to "0":
- (1) If the travel value of both is set to "0", fixed-pitch feed completion without fixed-pitch feed.

[Program]

Program for fixed-pitch feed control using 2 axes linear interpolation is shown as the following conditions.

(1) System configuration

Fixed-pitch feed control using 2 axes linear interpolation of Axis 2 and Axis 3.

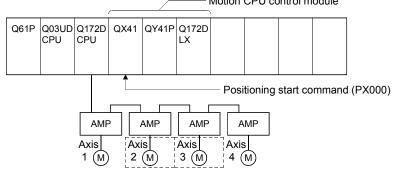

(2) Fixed-pitch feed control


(a) Fixed-pitch feed control conditions are shown below.

ltem	Set	ting
Servo program No.	No.	310
Positioning speed	100	000
Control axis	Axis 2	Axis 3
Travel value	500000	300000

(b) Fixed-pitch feed control start command PX000 Leading edge (OFF \rightarrow ON)


(3) Operation timing

Operation timing for fixed-pitch feed control using 2 axes linear interpolation is shown below.

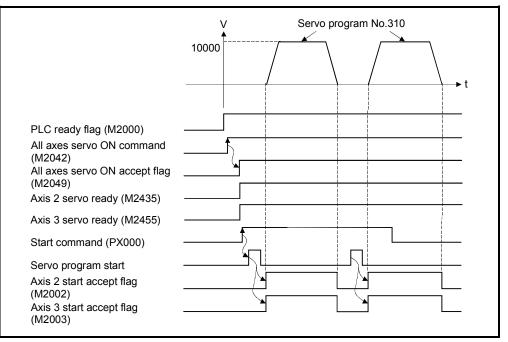

(4) Servo program


Servo program No.310 for fixed-pitch feed control using 2 axes linear interpolation is shown below.

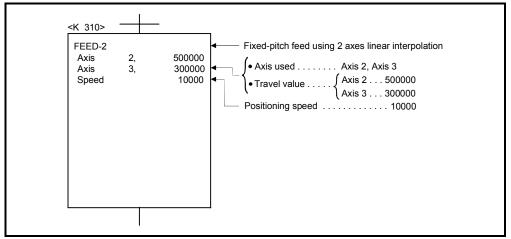

(Note): Example of the Motion SFC program for positioning control is shown next page.

(5) Motion SFC program

Motion SFC program for which executes the speed-switching control is shown below.

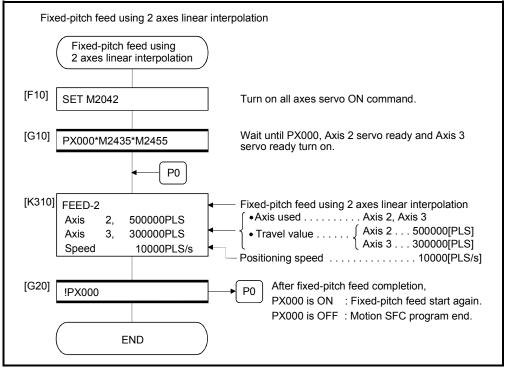

6.12 Fixed-Pitch Feed Control Using 3 Axes Linear Interpolation

Fixed-pitch feed control using 3 axes linear interpolation from the current stop position with the specified 3 axes.

Fixed-pitch feed control using 3 axes linear interpolation uses the FEED-3 servo instruction.

										Iter	ns s	et us	sing	MT I	Deve	elop	er2								
					Сс	omm	ion				Arc							er b	lock				Oth	iers	
Servo instruction	Positioning method	Number of control axes	Parameter block No.	Axis	Address/travel value	Command speed		M-code	Torque limit value	Auxiliary point	Radius	Central point	Interpolation control unit	Speed limit value	Acceleration time	Deceleration time	Rapid Stop deceleration time	Torque limit value	Deceleration processing on stop input	Allowable error range for circular interpolation	S-curve ratio	Advanced S-curve acceleration/deceleration	Cancel	WAIT-ON/OFF	Speed change
FEED-3	Incremental	2	\bigtriangleup	0	0	$^{\circ}$		\bigtriangleup					\bigtriangleup	\bigtriangleup	\bigtriangleup	\bigtriangleup	\bigtriangleup	\bigtriangleup	\bigtriangleup		\bigtriangleup	\bigtriangleup	\triangle		Valid

 $[\]bigcirc$: Must be set \triangle : Set if required

[Control details]

- Positioning control from the current stop position "0" to the position which combined travel direction and travel value specified with each axis is executed.
- (2) The travel direction for each axis is set by the sign (+/ -) of the travel value for each axis, as follows:
 - Positive travel valuePositioning control to forward direction
 - (Address increase direction)
 - Negative travel value.....Positioning control to reverse direction

(Address decrease direction)

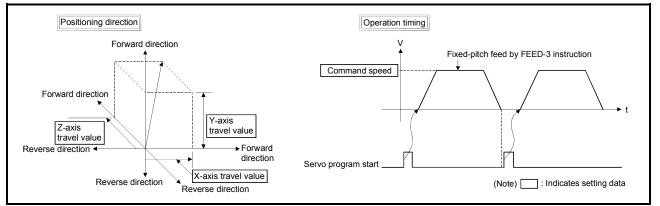


Fig. 6.25 Fixed-pitch feed control using 3 axes linear interpolation

POINT

Do not set the travel value to "0" for fixed-pitch feed control.


- The following results if the travel value is set to "0":
- (1) If the travel value of all axes are set to "0", fixed-pitch feed completion without fixed-pitch feed.

[Program]

Program for fixed-pitch feed control using 3 axes linear interpolation is shown as the following conditions.

(1) System configuration

Fixed-pitch feed control using 3 axes linear interpolation of Axis 1, Axis 2 and Axis 3.

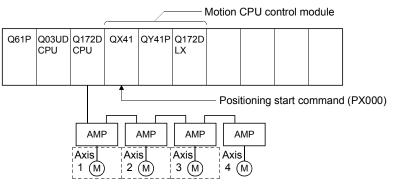


- (2) Fixed-pitch feed control
 - (a) Fixed-pitch feed control conditions are shown below.

Item		Setting	
Servo program No.		No.320	
Positioning speed		1000	
Control axes	Axis 1	Axis 2	Axis 3
Travel value	50000	40000	30000

(b) Fixed-pitch feed control start command PX000 Leading edge (OFF \rightarrow ON)


(3) Operation timing

Operation timing for fixed-pitch feed control using 3 axes linear interpolation is shown below.

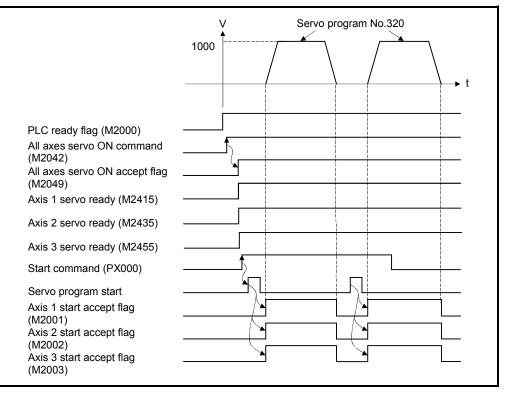

(4) Servo program

Servo program No.320 for fixed-pitch feed control using 3 axes linear interpolation is shown below.

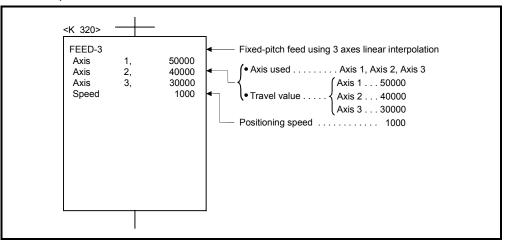

(Note): Example of the Motion SFC program for positioning control is shown next page.

(5) Motion SFC program

Motion SFC program for which executes the servo program is shown below.

Fixed-pitch feed using 3 axes linear ir	nterpolation
Fixed-pitch feed using 3 axes linear interpolation	
[F10] SET M2042	Turn on all axes servo ON command.
[G10] PX000*M2415*M2435*M2455	Wait until PX000, Axis 1 servo ready, Axis 2 servo ready and Axis 3 servo ready turn on.
•(P0)	
[K320] FEED-3 Axis 1, 50000PLS Axis 2, 40000PLS Axis 3, 30000PLS Speed 1000PLS/s	 Fixed-pitch feed using 3 axes linear interpolation Axis used Axis 1, Axis 2, Axis 3 Axis 1 500000[PLS] Travel value Axis 2 400000[PLS] Axis 3 300000[PLS] Positioning speed 10000[PLS/s]
[G20] IPX000	▶ P0 After fixed-pitch feed completion, PX000 is ON : Fixed-pitch feed start again. PX000 is OFF : Motion SFC program end.

6.13 Speed Control (I)

- (1) Speed control for the specified axis is executed.
- (2) Control includes positioning loops for control of servo amplifiers.

(3) Speed control (I) uses the VF (Forward) and VR (Reverse) servo inst

										Iter	ns s	et u	sing	MT	Dev	elope	er2								
					Сс	omm	on				Arc					Para	ame	ter b	lock				Oth	ners	
Servo instruction	Positioning method	Number of control axes	Parameter block No.	Axis	Address/travel value	Command speed	Dwell time	M-code	Torque limit value	Auxiliary point	Radius	Central point	Interpolation control unit	Speed limit value	Acceleration time	Deceleration time	Rapid Stop deceleration time	Torque limit value	Deceleration processing on stop input	Allowable error range for circular interpolation	S-curve ratio	Advanced S-curve acceleration/deceleration	Cancel	WAIT-ON/OFF	Speed change
VF VR	_	1		0		0		\bigtriangleup						\bigtriangleup		\bigtriangleup	\bigtriangleup	\bigtriangleup	\bigtriangleup		\bigtriangleup	\bigtriangleup	\bigtriangleup		Valid

 $[\]bigcirc$: Must be set \triangle : Set if required

[Control details]

- (1) Controls the axis at the specified speed until the input of the stop command after starting of the servomotors.
 - VF Forward direction start
 - VR Reverse direction start
- (2) The operation of the current value is as follows.
 - (a) Q173DSCPU/Q172DSCPU
 - The operation is as follows depending on the status of the feed current value update command (M3212+20n).
 - ON The feed current value is updated. The software stroke limit is valid.
 - OFF "0" is stored in the feed current value.
 - (Note): When the operating system software is 00A, the operation is same as (b).

Ver. : Refer to Section 1.3 for the software version that supports this function.

(b) Q173DCPU(-S1)/Q172DCPU(-S1)

Current value does not change at "0".

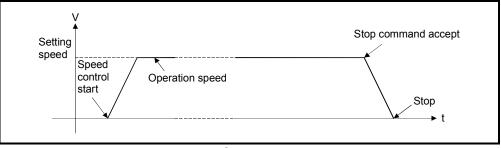



Fig.6.26 Speed control (I)

(3) Stop commands and stop processing The stop commands and stop processing for speed control are shown in the table.6.1.

Stop command	Stop condition	Stop axis	Stop processing
STOP signal input of the Q172DLX (STOP)			Deceleration stop based on the parameter block or the "deceleration time on STOP input" specified with the servo instruction.
Stop command (M3200+20n)	$OFF \to ON$	Specified axis	Deceleration stop based on the parameter block or the "deceleration time" specified with the servo instruction.
Rapid stop command ^(Note) (M3201+20n)			Deceleration stop based on the parameter block or the "rapid stop deceleration time" specified with the servo instruction.
Rapid stop of the all axes/ deceleration stop from MT Developer2. ^(Note) (Test mode)	Click icon	All axes	Deceleration stop based on the parameter block or the "rapid stop deceleration time" specified with the servo instruction.
Speed change to speed "0"	Speed change request	Specified axis	Deceleration stop based on the parameter block or the "deceleration time" specified with the servo instruction.

Table.6.1 Stop commands and stop processing

POINT

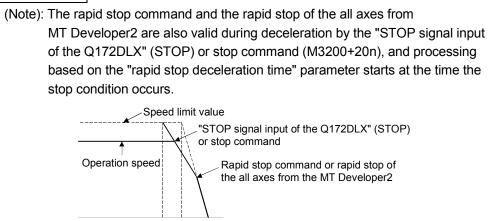


[Cautions]

- (1) After executing of the speed control using the absolute position system, the feed current value cannot be set to "0" by the following operations:
 - Reset the Multiple CPU system
 - Turning the servo power supply on (OFF \rightarrow ON)
- (2) The dwell time cannot be set.

[Program]

Program for speed control (I) is shown as the following conditions.

(1) System configuration Speed control (I) of Axis 1.

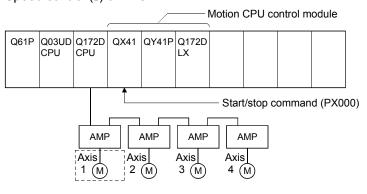

(2) Speed control (I) conditions


(a) Speed control (I) conditions are shown below.

Item	Setting
Servo program No.	No.91
Control axis	Axis 1
Control speed	3000
Rotation direction	Forward

- (b) Speed control (I) start command...... PX000 Leading edge (OFF \rightarrow ON)
- (c) Stop command..... PX000 Trailing edge (ON \rightarrow OFF)


(3) Operation timing

Operation timing for speed control (I) is shown below.

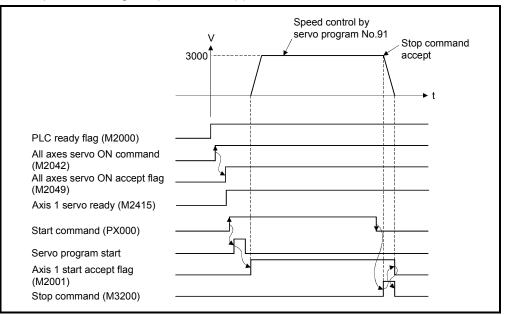


(4) Servo program

Servo program No.91 for speed control (I) is shown below.

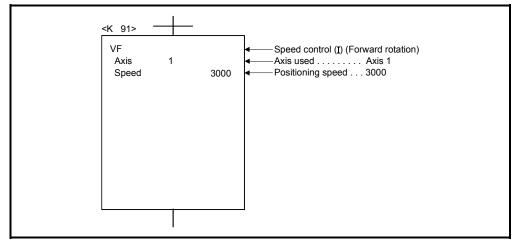

(5) Motion SFC program

Motion SFC program for which executes the servo program is shown below.

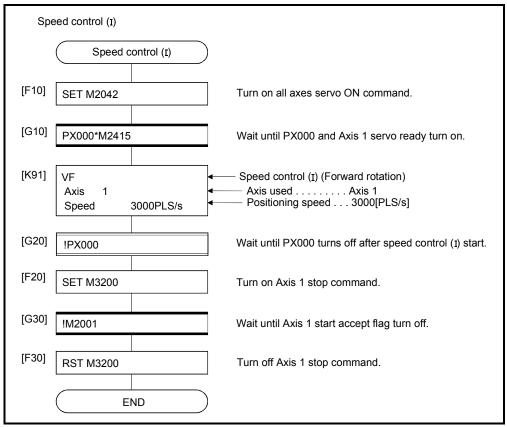

6.14 Speed Control (II)

- (1) Speed control for the specified axis is executed.
- (2) Speed control not includes positioning loops for control of servo amplifiers.It can be used for stopper control, etc. so that it may not become error excessive.

					0.0		~~			Iter		et u	sing	MT				harb	laak				Oth		
Servo instruction	Positioning method	Number of control axes	Parameter block No.	Axis	Address/travel value	Command speed	Dwell time	M-code	Torque limit value	Auxiliary point	Radius	Central point	Interpolation control unit	Speed limit value	Acceleration time	Deceleration time	Rapid Stop deceleration time	Torque limit value	Deceleration processing on stop input	Allowable error range for circular interpolation	S-curve ratio	Advanced S-curve acceleration/deceleration	Cancel 34	WAIT-ON/OFF	Speed change
VVF VVR	_	1		0		0		\triangle	Δ						\triangle	Δ	\bigtriangleup	\bigtriangleup	\bigtriangleup		Δ	Δ			Valid

(3) Speed control (II) uses the VVF (Forward) and VVR (Reverse) servo instructions.

[Control details]

(1) Controls the axis at the specified speed until the input of the stop command after starting of the servomotors.

○: Must be set△: Set if required

- VVF Forward direction start
- VVR Reverse direction start
- (2) Current value or deviation counter do not change at "0".
- (3) When the setting for "torque" is set in the servo program and an indirect setting made, the torque limit value can be changed during operation by changing the value of the indirect device.
- (4) The stop command and stop processing are the same as for speed control (I).

[Cautions]

- (1) After executing of the speed control using the absolute position system, the feed current value cannot be set to "0" by the following operations:
 - Reset
 - Turning the servo power supply on (OFF \rightarrow ON)
- (2) The dwell time cannot be set.

(3) Even if the speed command is set as probe data by the digital oscilloscope function, the value on digital oscilloscope does not change with "0".

[Program]

Program for speed control (II) is shown as the following conditions. (1) System configuration

Speed control (II) of Axis 3. Motion CPU control module Q03UD Q172D QY41P Q172D Q61P QX41 CPU CPU IX Start/stop command (PX000) AMP AMP AMP AMP Axis Axis Axis Axis 1 (M) 2 (M) 3 (M) 4 (M)

(2) Speed control (II) conditions


(a) Speed control (II) conditions are shown below.

Item	Setting
Servo program No.	No.55
Control axis	Axis 3
Control speed	4000
Rotation direction	Forward

- (b) Speed control (II) start command PX000 Leading edge (OFF \rightarrow ON)
- (c) Stop command PX000 Trailing edge (ON \rightarrow OFF)


(3) Operation timing

Operation timing for speed control (II) is shown below.

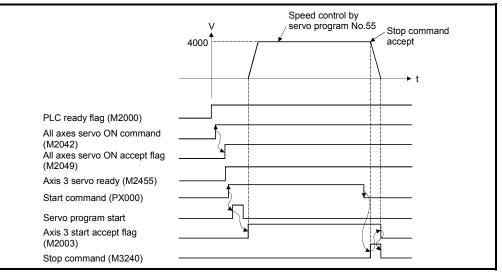


(4) Servo program

Servo program No.55 for speed control (II) is shown below.

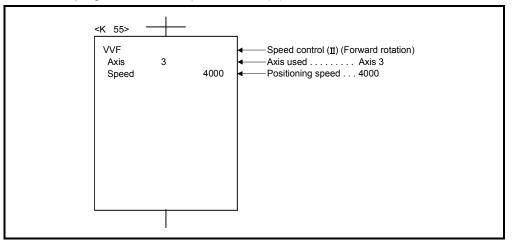

(5) Motion SFC program

Motion SFC program for which executes the servo program is shown below.

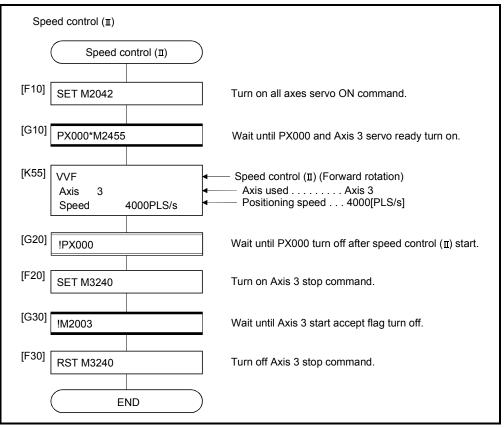

6 POSITIONING CONTROL

6.15 Speed/Position Switching Control

6.15.1 Speed/position switching control start


Speed/position switching control for specified axis is executed. Speed/position switching control uses the VPF (Forward rotation), VPR (Reverse rotation) and VPSTART (Re-start) servo instructions.

										Iter	ns s	et u	sing	MT	Deve	elop	er2								
					Сс	mm	on				Arc					Para	ame	ter b	lock				Oth	ers	
Servo instruction	Positioning method	Number of control axes	Parameter block No.	Axis	Address/travel value	Command speed	Dwell time	M-code	Torque limit value	Auxiliary point	Radius	Central point	Interpolation control unit	Speed limit value	Acceleration time	Deceleration time	Rapid Stop deceleration time	Torque limit value	Deceleration processing on stop input	Allowable error range for circular interpolation	S-curve ratio	Advanced S-curve acceleration/deceleration	Cancel	WAIT-ON/OFF	Speed change
VPF VPR	Incremental	1		0	0	0		Δ	Δ			_		\square	Δ	Δ	Δ	\bigtriangleup	\square		\bigtriangleup	Δ	Δ		Valid

[Control details]

 \bigcirc : Must be set \triangle : Set if required

- (1) The speed control is executed after the start of the servomotor, and changes from speed control to position control with the CHANGE (Speed/position switching) signal from external source, and then the specified positioning travel value is executed.
 - · VPF..... Forward rotation direction (Address increase direction) start
 - · VPR..... Reverse rotation direction (Address decrease direction) start
- (2) The CHANGE signal from external source is effective during speed/position switching enable signal (M3205+20n) is on only. If M3205+20n turns on after the CHANGE signal turned on, it does not change from speed control to position control and speed control is continued.

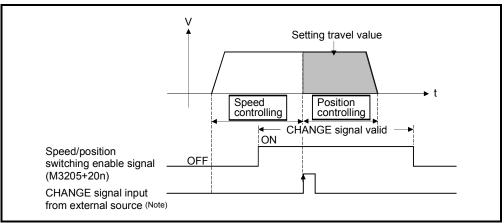

REMARK

(Note): "The external CHANGE signal input from external source" is inputted to CHANGE of signal type set in speed/position switching signal from external source. When "normally open contact input" is set, CHANGE input occurs at the CHANGE signal on, and when "normally closed contact input" is set, CHANGE input occurs at the CHANGE signal off. (Refer to the "Q173D(S)CPU/Q172D(S)CPU Motion controller User's Manual".) The signal types that can be used with speed/position switching signal are shown below.

Signal type	Q173DSCPU/ Q172DSCPU	Q173DCPU(-S1)/ Q172DCPU(-S1)
CHANGE signal of Q172DLX	0	0
External input signal (DOG) of servo amplifier ^(Note-1)	0	⊖ Ver.
Built-in interface in Motion CPU (DI)	0	×
Bit device	0	×

 \bigcirc : Usable, \times : Unusable

 (Note-1): The variation for ON/OFF timing of the external input signal (DOG) of servo amplifier may occur according to the input filter setting value of external signal input setting. Review the input filter setting value compatible with the applications.
 Use the Q172DLX or built-in interface in Motion CPU (DI) to execute the high-accuracy control.

Ver. : Refer to Section 1.3 for the software version that supports this function.

(3) Feed current value processing


The feed current value is as follows by turning feed current value update command (M3212+20n) on/off at the speed/position switching control start.

- (a) M3212+20n OFF..... The feed current value is cleared to "0" at the start.
 - The feed current value is updated from the start (speed control).
 - The feed current value after stop is as follows:

Feed current value after stop	=	Travel value during speed control	+	Travel value for position control
-------------------------------	---	---	---	---

- (b) M3212+20n ON...... The feed current value is not cleared at the start.
 - The feed current value is updated from the start (speed control).
 - The feed current value after stop is as follows:




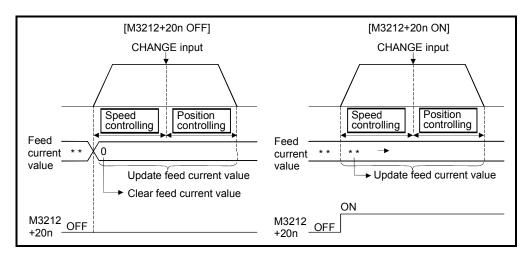


POINT

If it is started with M3212+20n on, leave M3212+20n on until positioning control is completed. If it is turns off during control, the feed current value cannot be guaranteed.

- (4) Change of the travel value during speed control The travel value for position control can be changed during speed control after speed/position control start.
 (a) The travel value is set in indirect specification by optional device (2-word)
 - (a) The travel value is set in indirect specification by optional device (2-word data) in the servo program.

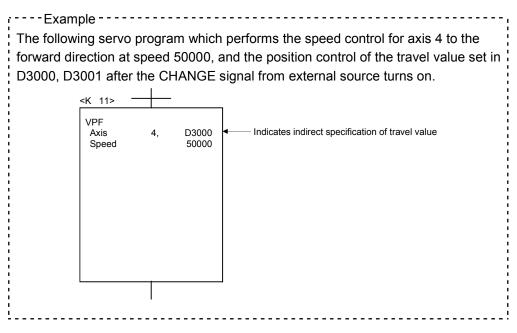


(b) The travel value is stored in the data register for travel value change during speed control in the Motion SFC program. When the CHANGE signal turns on, the contents of the data register for travel value change are set as the travel value.

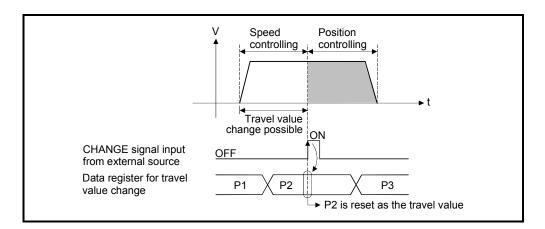


(5) Travel value area after proximity dog ON The travel value since the position mode was selected by the CHANGE signal input from external source is stored in the travel value storage register after proximity dog ON. (Refer to Section 3.2.1.) [Cautions]

- Item check at the CHANGE signal ON from external source When the external CHANGE signal turns on, speed control switches to position control if the following conditions are met:
 - Start accept flag (M2001+n) is turning on.
 - Speed control is executing after starting of the speed/position switching control.
 - Speed/position switching enable command (M3205+20n) is turning on.
- (2) No speed control

Position control only is executed if M3205+20n and CHANGE signal are turning on at the start. The speed controlling signal (M2404+20n) does not turn on.

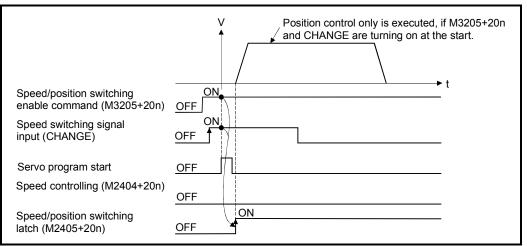

- (3) "Travel value for position control" is less than "deceleration distance"
 - (a) If the travel value for position control is less than the deceleration distance at controlling speed, deceleration processing starts immediately when CHANGE is input.
 - (b) The difference between travel value for the deceleration stop and position control is the overrun. At this time, the error detection signal (M2407+20n) turns on and error code [209] is stored in the data register.
 - (c) The positioning complete signal (M2401+20n) does not turn on.

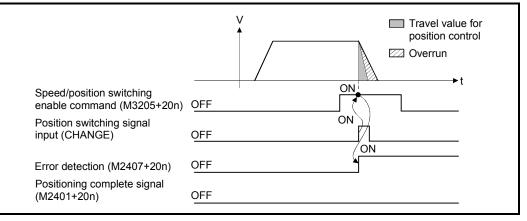

(4) Stroke limit check


Stroke limit range is not checked during the speed mode. If the travel value exceeds the stroke limit range, a minor error (error code: 210) occurs when position mode is selected, and performs a deceleration stop.

[Program]

Program for speed/position switching control is shown as the following conditions.

(1) System configuration

Speed/position switching control of Axis 4.

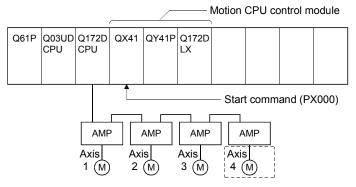


(2) Positioning conditions

(a) Positioning conditions are shown below.

Item	Positioning conditions
Servo program No.	101
Control axis	Axis 4
Travel value for positioning control	40000
Command speed	1000

- (b) Positioning start command PX000 Leading edge
- (c) Speed/position switching enable command M3265


(3) Operation timing

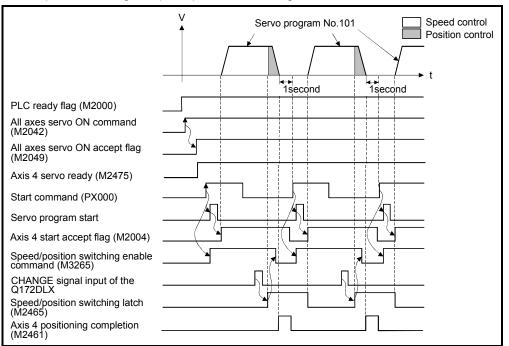

Operation timing for speed/position switching control is shown below.

(4) Servo program


Servo program No.101 for speed/position switching control is shown below.

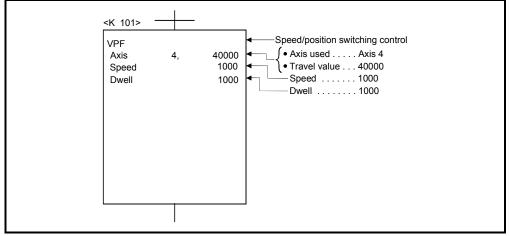

(Note): Example of the Motion SFC program for positioning control is shown next page.

(5) Motion SFC program

Motion SFC program for which executes the servo program is shown below.

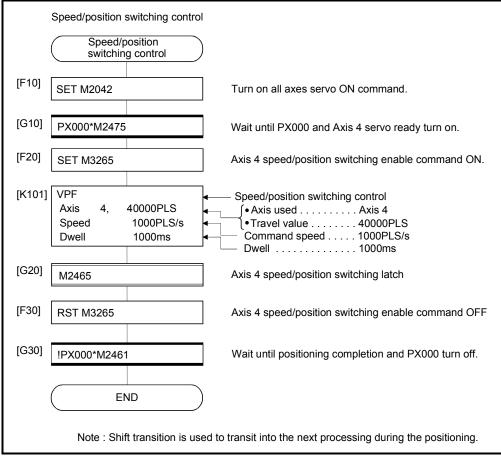

(Note): Example of the above Motion SFC program is started using the automatic start or sequence program.

6.15.2 Re-starting after stop during control

Re-starting (continuing) after stop with stop command during speed/position switching control is executed.

Re-starting uses VPSTART servo instruction.

										Iter	ms s	et us	sing	MT	Deve	elope	er2								
					Сс	mm	on				Arc					Para	amet	er b	lock			1	Oth	ers	
Servo instruction	Positioning method	Number of control axes	Parameter block No.	Axis	Address/travel value	Command speed	Dwell time	M-code	Torque limit value	Auxiliary point	Radius	Central point	Interpolation control unit	Speed limit value	Acceleration time	Deceleration time	Rapid Stop deceleration time	Torque limit value	Deceleration processing on stop input	Allowable error range for circular interpolation	S-curve ratio	Advanced S-curve acceleration/deceleration	Cancel	WAIT-ON/OFF	Speed change
VPSTART	Incremental	1		0																			\square		Valid

 \bigcirc : Must be set \triangle : Set if required

[Control details]

- (1) The continuous control after stop during speed control is executed, after speed/ position switching control start.
- (2) Re-starting using the VPSTART is effective by stop during speed control or position control.
 - (a) Re-starts with the speed control at the stop during speed control, then switches to position control by turning on the CHANGE signal.
 - The control contents after re-starting are same as the speed/position switching control. Refer to Section "6.15.1 Speed/position switching control start".

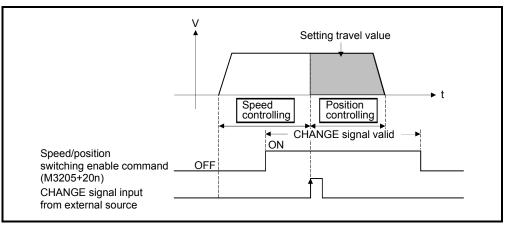



Fig. 6.27 Re-starting during speed control

(b) If the stop occurred during position control, re-start with position, and the positioning control of setting travel value.

The travel value after the re-start is calculated as follows:



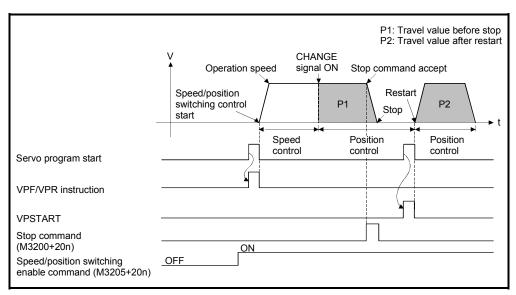


Fig.6.28 Re-starting during speed control

(3) It controls at the speed stored at the VPF/VPR instruction execution in the restarting.

Therefore, even if the speed change before stop during control, it becomes the speed at the VPF/VPR instruction execution.

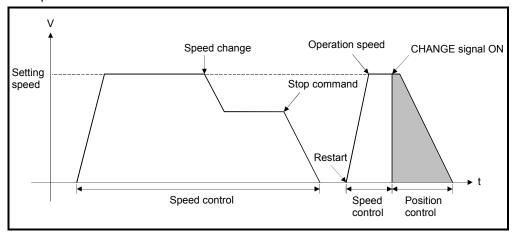


Fig.6.29 Re-starting after speed change


[Program]

Program for restarting after stop during control with the speed/position switching control is shown as the following conditions.

(1) System configuration

Speed/position switching control of Axis 4.

—— Motion CPU control module

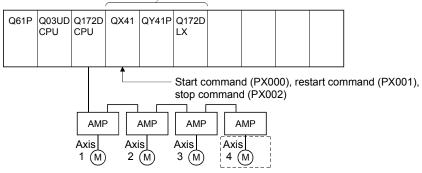


(2) Positioning conditions

(a) Positioning conditions are shown below.

	Positioning	conditions
Item	Speed/position switching control	Restart
Servo program No.	101	102
Control axis	Axis 4	Axis 4
Travel value for positioning control	40000	_
Command speed	1000	—


(3) Operation timing

Operation timing for speed/position switching control and re-starting are shown below.

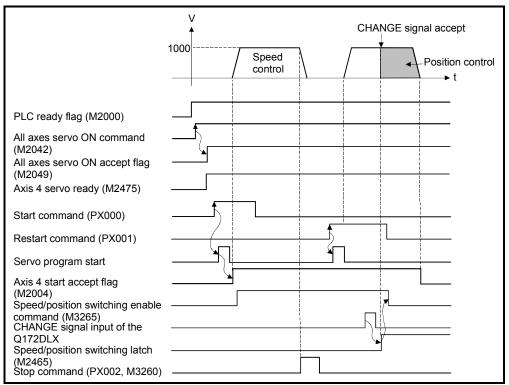

(4) Servo program


Servo program No.101 and No.2 for speed/position control and re-starting are shown below.

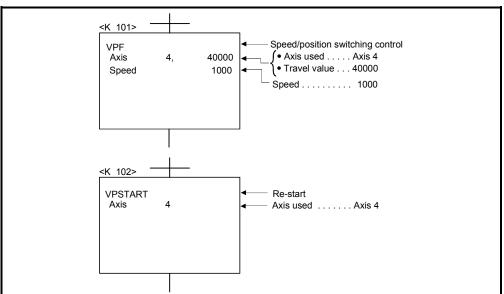

(Note): Example of the Motion SFC program for positioning control is shown next page.

(5) Motion SFC program

Motion SFC program for which executes the servo program is shown below.

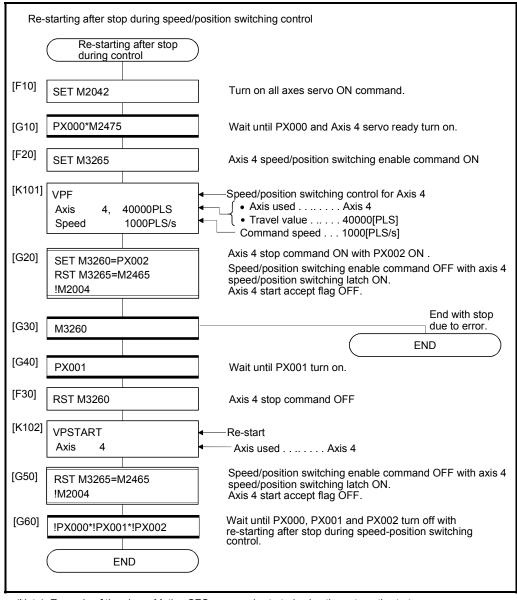

(Note): Example of the above Motion SFC program is started using the automatic start or sequence program.

6.16 Speed-Switching Control

- (1) Positioning control performs changing the speed on the point beforehand set by one start.
- (2) The speed-switching points and speed are set using the servo program.
- (3) Repetition control between any speed-switching points can be performed by using repetition instructions.
- (4) M-codes and torque limit values can be changed at each speed-switching point.

6.16.1 Speed-switching control start, speed-switching points and end specification

											Ite	ms s	et u	sing	MT	Dev	elop	er2								
						С	omm	on	1	1		Arc	1				Para	ame	ter b	lock				Oth	ners	
	ervo uction	Positioning method	Number of control axes	Parameter block No.	Axis	Address/travel value	Command speed	Dwell time	M-code	Torque limit value	Auxiliary point	Radius	Central point	Interpolation control unit	Speed limit value	Acceleration time	Deceleration time	Rapid Stop deceleration time	Torque limit value	Deceleration processing on stop input	Allowable error range for circular interpolation	S-curve ratio	Advanced S-curve acceleration/deceleration	Cancel	WAIT-ON/OFF	Speed change
Start	VSTART			\bigtriangleup										\triangle	\bigtriangleup	\bigtriangleup	\triangle	\bigtriangleup	\bigtriangleup	\bigtriangleup		\bigtriangleup	\triangle	\triangle		
End	VEND	_	—																							—
	ABS-1		1																							
End point address	ABS-2	Absolute data	2																							
	ABS-3		3		~	~	~																			Malta
Travel	INC-1		1		0	0	0	\triangle	Δ	Δ														\triangle		Valid
value to	INC-2	Incremental	2																							
end point	INC-3		3																							
Speed-	VABS	Absolute data																								
Switching point	VINC	Incremental				0	0		\triangle	\triangle																_

○: Must be set△: Set if required

[Control details]

Start and end of the speed-switching control

Speed-switching control is started and ended using the following instructions:

(1) VSTART

Starts the speed-switching control.

(2) VEND

Ends the speed-switching control.

Travel value setting to end address/end point

The travel value to end address/end point with the speed-switching control, positioning control method and positioning speed to the end point are set using the following instructions:

(1) ABS-1/INC-1

Set 1 axis linear positioning control. The control contents are same as Section 6.2 "1 Axis Linear Positioning Control".

(2) ABS-2/INC-2

Set 2 axes linear interpolation control.

The control contents are same as Section 6.3 "2 Axes Linear Interpolation Control".

(3) ABS-3/INC-3

Set 3 axes linear interpolation control. The control contents are same as Section 6.4 "3 Axes Linear Interpolation Control".

Speed-switching point setting

The address (travel value) of the speed-switching point and the positioning speed are set using the following instructions:

(1) VABS


Set the speed-switching point using the absolute data method.


(2) VINC

Set the speed-switching point using the incremental data method.

POINT

The axis which set the speed-switching point (travel value) and positioning speed by 2 or 3 axes linear interpolation control is first set in the "travel value to end address/end point".

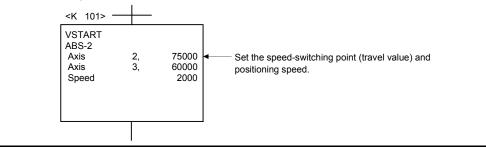

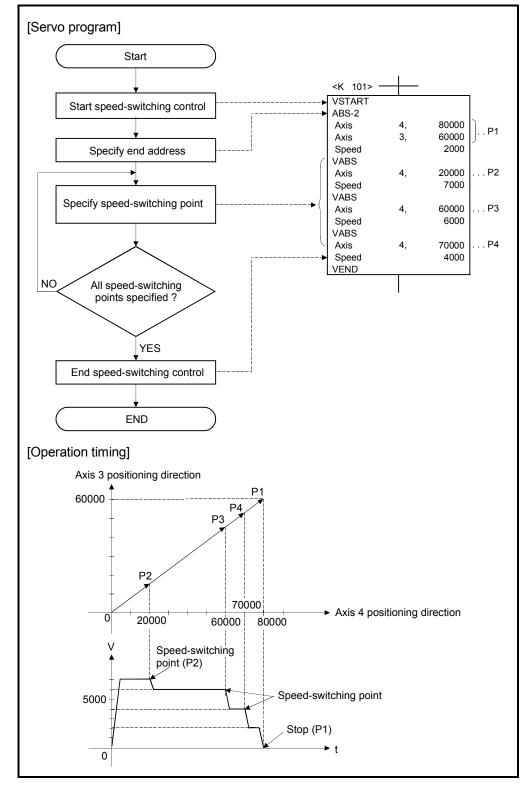

Procedure of the servo program and operation timing

Servo programs for speed-switching control and the operation timing are shown below.

[Cautions]


- (1) The number of control axes cannot be changed during control.
- (2) The speed-switching point can be specified the absolute data method (VABS□) and incremental data method (VINC□) by mixed use.
- (3) The speed-switching point cannot be specified an address which change in travel direction. If the travel direction change, the error code [215] is stored in the minor error storage register for each axis and the rapid stop is performed.
- (4) It checks whether to be the end address within the stroke limit range at the start. If it is positioning to outside the stroke limit range, the error code [106] is stored in the minor error storage register for each axis and operation does not start.
- (5) If the travel value between speed-switching points is so short and it shifts to the next speed-switching point during speed-switching control, the speed-switching does not perform.
- (6) The M-code from the previous point is retained in the point with which M-code is not specified.
- (7) Be sure to set the travel value between speed-switching points. (The torque limit value is not correctly set by restricting the internal control processing, and the servo errors might occur or a work might fall.)

[Program]

Program for speed-switching is shown as the following conditions.

System configuration
 Speed-switching control of Axis 2 and Axis 3.


—— Motion CPU control module

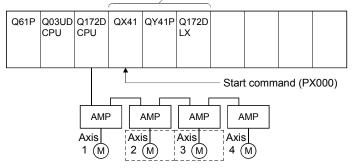


- (2) Positioning conditions
 - (a) Speed-switching control conditions are shown below.

Item	Set	ting
Servo program No.	50	00
Control axis	Axis 2	Axis 3
End address	100000	50000


(b) Speed-switching control start command PX000 Leading edge (OFF \rightarrow ON)

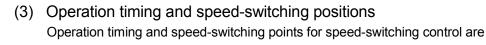

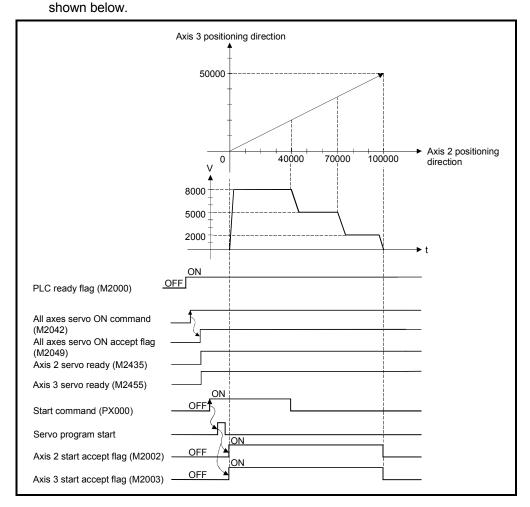

(4) Servo program


Servo program No.500 for speed-switching control is shown below.

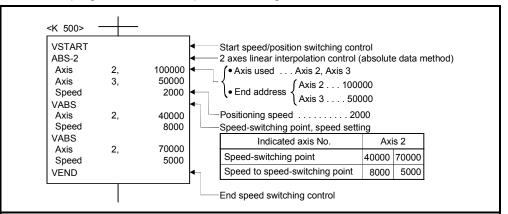

(Note): Example of the Motion SFC program for positioning control is shown next page.

(5) Motion SFC program

Motion SFC program for which executes the speed-switching control is shown below.

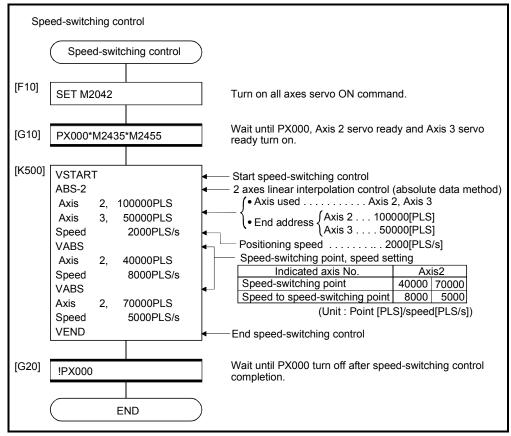

(Note): Example of the above Motion SFC program is started using the automatic start or sequence program.

6.16.2 Specification of speed-switching points using repetition instructions

														ng M		-										
					Сс	omm	ion				Arc	5 301	uaii	ig ivi		Para			lock				0	Other	S	ł
Servo instruction	Positioning method	Number of control axes	Parameter block No.	Axis	Address/travel value	Command speed		M-code	Torque limit value	Auxiliary point	Radius	Central point	Interpolation control unit	Speed limit value	Acceleration time	Deceleration time	Rapid Stop deceleration time	Torque limit value	Deceleration processing on stop input	Allowable error range for circular interpolation	S-curve ratio	Advanced S-curve acceleration/deceleration	Repeated condition	Cancel	WAIT-ON/OFF	Speed change
FOR-TIMES	_	_																					0			
FOR-OFF																										-
NEXT	_	_																								

Repetition execution between any speed-switching points.

 \bigcirc : Must be set \triangle : Set if required

[Control details]

First repetition range setting

The first repetition range is set using the following instructions:

- (1) FOR-TIMES (number of loops setting)
 - (a) The repetition range set specified number of times is executed repeatedly.
 - (b) The setting range is 1 to 32767.

Outside the range of -32768 to 0 is controlled as a setting of "1".

- (c) The following devices can be used as the repetition number of times:
 - 1) Data register (D)
 - 2) Link register (W)
 - 3) Motion register (#)
 - 4) Multiple CPU area device(U□\G)
 - 5) Decimal constant (K)
 - 6) Hexadecimal constant (H)

(2) FOR-ON (loop-out trigger condition setting)


- (a) The repetition range set until the specified bit device turns on is executed repeatedly.
- (b) The following devices are used as the loop-out trigger condition:
 - 1) Input (X/PX)
 - 2) Output (Y/PY)
 - 3) Internal relay (M)
 - 4) Special relay (SM)
 - 5) Link relay (B)
 - 6) Annunciator (F)

For indirect setting


- (3) FOR-OFF (loop-out trigger condition setting)
 - (a) The repetition range set until the specified bit device turns off is executed repeatedly.
 - (b) The following devices are used as the loop-out trigger condition:
 1) Input (X/PX)
 2) Output (Y/PY)
 3) Internal relay (M)
 4) Special relay (SM)
 5) Link relay (B)
 6) Annunciator (F)

Operation of the repetition control using FOR-TIMES, FOR-ON, and FOR-OFF is shown below.


[Servo program]

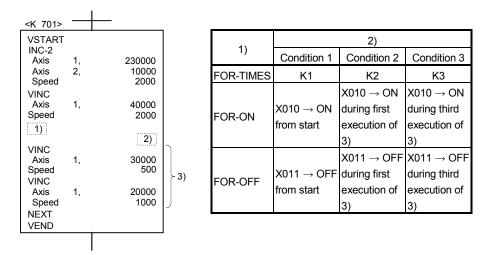

(1) Operation in condition 1

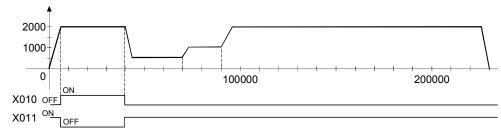


(2) Operation in condition 2

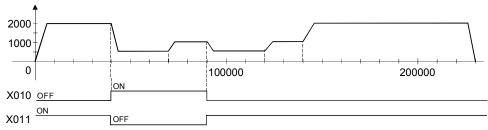

6 POSITIONING CONTROL

(3) Operation in condition 3

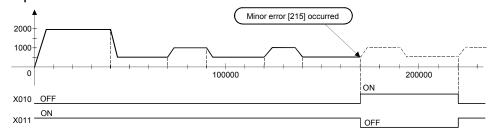


Error occurs because it exceeds the travel value to the stop position.

[Program]

Program for repetition speed-switching control is shown as the following conditions.

System configuration
 Speed-switching control of Axis 2 and Axis 3.

------- Motion CPU control module

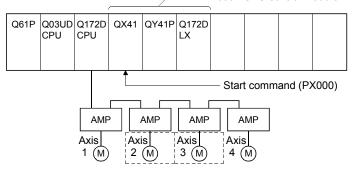


(2) Positioning conditions

(a) Speed-switching control conditions are shown below.

Item	Set	ting
Servo program No.	50	01
Control axes	Axis 2	Axis 3
End address	230000	100000


(b) Speed-switching control start command PX000 Leading edge $(\text{OFF} \rightarrow \text{ON})$

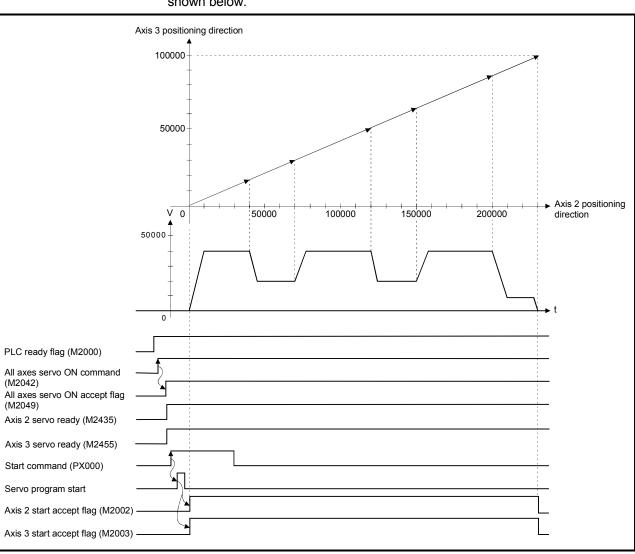

(3) Operation timing and speed-switching positions Operation timing and speed-switching points for speed-switching control are shown below.

(4) Servo program

Servo program No. 501 for speed-switching control by the repetition instruction is shown below.

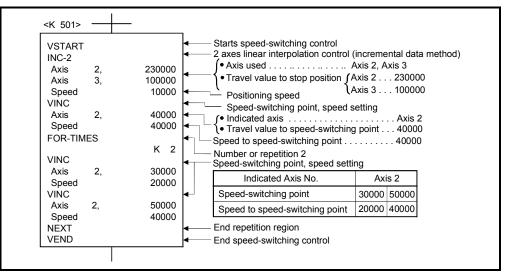

(Note): Example of the Motion SFC program for positioning control is shown next page.

(5) Motion SFC program

Motion SFC program for which executes speed-switching control using repetition instructions is shown below.

Spe	ecification of speed-switching poin	ts using repetition instructions
	Speed-switching control using repetition instructions	
[F10]	SET M2042	Turn on all axes servo ON command.
[G10]	PX000*M2435*M2455	Wait until PX000, Axis 2 servo ready and Axis 3 servo ready turn on.
[K501]	VSTART INC-2 Axis 2, 230000PLS Axis 3, 10000PLS Speed 10000PLS/S VINC Axis 2, 40000PLS Speed 40000PLS/S FOR-TIMES K 2 VINC Axis 2, 30000PLS Speed 20000PLS/S VINC Axis 2, 50000PLS Speed 40000PLS/S NEXT VEND	Starts speed-switching control 2 axes linear interpolation control (incremental data method) (Axis used Axis 2, Axis 3 Travel value to Axis 2, Axis 3 Travel value to Axis 2 230000 Axis 3 100000 Positioning speed 10000[PLS/s] Speed-switching point, speed setting Indicated axis Axis 2 Travel value to speed-switching point 40000[PLS] Speed to speed-switching point 40000[PLS] Speed to speed-switching point 40000[PLS/s] Number of repetitions 2 Speed-switching point, speed setting <u>Indicated axis No. Axis 2</u> Speed-switching point <u>30000 50000</u> Speed to speed-switching point <u>20000 40000</u> (Unit : Point [PLS]/speed [PLS/s]) End repetition region End speed-switching control
[G20]	!PX000	Wait until PX000 turn off after speed switching control completion.
	END	


(Note): Example of the above Motion SFC program is started using the automatic start or sequence program.

6.17 Constant-Speed Control

- (1) Positioning to the pass point beforehand set by one starting is executed with the specified positioning method and positioning speed.
- (2) The positioning method and positioning speed can be changed for each pass point.
- (3) The following parameters is set in the servo program.
 - Pass point
 - · Positioning method from any pass point to the next pass point.
 - Positioning speed from any pass point to the next pass point.
- (4) Repetition control between any pass points can be performed by using repetition instructions.
- (5) M-codes and torque limit values can be changed at each speed-switching point.
- (6) 1 to 4 axes can be controlled.

[Procedure to write servo programs]


The method to write the servo programs for constant-speed control is shown below.

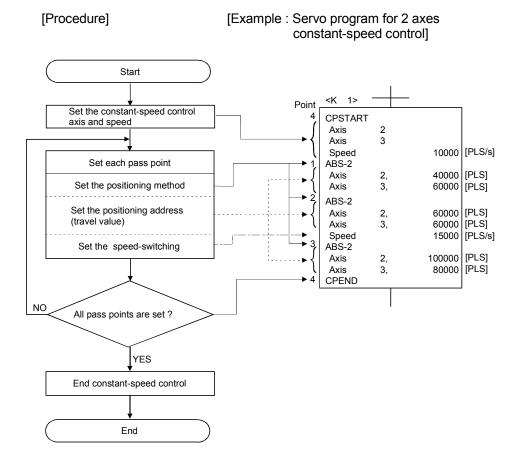


6 POSITIONING CONTROL

[Operation timing]

Operation timing for constant-speed control is shown below.



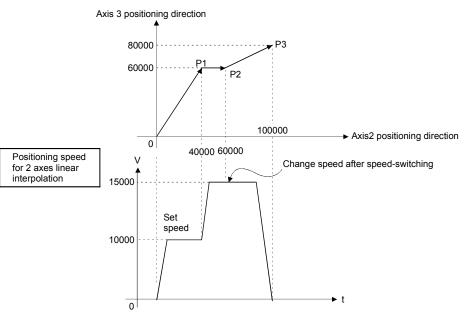

[Caution]

- (1) The number of control axes cannot be changed during control.
- (2) The pass point can be specified the absolute data method (ABS□) and incremental method (INC□) by mixed use.
- (3) The pass point can also be specified an address which change in travel direction. The acceleration processing at a pass point is executed for 1 axis constant-speed. However, the acceleration/deceleration processing at a pass point is not executed for 2 to 4 axes constant-speed, so be careful of the servo error occurrence, etc.
- (4) When the FIN acceleration/deceleration is not set in the program with only one pass point, this operation is the same as PTP control.
- (5) Speed change is possible after the start. Note the following points at the speed change.
 - (a) The central point-specified circular interpolation is included the constantspeed control.

When the arc path calculated from the start address and central-point address is differ (within the allowable error range for circular interpolation) from the setting end address, if the speed is changed, error compensation (Refer to Section 4.3.4) may not function normally.


When the central point-specified circular interpolation as positioning method is used at the constant-speed control, set the start address, central point address and end address becomes arc correctly. (b) The speed switching and change speed by CHGV instruction are executed toward the same program in the servo program.

The lower of the speed change by CHGV instructions and the command speed in the servo program is selected.

The speed change by CHGV instructions are executed if the speed is lower than the speed set in the servo program; otherwise the CHGV instructions are not executed.


1) Change speed by CHGV instruction > command speed in the servo program

The command speed in the servo program is selected.

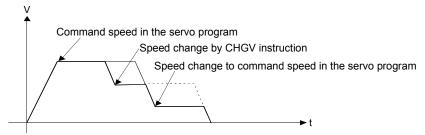

2) Change speed by CHGV instruction < command speed in the servo program

The change speed by CHGV instructions is effective.

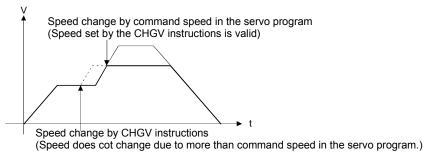

- (6) An overrun occurs if the distance remaining to the final positioning point when the final positioning point is detected is less than the deceleration distance at the positioning speed after the start (command speed).
 The error code [211] (overrun error) is stored in the minor error storage register for each axis.
- (7) If positioning to outside the stroke limit range is executed after the start, the error code [106] is stored in the minor error storage register for each axis and a deceleration stop is executed.

(8) The minimum travel value between constant-speed control pass points is shown below:

Command speed per second (control unit/s) imes Main cycle [s] < Travel distance [control unit]

Example) Main cycle: 20[ms], Command speed: 600[mm/min] If the command speed (600[mm/min]) is divided by 60, the command speed per second is 10[mm/s], and the main cycle is 0.02[s]. Therefore, the travel distance is as follow.

10[mm/s] × 0.02[s] = 0.2[mm]

Set the travel distance to more than 0.2[mm].

Positioning speed drops if the distance between pass points is short the minimum travel value.

6.17.1 Specification of pass points by repetition instructions

		pass points	ιcμ	νcu	icu	۰y.																				
												set	usir	ng M												
					Co	mm	on	1			Arc					Para	amet	er b	lock				C	other	s	
Servo instruction	Positioning method	Number of control axes	Parameter block No.	Axis	Address/travel value	Command speed	Dwell time	M-code	Torque limit value	Auxiliary point	Radius	Central point	Interpolation control unit	Speed limit value	Acceleration time	Deceleration time	Rapid Stop deceleration time	Torque limit value	Deceleration processing on stop input	Allowable error range for circular interpolation	S-curve ratio	Advanced S-curve acceleration/deceleration	Repeated condition	Cancel	WAIT-ON/OFF	Speed change
FOR-TIMES																										
FOR-ON	_	_																					0			
FOR-OFF																										_
NEXT	_	_																								

This section describes the method of the pass points for which executes between any pass points repeatedly.

 \bigcirc : Must be set \triangle : Set if required

[Control details]

Setting the first of repetition range

The first of repetition range is set by the following instructions:

- (1) FOR-TIMES (number of loops setting)
 - (a) The repetition range set specified number of times is executed repeatedly.
 - (b) The setting range is 1 to 32767.
 - Outside the range of -32768 to 0 is controlled as a setting of "1".
 - (c) The following devices can be used as the repetition number of times:
 - 1) Data register (D)
 - 2) Link register (W)
 - 3) Motion register (#)
 - 4) Multiple CPU area device (U□\G)
 - 5) Decimal constant (K)
 - 6) Hexadecimal constant (H)

(2) FOR-ON (Loop-out trigger condition setting)


- (a) The repetition range set until the specified bit device turns on is executed repeatedly.
- (b) The following devices are used as the loop-out trigger condition:
 - 1) Input (X/PX)
 - 2) Output (Y/PY)
 - 3) Internal relay (M)
 - 4) Special relay (SM)
 - 5) Link relay (B)
 - 6) Annunciator (F)

For indirect setting


- (3) FOR-OFF (loop-out trigger condition setting)
 - (a) The repetition range set until the specified bit device turns off is executed repeatedly.
 - (b) The following devices are used as the loop-out trigger condition:
 1) Input (X/PX)
 2) Output (Y/PY)
 3) Internal relay (M)
 4) Special relay (SM)
 5) Link relay (B)
 - 6) Annunciator (F)

The repetition control operation using FOR-TIMES, FOR-ON and FOR-OFF is shown below.

[Servo program]

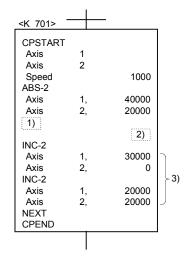

1)		2)	
1)	Condition 1	Condition 2	Condition 3
FOR-TIMES	K1	K2	КЗ
FOR-ON	$X010 \rightarrow ON$ during first positioning 3)	$X010 \rightarrow ON$ during second positioning 3)	X010 \rightarrow ON during third positioning 3)
FOR-OFF	X011 \rightarrow OFF during first positioning 3)	$X011 \rightarrow OFF$ during second positioning 3)	X011 \rightarrow OFF during third positioning 3)

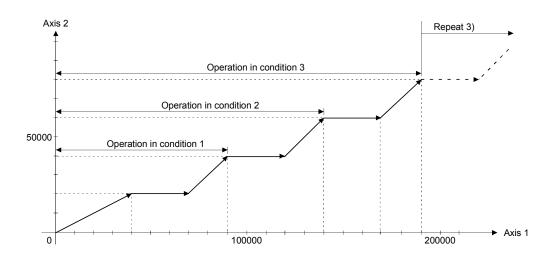

[Caution]

 During a FOR-ON loop, or a FOR-OFF loop, if the travel value of the specified pass point is smaller than the travel value of one operation cycle shown below, it will not loop-out even when trigger conditions are satisfied. To perform a loop-out, make the travel value of the pass point larger than the travel value of one operation cycle, or set a smaller speed command. The travel value for which positioning is completed in one operation cycle is shown below.

Travel value of one operation cycle	_	Command speed per second	~	Operation avala [a]
[control unit]	_	[control unit/s]	^	Operation cycle [s]

<Example> Command speed: 100.00[mm/min], Operation cycle: 0.44[ms]

$$\frac{100}{6}$$
 [mm/s] × 0.44[ms] = 0.74[µm]


If the travel value of the pass point exceeds 0.74[μm], it will loop-out normally.

[Program]

Program for repetition constant-speed control is shown as the following conditions.

(1) System configuration

Constant-speed control for Axis 2 and Axis 3.

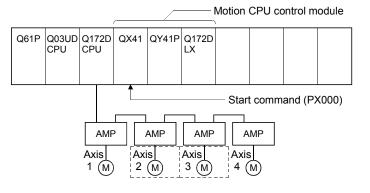

(2) Positioning conditions


(a) Constant-speed control conditions are shown below.

Item	Setting
Servo program No.	510
Control axis	Axis 2, Axis 3
Positioning speed	10000

(b) Constant-speed control start command PX000 Leading edge (OFF \rightarrow ON)


(3) Operation timing



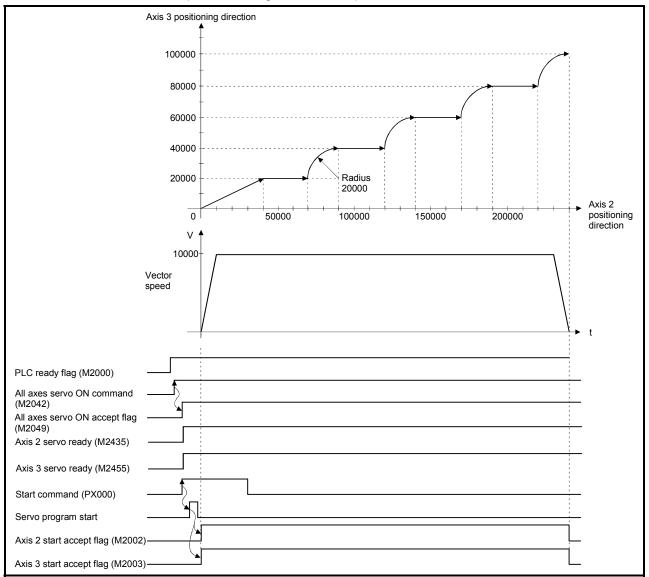


(4) Servo program

Servo program No.510 for constant-speed control is shown below.

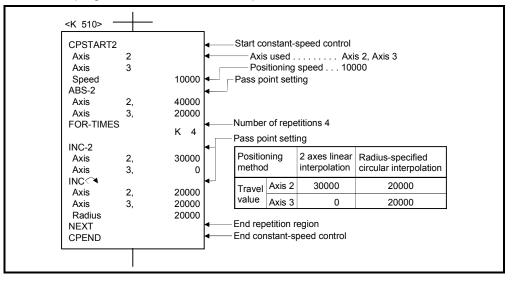

(5) Motion SFC program

Motion SFC program for which executes the servo program is shown below.

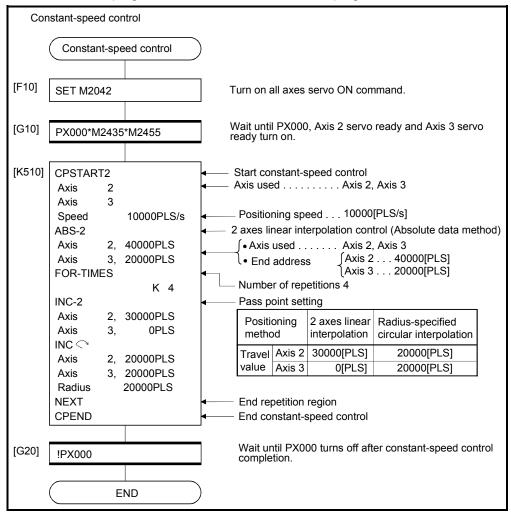

(Note): Example of the above Motion SFC program is started using the automatic start or sequence program.

6.17.2 Speed-switching by instruction execution


The speed can be specified for each pass point during the constant-speed control instruction.

The speed change from a point can be specified directly or indirectly in the servo program.

[Cautions]


- (1) The speed switching during servo instruction is possible at the constant-speed control for 1 to 4 axes.
- (2) The speed command can be set for point.
- (3) By turning on the speed-switching point specified flag (M2040) (Refer to Section 3.1.3) before the start, the point which completes speed change can be specified. The speed change timing at the flag ON/OFF.
 - (a) M2040 is OFF

The speed change starts with the specified speed-switching point.

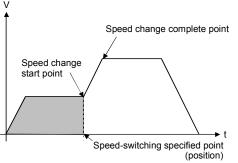

(b) M2040 is ON

The speed change ends with the specified speed-switching point.

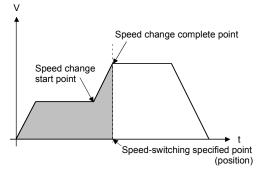


[Program]

Program for which executes the speed-switching control by turning on M2040 during constant-speed instruction is shown as the following conditions.

(1) System configuration Switches speed for Axis 1 and Axis 2.

——— Motion CPU control module

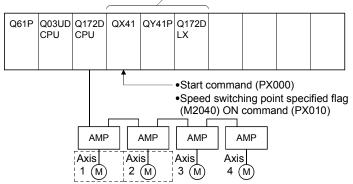


(2) Positioning conditions

(a) Speed switching conditions are shown below.

Item		Setting			
Servo program No.		310			
Positioning speed		10000		15000	
Positioning method		2 axes linear interpolation	Central point- specified circular interpolation	2 axes linear interpolation	2 axes linear interpolation
Pass point	Axis 1	20000	30000	40000	50000
	Axis 2	10000	20000	25000	40000


(b) The constant-speed start command for speed switchingPX000 Leading edge (OFF \rightarrow ON)

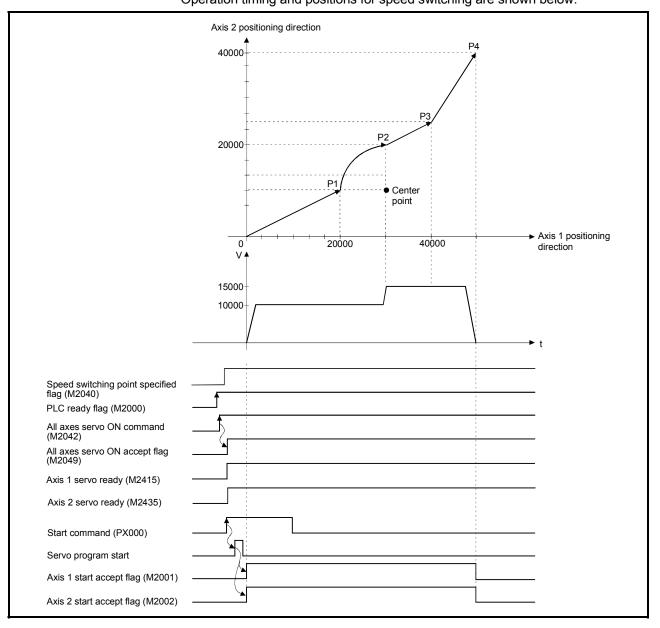

(3) Operation timing and speed-switching positions Operation timing and positions for speed switching are shown below.

(4) Servo program


Servo program No.310 for speed-switching is shown below.

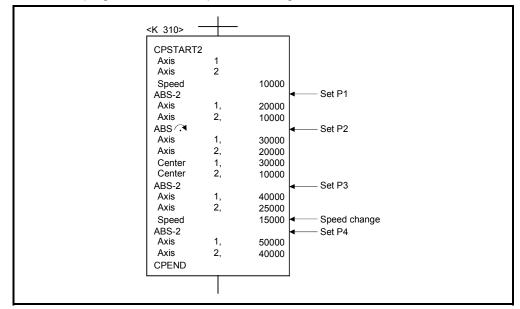

(Note): Example of the Motion SFC program for positioning control is shown next page.

(5) Motion SFC program

Motion SFC program for which executes the servo program is shown below.

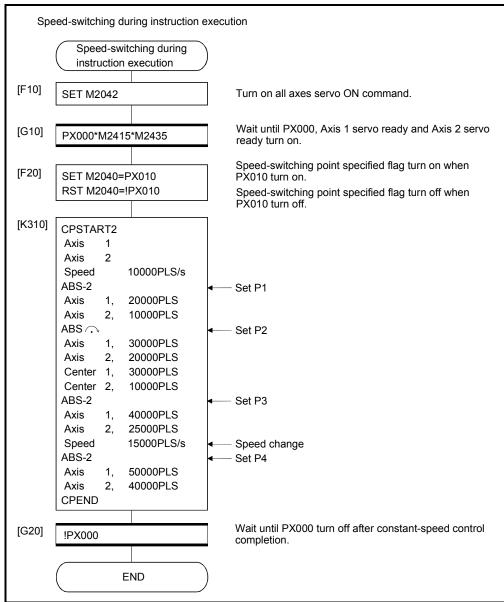

(Note): Example of the above Motion SFC program is started using the automatic start or sequence program.

6.17.3 1 axis constant-speed control

												lt	ems	set	usin	g M	T De	evelo	oper	2									
						Со	mm	on				Arc					Para	amet	er b	ock					С	ther	s		
	Servo truction	Positioning method	Number of control axes	Parameter block No.	Axis	Address/travel value	Command speed	Dwell time	M-code	Torque limit value	Auxiliary point	Radius	Central point	Interpolation control unit	Speed limit value	Acceleration time	Deceleration time	Rapid Stop deceleration time	Torque limit value	Deceleration processing on stop input	Allowable error range for circular interpolation	S-curve ratio	Advanced S-curve acceleration/deceleration	Commanded speed (Constant)	Cancel	Skip	FIN acceleration/deceleration	WAIT-ON/OFF	Speed change
Start	CPSTART1	_	1	\bigtriangleup	0		0								\bigtriangleup	\supset	\bigtriangleup	\bigtriangleup	\bigtriangleup	\bigtriangleup		\bigtriangleup	\bigtriangleup		\supset		\supset		
End	CPEND	_	_					\triangle																					
Pass	ABS-1	Absolute data	1		0	0			\bigtriangleup	\bigtriangleup														\bigtriangleup		\bigtriangleup		Δ	Valid
point	INC-1	Incremental	1		0	0			\bigtriangleup	\bigtriangleup														\bigtriangleup		\bigtriangleup		\bigtriangleup	

 \bigcirc : Must be set \triangle : Set if required

[Control details]

Start and end for 1 axis constant-speed control

1 axis constant-speed control is started and ended by the following instructions:

(1) CPSTART1 💯

Starts the 1 axis constant-speed control. Sets the axis No. and command speed.

(2) CPEND

Ends the 1 axis constant-speed control for CPSTART1.

Positioning control method to the pass point

The positioning control to change control is specified with the following instructions:

 ABS-1/INC-1 Sets the 1 axis linear positioning control.

Refer to Section 6.2 "1 Axis Linear Positioning Control" for details.


Ver. : Refer to Section 1.3 for the software version that supports the advanced S-curve acceleration/deceleration in constant-speed (CPSTART).

[Program]

Program for repetition 1 axis constant-speed control is shown as the following conditions.

(1) System configuration Axis 4 constant-speed control.

— Motion CPU control module

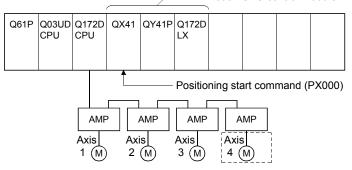


(2) Positioning conditions


(a) Constant-speed control conditions are shown below.

Item		Setting
Servo program No		500
Control axis		Axis 4
Positioning speed		10000
Number of repetition	ons	100
	P1	-1000
Pass point	P2	2000
travel value	P3	-2000
	P4	1000

(b) Constant-speed control start command PX000 Leading edge (OFF \rightarrow ON)

(3) Details of positioning operation

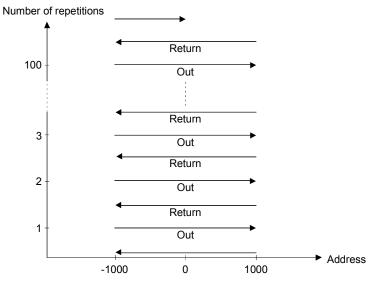

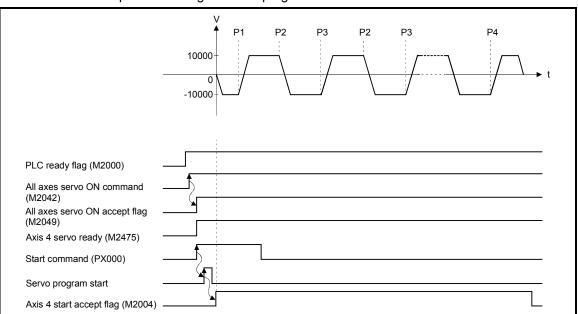


(4) Operation timing

Operation timing for servo program No.500 is shown below.

(5) Servo program


Servo program No.500 for constant-speed control is shown below.

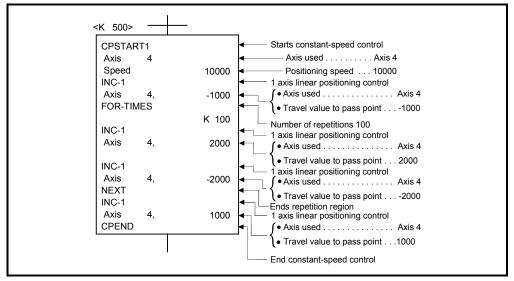

(Note): Example of the Motion SFC program for positioning control is shown next page.

(6) Motion SFC program

Motion SFC program for which executes the servo program is shown below.

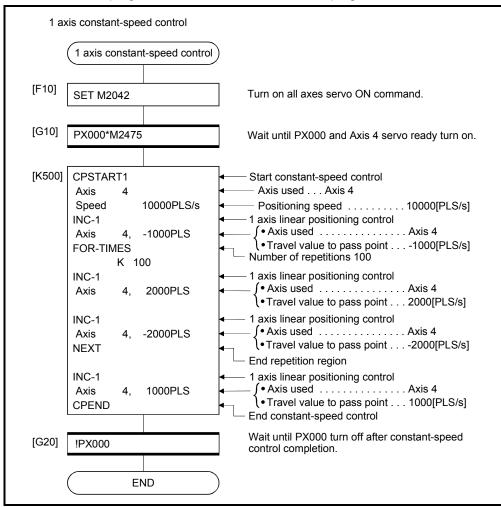

(Note): Example of the above Motion SFC program is started using the automatic start or sequence program.

6.17.4 2 to 4 axes constant-speed control

			Constant-											s set	usir	ng M	T De	evel	oper	2									
					1	Сс	mm	ion	1	1		Arc			1	-		ame	-			1	1		С	ther	s	1	
	Servo truction	Positioning method	Number of control axes	Parameter block No.	Axis	Address/travel value	Command speed	Dwell time	M-code	Torque limit value	Auxiliary point	Radius	Central point	Interpolation control unit	Speed limit value	Acceleration time	Deceleration time	Rapid Stop deceleration time	Torque limit value	Deceleration processing on stop input	Allowable error range for circular interpolation	S-curve ratio	Advanced S-curve acceleration/deceleration	Commanded speed (Constant)	Cancel	Skip	FIN acceleration/deceleration	WAIT-ON/OFF	Speed change
	CPSTART2		2	\bigtriangleup	0		0			-				\bigtriangleup	\bigtriangleup	\bigtriangleup	\triangle	\bigtriangleup	\bigtriangleup	\bigtriangleup	\bigtriangleup	\bigtriangleup	\bigtriangleup		\bigtriangleup		\bigtriangleup	-	
Start	CPSTART3		3	\bigtriangleup	0		0							\bigtriangleup	\bigtriangleup	\bigtriangleup	\bigtriangleup	\bigtriangleup	\bigtriangleup	\bigtriangleup	\bigtriangleup	\bigtriangleup	\bigtriangleup		\bigtriangleup		\bigtriangleup		
	CPSTART4		4	\bigtriangleup	0		0							\bigtriangleup	\bigtriangleup	\bigtriangleup	\triangle	\bigtriangleup	\bigtriangleup	\bigtriangleup	\bigtriangleup	\bigtriangleup	\bigtriangleup		\bigtriangleup		\bigtriangleup		
End	CPEND		—		-			\bigtriangleup																				-	
	ABS-2		2		0	0			\bigtriangleup	\bigtriangleup														\bigtriangleup		\bigtriangleup		\bigtriangleup	
	ABS-3		3		0	0			\bigtriangleup	\bigtriangleup														\bigtriangleup		\bigtriangleup		\triangle	
	ABS-4		4		0	0			\bigtriangleup	\bigtriangleup														\bigtriangleup		\bigtriangleup		\triangle	
	ABS				0	0			\bigtriangleup	\bigtriangleup	0													\bigtriangleup		\bigtriangleup		\bigtriangleup	
	ABS ABS ABS ABS ABS ABS	Absolute data	2		0	0						0																\bigtriangleup	Volid
Pass	ABS .				0	0				Δ			0													\bigtriangleup		Δ	Valid
point	INC-2		2		0	0			\bigtriangleup	\bigtriangleup														\bigtriangleup		\bigtriangleup		\bigtriangleup	
	INC-3		3		0	0			\bigtriangleup	\bigtriangleup														\bigtriangleup		\bigtriangleup		\bigtriangleup	
	INC-4		4		0	0			\bigtriangleup	\bigtriangleup														\bigtriangleup		\bigtriangleup		\bigtriangleup	
					0	0				\triangle	0															\bigtriangleup		\bigtriangleup	
		Incremental data	2		0	0						0																	
					0	0				Δ			0															Δ	

Constant-speed control for 2 to 4 axes.

 \bigcirc : Must be set \triangle : Set if required

[Control details]

Start and end for 2 to 4 axes constant-speed control

2 to 4 axes constant-speed control is started and ended using the following instructions:

(1) CPSTART2 Ver

Starts the 2 axes constant-speed control. Sets the axis No. and command speed.

(2) CPSTART3 Ver.

Starts the 3 axes constant-speed control. Sets the axis No. and command speed.

(3) CPSTART4 Ver

Starts the 4 axes constant-speed control. Sets the axis No. and command speed.

(4) CPEND

Ends the 2, 3, or 4 axes constant-speed control for CPSTART2, CPSTART3, or CPSTART4.

Positioning control method to the pass point

Positioning control to change control is specified using the following instructions: (1) ABS-2/INC-2

Sets 2 axes linear interpolation control. Refer to Section 6.3 "2 Axes Linear Interpolation Control" for details.

(2) ABS-3/INC-3

Sets 3 axes linear interpolation control. Refer to Section 6.4 "3 Axes Linear Interpolation Control" for details.

(3) ABS-4/INC-4

Sets 4 axes linear interpolation control. Refer to Section 6.5 "4 Axes Linear Interpolation Control" for details.

(4) ABS/INC A

Sets circular interpolation control using auxiliary point specification. Refer to Section 6.6 "Auxiliary Point-Specified Circular Interpolation Control" for details.

(5) ABS/INC (3, AB

Sets circular interpolation control using radius specification. Refer to Section 6.7 "Radius-Specified Circular Interpolation Control" for details.




Ver. : Refer to Section 1.3 for the software version that supports the advanced S-curve acceleration/deceleration in constant-speed (CPSTART).

(6) ABS/INC (3, ABS/INC 😉

Sets circular interpolation control using center point specification. Refer to Section 6.8 "Central Point-Specified Circular Interpolation Control" for details.

[Program]

- (1) Program for 2 axes constant-speed control is shown as the following conditions.(a) System configuration
 - Constant-speed control for Axis 2 and Axis 3.

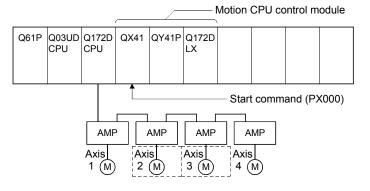

(b) Positioning operation details
 Axis 2 and axis 3 servomotors is used for positioning operation.
 Positioning details for Axis 2 and Axis 3 servomotors are shown below.

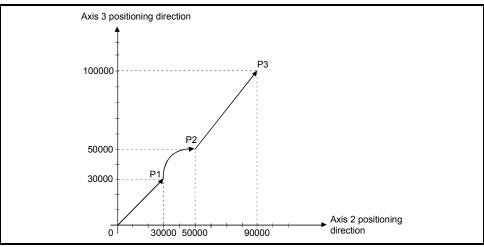


Fig.6.30 Positioning for Axis 2 and Axis 3

(c) Positioning conditions


1) Constant-speed control conditions are shown below.

Iter	n		Setting	
Servo program	n No.		505	
Positioning sp	eed		10000	
Positioning me	ethod	2 axes linear interpolation	Radius-specified circular interpolation	2 axes linear interpolation
	Axis 2	30000	50000	90000
Pass point	Axis 3	30000	50000	100000

2) Constant-speed control start command ... PX000 Leading edge (OFF \rightarrow ON)


(d) Servo program

Servo program No.505 for constant-speed control is shown below.

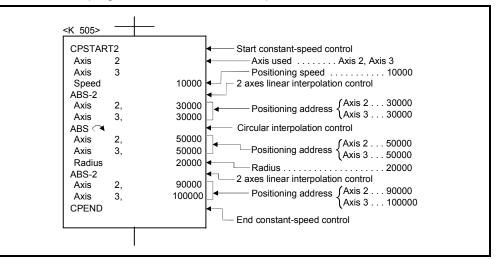

(Note): Example of the Motion SFC program for positioning control is shown next page.

(e) Motion SFC program

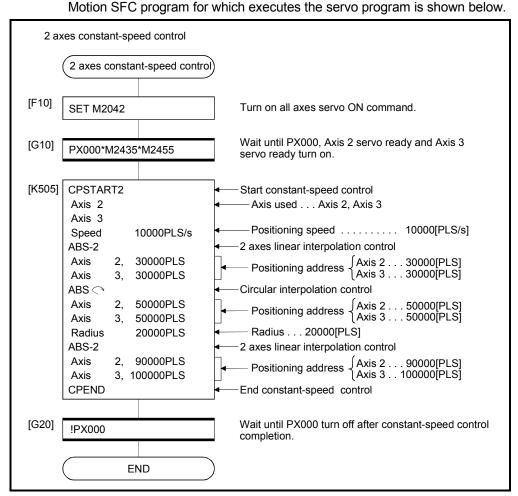

(Note): Example of the above Motion SFC program is started using the automatic start or sequence program.

- (2) Program for 4 axes constant-speed control is shown as the following conditions.
 - (a) System configuration Constant-speed control for Axis 1, Axis 2, Axis 3, and Axis 4.

Motion CPU control module Q03UD Q172D Q61P QX41 QY41P Q172D CPU CPU LX Start command (PX000) AMP AMP AMP AMP Axis Axis Axis Axis 2 (M) 4 (M) 1 (M) 3 (M)

(b) Positioning conditions

1) Constant-speed control conditions are shown below.

Iter	n		Setting	
Servo program	n No.		506	
Positioning sp	eed		10000	
Desitioning me	thad	4 axes linear	4 axes linear	4 axes linear
Positioning me		interpolation	interpolation	interpolation
	Axis 1	3000	5000	5000
Deserveint	Axis 2	4000	3500	3500
Pass point	Axis 3	4000	-4000	3000
	Axis 4	4000	-6000	6000

2) Constant-speed control start command... PX000 Leading edge (OFF \rightarrow ON)


(c) Servo program

Servo program No.506 for constant-speed control is shown below.

CPSTAR	Г4		Constant-speed control
Axis	1		Axis used Axis 1, Axis 2, Axis 3, Axis 4
Axis	2		
Axis	3		
Axis	4		
Speed		10000	Positioning speed 10000
INC-4			 4 axes linear interpolation control (P1)
Axis	1,	3000	Axis 1 3000
Axis	2,	4000	Travel value to pass point Axis 2 4000
Axis	3,	4000	Axis 3 4000
Axis	4,	4000	Axis 4 4000
INC-4			 4 axes linear interpolation control (P2)
Axis	1,	5000	Axis 1 5000
Axis	2,	3500	Travel value to pass point Axis 2 3500
Axis	3,	-4000	Axis 34000
Axis	4,	-6000	Axis 46000
INC-4			 4 axes linear interpolation control (P3)
Axis	1,	5000	Axis 1 5000
Axis	2,	3500	Travel value to pass point Axis 2 3500
Axis	3,	3000	Axis 3 3000
Axis	4,	6000	Axis 4 6000
CPEND			End constant-speed control

(Note): Example of the Motion SFC program for positioning control is shown next page.

(d) Motion SFC program
 Motion SFC program for which executes the servo program is shown below.

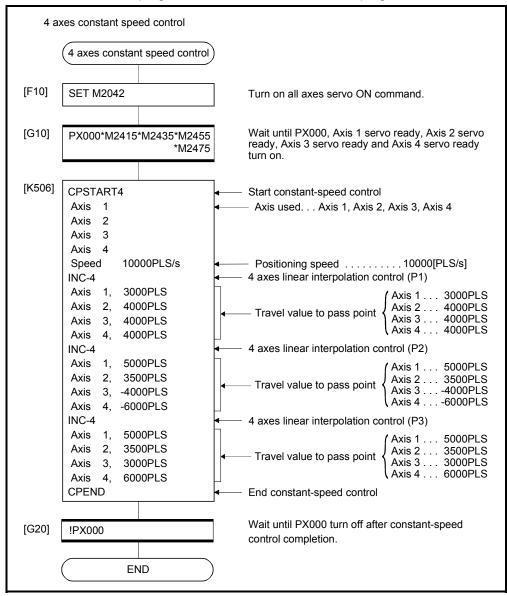

(Note): Example of the above Motion SFC program is started using the automatic start or sequence program.

6.17.5 Constant speed control for helical interpolation

The helical interpolation can be specified as the positioning control method to pass point for 3 or 4 axes constant-speed control.

Starting or ending instruction for constant-speed control uses the same CPSTART3, CPSTART4 or CPEND as 3 or 4 axes constant-speed control instruction.

									1			tems	set	usir														
				(Com	mor	1		A	rc/H	elica	al			1	Para	ame	ter b	lock					С	Other	s		
Servo instruction	Positioning method	Number of control axes	Parameter block No.	Axis	Address/travel value	Command speed	M-code	Torque limit value	Auxiliary point	Radius	Central point	Pitch	Interpolation control unit	Speed limit value	Acceleration time	Deceleration time	Rapid Stop deceleration time	Torque limit value	Deceleration processing on stop input	Allowable error range for circular interpolation	S-curve ratio	Advanced S-curve acceleration/deceleration	Commanded speed (Constant)	Cancel	Skip	FIN acceleration/deceleration	WAIT-ON/OFF	Speed change
ABH				0	0		\bigtriangleup	\bigtriangleup	0			0											\triangle		\triangle		\bigtriangleup	
ABH <																												
ABH																												
ABH	Absolute			0	0		\bigtriangleup	\bigtriangleup		0		0											\bigtriangleup		\bigtriangleup		\bigtriangleup	
ABH																												
ABH ∩.◄																												
ABH				0	0		\bigtriangleup	\triangle			0	0											\bigtriangleup		\bigtriangleup		\bigtriangleup	
		2		0	0		\bigtriangleup	\bigtriangleup	0			0											\bigtriangleup		\bigtriangleup		\triangle	Valid
INH <																												
INH 🖓				0	~																		_		_			
	Incremental			0	0		\triangle	\bigtriangleup		0		0											Δ		Δ		Δ	
INH 🕑																												
INH 🔿					0		_	^			0												~		~		~	
				0	0		\triangle	Δ			0	0											Δ		Δ		Δ	

○: Must be set
 △: Set if required

Servo instruction	Positioning method	Circular interpolation specified method
ABH 🔍	Absolute	Radius-specified method
INH (Incremental	less than CW180°
АВН 🖼	Absolute	Radius-specified method
INH 🖼	Incremental	less than CCW180°
АВН 🖓	Absolute	Radius-specified method
INH 🖓	Incremental	CW180° or more.
АВН 🕑	Absolute	Radius-specified method
INH 🕑	Incremental	CCW180° or more.
ABH 🔿	Absolute	
INH 🔿	Incremental	Central point-specified method CW
АВН 🍽	Absolute	
INH 😉	Incremental	Central point-specified method CCW
ABH 🖄	Absolute	
INH 🏠	Incremental	Auxiliary point-specified method

Helical interpolation specified methods for constant-speed control are shown below.


[Cautions]

- (1) The helical interpolation specification at pass point for constant-speed control can be used in the both of real mode/virtual mode.
- (2) Specify any 3 axes among 4 controlled axes in the helical interpolation control at the pass point for 4 axes constant-speed control (CPSTART4).
- (3) Command speed at the helical interpolation specified point is controlled with the speed of circumference. Control is the same as before at the point except for the helical interpolation specification. (Both of the linear interpolation-specified point and circular interpolation-specified point are the vector speed for number of interpolation axes.)
- (4) Skip function toward the helical interpolation-specified each point for constantspeed control is possible. If the absolute-specified helical interpolation is specified to point since the skip signal specified point, set the absolute linear interpolation between them. If it does not set, it may occur an error and stop.
- (5) FIN signal wait function toward the helical interpolation specified each pass point for constant-speed control is possible. M-code outputting signal is outputted to all circular interpolation axes and linear axes. Fin signal can be operated with the both of circular interpolation axes and linear axes.
- (6) If negative speed change toward the helical interpolation-specified each pass point for constant-speed control is executed, it can be returned before 1 point during positioning control.
- (7) Speed-switching point-specified flag is effective toward the helical interpolationspecified each pass point for constant-speed control.

[Program1]

(1) Servo program

Servo program for which helical interpolation specified pass point for constantspeed control is shown below.

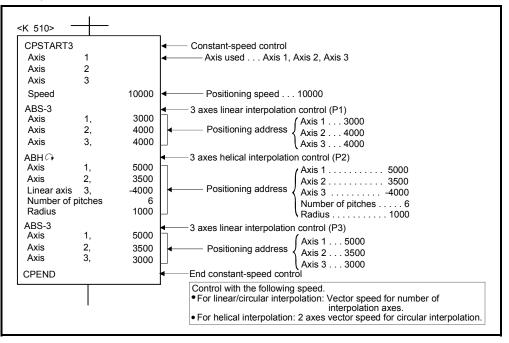


[Program2]

Program for direction of the nozzle of controlling the normal for circular arc curve is shown as the following conditions.


(1) System configuration

Helical interpolation with constant-speed control of Axis 1, Axis 2 and Axis 3

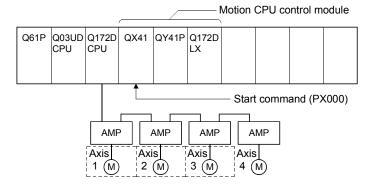

(2) Positioning operation details

The operation to start as the following figure from start point and witch keeps a nozzle at right angles toward the contour of line and that it goes around the contour and witch is returned to start point. It is the following program when a helical interpolation function is used.

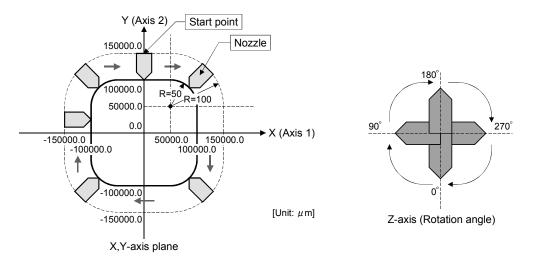

(3) Positioning conditions

(a) Helical interpolation conditions for constant-speed control are shown below.

	tem			Setting		
Servo pr	ogram No.			61, 62		
Positioni	ng speed			1000.00 [mm/min]		
Control		Р	ositioning addres	SS	Centra	al point
Control a	axis	Axis 1 [µm]	Axis 2 [µm]	Axis 3 [degree]	Axis 1 [µm]	Axis 2 [µm]
	Start point	0.0	150000.0	0.00000	_	—
	P1	50000.0	150000.0	0.00000	_	—
	P2	150000.0	50000.0	90.00000	50000.0	50000.0
	P3	150000.0	-50000.0	90.00000	_	—
Pass	P4	50000.0	-150000.0	180.00000	50000.0	-50000.0
point	P5	-50000.0	-150000.0	180.00000		
	P6	-150000.0	-50000.0	270.00000	-50000.0	-50000.0
	P7	-150000.0	50000.0	270.00000		
	P8	-50000.0	150000.0	0.00000	-50000.0	50000.0

Vibration may cause the machine at the pass point depend on the speed change. In this case, reduce the speed change (acceleration) in the FIN acceleration/deceleration.

However, a locus will change depend on the setting time of the FIN acceleration/deceleration.

(b) Constant-speed control start command PX000 Leading edge (OFF \rightarrow ON)

(4) Motion SFC program

Motion SFC program for is shown below.

	Helical in	terpolation)
[F10]	SET M2042		Turn ON all axes servo ON command.
[G10]	PX000*M2415*N	12435*M2455	Wait until PX000, Axis 1 servo ready, Axis 2 servo ready and Axis 3 servo ready turn ON
[K61]	ABS-3		3 axes linear interpolation control (Travel to start point) (•Axis usedAxis 1, Axis 2, Axis 3
	Axis 1, Axis 2, Axis 3,	0.0m 150000.0m 0.00000degree	Axis 1 0.0[μm] • Positioning address Axis 2 150000.0[μm] Axis 3 0.00000[degree]
[014]	Vector speed	30000.00mm/min	 Command positioning speed Vector speed30000.00[mm/min]
[G11]	!M2001*!M2002*	!M2003	Wait until Axis 1, Axis 2 and Axis 3 start accept flag turn OFF
[K62]	CPSTART3 Axis 1		3 axes constant speed control start
	Axis 2 Axis 3		Axis usedAxis 1, Axis 2, Axis 3
	Speed ABS-3	1000.00mm/min	3 axes linear interpolation control (P1)
	Axis 1, Axis 2, Axis 3,	50000.0 μm 150000.0 μm 0.00000degree	◄ Positioning address { Axis 1 50000.0[µm] Axis 2 150000.0[µm] Axis 3 0.00000[degree]
	ABH ᠬ Axis 1,	150000.0 μm	Axes helical interpolation control (P2) (Axis 1 150000.0[μm]
	Axis 2, Linear axis 3, Number of pitche	50000.0 μm 90.00000degree es 0	◄ Positioning address Axis 2 50000.0[µm] Axis 390.00000[degree] Number of pitches0
	Ctr.P. 1, Ctr.P. 2,	50000.0 μm 50000.0 μm	Central point address of the arc Axis 1 50000.0[μm] Axis 2 50000.0[μm]
	ABS-3 Axis 1, Axis 2,	150000.0 μm -50000.0 μm	S axes linear interpolation control (P3)
	Axis 2, Axis 3, ABH •	90.000000degree	Axis 3
		50000.0 μm -150000.0 μm 180.00000degree	Axis 1 50000.0[μm] Axis 2150000.0[μm] Axis 3180.00000[degree]
	Number of pitch Ctr.P 1,	es 0 50000.0 μm	Number of pitches 0 Axis 1 50000.0[μ m]
	Ctr.P 2, ABS-3 Axis 1,	-50000.0μm -50000.0μm	Axis 250000.0[µm]
	Axis 2, Axis 3,	-150000.0 µm 180.000000degree	Positioning address Axis 2150000.0[µm] Axis 3 180.00000[degree]
	ABH ↔ Axis 1, Axis 2,	-150000.0μm -50000.0μm	3 axes helical interpolation control (P6)
		270.00000degree	Positioning address Axis 3270.0000[degree] Number of pitches0
	Ctr.P 1, Ctr.P 2,	-50000.0µm -50000.0µm	Central point address of the $\operatorname{arc} \left\{ Axis 150000.0[\mu m] Axis 250000.0[\mu m] \right\}$
	ABS-3 Axis 1, Axis 2,	-150000.0μm 50000.0μm	
	Axis 3, 2 ABH ᠬ	270.00000degree	Axis 3270.0000[degree] 4 3 axes helical interpolation control (P6)
	Axis 1, Axis 2, Linear axis 3,	-50000.0 μm 150000.0 μm 0.00000degree	Axis 1
	Number of pitche Ctr.P 1, Ctr.P 2,	es 0 -50000.0μm 50000.0μm	Number of pitches0 Central point address of the arc Axis 150000.0[μ m] Axis 2 50000.0[μ m]
	ABS-3 Axis 1,	0.0 μm	■ 3 axes linear interpolation control Start point (Axis 1
	Axis 2, Axis 3, CPEND	150000.0 µm 0.000000degree	 Positioning address Axis 2 150000.0[µm] Axis 3
[G12]	!M2001*!M2002*	!M2003	Wait until Axis 1, Axis 2 and Axis 3 start accept flag turn OFF
			-

6 POSITIONING CONTROL

6.17.6 Pass point skip function

This function stops positioning to executing point and executes positioning to next point, by setting a skip signal toward each pass point for constant-speed control.


[Data setting]


(1) Skip signal devices
 The following devices can be specified as skip signal devices.
 X, Y, M, B, F, U□\G

[Cautions]

- When an absolute circular interpolation or absolute helical interpolation is specified to since point since the skip signal specified point, set the absolute linear interpolation between them.
 If it does not set, it may occur an error and stop.
- (2) If a skip signal is inputted at the end point, a deceleration stop occurs at that point and the program is ended.

[Program]

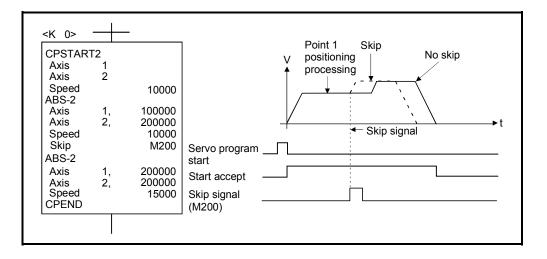

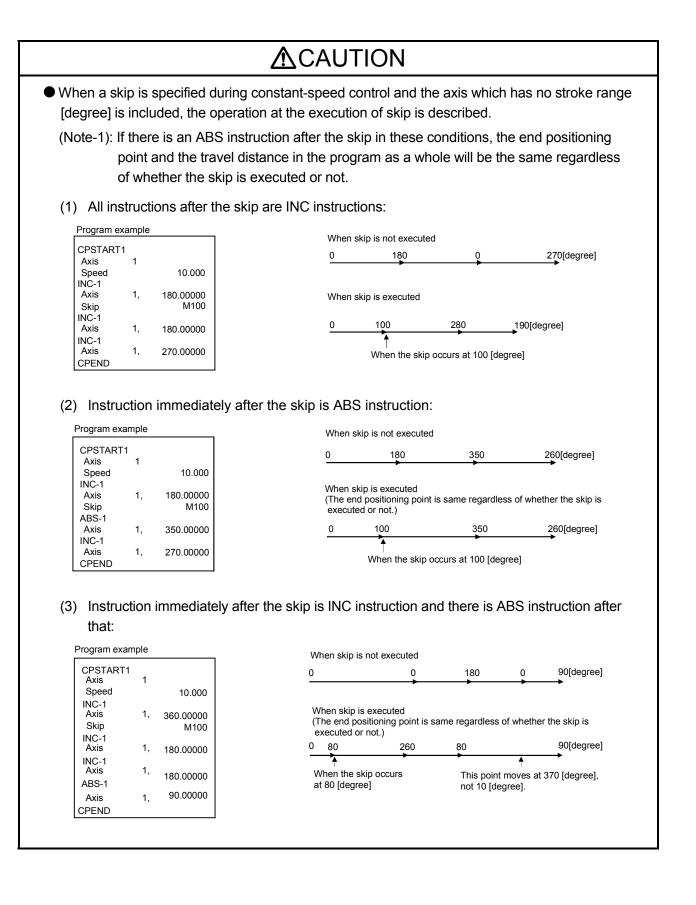

6.17.7 FIN signal wait function

	By selecting the FIN signal wait function and setting a M-code at each executing point, a process end of each executing point is synchronized with the FIN signal, the FIN signal turns ON to OFF and then the next positioning is executed. Turn the FIN signal on/off using the Motion SFC program or sequence program.
[Data setting]	 When the FIN signal wait function is selected, the fixed acceleration/deceleration time method is used. Set the acceleration/deceleration time within the range of 1 to 5000 [ms] by "FIN acceleration/deceleration" (selecting item) in the servo program. Indirect setting is also possible by the word devices (1 word).
[Cautions]	(1) If the acceleration/deceleration time is specified outside the setting range, the servo program setting error [13] will occur at the start and it is controlled with the acceleration/deceleration time of 1000[ms].
	(2) M-code outputting signal is output to all interpolation axes at the interpolation control. In this case, turn on the FIN signal for one of the interpolation axes.

- (3) When M-code is set at the end point, positioning ends after the FIN signal has turn OFF to ON to OFF.
- (4) When the FIN acceleration/deceleration (Fixed acceleration/deceleration time method) is set in the constant speed control, the setting for advanced S-curve acceleration/deceleration is invalid.

[Operation]

Servo program K0 for FIN signal wait function is shown below.


CPSTART	2		Vector speed/ \/ \
Axis	1		
Axis	2		Point X 1 XWAIT X 2 X
Speed		10000	
FIN		100	[[ms]
ABS-2			M-code X 10 X 11 X
Axis	1,	200000	
Axis	2,	200000	
M code		10	M-code outputting
ABS-2			
Axis	1,	300000	∮∕⊾ †]
Axis	2,	250000	FIN signal
M code		11	Explanatory
ABS-2			
Axis	1,	350000	1. When the positioning of point 1 starts, M-code 10 is output and
Axis	2,	300000	M-code outputting signal turns on.
M code		12	2. FIN signal turns on after performing required processing in the
ABS-2			Motion SFC program.
Axis	1,	400000	Transition to the next point does not execute until the FIN signal turns on.
Axis	2,	400000	
CPEND			 3. When the FIN signal turns on, M-code outputting signal turns off. 4. When the FIN signal turns off after the M-code outputting signal

[Program example]

(1) FIN signal wait function by the PLC program

(a) System configuration

FIN signal wait function toward constant-speed control for Axis 1 and Axis 2.

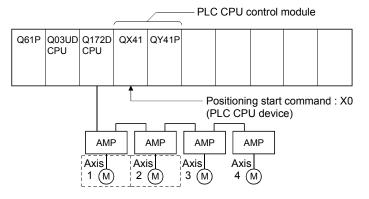


(b) Positioning conditions

1) Constant-speed control conditions are shown below.

lt	em	Setting											
Servo program	n No.	0											
Positioning spo	eed		10000										
FIN acceleration/de	eceleration time		100[ms]										
Positioning me	ethod	2 a	axes linear inte	erpolation cont	trol								
D	Axis 1	200000	300000	350000	400000								
Pass point			250000	300000	400000								
M-code		10	10 11 12										


2) Constant-speed control start command

.....X0 Leading edge (OFF \rightarrow ON) (PLC CPU device)

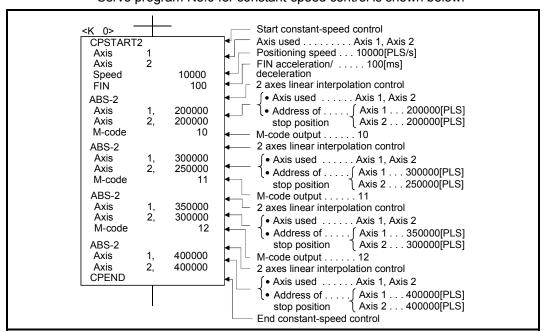

(c) Servo program
 Servo program No.0 for constant-speed control is shown below.


(d) Motion SFC program
 Motion SFC program for constant-speed control is shown below.

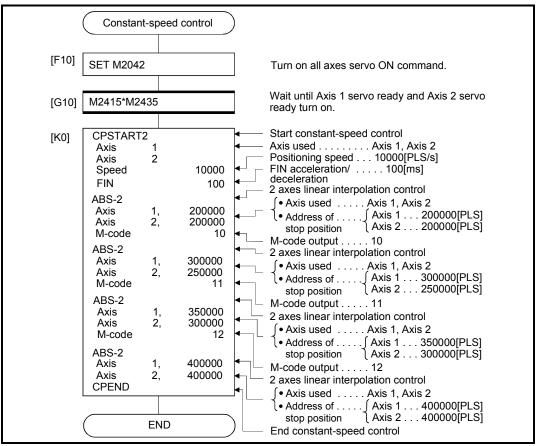

(Note): Example of the above Motion SFC program is started using the automatic start or sequence program.

6 POSITIONING CONTROL


(e) Sequence program Sequence program for FIN signal wait function is shown below.

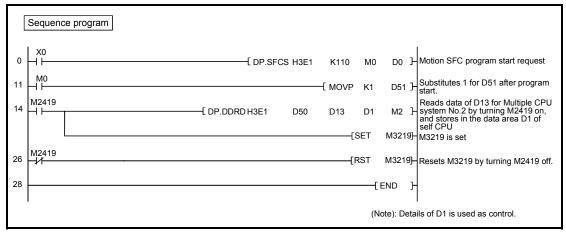


(Note): The automatic refresh setting example for FIN signal wait function is shown next page.


6 POSITIONING CONTROL

 (f) Parameter setting The automatic refresh setting example for FIN signal wait function is shown below.

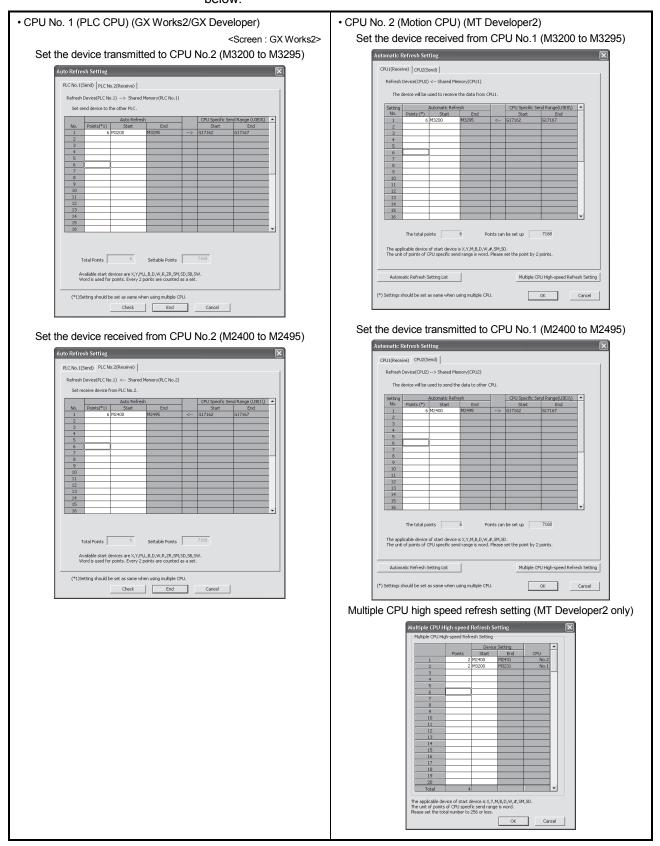

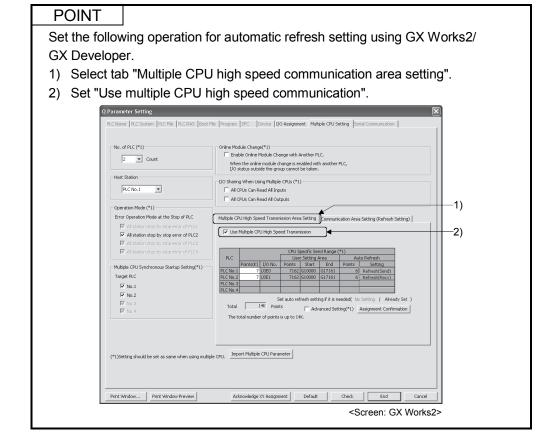

- (2) FIN signal wait function using the Motion SFC program(a) System configuration
 - FIN signal wait function toward constant-speed control for Axis 1 and Axis 2.

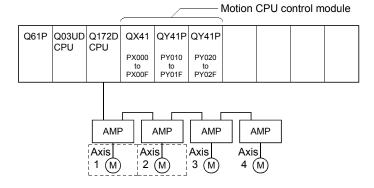


(b) Positioning conditions

1) Constant-speed control conditions are shown below.


lt	em	Setting											
Servo program	n No.	0											
Positioning spo	eed		10000										
FIN acceleration/de	eceleration time		100[ms]										
Positioning me	ethod	2 a	2 axes linear interpolation control										
	Axis 1	200000	300000	350000	400000								
Pass point			250000	300000	400000								
M-code		10	10 11 12										

2) Constant-speed control start command ... PX000 Leading edge (OFF \rightarrow ON)

- (c) Servo program
 - Servo program No.0 for constant speed control is shown below.

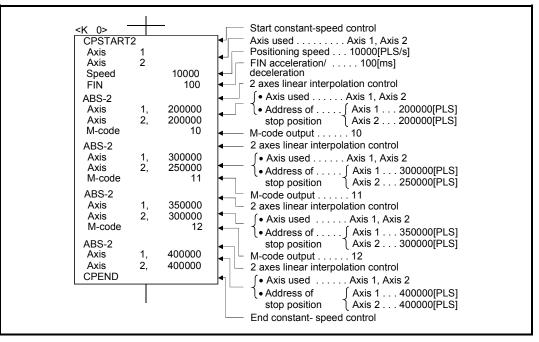

(Note): Example of the Motion SFC program for positioning control is shown next page.

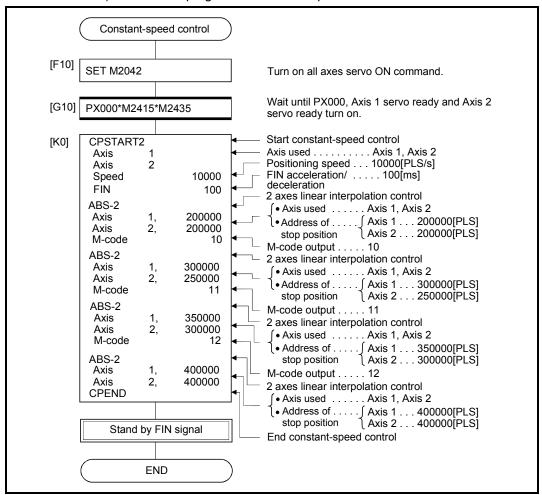


(d) Motion SFC program1) Motion SFC program for constant-speed control is shown below.

(Note): Example of the above Motion SFC program is started using the automatic start or sequence program.

FIN signal wait	(Note): Details of #0 is used as control.
FIN signal wait	
←P0	
[G10] M2419*M2439	Turn on Axis 1, Axis 2 M-code outputting signal.
[F10] #0=BCD(D13) DOUT Y20,#0 SET M3219	Output Axis 1 M-code. Turn on FIN signal.
[G20] <u>IM2419*IM2439*M2403*M2423</u>	Turn off Axis 1, Axis 2 M-code outputting signal and turn on Axis 1, Axis 2 command in-position signal.
[F20] RST M3219	Turn off FIN signal.
[G30]	→ P0 Repeat until M-code value become 12.
END	

2) Motion SFC program which outputs M-code of each point for constantspeed control to PY20 to PY2F by BCD code is shown below.

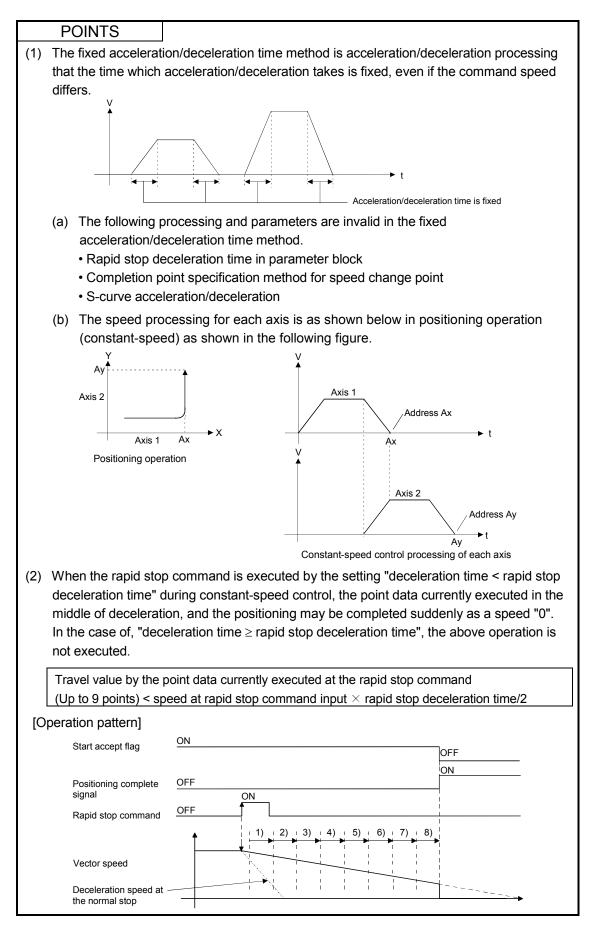

6.18 Position Follow-Up Control

Positioning to the address set in the word device of the Motion CPU specified with the servo program at one start is executed.


Position follow-up control is started using the PFSTART servo program instruction.

											ns s	et u	t using MT Developer2												
1			Common Arc Parameter block O										Oth	ers											
Servo instruction	Positioning method	Number of control axes	Parameter block No.	Axis	Address/travel value	Command speed	Dwell time	M-code	Torque limit value	Auxiliary point	Radius	Central point	Interpolation control unit	Speed limit value	Acceleration time	Deceleration time	Rapid Stop deceleration time	Torque limit value	Deceleration processing on stop input	Allowable error range for circular interpolation	S-curve ratio	Advanced S-curve acceleration/deceleration	Cancel	WAIT-ON/OFF	Speed change
PFSTART	Absolute	1	\triangle	0	0	0		\bigtriangleup						\bigtriangleup	\bigtriangleup	\bigtriangleup	\bigtriangleup	\bigtriangleup	\bigtriangleup		\triangle	\bigtriangleup	\bigtriangleup		Valid

 \bigcirc : Must be set \triangle : Set if required

[Control details]

- (1) Positioning to the address set in the word device of the Motion CPU specified with the servo program is executed.
- (2) Position follow-up control is executed until the stop instruction is input. If the word device value changes during operation, positioning is executed to the changed address.

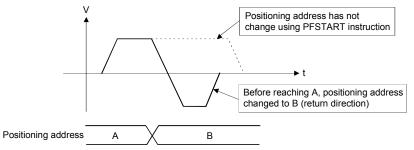

6 POSITIONING CONTROL

[Cautions]


- (1) Number of control axes is 1 axis.
- (2) Only the absolute data method (ABS□) is used for positioning control to the pass points.
- (3) The speed can be changed during the start. The changed speed is effective until the stop command is input.
- (4) Set the positioning address in the servo program using indirect setting with the word devices.
- Use only even-numbered devices for indirect setting of positioning address in the servo program.
 If odd-numbered devices are used, a minor error [141] occurs at the start and control does not start.
- (6) Positioning speeds can be set in the servo program using indirect setting with the word devices.
 However, this data is effective only at the position follow-up control start (servo program start) and the speed does not change if the indirect setting are changed

[Program]

(1) System configuration

during the start.

Axis 3 position follow-up control for PLC CPU (CPU No.1) to Motion CPU (CPU No.2).

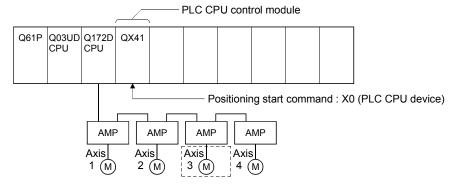

(2) Positioning conditions

(a) Position follow-up conditions are shown below.


Item	Setting
Servo program No.	100
Control axis	Axis 3
Positioning address	D4000
Positioning speed	20000

(b) Position follow-up control start command

..... X0 Leading edge (OFF \rightarrow ON) (PLC CPU device)


(3) Operation timing

Operation timing for position follow-up control is shown below.

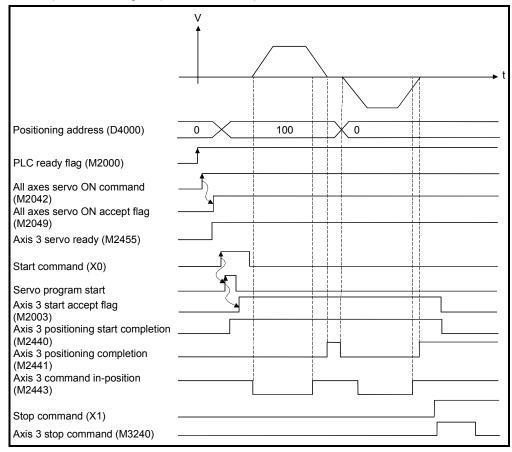

(4) Servo program

Servo program No.100 for position follow-up control is shown below.

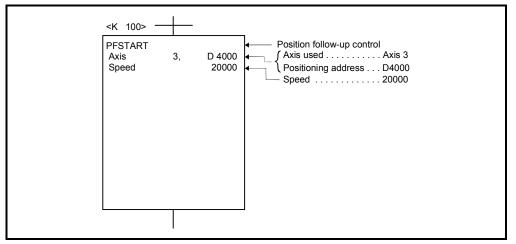


(Note): Example of the Motion SFC program for positioning control is shown next page.

(5) Motion SFC program

Motion SFC program, sequence program and parameter setting for position follow-up control is shown below.

(a) Motion SFC program
 Motion SFC program example for position follow-up control is shown below.
 This program is started using D(P).SFCS instruction from PLC CPU (CPU No.1).

Pos	ition follow-up control	
	Position follow-up control	
[F10]	SET M2042	Turn on all axes servo ON command.
[G10]	M2049*M2455	Wait until all axes servo ON accept flag and Axis 3 servo ready turn on.
[K100]	PFSTART Axis 3, D4000 Speed 20000PLS/s	 Position follow-up control Axis used Axis 3 Positioning address D4000 Positioning speed 2000[PLS/s]
[G20]	!M2003	Wait until Axis 3 start accept flag turn off after position follow-up control completion.
	END	

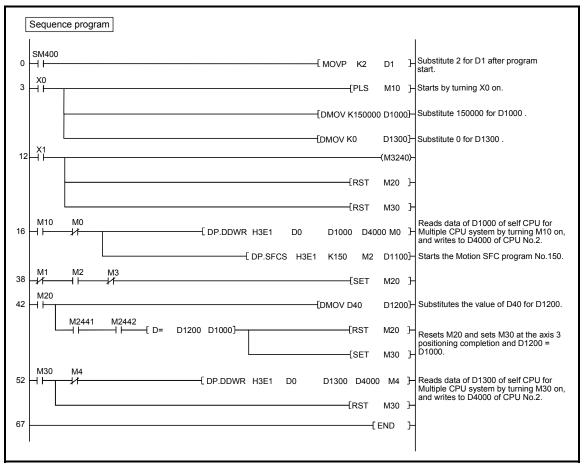


(b) Sequence program
 Sequence program example for position follow-up control is shown below.

(Note): The automatic refresh setting example for position follow-up control is shown next page.

(c) Parameter setting

The automatic refresh setting example for position follow-up control is shown below.


[Allocation example of devices allocated in the Motion dedicated device to the PLC CPU]

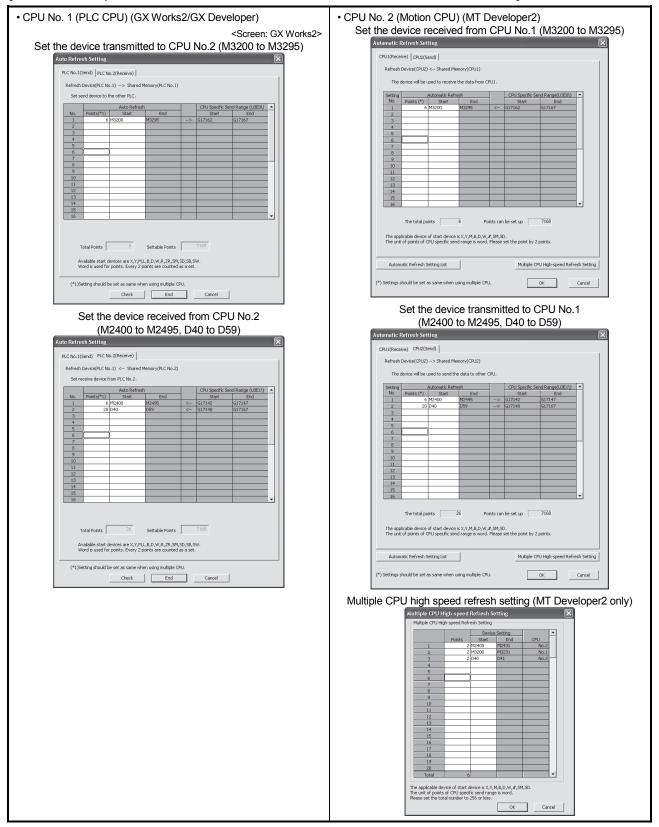



Set the following operation for automatic refresh setting using GX Works2/GX Developer.

- 1) Select tab "Multiple CPU high speed communication area setting".
- 2) Set "Use multiple CPU high speed communication".

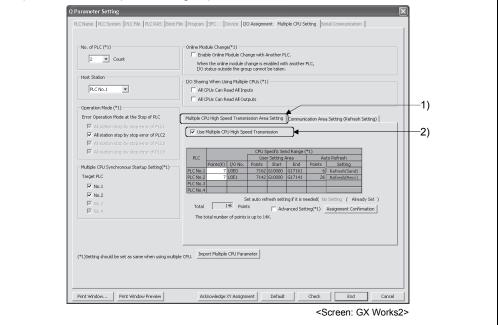

6.19 Speed Control with Fixed Position Stop


Speed control with fixed position stop of the specified axis is executed. Speed control with fixed position stop is started using the PVF (forward rotation) or PVR (reverse rotation) of servo program instruction.

											Ite	ns s	et u	sing	MT	Dev	elope	er2									
				Common Arc/Helical Parameter block											Oth												
Servo instruction	Positioning method	Number of control axes	Parameter block No.	Axis	Address/travel value	Command speed	Dwell time	M-code	Torque limit value	Auxiliary point	Radius	Central point	Interpolation control unit	Speed limit value	Acceleration time	Deceleration time	Rapid Stop deceleration time	Torque limit value	Deceleration processing on stop input	Allowable error range for circular interpolation	S-curve ratio	Advanced S-curve acceleration/deceleration	Cancel	WAIT-ON/OFF	Fixed position stop accel./decel.time	Fixed position stop	Speed change
PVF PVR	Absolute	1	\bigtriangleup	0	0	0	\bigtriangleup	\bigtriangleup						\bigtriangleup		\bigtriangleup	\bigtriangleup	\bigtriangleup	\bigtriangleup		\bigtriangleup	\bigtriangleup	\bigtriangleup		0	0	Valid

 \bigcirc : Must be set \triangle : Set if required


[Control details]

- (1) After starting of servomotor, control at the specified speed is executed until the fixed position stop command turns on.
 - PVF..... Forward rotation direction (Address increase direction) start
 - PVR..... Reverse rotation direction (Address decrease direction) start
- (2) When the fixed position stop command turns on, a positioning control to the specified address is executed.

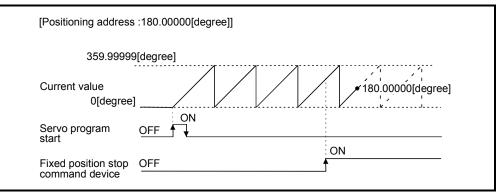


(3) It can be controlled in the real mode only for axis which "control unit is [degree] and stroke limit is invalid ("upper stroke limit value" equal to "lower stroke limit value")". If it is started for axis which "control unit is except [degree] or stroke limit is not invalid", a minor error [130] occurs and it does not start. And, if it is started for the virtual servomotor axis in the virtual mode, a servo program setting error [905] occurs and it does not start. (It can be started for real mode axis.)

- (4) Address setting range is 0 to 35999999 (0 to 359.99999[degree]) in the indirect setting of positioning address. If it is set outside the setting range, a servo program setting error [n03] occurs and it does not start. Positioning address is input at the program start.
- (5) It is controlled in the fixed position stop acceleration/deceleration time set in the servo program at positioning start, speed change request (CHGV) and fixed position stop command ON. The fixed acceleration/deceleration time method is used as an acceleration/deceleration processing in this case.
- (6) The setting range of fixed position stop acceleration/deceleration time is 1 to 65535[ms].
- (7) In the case of indirect setting, the fixed position stop acceleration/deceleration time is input in the following timing.
 - Positioning start
 - Speed change request (CHGV)
 - Fixed position stop command ON
- (8) When the positioning to specified address completes, the positioning complete signal (M2401+20n) turns on. It does not turn on at the time of stop by the stop command (M3200+20n)/rapid stop command (M3201+20n). The positioning complete signal (M2401+20n) turns off at leading edge of complete signal OFF command (M3204+20n) or positioning start.
- (9) Speed change can be executed any number of times by the speed change request (CHGV) instruction during operation.

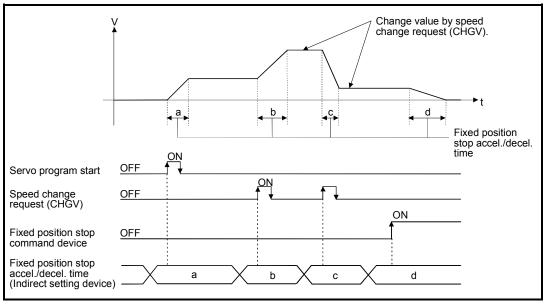


 (10) Deceleration speed by the stop command (M3200+20n)/rapid stop command (M3201+20n) is controlled with fixed inclination (deceleration speed).
 Deceleration processing is executed using the speed limit value or deceleration/ rapid stop deceleration time set in the parameter block.

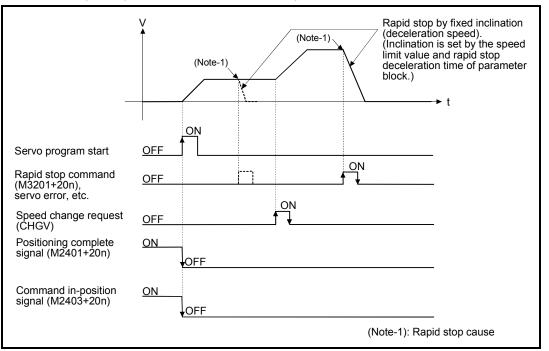

- (11) When the fixed position stop command turns on, the command in-position check starts. When the absolute value of difference between the setting address and feed current value below the "command in-position range" set in the fixed parameter, the command in-position signal (M2403+20n) turns on. The command in-position signal (M2403+20n) turns on by a positioning start.
- (12) In any of the following cases, positioning is executed at the speed that was specified by the speed limit value.
 - Speed control with fixed position stop is started with the fixed position stop command turned ON.
 - The fixed position stop command is turned ON after a speed change to "0".

Program for speed control with fixed position stop is shown as the following conditions. (1) System configuration

Speed control with fixed position stop for "Axis 1".

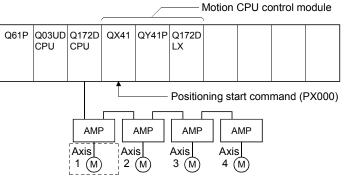

[Program]

(2) Positioning conditions

(a) Speed control with fixed position stop conditions are shown below.


Item	Setting
Servo program No.	55
Start direction	Forward
Control axis	Axis 1
Positioning address	120.00000[degree]
Control speed	30000[degree/min]
Acceleration/deceleration time	20ms
Fixed position stop command device	M100

(c) Speed control with fixed position stop command

..... PX000 Trailing edge (ON ightarrow OFF)


(3) Operation timing

Operation timing for speed control with fixed position stop is shown below.

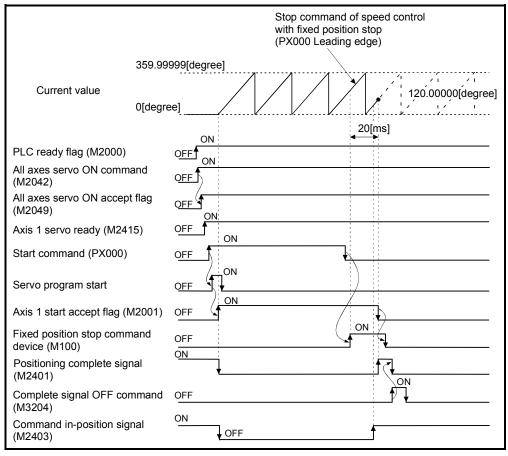

(4) Servo program

Servo program No.55 for speed control with fixed position stop is shown below.

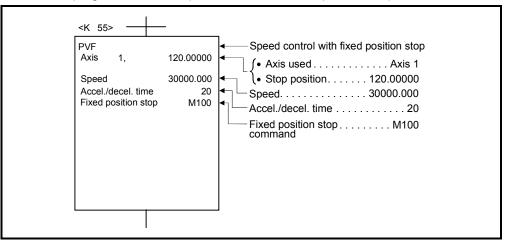

(5) Motion SFC program

Motion SFC program for which executes the servo program is shown below.

	Speed control with fixed position stop	
	Speed control with fixed position stop	
[F10]	SET M2042	Turn on all axes servo ON command.
[G10]	PX000*M2415	Wait until PX000, Axis 1 servo ready turn on.
[K55]	PVF Axis 1, 120.00000 degree Speed 30000.000 degree/min Accel./decel. time 20 ms Fixed position stop M100	Fixed position stop with speed control start • Axis used Axis 1 • Stop position 120.00000 • Speed 30000.000 • Accel./decel. time 20 Fixed position stop command M100
[G20]	!PX000	Wait until PX000 turn off after speed control with fixed position stop start.
[F20]	SET M100	Turn on fixed position stop command.
[G30]	!M2001	Wait until Axis 1 start accept flag turn off.
[F30]	RST M100	Turn off fixed position stop command.
	END	

(Note): Example of the above Motion SFC program is started using the automatic start or sequence program.

6 POSITIONING CONTROL

6.20 Simultaneous Start

		Simultaneou								3 -					••••	• r		9. 0.							
										Iter	ns s	et us	sing	MT I	Deve	elope	er2								
					Сс	mm	on				Arc					Para	amet	er b	lock				Oth	ners	
Servo	Positioning method	Number of control axes	Parameter block No.	Axis	Address/travel value	Command speed	Dwell time	M-code	Torque limit value	Auxiliary point	Radius	Central point	Interpolation control unit	Speed limit value	Acceleration time	Deceleration time	Rapid Stop deceleration time	Torque limit value	Deceleration processing on stop input	Allowable error range for circular interpolation	S-curve ratio	Advanced S-curve acceleration/deceleration	Others	Program No.	Speed change
START	*	*																						0	*

Simultaneous start of the specified servo program at one start is executed. Simultaneous start is started using the START servo program instruction.

 \bigcirc : Must be set

* : It changes by the servo program for simultaneous start.

[Control details]

Control using START instruction

- (1) Simultaneous start of the specified servo programs is executed.
- (2) The servo program except for the simultaneous start (START instruction) can be specified.
- (3) Up to 3 servo programs can be specified.
- (4) Each axis is controlled using the specified servo program after the simultaneous start.

[Cautions]

(1) A check is made at the start. An error occurs and operation does not start in the following cases.


Глин		Stored codes						
Error	Error processing	SD516	SD517					
Specified servo program does not exist.	Con a program patting							
START instruction is set as the specified servo program.	Servo program setting error flag (SM516): ON	Erroneous program No. of simultaneous start.	19					
The specified servo program start axis is already used.								
A servo program cannot start by an error.	Start accept flag (M2001+n): OFF	Erroneous program No. of program specified with simultaneous start.	Error Item data (Refer to Section 3.5)					

(2) The servo program No. specified using START instruction cannot be set indirectly.

[Program]

Program for simultaneous start is shown as the following conditions. (1) System configuration

Simultaneous start for "Axis 1 and Axis 2", Axis 3 and Axis 4.

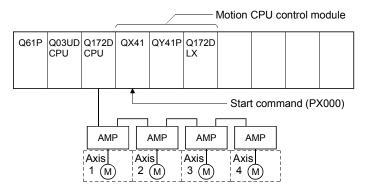

(2) Number of specified servo programs and program No.

- (a) Number of specified servo programs : 3
- (b) Specified servo program No. are shown below.

Servo Program No.	Used axis	Control Details
No.1	Axis 1, Axis 2	Circular interpolation control
No.14	Axis 3	Speed control
No.45	Axis 4	Home position return control


(3) Start conditions

- (a) Simultaneous start servo program No. No.121
- (b) Simultaneous start execute command PX000 Leading edge

 $(OFF \rightarrow ON)$

(4) Servo program


Servo program No.121 for simultaneous start is shown below.

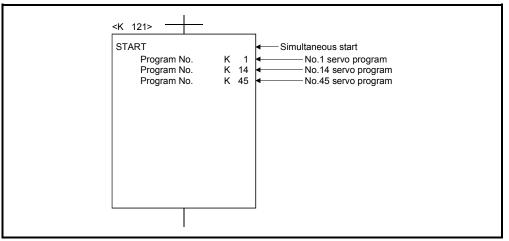

(Note): Example of the Motion SFC program for positioning control is shown next page.

(5) Motion SFC program

Motion SFC program for which executes the servo program is shown below.

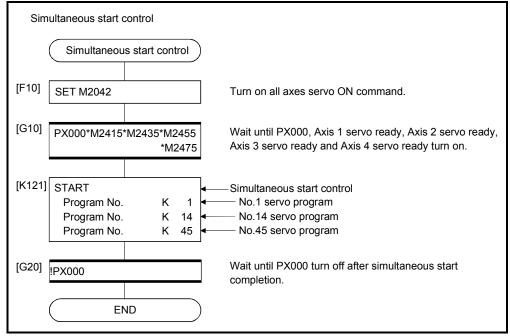

(Note): Example of the above Motion SFC program is started using the automatic start or sequence program.

6.21 JOG Operation

The setting JOG operation is executed. Individual start or simultaneous start can be used in the JOG operation. JOG operation can be executed using the Motion SFC program or test mode of MT Developer2. (Refer to the help of MT Developer2 for JOG operation method in the test mode of MT Developer2.) JOG operation data must be set for each axis for JOG operation. (Refer to Section 6.21.1.)

6.21.1 JOG operation data

JOG operation data is the data required to execute JOG operation. Set the JOG operation data using MT Developer2.

					Settir	ng range								
No.	Item	mm		inch		degree	;	PLS		Initial	Units	Remarks	Explanatory	
INO.	llem	Setting range	Units	Setting range	Units	Setting range	Units	Setting range	Units	value	Units	Renarks	section	
1	JOG speed limit value	0.01 to 6000000.00	mm /min	0.001 to 600000.000	inch /min	0.001 to 2147483.647 (Note-1)	degree /min	1 to 2147483647	PLS /s	20000	PLS /s	 Sets the maximum speed at the JOG operation. If JOG speed setting exceeds the JOG speed limit value, it is controlled with JOG speed limit value. 	_	
2	Parameter block setting				1	to 64				1	_	• Sets the parameter block No. to be used at the JOG operation.	4.3	


Table 6.2 JOG operation data list

(Note-1): When the "speed control 10×multiplier speed setting for degree axis" is set to "valid", the setting range is 0.01 to 21474836.47[degree/min].

(1) JOG operation data check

A relative check of the JOG operation data is executed at the following timing:

- JOG operation Individual start
- JOG operation simultaneous start
- JOG operation request
- (2) Data error processing
 - · Only data for which detected errors is controlled as default value.
 - The error code corresponding to each data for erroneous axis is stored in the data register.

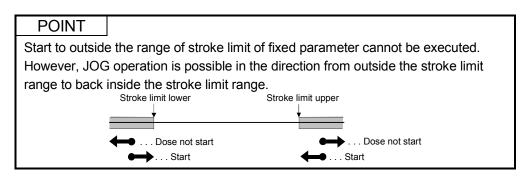

6.21.2 Individual start

JOG operation for the specified axes is started.


JOG operation is executed by the following JOG start commands:

- Forward JOG start command M3202+20n
- Reverse JOG start command M3203+20n

[Control details]

 JOG operation continues at the JOG speed setting register value while the JOG start command turns on, and a deceleration stop is made by the JOG start command OFF.

Control of acceleration/deceleration is based on the data set in JOG operation data.

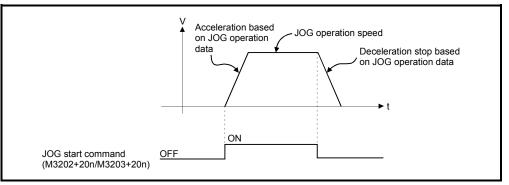

JOG operation for axis for which JOG start command is turning on is executed.

	100		100					Settin	g range			
Axis	JOG op	beration	JOG speed s	etting register	mm		inch		degree	9	PLS	
No. (Note-2)	Forward JOG	Reverse JOG	Most significant	Least significant	Setting range	Units	Setting range	Units	Setting range	Units	Setting range	Units
1	M3202	M3203	D641	D640								
2	M3222	M3223	D643	D642								
3	M3242	M3243	D645	D644								
4	M3262	M3263	D647	D646								
5	M3282	M3283	D649	D648								
6	M3302	M3303	D651	D650								
7	M3322	M3323	D653	D652								
8	M3342	M3343	D655	D654								
9	M3362	M3363	D657	D656								
10	M3382	M3383	D659	D658								
11	M3402	M3403	D661	D660								
12	M3422	M3423	D663	D662								
13	M3442	M3443	D665	D664								
14	M3462	M3463	D667	D666								PLS/s
15	M3482	M3483	D669	D668		× 10 ⁻²		× 10 ⁻³		imes 10 ⁻³		
16	M3502	M3503	D671	D670	1 to		1 to		1 to	degree	2147483647	
17	M3522	M3523	D673	D672	60000000	mm /min	60000000	inch /min	2147483647	/min (Note-1)		
18	M3542	M3543	D675	D674		,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,		/				
19	M3562	M3563	D677	D676								
20	M3582	M3583	D679	D678								
21	M3602	M3603	D681	D680								
22	M3622	M3623	D683	D682								
23	M3642	M3643	D685	D684								
24	M3662	M3663	D687	D686								
25	M3682	M3683	D689	D688								
26	M3702	M3703	D691	D690								
27	M3722	M3723	D693	D692								
28	M3742	M3743	D695	D694								
29	M3762	M3763	D697	D696								
30	M3782	M3783	D699	D698								
31	M3802	M3803	D701	D700								
32	M3822	M3823	D703	D702								

(2) The setting range for JOG speed setting registers are shown below.

(Note-1): When the "speed control 10 \times multiplier setting for degree axis" is set to "valid" in the fixed parameter, the unit is " \times 10⁻²[degree/min]". (Note-2): The following is valid.

• Q172DSCPU : Axis No. to 16

• Q172DCPU(-S1): Axis No. to 8

POINT

When the JOG operation speed is set in the Motion SFC program, stores a value which is 100 times the real speed in units of [mm] or 1000 times the speed in units of [inch] or [degree] in the JOG speed setting register.


- ---- Example -----
- If JOG operation speed of 6000.00[mm/min] is set, stores the value "600000" in the JOG speed setting register.

(Note): Store a value which is 100 times the real speed in the JOG speed setting register for the "degree axis control $10 \times$ multiplier speed setting valid".


[Cautions]

 If the forward JOG start command (M3202+20n) and reverse JOG start command (M3203+20n) turn on simultaneously for a single axis, the forward JOG operation is executed.

When a deceleration stop is made by the forward JOG start command OFF the reverse JOG operation is not executed even if the reverse JOG start command is ON. After that, when the reverse JOG start command turns off to on, the reverse JOG operation is executed.

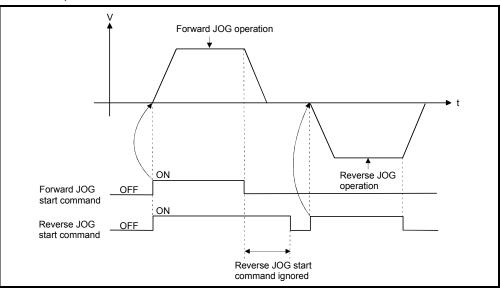


(2) If the JOG start command (M3202+20n/M3203+20n) turns on during deceleration by the JOG start command OFF, after deceleration stop, JOG operation is not executed.

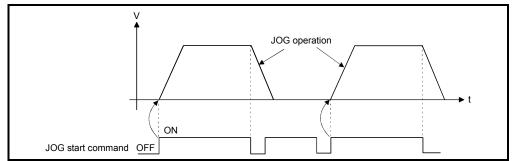

After that, the JOG operation is executed by the JOG start command OFF to ON.


 (3) JOG operation by the JOG start command (M3202+20n/M3203+20n) is not executed during the test mode using MT Developer2.
 After release of test mode, the JOG operation is executed by turning the JOG start command off to on.

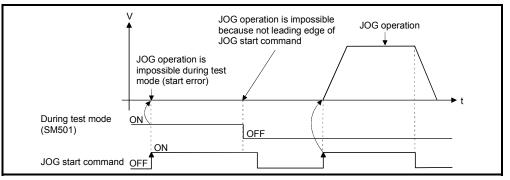

[Program]

Program for JOG operation is shown as the following conditions. (1) System configuration


JOG operation for Axis 1 and Axis 2.

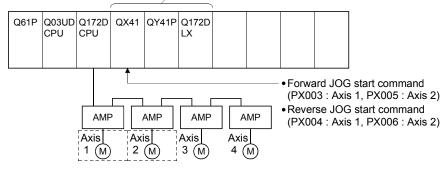

- (2) JOG operation conditions
 - (a) Axis No. Axis 1, Axis 2
 - (b) JOG start speed 100000 (1000.00[mm/min])
 - (c) JOG start commands
 - 1) Forward JOG start Axis 1: PX003 ON, Axis 2: PX005 ON
 - 2) Reverse JOG start Axis 1: PX004 ON, Axis 2: PX006 ON

(3) Motion SFC program

Motion SFC program for which executes JOG operation is shown below.

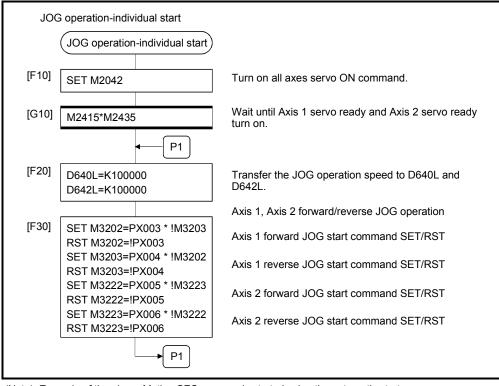

(Note): Example of the above Motion SFC program is started using the automatic start or sequence program.

6 POSITIONING CONTROL


6.21.3 Simultaneous start

[Control details]


Simultaneous start JOG operation for specified multiple axes.

 JOG operation continues at the JOG speed setting register value for each axis while the JOG operation simultaneous start command (M2048) turns on, and a deceleration stop is made by the M2048 OFF.
 Control of acceleration/deceleration is based on the data set in the JOG operation



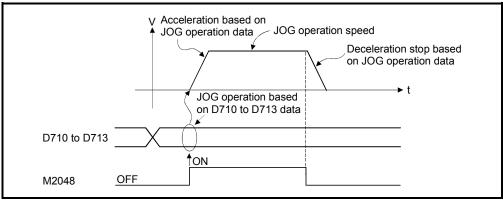

(2) JOG operation axis is set in the JOG operation simultaneous start axis setting register (D710 to D713).

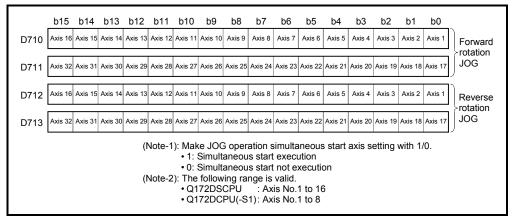

Auto	JOG or	oration		etting register				Settin	g range			
Axis	10G of	beration	JOG speed s	etting register	mm		inch		degree	e	PLS	
No. (Note-2)	Forward JOG	Reverse JOG	Most significant	Least significant	Setting range	Units	Setting range	Units	Setting range	Units	Setting range	Units
1	M3202	M3203	D641	D640								
2	M3222	M3223	D643	D642								
3	M3242	M3243	D645	D644								
4	M3262	M3263	D647	D646								
5	M3282	M3283	D649	D648								
6	M3302	M3303	D651	D650								
7	M3322	M3323	D653	D652								
8	M3342	M3343	D655	D654								
9	M3362	M3363	D657	D656								
10	M3382	M3383	D659	D658								
11	M3402	M3403	D661	D660								
12	M3422	M3423	D663	D662								
13	M3442	M3443	D665	D664								
14	M3462	M3463	D667	D666								
15	M3482	M3483	D669	D668		× 10 ⁻²		× 10 ⁻³		imes 10 ⁻³		PLS/s
16	M3502	M3503	D671	D670	1 to		1 to		1 to	degree	1 to 2147483647	
17	M3522	M3523	D673	D672	60000000	mm /min	60000000	inch /min	2147483647	/min (Note-1)		
18	M3542	M3543	D675	D674		/11111		//////				
19	M3562	M3563	D677	D676								
20	M3582	M3583	D679	D678								
21	M3602	M3603	D681	D680								
22	M3622	M3623	D683	D682								
23	M3642	M3643	D685	D684								
24	M3662	M3663	D687	D686								
25	M3682	M3683	D689	D688								
26	M3702	M3703	D691	D690								
27	M3722	M3723	D693	D692								
28	M3742	M3743	D695	D694								
29	M3762	M3763	D697	D696								
30	M3782	M3783	D699	D698								
31	M3802	M3803	D701	D700								
32	M3822	M3823	D703	D702								

(3) The setting range for JOG speed setting registers are shown below.

(Note-1): When the "speed control $10 \times$ multiplier setting for degree axis" is set to "valid" in the fixed parameter, the unit is " $\times 10^{-2}$ [degree/min]". (Note-2): The following is valid.


• Q172DSCPU : Axis No.1 to 16

• Q172DCPU(-S1): Axis No.1 to 8

[Program]

Program for simultaneous start of JOG operations are shown as the following conditions.

(1) System configuration JOG operation for Axis 1 and Axis 2.

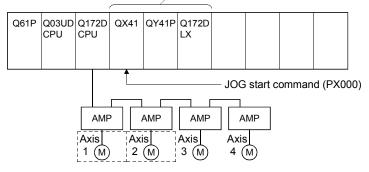

(2) JOG operation conditions


(a) JOG operation conditions are shown below.

Item	JOG operation	on conditions
Axis No.	Axis 1	Axis 2
JOG operation speed	150000	150000

(b) JOG start command During PX000 ON

(3) Motion SFC program

Motion SFC program for which executes the simultaneous start of JOG operation is shown below.

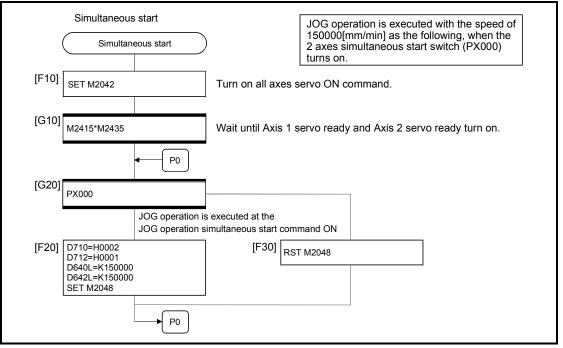


(Note): Example of the above Motion SFC program is started using the automatic start or sequence program.

6.22 Manual Pulse Generator Operation

Positioning control based on the number of pulses inputted from the manual pulse generator is executed.

Simultaneous operation for 1 to 3 axes is possible with one manual pulse generator, the number of connectable modules are shown below.



POINT

 When two or more Q173DPXs are installed, connect the manual pulse generator to first (It counts from 0 slot of the main base) Q173DPX.

(When the manual pulse generator is used, only first Q173DPX is valid.)

[Control details]

 Positioning of the axis set in the manual pulse generator axis setting register based on the pulse input from the manual pulse generator. Manual pulse generator operation is only valid while the manual pulse generator enable flag turn ON.

Manual pulse generator	Manual pulse generator	Manual pulse generator
connecting position	axis No. setting register	enable flag
P1	D714, D715	M2051
P2	D716, D717	M2052
P3	D718, D719	M2053

- (2) The travel value and output speed for positioning control based on the pulse input from manual pulse generator are shown below.
 - (a) Travel value

The travel value based on the pulse input from a manual pulse generator is calculated using the following formula.

[Travel value] = [Travel value per pulse] × [Number of input pulses] × [Manual pulse generator 1- pulse input magnification setting]

The travel value per pulse for manual pulse generator operation is shown below.

Unit	Travel value					
mm	0.1 [µm]					
inch	0.00001 [inch]					
degree	0.00001 [degree]					
PLS	1 [PLS]					

If units is [mm], the command travel value for input of one pulse is: $(0.1[\mu m]) \times (1[PLS]) \times (Manual pulse generator 1- pulse input magnification setting)$

(b) Output speed

The output speed is the positioning speed corresponding to the number of pulses input from a manual pulse generator in unit time.

[Output speed] = [Number of input pulses per 1[ms]] × [Manual pulse generator 1- pulse input magnification setting]

- (3) Setting of the axis operated by the manual pulse generator The axis operated by the manual pulse generator is set in the manual pulse generator axis setting register (D714 to D719). The bit corresponding to the axis controlled (1 to 32) is set.
- (4) Manual pulse generator 1- pulse input magnification setting Make magnification setting for 1- pulse input from the manual pulse generator for each axis.

1- pulse input magnification setting register	Applicable axis No. (Note-1)	Setting range
D720	Axis 1	
D721	Axis 2	
D722	Axis 3	
D723	Axis 4	
D724	Axis 5	
D725	Axis 6	
D726	Axis 7	
D727	Axis 8	
D728	Axis 9	
D729	Axis 10	
D730	Axis 11	
D731	Axis 12	
D732	Axis 13	
D733	Axis 14	
D734	Axis 15	
D735	Axis 16	4 1- 40000
D736	Axis 17	1 to 10000
D737	Axis 18	
D738	Axis 19	
D739	Axis 20	
D740	Axis 21	
D741	Axis 22	
D742	Axis 23	
D743	Axis 24	
D744	Axis 25	
D745	Axis 26	
D746	Axis 27	
D747	Axis 28	
D748	Axis 29	
D749	Axis 30	
D750	Axis 31	
D751	Axis 32	

(Note-1): The following range is valid.

• Q172DSCPU : Axis No.1 to 16


• Q172DCPU(-S1) : Axis No.1 to 8

(Note): The manual pulse generator does not have the speed limit value, so they set the magnification setting within the related speed of servomotor.

- (5) The setting manual pulse generator 1- pulse input magnification checks the "1pulse input magnification setting registers of the manual pulse generator" of the applicable axis at leading edge of manual pulse generator enable flag. If the value is outside of range, the manual pulse generator axis setting error register (SD513 to SD515) and manual pulse generator axis setting error flag (SM513) are set and a value of "1" is used for the magnification.
- (6) Manual pulse generator smoothing magnification setting A magnification to smooth leading edge/trailing edge of manual pulse generator operation is set.

Manual pulse generator smoothing magnification setting register	Setting range
Manual pulse generator 1 (P1): D752	
Manual pulse generator 2 (P2): D753	0 to 59
Manual pulse generator 3 (P3): D754	

(a) Operation

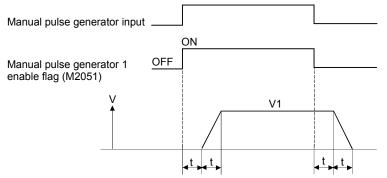

Output speed (V1) = [Number of input pulses/ms] × [Manual pulse generator 1- pulse input magnification setting]

- Travel value (L) = [Travel value per pulse] × [Number of input pulses] × [Manual pulse generator 1-pulse input magnification setting]
- (b) When the smoothing magnification is set, the smoothing time constant is as following formula.

Smoothing time constant (t) = (Smoothing magnification + 1) \times 56.8 [ms]

REMARK

The smoothing time constant is within the range of 56.8 to 3408 [ms].

(7) Errors details at the data setting for manual pulse generator operation are shown below.


Error details	Error processing
Axis setting is 4 axes or more	Manual pulse generator operation is executed according to valid for 3 axes from the lowest manual pulse generator axis setting register.
All of bit is "0" for the effective axis No. of manual pulse generator axis No. setting register.	Manual pulse generator operation is not executed.

[Cautions]

- The start accept flag turns on for axis during manual pulse generator operation. Positioning control or home position return cannot be started using the Motion CPU or MT Developer2. Turn off the manual pulse generator enable flag after the manual pulse generator operation end.
- (2) When the torque limit value is not specified with D(P).CHGT (torque limit value change request instruction form the PLC CPU to the Motion CPU), D(P).CHGT2 (torque limit value individual change request instruction form the PLC CPU to the Motion CPU) (CPU) (C

The torque limit value is fixed at 300[%] during manual pulse generator operation.


(3) If the manual pulse generator enable flag turns on for the starting axis by positioning control or JOG operation, a minor error [214] is set to the applicable axis and manual pulse generator input is not enabled. After the axis has been stopped, the leading edge of manual pulse generator enable flag becomes valid, the start accept flag turns on by the manual pulse generator input enabled status, and input from the manual pulse generator is input.

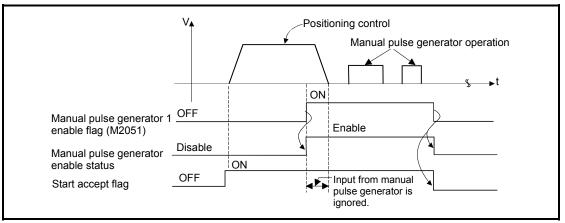

- (4) If the manual pulse generator enable flag of another manual pulse generator No. turns on for axis during manual pulse generator operation, a minor error [214] is set to the applicable axis and the input of that manual pulse generator is not enabled. Turn the manual pulse generator enable flag on again after stopping the manual pulse generator operation which had become input enable previously.
- (5) If the manual pulse generator enable flag turns on again for axis during smoothing deceleration after manual pulse generator enable flag turns off, a minor error [214] is set and manual pulse generator input is not enabled. Turn the manual pulse generator enable flag on after smoothing deceleration stop (after the start accept flag OFF).
- (6) If another axis is set and the same manual pulse generator enable flag turns on again during smoothing deceleration after manual pulse generator enable flag turns off, the manual pulse generator input is not enabled. At this time, the manual pulse generator axis setting error bit of the manual pulse generator axis setting error storage register (SD513 to SD515) turns on, and the manual pulse generator axis setting error flag (SM513) turns on. Include the start accept flag OFF for specified axis in interlocks as the conditions which turn on the manual pulse generator enable flag.

[Procedure for manual pulse generator operation]

Procedure for manual pulse generator operation is shown below.

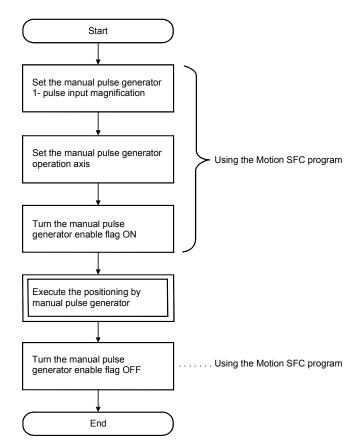


[Program]

Program executes manual pulse generator operation is shown as the following conditions.

(1) System configuration

Manual pulse generator operation of Axis 1 and Axis 2.

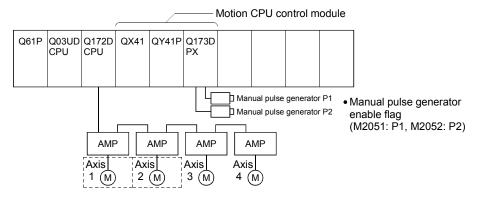


(2) Manual pulse generator operation conditions

- (a) Manual pulse generator operation axis.....Axis 1, Axis 2
- (b) Manual pulse generator 1- pulse input magnification...... 100
- (c) Manual pulse generator operation enableM2051 (Axis 1)/
 - M2052 (Axis 2) ON
- (d) Manual pulse generator operation endM2051 (Axis 1)/ M2052 (Axis 2) OFF

(3) Motion SFC program

Motion SFC program for manual pulse generator operation is shown below.

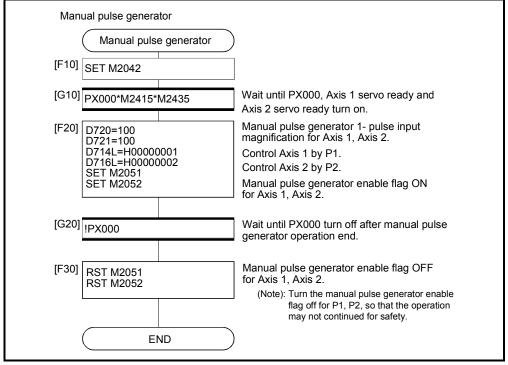

(Note): Example of the above Motion SFC program is started using the automatic start or sequence program.

6.23 Home Position Return

- (1) Use the home position return at the power supply ON and other times where decision of axis is at the machine home position is required.
- (2) The following seven methods for home position return are shown below.
 - Proximity dog type
 - Count type
 - Data set type
 - Dog cradle type
 - Stopper type
 - Limit switch combined type
 - Scale home position signal detection type Ver
 - Dogless home position signal reference type Ver.
- (3) The home position return data must be set for each axis to execute the home position return.

Ver. : Refer to Section 1.3 for the software version that supports this function.

Home positio	n return methods	Contents	Applications
Proximity dog	Proximity dog type 1	 Home position is zero point of servo motor. When the proximity dog is ON, it cannot be started. 	 It is used in the system which can surely pass a zero point from the home position return start to proximity dog ON → OFF.
type	Proximity dog type 2	 Home position is zero point of servo motor. When the proximity dog is ON, it can be started. 	 This method is valid when the stroke range is short and "proximity dog type 1" cannot be used.
	Count type 1	Home position is zero point of servo motor.	 It is used in the system which can surely pass a zero point from the home position return start to point of travel distance set as "travel value after proximity dog ON".
Count type	Count type 2	Zero point is not used in the home position return.	 This method is used when the proximity dog is near the stroke end and the stroke range is narrow.
	Count type 3	Home position is zero point of servo motor.	 This method is valid when the stroke range is short and "count type 1" cannot be used.
Data set type	Data set type 1	 Home position is command position of Motion CPU. 	 External input signals such as dog signal are not set in the absolute position system. This method is valid for the data set independent of a deviation counter value.
	Data set type 2	Home position is real position of servo motor.	 External input signals such as dog signal are not set in the absolute position system.
Dog cradle type	9	 Home position is zero point of servo motor immediately after the proximity dog signal ON. 	 It is easy to set the position of proximity dog, because the proximity dog is set near the position made to the home position.
	Stopper type 1	 Home position is position which stopped the machine by the stopper. Proximity dog is used. 	 This method is valid to improve home position accuracy in order to make the home position for
Stopper type	Stopper type 2	 Home position is position which stopped the machine by the stopper. Proximity dog is not used. 	the position which stopped the machine by the stopper.
Limit switch co	nbined type	 Home position is zero point of servo motor. Proximity dog is not used. External limit switch is surely used. 	 It is used in a system where the proximity dog signal cannot be used and only external limit switch can be used.
Scale home position signal detection type		 Proximity dog is positioned to overlap with the limit switch. The travel direction is reversed at the proximity dog ON, and home position is encoder zero point after reversal. 	 This method is valid to make the home position for the load side at the linear motors or direct drive motors use.
Dogless home position signal reference type		 Home position is zero point of servo motor. Proximity dog is not used. Home position return operation differs by servo amplifier. 	 It is used in a system where proximity dog signal cannot be used and stops at the zero point of servo motor.

(4) Select the optimal home position return method for the system configuration and applications with reference to the following.

Ver.! : Refer to Section 1.3 for the software version that supports this function.

6.23.1 Home position return data

This data is used to execute the home position return. Set this data using MT Developer2.

	Setting range											
		mm		inch	Seully	degree	•	PLS		Initial		
No.	ltem	Setting range	Units	Setting range	Units	Setting range	Units	Setting range Units		value	Units	
1	Home position return direction		0	_								
2	Home position return method	0: Proximity dog type 17: Dog cradle type4: Proximity dog type 28: Stopper type 11: Count type 19: Stopper type 25: Count type 210: Limit switch combined type6: Count type 311: Scale home position signal detection type2: Data set type 112: Dogless home position signal reference type3: Data set type 2									_	
3	Home position address	-214748364.8 to 214748364.7	μm	-21474.83648 to 21474.83647	inch	0 to 359.99999	degree	-2147483648 to 2147483647	PLS	0	PLS	
4	Home position return speed	0.01 to 6000000.00	mm/min	0.001 to 600000.000	inch/min	0.001 to 2147483.647 (Note-1)	degree/ min	1 to 2147483647	PLS/s	1	PLS/s	
5	Creep speed	0.01 to 6000000.00	mm/min	0.001 to 600000.000	inch/min	0.001 to 2147483.647 (Note-1)	degree/ min	1 to 2147483647	PLS/s	1	PLS/s	
6	Travel value after proximity dog ON	0.0 to 214748364.7	μm	0.00000 to 21474.83647	inch	0.00000 to 21474.83647	degree	0 to 2147483647	PLS	0	PLS	
7	Parameter block setting		-		1 to	64				1	_	
8	Home position return retry function		•	Do not execute the ecute the home p				.)		0	_	
9	Dwell time at the home position return retry				0 to 50	00 [ms]				0	ms	
10	Home position shift amount	-214748364.8 to 214748364.7	μm	-21474.83648 to 21474.83647	inch	-21474.83648 to 21474.83647	degree	-2147483648 to 2147483647	PLS	0	PLS	
11	Speed set at the home position shift	0: Home position return speed 1: Creep speed										
12	Torque limit value at the creep speed	1 to 1000 [%]										
13	Operation setting for incompletion of home position return				e a servo p ecute a serv	-				1	_	


Table 6.3 Home position return data list

Indirect setting		Durala	Explanatory
Valid/invalid	Number of words	Remarks	section
_	_	The home position return direction is set.	_
_	_	 The home position return method is set. The proximity dog type or count type are recommended for the servo amplifier which does not support absolute value. 	_
0	2	 The current value of home position after the home position return is set. 	_
0	2	The home position return speed is set.	_
0	2	The creep speed (low speed immediately before stopping after deceleration from home position return speed) after the proximity dog ON is set.	_
0	2	 The travel value after the proximity dog ON for the count type is set. More than the deceleration distance at the home position return speed is set. 	6.23.1 (1)
_	_	The parameter block (Refer to Section 4.3) No. to use for home position return is set.	_
_	_	Valid/invalid of home position return retry is set.	
0	1	The stop time at the deceleration stop during the home position return retry is set.	6.23.1 (2)
0	2	The shift amount at the home position shift is set.	
_	_	The operation speed which set the home position shift amount except "0" is set.	6.23.1 (3)
0	1	The torque limit value with creep speed at the stopper type home position return is set.	6.23.1 (4)
_	_	 When the home position return request signal is ON, it set whether a servo program is executed or not. 	6.23.1 (5)

(Note-1): When the "speed control 10×multiplier setting for degree axis" is set to "valid" in the fixed parameter, the setting range is "0.01 to 21474836.47[degree/min] ".

(1) Travel value after proximity dog ON

- (a) The travel value after proximity dog ON is set to execute the count type home position return.
- (b) After the proximity dog ON, the home position is the first zero-point after travel by the setting travel value.
- (c) Set the travel value after proximity dog ON more than the deceleration distance from the home position return speed.

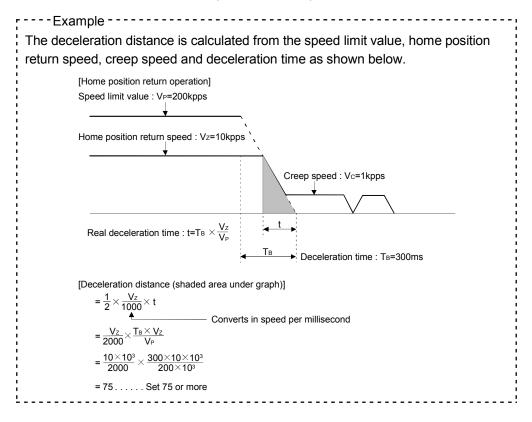

POINT

A home position return must be made after the servomotor has been rotated more than one revolution to pass the axis through the Z-phase (motor reference position signal).

For a proximity dog type or count type home position return, the distance between the point where the home position return program is started and the deceleration stop point before re-travel must be such that the servomotor is rotated more than one revolution to pass the axis through the Z-phase.

When a data set type home position return is made in an ABS (absolute position) system, the servomotor must also have been rotated more than one revolution by JOG operation or the like to pass the axis through the Z-phase.

(Note) : When "1 : No servomotor Z-phase pass after power ON" is selected in the "function selection C-4 (PC17)" of servo parameter (expansion setting parameter), even if it does not pass zero point, the home position return can be executed and restrictions are lost.

- (2) Home position return retry function/dwell time at the home position return retry
 - (a) Valid/invalid of home position return retry is set.
 - (b) When the valid of home position return retry function is set, the time to stop at return of travel direction is set with dwell time at the home position return retry.
 - (c) Operation for the proximity dog type home position return by setting "valid" for home position return retry function is shown below.

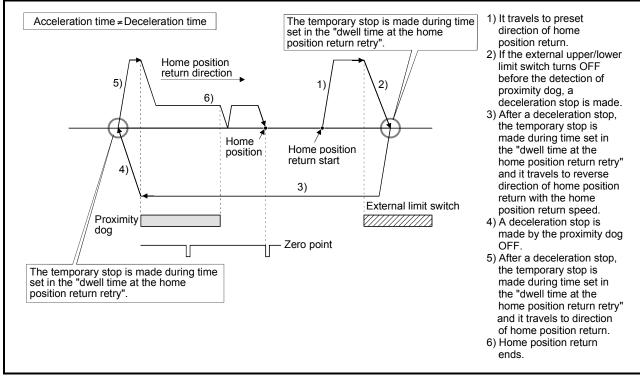


Fig. 6.31 Operation for home position return retry function

Home position r	eturn methods	Possible/not possible of home position return retry function
Proximity dog type	9	0
Count type		0
Data set type		×
Dog cradle type		0
Stopper type		×
Limit switch comb	ined type	×
Scale home position signal detection type		×
Dogless home	Operation A	0
position signal Operation B		×
reference type	Operation C	×

(d) Possible/not possible of home position return retry function by the home position return method is shown below.

 $\bigcirc:$ Possible, $\times:$ Not possible

- (3) Home position shift amount/speed set at the home position shift
 - (a) The shift (travel) amount from position stopped by home position return is set.
 - (b) If the home position shift amount is positive value, it shifts from detected zero point signal to address increase direction. If it is negative value, it shifts from detected zero point signal to address decrease direction.
 - (c) Operation speed which set the home position shift amount except "0" is set in the speed set at the home position shift. Select one of the "home position return speed" or "creep speed".

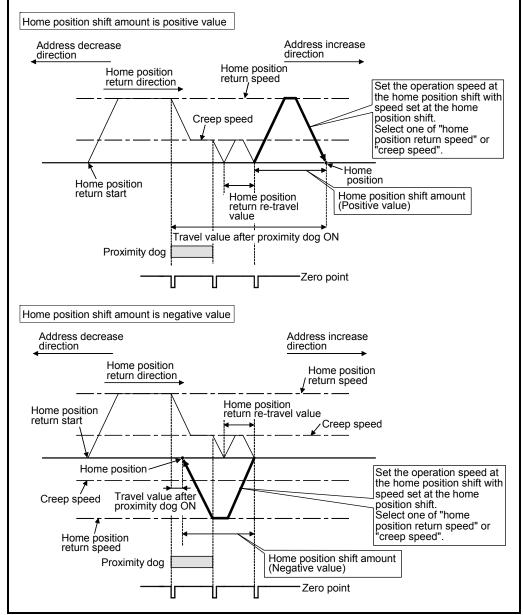


Fig. 6.32 Home position shift amount/speed set at the home position shift

Home position return methods	Valid/invalid of home position shift amount
Proximity dog type	0
Count type	0
Data set type	×
Dog cradle type	0
Stopper type	×
Limit switch combined type	0
Scale home position signal detection type	0
Dogless home position signal reference type	0

(d) Valid/invalid of the setting value for home position shift amount by the home position return method is shown below.

 $\bigcirc:$ Valid, $\times:$ Invalid

POINT

- (1) Home position shift function is used to rectify a home position stopped by the home position return. When there are physical restrictions in the home position by the relation of a proximity dog setting position, the home position is rectified to the optimal position. Also, by using the home position shift function, it is not necessary to care the zero point for mounting of servomotor.
- (2) After proximity dog ON, if the travel value including home position shift amount exceeds the range of "-2147483648 to 2147483647" [$\times 10^{-1} \mu m$, $\times 10^{-5}$ inch, $\times 10^{-5}$ degree, PLS], "travel value after proximity dog ON" of monitor register is not set correctly.

(4) Torque limit value at the creep speed

- (a) Torque limit value at the creep speed (on press) is set in the case of using the pressed position as the home position by the home position return of stopper type 1, 2.
- (b) Valid/invalid of the torque limit value at the creep speed by the home position return method is shown below.

Home position return methods	Valid/invalid of torque limit value at the creep speed
Proximity dog type	×
Count type	×
Data set type	×
Dog cradle type	×
Stopper type	0
Limit switch combined type	×
Scale home position signal detection type	×
Dogless home position signal reference type	×

 $\bigcirc:$ Valid, $\times:$ Invalid

- (5) Operation setting for incompletion of home position return
 - (a) Operation in selecting "1: Not execute servo program"
 - Servo program cannot be executed if the home position return request signal (M2409+20n) is ON. However, the servo program can be executed even if the home position return request signal (M2409+20n) is ON in the case of only servo program of home position return instruction (ZERO).
 - At the time of servo program start, when "1: Not execute servo program" is selected in the operation setting for incompletion of home position return and the axis which the home position return request signal (M2409+20n) is ON exists also with one axis, a minor error [121] occurs and the servo program does not start.
 - JOG operation and manual pulse generator operation can be executed regardless of the home position return request signal (M2409+20n) ON/OFF.
 - 4) Same operation is executed regardless of absolute position system or not. When "1: Not execute servo program" is selected in the case of not absolute position system, the home position return request signal (M2409+20n) turns ON at power supply ON or reset of Multiple CPU system and power supply ON of servo amplifier. Therefore, it must be executed home position return before a servo program start.
 - 5) Same operation is executed in also TEST mode.
 - 6) This setting is valid in the real mode only. Servo program can be executed for a virtual axis connected to the output axis which the home position return request signal (M2409+20n) is ON.
 - (b) Operation in selecting "0: Execute servo program"
 - 1) Servo program can be executed even if the home position return request signal (M2409+20n) is ON.

 Do not execute the positioning control in home position return request signal ON for the axis which uses in the positioning control.

Failure to observe this could lead to an accident such as a collision.

(6) Indirect setting of home position return data

A part of home position return data can be executed the indirect setting by the word devices of Motion CPU.

(a) Word devices for indirect setting

The word devices for indirect setting are the data registers (D), link registers (W), Motion registers (#) and Multiple CPU area device ($U\Box\G$).

Word devices except the above devices cannot be used.

The usable setting range of word devices are shown below. (For data that uses2 words, set as an even number.)

Word devices	Setting range
D	0 to 8191
W	0 to 1FFF
#	0 to 7999
U⊟\G	10000 to (10000+p-1) ^(Note-1)

(Note-1): "p" indicates the user setting area points of the Multiple CPU high speed transmission area for each CPU.

(b) Input of home position return

In the indirect setting by the word devices, the specified word device data are read at servo program execution by Motion CPU.

Set data to devices for indirect setting and then execute the start request of servo program at home position return.

POINT

- Indirect setting of axis cannot be executed using word devices in the servo program.
- (2) Take an interlock with start accept flag (M2001 to M2032) not to change until the device data specified for indirect setting.
 If the device data is changed before starting accept, it may not execute the home position return at the normal value.
- (3) Refer to the Chapter 2 of "Q173D(S)CPU/Q172D(S)CPU Motion controller Programming Manual (COMMON)" for the user setting area points of the Multiple CPU high speed transmission area.

							ŀ	lome	e pos	ition I	returr	n met	hods	;			
	Items				Count type 1	Count type 2	Count type 3	Data set type 1	Data set type 2	Dog cradle type	Stopper type 1	Stopper type 2	Limit switch combined type	Scale home position signal detection type	posi	Operation B Coperation B	ignal
			Proximity dog type	Proximity dog type	Cou	Cou	Cou	Data	Data	Dog	Stop	Stop	Limi	Scal	Ope	Ope	Ope
	Home position return direction				0	0	0	0	0	0	0	\bigcirc	0	0	0	\bigcirc	0
	Home position a	address	0	\bigcirc	0	0	\odot	\odot	0	\odot	0	0	\odot	0	0	0	0
	Home position r	return speed	\odot	0	\odot	0	\odot			\odot	0		\odot	\odot	0	\odot	0
	Creep speed		\odot	0	0	0	0	—	—	0	\odot	\odot	\odot	\odot	\odot	\odot	\odot
	Travel value after	er proximity dog ON			0	0	0					_		—		_	-
Home	Parameter block	k setting	0	0	0	0	0			0	0	0	0	0	0	\bigcirc	0
position	Home position r	return retry function	0	0	0	0	0			0	l			—	0	_	-
return data	Dwell time at the	e home position return retry	\odot	0	\odot	0	0	—	—	0	—	—	—	—	0		—
	Home position s	ome position shift amount		0	\odot	0	0	—	—	0	—	—	\odot	0	\odot	\odot	\odot
	Speed set at the	e home position shift	0	0	0	0	0			0		-	0	0	0	\bigcirc	0
	Torque limit valu	ue at the creep speed	—	—	—	—	—	—	—	—	\odot	\odot	—	—	_	—	—
	Operation settin position return	g for incompletion of home	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0
	Interpolation co	ntrol unit	_	_	_	_	_	_	_	_	_	_	_	_	_		_
	Speed limit valu	le	_	_	_	_	_	_	_	_	_	_	_	_	_		_
	Acceleration tim	ne	0	0	0	0	0	_	_	0	0	0	0	0	0	0	0
	Deceleration tim	ne	0	0	0	0	0	_	_	0	0	0	0	0	0	0	0
	Rapid stop dece	eleration time	0	0	0	0	0	_	—	0	0	0	0	0	0	0	0
	S-curve ratio		0	0	0	0	0	_	_	0	0	0	0	0	0	0	0
Parameter blocks	Advanced	Acceleration/deceleration system	0	0	0	0	0	—	—	0	0	0	0	0	0	0	0
DIUCKS	S-curve	Acceleration section 1 ratio	0	0	0	0	0	—	—	0	0	0	0	0	0	0	0
ac	acceleration/	Acceleration section 2 ratio	0	0	0	0	0	—	—	0	0	0	0	0	0	0	0
	deceleration	Deceleration section 1 ratio	\bigcirc	0	0	0	0	—	—	0	0	0	0	0	0	\bigcirc	0
		Deceleration section 2 ratio	\bigcirc	0	0	0	0	—	—	0	\bigcirc	\bigcirc	\circ	0	0	\bigcirc	0
	Torque limit value		0	0	0	0	0	—	—	0	0	0	\circ	0	0	0	0
	Deceleration pro	ocessing at the stop time	0	0	0	0	0	—	—	0	0	0	0	0	0	0	0
	Allowable error	range for circular interpolation	—	—	—	—	—	—	—	—	_	—	—	—	_	—	—

(7) Setting items for home position return data

◎: Must be set (Indirect setting)

O: Must be set

-: Must be not set

6.23.2 Home position return by the proximity dog type 1

(1) Proximity dog type 1

Zero point position after proximity dog ON to OFF is home position in this method. When it does not pass (zero pass signal: M2406+20n OFF) the zero point from home position return start to deceleration stop by proximity dog ON to OFF, an error will occur and home position return is not executed. However, when "1 : Not need to pass motor Z phase after the power supply is switched on" is selected in the "function selection C-4 (PC17)" of servo parameter (expansion setting parameter), if it does not pass zero point from home position return start to deceleration stop by proximity dog ON to OFF, the home position return can be executed.

(2) Home position return by the proximity dog type 1 Operation of home position return by proximity dog type 1 for passing (zero pass signal: M2406+20n ON) the zero point from home position return start to deceleration stop by proximity dog ON to OFF is shown below.

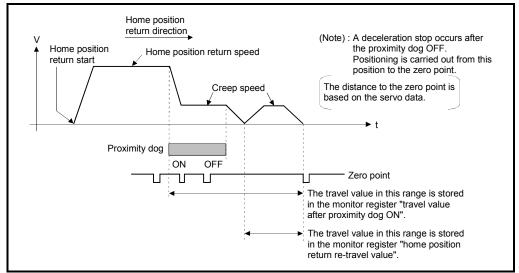



Fig. 6.33 Home position return operation by the proximity dog type 1

(3) Home position return execution Home position return by the proximity dog type 1 is executed using the servo program in Section 6.23.18.


(4) Cautions

(a) Keep the proximity dog ON during deceleration from the home position return speed to the creep speed.

If the proximity dog turns OFF before deceleration to the creep speed, a deceleration stop is made and the next zero point is set as the home position.

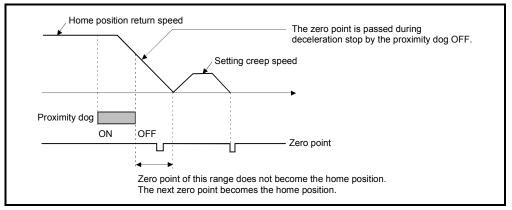

(b) The position executed deceleration stop by the proximity dog OFF is near zero point, a home position discrepancy equivalent to one revolution of the servomotor may occur. Adjust the position of proximity dog OFF, such that the home position return re-travel value becomes half the travel value for one revolution of the servomotor.

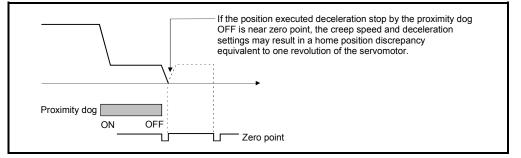

POINT

When the home position return retry function is not set in the following cases, execute the home position return, after return the axis once to position before the proximity dog ON by the JOG operation, etc.

Home position return cannot be executed without returning to position before the proximity dog ON.

- (1) Home position return with a position after the proximity dog ON to OFF.
- (2) When the power supply turned OFF to ON after home position return end.

- (c) When it does not pass (zero pass signal: M2406+20n ON) the zero point from home position return start to deceleration stop by proximity dog ON to OFF, a minor error (error code: 120) will occur, a deceleration stop is made and home position return does not end normally. When a distance between home position return start position and home position is near and a zero point is not passed, select the proximity dog type 2.
- (d) If home position return is executed in the proximity dog ON, a major error (error code: 1003) will occur, the home position return is not executed. Use the proximity dog type 2 in this case.
- (e) When home position return retry function is not set, if home position return is executed again after home position return end, a minor error (error code: 115) will occur, the home position return is not executed.
- (f) If in-position signal (M2402+20n) does not turn ON, home position return is not ended.

6.23.3 Home position return by the proximity dog type 2


(1) Proximity dog type 2


Zero point position after proximity dog ON to OFF is home position in this method. When it passed (zero pass signal: M2406+20n ON) the zero point from home position return start to deceleration stop by proximity dog ON to OFF, operation for "proximity dog type 2" is the same as "proximity dog type 1". (Refer to Section 6.23.2)

When it does not pass (zero pass signal: M2406+20n OFF) the zero point from home position return start to deceleration stop by proximity dog ON to OFF, it moves to home position return direction after the servomotor is rotated one revolution to reverse direction and it passed the zero point, and the first zero point position is set as home position after proximity dog ON to OFF.

(2) Home position return by the proximity dog type 2

Operation of home position return by proximity dog type 2 for not passing the zero point from home position return start to deceleration stop by proximity dog ON to OFF is shown below.

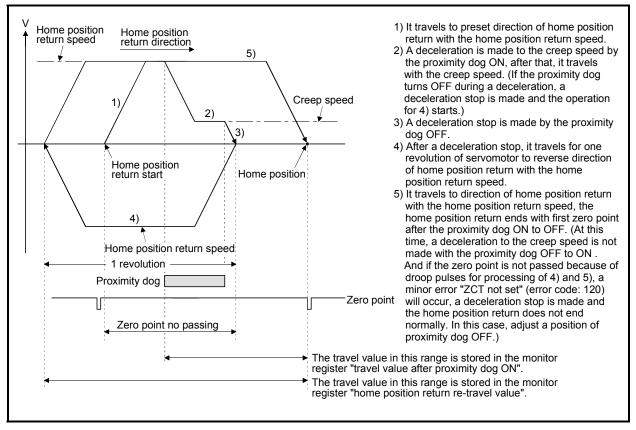



(3) Home position return execution

Home position return by the proximity dog type 2 is executed using the servo program in Section 6.23.18.

- (4) Cautions
 - (a) A system which the servomotor can rotate one time or more is required.
 - (b) When a servomotor stops with specified condition enables and rotates to reverse direction one time after proximity dog ON, make a system for which does not turn OFF the external upper/lower stroke limit.
 - (c) Keep the proximity dog ON during deceleration from the home position return speed to the creep speed.
 If the proximity dog turns OFF before deceleration to the creep speed, a deceleration stop is made and the next zero point is set as the home position.
 - (d) If home position return is executed in the proximity dog ON, it starts with the creep speed.
 - (e) When home position return retry function is not set, if home position return is executed again after home position return completion, a minor error (error code: 115) will occur, the home position return is not executed.
 - (f) When "1 : Not need to pass motor Z phase after the power supply is switched on" is selected in the "function selection C-4 (PC17)" of servo parameter (expansion setting parameter), even if it does not pass zero point at the servo amplifier power ON, the zero pass signal (M2406+20n) turns ON. This operation is the same as proximity dog type 1.
 - (g) If in-position signal (M2402+20n) does not turn ON, home position return is not ended.

6.23.4 Home position return by the count type 1

(1) Count type 1

After the proximity dog ON, the zero point after the specified distance (travel value after proximity dog ON) is home position in this method. When the zero point is not passed (zero pass signal: M2406+20n OFF) until it travels the distance set in the "travel value after proximity dog ON" from home position return start, an error will occur and home position return is not executed. However, when "1 : Not need to pass motor Z phase after the power supply is switched on" is selected in the "function selection C-4 (PC17)" of servo parameter (expansion setting parameter), if the zero point is not passed until it travels the distance set in the "travel value after proximity dog ON" from home position return start, the home position return can be executed. The travel value after proximity dog ON is set in the home position return data (Refer to Section 6.23.1).

(2) Home position return by the count type 1

Operation of home position return by count type 1 for passing the zero point during travel of specified distance set in the "travel value after proximity dog ON" from the home position return start is shown below.

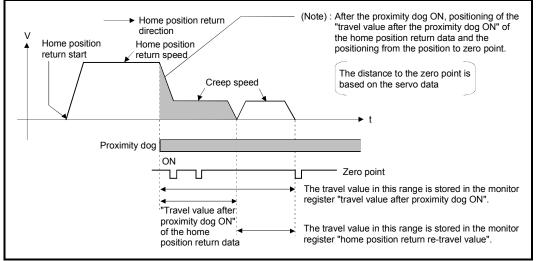


Fig. 6.35 Home position return operation by the count type 1

(3) Home position return execution Home position return by the count type 1 is executed using the servo program in Section 6.23.18.

- (4) Cautions
 - (a) Home position return and continuously start of home position return are also possible in the proximity dog ON in the count type 1.
 When the home position return or continuously start of home position return are executed in the proximity dog ON, the home position return is executed after return the axis once to position of the proximity dog OFF.
 - (b) When the zero point is not passed (zero pass signal: M2406+20n ON) until it travels the distance set in the "travel value after proximity dog ON" from home position return start, a minor error (error code: 120) will occur, a deceleration stop is made and home position return does not end normally. When a distance between home position return start position and home position is near and a zero point is not passed, select the count type 3.
 - (c) When the "travel value after proximity dog ON" is less than the deceleration distance from "home position return speed" to "creep speed", a minor error (error code: 209) will occur and deceleration stop is made.
 - (d) If in-position signal (M2402+20n) does not turn ON, home position return is not ended.

REMARK

The signal types that can be used with home position return by the count type 1 are shown below.

Signal type	Q173DSCPU/ Q172DSCPU	Q173DCPU(-S1)/ Q172DCPU(-S1)	
DOG signal of Q172DLX	0	0	
External input signal (DOG) of servo amplifier (DOG)	0	⊖ ver.)	
Built-in interface in Motion CPU (DI)	0	×	
Bit device	0	×	

 \bigcirc : Usable, $~\times$: Unusable

Ver. : Refer to Section 1.3 for the software version that supports this function.

6.23.5 Home position return by the count type 2


(1) Count type 2


After the proximity dog ON, the position which traveled the specified distance (travel value after proximity dog ON) is home position in this method. It is not related for zero point pass or not pass.


A count type 2 is effective method when a zero point signal cannot be taken. (However, dispersions will occur to the stop position at the home position return compared with the count type 1.)

The travel value after proximity dog ON is set in the home position return data (Refer to Section 6.23.1).

(2) Home position return by the count type 2 Operation of home position return by count type 2 is shown below.



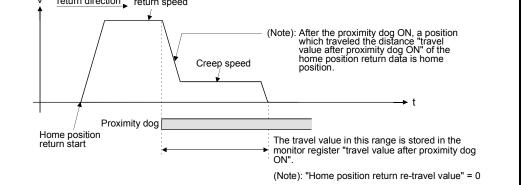



(3) Home position return execution

Home position return by the count type 2 is executed using the servo program in Section 6.23.18.

- (4) Cautions
 - (a) Home position return and continuously start of home position return are also possible in the proximity dog ON in the count type 2.
 When the home position return and continuously start of home position return are executed in the proximity dog ON, the home position return is executed after return the axis once to position of the proximity dog OFF.
 - (b) When the "travel value after proximity dog ON" is less than the deceleration distance from "home position return speed" to "creep speed", a minor error (error code: 209) will occur and deceleration stop is made.
 - (c) Command position is the home position.
 - (d) If in-position signal (M2402+20n) does not turn ON, home position return is not ended.

REMARK

The signal types that can be used with home position return by the count type 2 are shown below.

Signal type	Q173DSCPU/ Q172DSCPU	Q173DCPU(-S1)/ Q172DCPU(-S1)	
DOG signal of Q172DLX	0	0	
External input signal (DOG) of servo amplifier (DOG) ^(Note-1)	0	⊖ Ver.)	
Built-in interface in Motion CPU (DI)	0	×	
Bit device	0	×	

 \bigcirc : Usable, \times : Unusable

(Note-1): The variation for ON/OFF timing of the external input signal (DOG) of servo amplifier may occur according to the input filter setting value of external signal input setting.

Review the input filter setting value compatible with the applications.

Use the Q172DLX or built-in interface in Motion CPU (DI) to execute the high-accuracy control.

Ver. : Refer to Section 1.3 for the software version that supports this function.

6.23.6 Home position return by the count type 3

(1) Count type 3

After the proximity dog ON, the zero point after the specified distance (travel value after proximity dog ON) is home position in this method. When the zero point is passed (zero pass signal: M2406+20n ON) during travel of specified distance set in the "travel value after proximity dog ON" from the home position return start, home position return operation is the same as "count type 1". (Refer to Section 6.23.4)

When a zero point is not passed (zero pass signal: M2406+20n OFF) during travel of specified distance set in the "travel value after proximity dog ON" from the home position return start, it rotates one time to reverse direction and passes the zero point, re-travels to home position return direction, and then the first zero point after the specified distance (travel value after proximity dog ON) after proximity dog ON is set as home position.

The travel value after proximity dog ON is set in the home position return data (Refer to Section 6.23.1).

(2) Home position return by the count type 3

Operation of home position return by count type 3 for not passing the zero point during travel of specified distance set in the "travel value after proximity dog ON" from the home position return start is shown below.

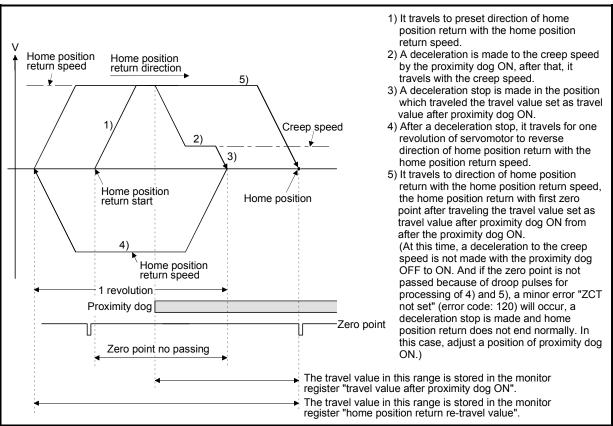


Fig. 6.37 Home position return operation by the count type 3 (zero point no passing)

(3) Home position return execution

Home position return by the count type 3 is executed using the servo program in Section 6.23.18.

- (4) Cautions
 - (a) A system which the servomotor can rotate one time or more is required.
 - (b) After the proximity dog ON, when a servomotor rotates one time to reverse direction after stop with travel value set in the "travel value after proximity dog ON", make a system which does not turn OFF the external upper/lower stroke limit.
 - (c) Home position return and continuously start of home position return are also possible in the proximity dog ON in the count type 3. When the home position return and continuously start of home position return are executed in the proximity dog ON, the home position return is executed after return the axis once to position of the proximity dog OFF.
 - (d) When the "travel value after proximity dog ON" is less than the deceleration distance from "home position return speed" to "creep speed", a minor error (error code: 209) will occur and deceleration stop is made.
 - (e) When "1 : Not need to pass motor Z phase after the power supply is switched on" is selected in the "function selection C-4 (PC17)" of servo parameter (expansion setting parameter), even if it does not pass zero point at the servo amplifier power ON, the zero pass signal (M2406+20n) turns ON. This operation is the same as count type 1.
 - (f) If in-position signal (M2402+20n) does not turn ON, home position return is not ended.

REMARK

The signal types that can be used with home position return by the count type 3 are shown below.

Signal type	Q173DSCPU/ Q172DSCPU	Q173DCPU(-S1)/ Q172DCPU(-S1)	
DOG signal of Q172DLX	0	0	
External input signal (DOG) of servo amplifier (DOG)	0		
Built-in interface in Motion CPU (DI)	0	×	
Bit device	0	×	

 \bigcirc : Usable, \times : Unusable

Ver. : Refer to Section 1.3 for the software version that supports this function.

6.23.7 Home position return by the data set type 1

- Data set type 1 The proximity dog is not used in this method for the absolute position system.
- (2) Home position return by the data set type 1Home position is the command position at the home position return operation.

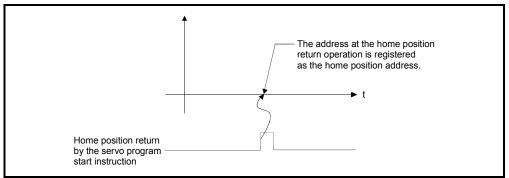


Fig. 6.38 Home position return operation by the date set type 1

(3) Home position return execution

Home position return by the data set type 1 is executed using the servo program in Section 6.23.18.

(4) Cautions

- (a) A zero point must be passed (zero pass signal: M2406+20n ON) between turning ON the power supply and executing home position return. If home position return is executed without passing a zero point once, "no zero point passed error" occurs. If "no zero point passed error" occurred, perform the home position return again, after reset the error and turn the servomotor at least one revolution by the JOG operation. The zero point passing can be confirmed with the zero pass signal (M2406+20n). However, when "1 : Not need to pass motor Z phase after the power supply is switched on" is selected in the "function selection C-4 (PC17)" of servo parameter (expansion setting parameter), even if it does not pass zero point at the servo amplifier power ON, the home position return is possible because the zero pass signal (M2406+20n) turns ON.
- (b) Home position return is started by the data set type 1 when the absolute position system does not support, it becomes same function as the current value change command.
- (c) The home position return data required for the data set type 1 are the home position return direction and home position address.
- (d) If in-position signal (M2402+20n) does not turn ON, home position return is not ended.


6.23.8 Home position return by the data set type 2


(1) Data set type 2

The proximity dog is not used in this method for the absolute position system.

(2) Home position return by the data set type 2

Home position is the real position of servomotor at the home position return operation.

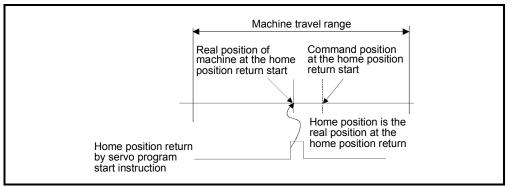



(3) Home position return execution

Home position return by the data set type 2 is executed using the servo program in Section 6.23.18.

- (4) Cautions
 - (a) A zero point must be passed (zero pass signal: M2406+20n ON) between turning on the power supply and executing home position return. If home position return is executed without passing a zero point once, "no zero point passed error" occurs. If "no zero point passed error" occurred, perform the home position return again, after reset the error and turn the servomotor at least one revolution by the JOG operation. The zero point passing can be confirmed with the zero pass signal (M2406+20n). However, when "1 : Not need to pass motor Z phase after the power supply is switched on" is selected in the "function selection C-4 (PC17)" of servo parameter (expansion setting parameter), even if it does not pass zero point at the servo amplifier power ON, the home position return is possible because the zero pass signal (M2406+20n) turns ON.
 - (b) The home position return data required for the data set type 2 are the home position return direction and home position address.

6.23.9 Home position return by the dog cradle type

(1) Dog cradle type

After deceleration stop by the proximity dog ON, if the zero point is passed after traveling to reverse direction and turning the proximity dog OFF, the deceleration stop is made. And it moves to direction of home position return again with creep speed and the first zero point after proximity dog ON is home position in this method.

(2) Home position return by the dog cradle type Operation of home position return by the dog cradle type for setting the proximity dog in the home position return direction is shown below.


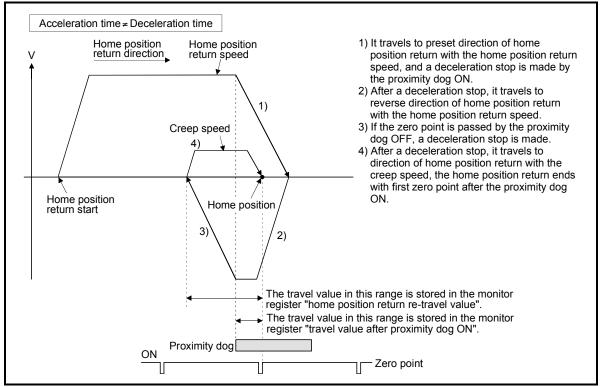



Fig. 6.40 Home position return operation by the dog cradle type

- (3) Home position return execution Home position return by the dog cradle type is executed using the servo program in Section 6.23.18.
- (4) Cautions
 - (a) When home position return retry function is not set, if home position return is executed again after home position return end, a minor error (error code: 115) will occur, the home position return is not executed.


(b) If the home position return is executed in the proximity dog, it travels to reverse direction of home position return. If proximity dog turns OFF, a deceleration stop is made, it travels to direction of home position return again with the creep speed and the first zero point after proximity dog ON is home position.

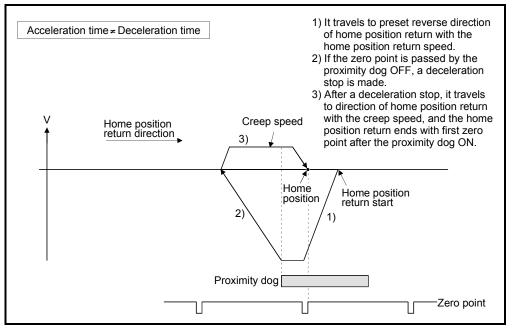


(c) When the proximity dog is set in the home position return direction, the proximity dog is turned OFF during travel to reverse direction of home position return, and the zero point is not passed, it continues to travel in the reverse direction of home position return with home position return speed until the zero point is passed. The zero point is passed again during deceleration by zero point pass, the home position becomes this side compared with the case to pass zero point at the time of the proximity dog OFF.

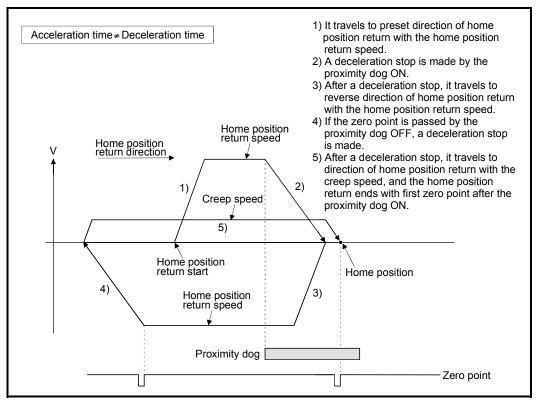

(d) When it starts in the proximity dog, the zero point is not passed at the time of the proximity dog is turned OFF during travel to reverse direction of home position return, it continues to travel with home position return speed until the zero point is passed. The zero point is passed again during deceleration by zero point pass, the home position becomes this side compared with the case to pass zero point at the time of the proximity dog OFF.

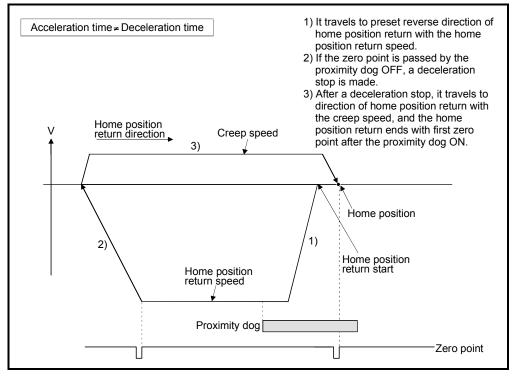

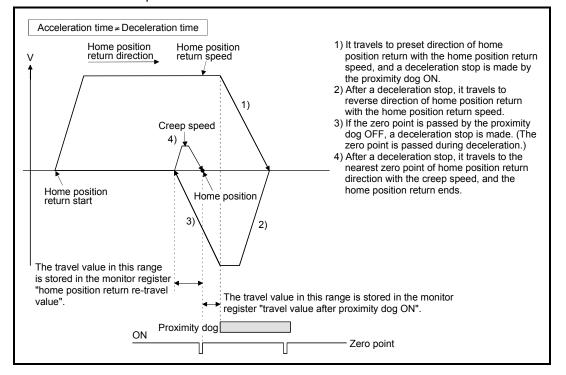

(e) If the zero point is passed during deceleration, the nearest zero point from deceleration stop position to home position return direction is set as the home position.

6.23.10 Home position return by the stopper type 1


(1) Stopper type 1


Position of stopper is home position in this method.

It travels to the direction set in the "home position return direction" with the "home position return speed", after a deceleration starts by proximity dog OFF to ON and it presses against the stopper and makes to stop with the torque limit value set in the "torque limit value at the creep speed" and "creep speed" of home position return data. Real position of servomotor at the time of detection for turning the torque limiting signal OFF to ON is home position. Torque limit value after reaching creep speed is set in the "torque limit value at the creep speed" of home position.

(2) Home position return by the stopper type 1

Operation of home position return by the stopper type 1 is shown below.

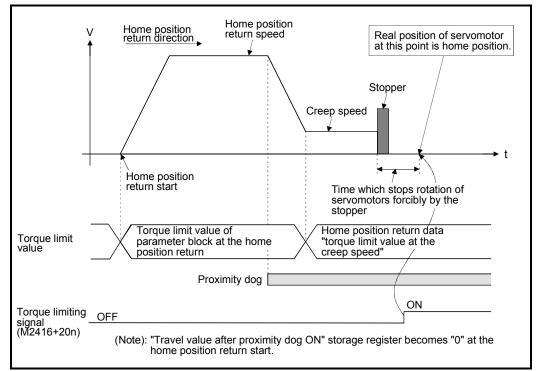



(3) Home position return execution

Home position return by the stopper type 1 is executed using the servo program in Section 6.23.18.

- (4) Cautions
 - (a) A zero point does not must be passed (zero pass signal: M2406+20n ON) between turning on the power supply and executing home position return.
 - (b) Home position return retry function cannot be used in the stopper type 1.
 - (c) Set the torque limit value after reaching the creep speed for system. When the torque limit value is too large, servomotors or machines may be damaged after pressing the stopper. Also, when the torque limit value is too small, it becomes the torque limiting before pressing the stopper and ends the home position return.
 - (d) If the home position return is executed again after home position return completion, a minor error (error code: 115) will occur, the home position return is not executed.
 - (e) Home position return is started during the proximity dog ON, it is started from the "creep speed".

6.23.11 Home position return by the stopper type 2

(1) Stopper type 2

Position of stopper is home position in this method.

It travels the direction set in the "home position return direction" with the "creep speed", and it presses against the stopper and makes to stop with the "creep speed". (The torque limit value is valid set in the "torque limit value at the creep speed" of the home position return data from the home position return start.) Real position of servomotor at the time of detection for turning the torque limiting signal OFF to ON is home position.

Torque limit value after reaching creep speed is set in the "torque limit value at the creep speed" of home position return data.

(2) Home position return by the stopper type 2

Operation of home position return by the stopper type 2 is shown below.

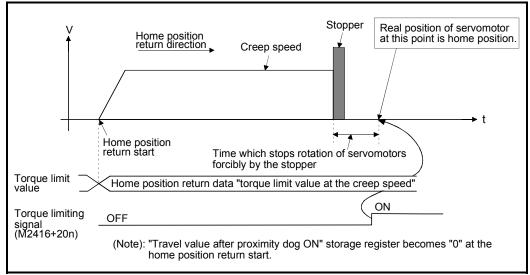


Fig. 6.42 Home position return operation by the stopper type 2

(3) Home position return execution

Home position return by the stopper type 2 is executed using the servo program in Section 6.23.18.

(4) Cautions

- (a) A zero point does not must be passed (zero pass signal: M2406+20n ON) between turning on the power supply and executing home position return.
- (b) Home position return retry function cannot be used in the stopper type 2.

- (c) Set the torque limit value at the reaching creep speed for system. When the torque limit value is too large, servomotors or machines may be damaged after pressing the stopper. Also, when the torque limit value is too small, it becomes the torque limiting before pressing the stopper and ends the home position return.
- (d) If the home position return is executed again after home position return completion, a minor error (error code: 115) will occur, the home position return is not executed.

6.23.12 Home position return by the limit switch combined type

(1) Limit switch combined type

The proximity dog is not used in this method. Home position return can be executed by using the external upper/lower limit switch. When the home position return is started, it travels to direction of home position return with "home position return speed". Deceleration is made by turning the limit switch of home position return direction ON to OFF, it travels to reverse direction of home position return with creep speed, and the zero point just before limit switch is home position.

(2) Home position return by the limit switch combined type Operation of home position return by limit switch combined type for setting the limit switch in the home position return direction is shown below.

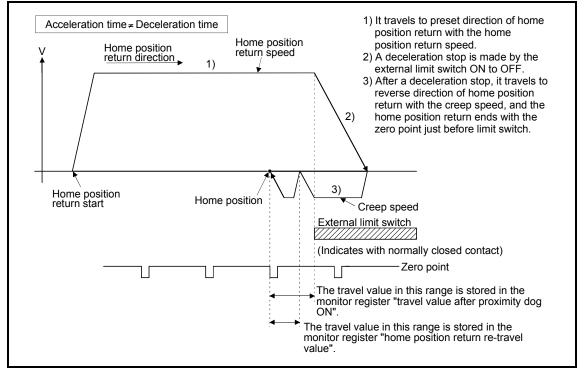


Fig. 6.43 Home position return operation by the limit switch combined type

(3) Home position return execution Home position return by the limit switch combined type

Home position return by the limit switch combined type is executed using the servo program in Section 6.23.18.

- (4) Cautions
 - (a) For the axis which executes the home position return by the limit switch combined type, if the external input signal has not set in the system settings, a minor error (error code: 142) will occur and home position return is not executed.
 - (b) When the limit switch reverse to home position return direction is turned ON to OFF, deceleration stop is made, home position return is not completed and a major error (error code : 1101, 1102) will occur.
 - (c) Home position return retry function cannot be used in the limit switch combined type.
 - (d) If the home position return is executed with the limit switch OFF, it is started to reverse direction of home position return with creep speed.
 - (e) When it does not pass (zero pass signal: M2406+20n ON) the zero point from home position return start to deceleration stop by limit switch OFF, a minor error (error code: 120) will occur, a deceleration stop is made and home position return does not end normally. However, when "1 : Not need to pass motor Z phase after the power supply is switched on" is selected in the "function selection C-4 (PC17)" of servo parameter (expansion setting parameter), if the zero point is not passed until from home position return start to deceleration stop by limit switch OFF, the home position return can be executed.
 - (f) Deceleration stop is executed after the limit switch OFF. Set the limit switch in expectation of deceleration distance.
 - (g) If the in-position signal (M2402+20n) is turned ON, home position return is not ended.
 - (h) When the width is in a zero point, the home position differs from the home position return by the proximity dog type 1, proximity dog type 2, count type 1, count type 3, dog cradle type and scale home position signal detection type.

6.23.13 Home position return by the scale home position signal detection type

- (1) Scale home position signal detection type Home position return is executed using home position signal (zero point). After detecting the proximity dog, it makes to travel to reverse direction of home position return. And the detecting position of home position signal (zero point) is home position in this method.
- (2) Home position return by the scale home position signal detection type

Operation of home position return by the scale home position signal detection type for setting the proximity dog in the home position return direction is shown below.

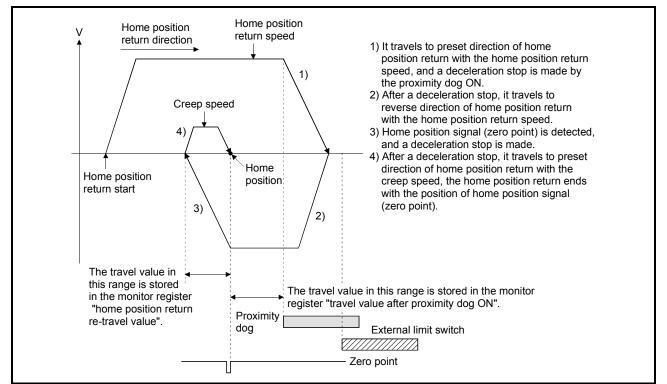



Fig. 6.44 Home position return operation by the scale home position signal detection type

(3) Home position return execution


Home position return by the scale home position signal detection type is executed using the servo program in Section 6.23.18.

Ver. : Refer to Section 1.3 for the software version that supports this function.

- (4) Cautions
 - (a) When home position is in the proximity dog, if home position return is executed again after home position return end, a minor error (error code: 123) will occur, the home position return is not executed.
 - (b) Set "0: Need to pass motor Z phase after the power supply is switched on" in the "function selection C-4 (PC17)" of servo parameter (expansion setting parameter). When "1: Not need to pass motor Z phase after the power supply is switched on" is set, a minor error (error code: 124) will occur at home position return by the scale home position signal detection type starting, the home position return is not executed.
 - (c) When zero pass signal (M2406+20n) turns on by passing zero point at home position return start, this signal turns off once at the reverse direction of home position return start and turns on again at the next zero point passage.
 - (d) Home position return is executed in the proximity dog, it travels to reverse direction of home position return. If home position signal (zero point) is detected, a deceleration stop is made, it travels to direction of home position return again with the creep speed and the detecting position of home position signal (zero point) is home position.

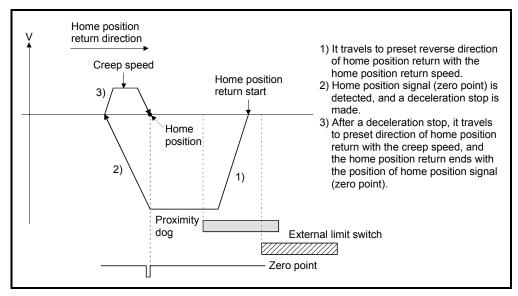

(e) If the zero point is passed during deceleration, the nearest position of home position signal (zero point) of home position return direction from deceleration stop position is set as the home position.

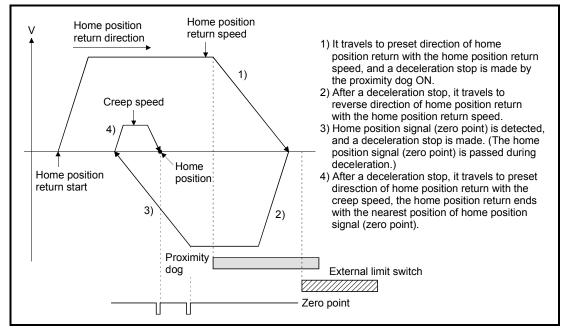

- (f) Home position return retry function cannot be used in the scale home position signal detection type.
- (g) An error always occurs without the proximity dog in home position return direction from home position return starting position, so that the proximity dog is set before limit switch of home position return direction for making the proximity dog overlap in limit switch like Fig. 6.44. And, when home position return is executed in the proximity dog, an error will occur if zero point is not in reverse direction of home position return from home position return starting position.
- (h) When there is only one zero point in the motor like linear motor, home position return may not be ended if zero point is in the proximity dog. Set zero point before the proximity dog.
- (i) If the in-position signal (M2402+20n) is not turned ON, home position return is not ended.

6.23.14 Home position return by the dogless home position signal reference type

(1) Dogless home position signal reference type

Home position return is executed using home position signal (zero point). This is a home position return method that does not use proximity dogs. Home position, home position return operation, home position return data (home position return retry function, dwell time at the home position return retry) differ by the servo amplifier connected as shown below.

Also, set the servo parameter "Function selection C-4 (PC17) (Selection of home position setting condition)" as follows.

Servo ampl	ifier model	Linear encoder type	Home position	Home position return operation (Note-1)	Home position return retry	ion return data Dwell time at the home position	servo parameter "Function selection C-4 (PC17) (Selection of home position
	Standard	_	Home position signal	Operation B	function return retry		setting condition)" 1: Not need to pass motor Z phase after the power supply is switched on.
	Direct drive motor	_	(zero point)	Operation A	Valid		0: Need to pass motor Z phase after the power supply is switched on.
MR-J4-□B	Linear servo	Absolute position type	Position where address of absolute linear encoder becomes 0.	Operation C	Invalid Valid		Both
MR-J4W-⊡B MR-J4-⊡B-RJ		Incremental type	Reference mark	Operation A			0: Need to pass motor Z phase after the power supply is switched on.
	Fully closed	Absolute position type	Position where address of absolute linear encoder becomes 0.	Operation C	In	valid	Both
	(Note-2)	Incremental type	Reference mark	Operation A	V	/alid	0: Need to pass motor Z phase after the power supply is switched on.
MR-J3-⊟B MR-J3-⊟B Safet MR-J3W-⊟B	MR-J3-□B Safety		Home position signal (zero point)	Operation B			1: Not need to pass motor Z phase after the power supply is switched on.
MR-J3-⊡B-RJ004 MR-J3-⊡B Safety		Absolute position type	Position where address of absolute linear encoder becomes 0.	Operation C	In	valid	Both
		Incremental type	Reference mark	Operation A	Valid		0: Need to pass motor Z phase after the power supply is switched on.
MR-J3-⊟B-RJ006 ^(Note-2) MR-J3-⊟B Safety		Absolute position type	Position where address of absolute linear encoder becomes 0.	Operation C	In	valid	Both
		Incremental type	Reference mark Home position signal	Operation A	V	/alid	0: Need to pass motor Z phase after the power
MR-J3-□B-RJ080W		—	(zero point)				supply is switched on.

(Note-1): Refer to (2) to (4) of this section for home position return operation.


(Note-2): During semi closed loop control is equivalent to MR-J3- B and MR-J4- B (standard).


Ver. : Refer to Section 1.3 for the software version that supports this function.

(2) Home position return by the dogless home position signal reference type (Operation A)

"Operation A" of a home position return by the dogless home position signal reference type is shown in Fig. 6.45 and Fig. 6.46.

(a) When the zero point is in the home position return direction.

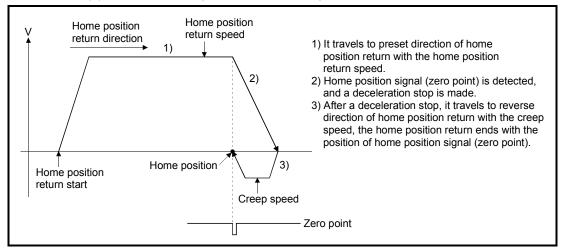





POINT

- (1) If an external limit switch is detected during a deceleration stop after zero point detection, an error occurs and stops. Ensure there is enough distance between the zero point signal and external limit switch, or set the deceleration time so the decelerating distance is shortened.
- (2) If multiple home position signals (zero points) are passed during deceleration after zero point detection, by the connected servo amplifier, the following operation occurs.

Servo amplifier model		Operation
MR-J4-□B	Direct drive motor	Home position return ends at the position of the last home position signal (zero point) passed.
MR-J4W-⊡B	Linear servo	
MR-J4-□B-RJ	Fully closed loop control	Home position return ends at the position of the
MR-J3-□B-RJ004		first home position signal (zero point) passed.
MR-J3-□B-RJ006		
MR-J3-□B-RJ080W		Home position return ends at the position of the last home position signal (zero point) passed.

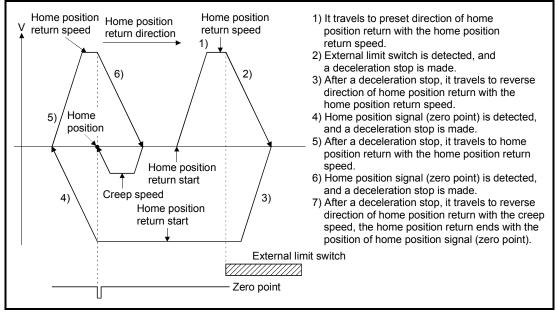

(b) When the zero point is not in the home position return direction.



POINT

Set home position return retry function to "valid". When set as "invalid" at the detection of the external limit switch, an error occurs and stops.

 (3) Home position return by the dogless home position signal reference type (Operation B)

"Operation B" of a home position return by the dogless home position signal reference type is shown below.

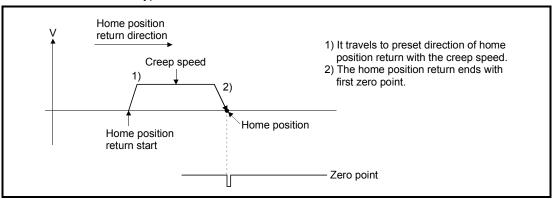


Fig. 6.47 Home position return by the dogless home position signal reference type (Operation B)

POINT

- (1) If an external limit switch is detected during home position return operation, an error occurs and stops.
- (2) Home position return retry function cannot be used.

(4) Home position return by the dogless home position signal reference type (Operation C)

"Operation C" of a home position return by the dogless home position signal reference type is shown in Fig. 6.48 and Fig. 6.49.

(a) When the position where address of absolute linear encoder becomes 0 is in the home position return direction.


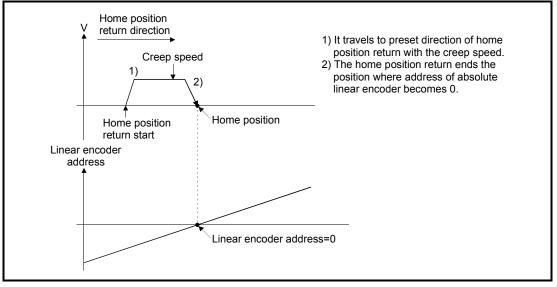


Fig. 6.48 Home position return by the dogless home position signal reference type (Operation C)

POINT	
-------	--

- (1) If an external limit switch is detected during home position return operation, an error occurs and stops.
- (2) Home position return retry function cannot be used.

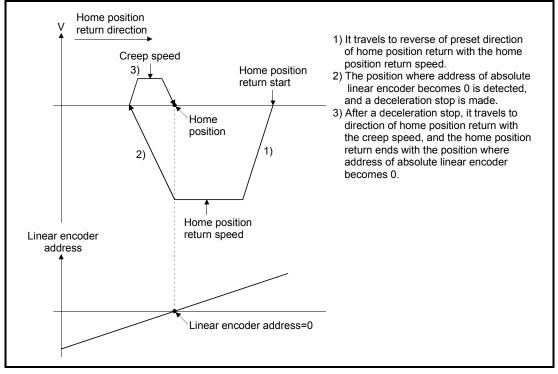

(b) When the position where address of absolute linear encoder becomes 0 is not in the home position return direction.

Fig. 6.49 Home position return by the dogless home position signal reference type (Operation C)

POINT

- (1) If an external limit switch is detected during home position return operation, an error occurs and stops.
- (2) Home position return retry function cannot be used.
- (5) Home position return execution Home position return by dogless home position signal reference type is executed using the servo program in Section 6.23.18.

- (6) Cautions
 - (a) If a home position return is started for an axis connected with servo amplifiers other than MR-J3(W)-□B, MR-J4(W)-□B, a minor error (error code: 192) will occur and the home position return is not executed.
 - (b) If home position return is executed again after home position return end, a minor error (error code: 115) will occur, the home position return is not executed.
 - (c) If connecting a rotational motor on the load side with a fully closed loop control servo amplifier (MR-J3-□B-RJ006, MR-J4-□B), execute home position return in a semi closed loop control state. (The home position return operation becomes that of "Operation B".)

POINT

If a home position return is performed in a fully closed loop control state, the home position return is at the position of encoder current value of multiple revolution position =0, and single revolution position =0 (The home position return operation becomes that of "Operation C"), and the motor might revolve more than necessary. When connecting a rotational motor on the load side, execute home position return in a semi closed loop control state.

- (d) If executing home position return with a fully closed loop control servo amplifier (MR-J3-□B-RJ006, MR-J4-□B), do not change fully closed loop control/semi closed loop control during home position return operation. When fully closed loop control/semi closed loop control is changed during home position return operation, the home position return might not be completed normally
- (e) If performing home position return from zero point, depending on the actual motor position at the start, and it's relative position to zero point, the home position return might be completed at the next zero point. It is recommended to move the start of the home position return from the zero point to a position in the in the reverse direction of home position return direction.
- (f) If home position return is executed during operation of amplifier-less operation function:
 - 1) MR-J3(W)-□B

Regardless of the servo amplifier model, home position return is executed by the home position return operation of "Operation B".

 MR-J4(W)-□B Home position return is executed by the home position return operation stated in amplifier operation mode that is set in amplifier setting of system setting.

- (g) Home position return by dogless home position signal reference type (Operation A)
 - Set the servo parameter (expansion parameter) "Function selection C-4 (PC17)" to "0: Need to pass motor Z phase after the power supply is switched on". If set to "1: Not need to pass motor Z phase after the power supply is switched on", when home position return by dogless home position signal reference type (operation A) is started, a minor error (error code: 124) will occur and the home position return is not executed.
 - 2) If the zero pass signal (M2046+20n) was on at home position return start, this signal turns off once at the home position return start and turns on again at the next zero point passage.
 - 3) If an external limit switch is detected during a deceleration stop after zero point detection, an error occurs and stops. Ensure there is enough distance between the zero point signal and external limit switch, or set the deceleration time so the decelerating distance is shortened.
 - 4) With home position return retry function valid, if zero point is detected during a deceleration stop after external limit switch is detected, an error occurs and stops.
- (h) Home position return by dogless home position signal reference type (Operation B)
 - Set the servo parameter (expansion parameter) "Function selection C-4 (PC17)" to "1: Not need to pass motor Z phase after the power supply is switched on". ". If set to "0: Need to pass motor Z phase after the power supply is switched on", when home position return by dogless home position signal reference type (operation B) is started, a minor error (error code: 193) will occur and the home position return is not executed.
 - 2) Home position return retry function cannot be used.
- (i) Home position return by dogless home position signal reference type (Operation C)
 - 1) If an external limit switch is detected during home position return operation, an error occurs and stops.
 - 2) Home position return retry function cannot be used.

6.23.15 Home position return retry function

When a current value has been exceeded home position during positioning control, etc., even if it executes the home position return, depending on the position of current value, a current value may not travel to home position direction. In this case, a current value is normally travelled before the proximity dog by the JOG operation, etc, and the home position return is started again. However, by using the home position return retry function, the home position return can be executed regardless of current value position. Refer to Section 6.23.1(7) for home position return method by using the home position return retry function.

[Data Setting]


When the "home position return retry function" is used, set the following "home position return data" using MT Developer2.

Set the "dwell time at the home position return retry" as required. Set the parameters for every axis.

Items	Setting details	Setting value	Initial value
Home position return retry function	 0 : Invalid (Do not execute the home position return retry by limit switch.) 1 : Valid (Execute the home position return retry by limit switch.) 	0, 1	0
	The stop time at the deceleration stop during the home position return retry is set.	0 to 5000 [ms]	0


[Control details]

- Operation for the home position return retry function is shown below.
- (1) Home position return retry operation setting a current value within the range of external limit switch

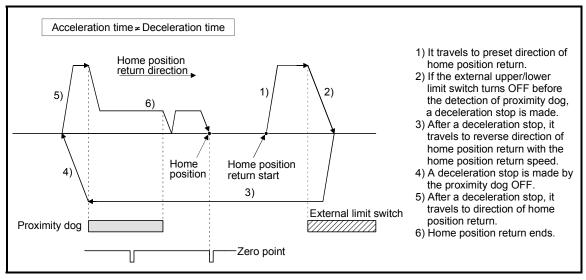




- (2) Home position return retry operation setting a current value outside the range of external limit switch
 - (a) When the direction of "current value → home position" and home position return is same, normal home position return is operated.

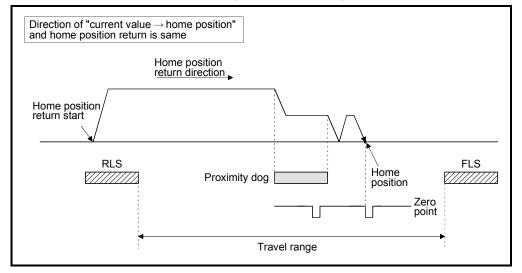

(b) When the direction of "current value → home position" and home position return is reverse, deceleration stop is made with the proximity dog OFF and home position return is operated to preset direction of home position return.

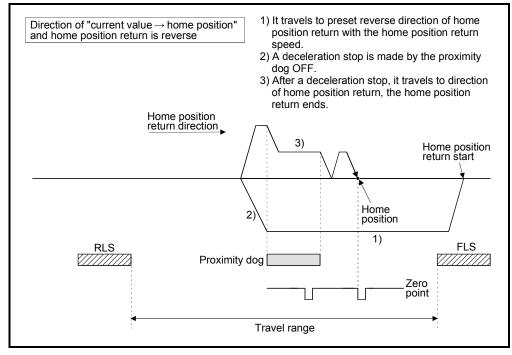

(3) Dwell time setting at the home position return retry

Reverse operation by detection of the external upper/lower limit switch and dwell time function at the home position return start after stop by proximity dog OFF are possible with the dwell time at the home position return retry in the home position return retry function.

Dwell time at the home position return retry becomes valid at the time of deceleration stop of the following 2) and 4). (Dwell time operates with the same value.)

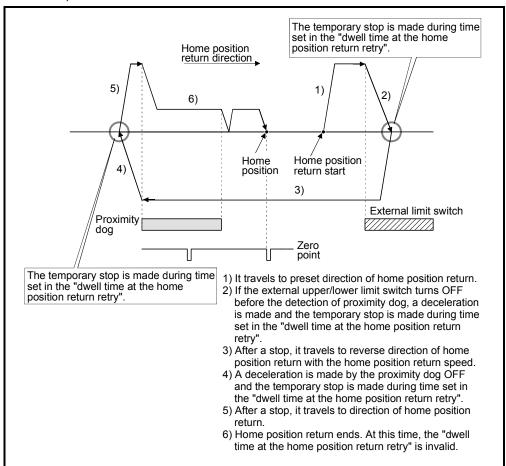


Fig. 6.51 Dwell time setting at the home position return retry

[Cautions]

(1) Possible/not possible of home position return retry function by the home position return method is shown below.

Home position return methods		Possible/not possible of home position return retry function
Proximity dog typ	e	0
Count type		0
Data set type		×
Dog cradle type		0
Stopper type		×
Limit switch comb	pined type	×
Scale home position signal detection type		×
Dogless home	Operation A	0
position signal	Operation B	×
reference type	Operation C	×

 \bigcirc : Possible, \times : Not possible

- (2) Make a system for which does not execute the servo amplifier power off or servo OFF by the external upper/lower limit switch. Home position return retry cannot be executed only in the state of servo ON.
- (3) Deceleration is made by detection of the external limit switch and travel to reverse direction of home position return is started. In this case, a major error "external limit switch detection error" (error codes: 1001, 1002, 1101, 1102) will not occur.

≜CAUTION

Be sure to set the external limit switch (FLS, RLS) in the upper/lower position of machines. If the home position return retry function is used without external limit switch, servomotors continue rotating.

6.23.16 Home position shift function

Normally, when the machine home position return is executed, a position of home position is set by using the proximity dog or zero point signal. However, by using the home position shift function, the position to which only the specified travel value was travelled from the position which detected the zero point signal can be regarded as home position.

[Data Setting]

Set the following "home position return data" using MT Developer2 to use the home position shift function.

Refer to Section 6.23.1(7) for home position return method by using the home position shift function.

Set the parameters for every axis.

Table 6.5 Home position return data

Items	Setting details	Setting value	Initial value
Home position shift amount	The shift amount at the home position shift is set.	-2147483648 to 2147483647 $[\times10^{\text{-1}}\mu\text{m},\times10^{\text{-5}}$ inch, $10^{\text{-5}}$ degree, PLS]	0
Speed set at the home position shift	The speed at the home position shift is set.	0 : Home position return speed 1: Creep speed	0

6 POSITIONING CONTROL

[Control details]

(1) Home position shift operation

Operation for the home position shift function is shown below.



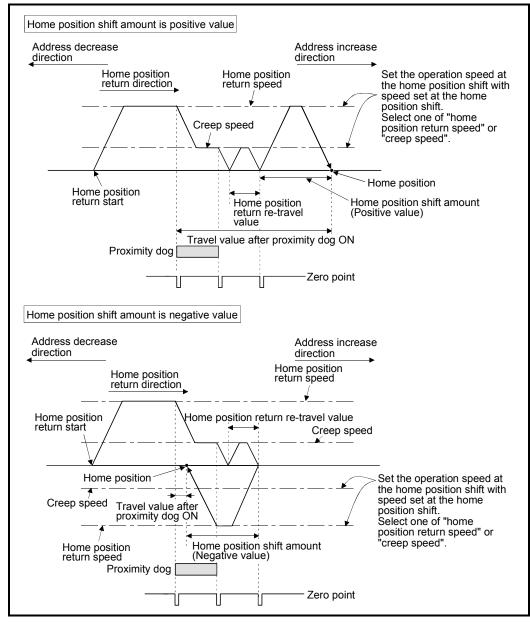


Fig. 6.52 Operation for home position shift

(2) Setting range of home position shift amount

Set the home position shift amount within the range of from the detected zero signal to external upper/lower limit switch (FLS/RLS). If the range of external upper/lower limit switch is exceeded, a major error "external limit switch detection error" (error codes: 1102, 1103) will occur at that time and the home position return is not ended.

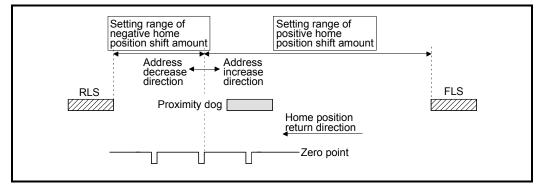



(3) Travel speed at the home position shift

When the home position shift function is used, set the travel speed at the home position shift as the speed set at the home position shift. Either the home position return speed or creep speed is selected as the travel speed at the home position shift.

The travel speed at the home position shift for the home position return by proximity dog type is shown below.

(a) Home position shift operation with the "home position return speed"



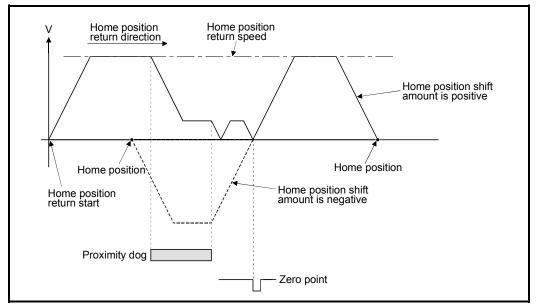


Fig. 6.54 Operation for home position shift with the home position return speed

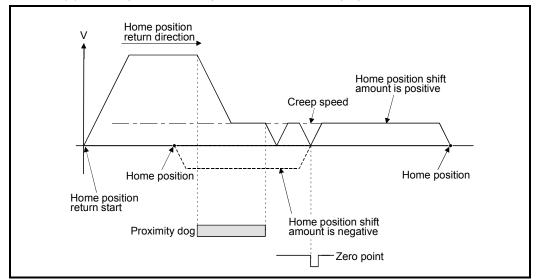

(b) Home position shift operation with the "creep speed"



[Cautions]

(1) Valid/invalid of home position shift amount setting value by the home position return method.

Home position return methods	Possible/not possible of home position return retry function					
Proximity dog type	0					
Count type	0					
Data set type	×					
Dog cradle type	0					
Stopper type	×					
Limit switch combined type	0					
Scale home position signal detection type	0					
Dogless home position signal reference type	0					

 \bigcirc : Valid, \times : Invalid

- (2) Axis monitor devices and axis statuses are set after completion of home position shift.
- (3) When the home position return by proximity dog type set the travel value after proximity dog ON and home position shift amount within the range of "-2147483648 to 2147483647" [$\times 10^{-1} \mu m$, $\times 10^{-5}$ inch, 10^{-5} degree, PLS].

6.23.17 Condition selection of home position set

A home position return must be made after the servomotor has been rotated more than one revolution to pass the axis through the Z-phase (motor reference position signal) and the zero pass signal (M2406+20n) has been turned ON.

When "1 : Not need to pass motor Z phase after the power supply is switched on" is selected in the "function selection C-4 (PC17), Condition selection of home position set" of servo parameter (expansion setting parameter), if it does not pass zero point with the motor rotation after turning the servo amplifier power ON, the zero pass signal (M2406+20n) can be turned ON.

[Data Setting]

Set the following "servo parameter" using MT Developer2 to select the "function selection C-4 (PC17)".

Set the servo parameters for every axis.

Items	Setting details	Setting value	Initial value
(PC17) Condition selection of	Set the condition selection of home position set in the absolute position system.	0: Need to pass motor Z phase after the power supply is switched on1: Not need to pass motor Z phase after the power supply is switched on	0

Table 6.6 Servo parameter (expansion setting parameter)

[Cautions]

- (1) When "1 : Not need to pass motor Z phase after the power supply is switched on" is set as the above servo parameter, a restrictions such as "make the home position return after the servomotor is rotated more than one revolution to pass the axis through the Z-phase (motor reference position signal) " is lost.
- (2) When "1 : Not need to pass motor Z phase after the power supply is switched on" is selected in the "function selection C-4 (PC17)" of servo parameter (expansion setting parameter), if it does not pass zero point at the servo amplifier power ON, the zero pass signal (M2406+20n) turns ON.
- (3) When the above parameter is changed, turn the servo amplifier power OFF to ON after resetting or turning power OFF to ON of Multiple CPU system.

Do not set the "1 : Not need to pass motor Z phase after the power supply is switched on" for axis which executes the home position return again after it continues traveling the same direction infinitely.

POINT

(1)	Set "0: Need to pass motor Z phase after the power supply is switched on" in the "function selection C-4 (PC17)" of servo parameter (expansion setting parameter) for the home position return by the scale home position signal detection type.
	If "1: Not need to pass motor Z phase after the power supply is switched on" is
	set, a minor error (error code: 124) will occur at the home position return start
	and the home position return is not executed.
(2)	When executing home position return by dogless home position signal
	reference type, set the servo parameter (expansion parameter) "Function

selection C-4 (PC17)" by the servo amplifier connected.

(Refer to Section 6.23.14)

6.23.18 Servo program for home position return

										Iter	ns s	et us	sing	MT I	Deve	elop	er2								
					Сс	omm	on		-		Arc					Para	ame	ter b	lock		-		Oth	ners	
Servo instruction	Positioning method	Number of control axes	Parameter block No.	Axis	Address/travel value	Command speed	Dwell time	M-code	Torque limit value	Auxiliary point	Radius	Central point	Interpolation control unit	Speed limit value	Acceleration time	Deceleration time	Rapid Stop deceleration time	Torque limit value	Deceleration processing on stop input	Allowable error range for circular interpolation	S-curve ratio	Advanced S-curve acceleration/deceleration		Program No.	Speed change
ZERO	_	1		0																					_

The home position return executed using the ZERO servo instruction.

[Control details]

 \bigcirc : Must be set

(1) Home position return is executed by the home position return method specified with the home position return data (Refer to Section 6.23.1).


Refer to the following sections for details of the home position return methods :

Proximity dog type 1	Section 6.23.2
Proximity dog type 2	Section 6.23.3
Count type 1	Section 6.23.4
Count type 2	Section 6.23.5
Count type 3	Section 6.23.6
Data set type 1	Section 6.23.7
Data set type 2	Section 6.23.8
Dog cradle type	Section 6.23.9
Stopper type 1	Section 6.23.10
Stopper type 2	Section 6.23.11
Limit switch combined type	Section 6.23.12
Scale home position signal detection type	Section 6.23.13
• Dogless home position signal reference type.	Section 6.23.14

6 POSITIONING CONTROL


[Program]

- Servo program No. 0 for home position return is shown as the following conditions. (1) System configuration
 - Home position return of Axis 4.

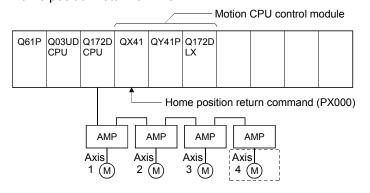


(2) Servo program example

Servo program No. 0 for home position return is shown below.

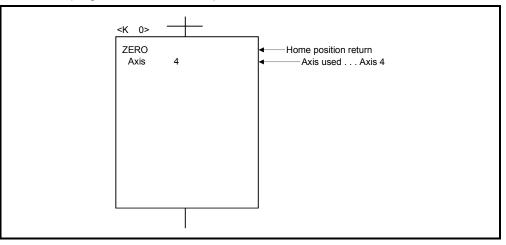

(3) Motion SFC program

Motion SFC program for which executes the servo program is shown below.

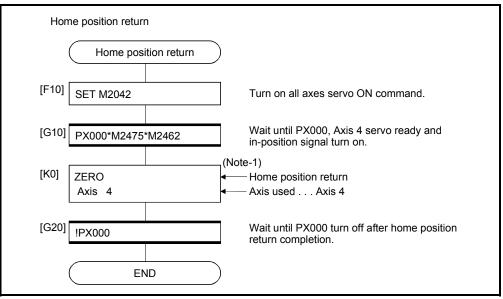

(Note-1): It is necessary to turn on the zero pass signal before execution of the home position return instruction for data set type home position return.

(Note-2): Example of the above Motion SFC program is started using the automatic start or sequence program.

[Cautions]

If the home position is not within the in-position range of servo parameter, it does not mean having reached the home position and the home position return does not end in the proximity dog type, count type, data set type 1, dog cradle type, limit switch combined type, scale home position signal detection type, or dogless home position signal reference type home position return. In this case, adjusts the in-position range of servo parameter or position control gain.

6.24 High-Speed Oscillation


			1																					1	
										Iter	ns s	et us	sing	MT [Deve	elope	er2								
					Сс	omm	on			(osc					Para	ame	ter b	lock				Oth	iers	
Servo instruction	Positioning method	Number of control axes	Parameter block No.	Axis	Address/travel value	Command speed	Dwell time	M-code	Torque limit value	Starting angle	Amplitude	Frequency	Interpolation control unit	Speed limit value	Acceleration time	Deceleration time	Rapid Stop deceleration time	Torque limit value	Deceleration processing on stop input	Allowable error range for circular interpolation	S-curve ratio	Advanced S-curve acceleration/deceleration	Cancel	WAIT-ON/OFF	Speed change
OSC	_	1	\triangle	0				\bigtriangleup		0	0	0						\bigtriangleup					\bigtriangleup		Invalid

Positioning of a specified axis is caused to oscillate on a sine wave.

 \bigcirc : Must be set \triangle : Set if required

[Control details]

The designated axis caused to oscillate on a specified sine wave. Acceleration/deceleration processing is not performed.



(1) Amplitude

Set the amplitude of the oscillation in the setting units. The amplitude can be set within the range of 1 to 2147483647.

(2) Starting angle

Set the angle on the sine curve at which oscillation is to start. The setting range is 0 to 359.9 [degree]

(3) Frequency

Set how many sine curve cycles occur in one minute. The setting range is 1 to 5000 [CPM].

POINT

Since acceleration/deceleration processing is not performed, you should set the starting angle to 90 or 270 [degree] in order to avoid an abrupt start.


6 POSITIONING CONTROL

[Cautions]

- (1) If the amplitude setting is outside the range, the servo program setting error [25] occurs and operation does not start.
- (2) If the starting angle setting is outside the range, the servo program setting error [26] occurs and operation does not start.
- (3) If the frequency setting is outside the range, the servo program setting error [27] occurs and operation does not start.
- (4) Operation is continually repeated until a stop signal is input after the start.
- (5) Speed changes during operation are not possible. Attempted speed changes will cause minor error [310].
- (6) Do not use the high-speed oscillation in the axis that invalidates a stroke limit of control unit "degree".

[Program]

An example of a program for high-speed oscillation is shown below.

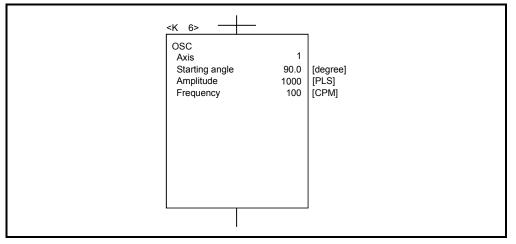

MEMO

 	 <u></u>
	<u> </u>

7. AUXILIARY AND APPLIED FUNCTIONS

This section describes the auxiliary and applied functions for positioning control in the Multiple CPU system.


7.1 M-code Output Function

M-code is a code No. between 0 and 32767 which can be set for every positioning control. During positioning control, these M-codes are read using the Motion SFC program to check the servo program during operation and to command auxiliary operations, such as clamping, drill rotation and tool replacement.

- Setting of M-codes
 M-code can be set using MT Developer2 at the creation and correction of the servo program.
- (2) Storage of M-code and read timing

perform interpolation control.

- M-codes are stored in the M-code storage register of the axis specified with the positioning start completion and specified points (at the speed switching control or constant-speed control).
 During interpolation control, the M-codes are stored in all axes which
- (b) When the M-code is read at the positioning start completion, use the positioning start complete signal (M2400+20n) as the reading command.

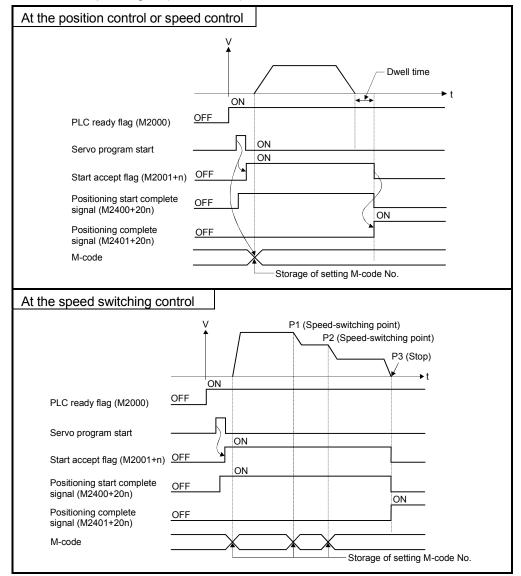

(c) When the M-code is read at positioning completion, use the positioning complete signal (M2401+20n) as the read command.

(3) Resetting of M-codes

M-codes can be reset by setting of the M-code output devices to zero. Use this method during positioning control to perform operations unrelated to the servo program, such as when it has been difficult to output the M-code during the previous positioning control.

However, M-code is set during the speed switching control or constant-speed control, the M-code output of the servo program takes priority.

(4) Program example

- (a) The Motion SFC program to read M-codes is shown as the following conditions.
 - 1) Axis used No.....Axis 3
 - 2) Processing at the positioning start by M-code M-code No. is output
 - as BCD code to Y110
 - to Y11F
 - 3) Processing at the positioning completion by M-code
 - a) M-code = 3.....Y120 turns on
 - b) M-code = 5.....Y121 turns on
 - c) M-code is except for (3 or 5)Y122 turns on
- (b) Motion SFC program with the above conditions are shown below.

	System Configu	iration					
	Q61P Q03UD Q CPU CF	172D QY40P QY4 PU	IOP Q172D LX]			
		7000 PY010 to to 700F PY01F					
	Motion SFC pro	aram					
		Jyrann	、 、				
	Reading c	of M-codes)		1	l)	
[F10]	#0=0		7				
	#1=0 #2=0			[G30]	D53==5	·	M-code (5) for axis 3 ?
[F20]	SET M2042		All axes servo ON command turns on	[F40]	#1=BCD(D53)		After M-code storage area for axis 3 is changed into BCD code,
[G10]	PX000*M2455		Stand by until PX000 and Axis 3 servo ready turns on		DOUT Y110, # SET Y121	1	it is output to ¥110 and ¥121 turns on.
[K100]	CPSTART1		1 axis constant-speed control			M-code (except 3	B or 5) for axis 3 ?
	Axis 3 Speed	1000PLS/s	Axis used Axis 3 Speed 1000PLS/s	[G40]	(D53==3)+(D5	3==5)	After M-code storage area for axis 3 is
	INC-1 Axis 3.	200000PLS	1 axis linear positioning control • Axis used Axis 3				changed into BCD code, it is output to Y110 and
	M-code	3	Positioning 200000PLS address			[F50]	Y122 turns on. #2=BCD(D53)
	Axis 3,	300000PLS	M-code output 3 1 axis linear positioning control				DOUT Y110, #2
	M-code INC-1	5	Axis used Axis 3 • Positioning 300000PLS				SET Y122
	Axis 3, M-code	400000PLS 4	address M-code output 5	[G50]	!M2003		→ P0
	CPEND	·	1 axis linear positioning control • Axis used Axis 3		:10/2003		
		← P0	 Positioning 40000PLS address M-code output 4 				
[G20]	D53==3		M-code (3) for axis 3 ?				
[F30]	#0=BCD(D53) DOUT Y110, # SET Y120		After M-code storage area for ax is changed into BCD code, it is o to Y110 and Y120 turns on.	is 3 utput			
	1)					

7.2 Backlash Compensation Function

This function compensates for the backlash amount in the machine system. When the backlash compensation amount is set, extra feed pulses equivalent to the backlash compensation amount set up whenever the travel direction is generated at the positioning control, JOG operation or manual pulse generator operation.


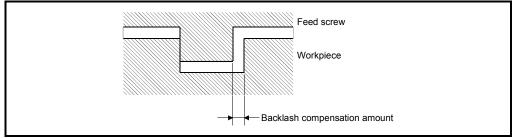


Fig.7.1 Backlash compensation amount

 Setting of the backlash compensation amount The backlash compensation amount is one of the fixed parameters, and is set for each axis using MT Developer2.

The setting range differs according to whether [mm], [inch], [degree] or [PLS] units are used as shown below.

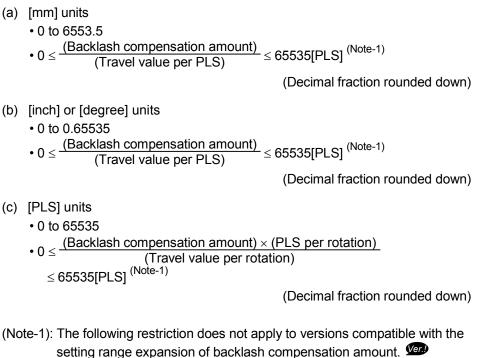

Ver. : Refer to Section 1.3 for the software version that supports this function.

(2) Backlash compensation processing

Details of backlash compensation processing are shown below.

Condition	Processing
First start after power on	 If travel direction is equal to home position return direction, the backlash compensation is not executed. If travel direction is not equal to home position return direction, the backlash compensation is executed.
JOG operation start	 If travel direction is changed at the JOG operation start, the backlash compensation is executed.
Positioning start	 If travel direction is changed, the backlash compensation is executed.
Manual pulse generator operation	 If travel direction is changed, the backlash compensation is executed.
Home position return completion	The backlash compensation is executed after home position return completion.
Absolute position system	Status stored at power off and applied to absolute position system.

Table 7.1 Details of backlash compensation process	sina
	Sing

POINTS

- (1) The feed pulses of backlash compensation amount are added to the feed current value.
- (2) When the backlash compensation amount is changed, the home position return is required.

When the home position return is not executed, the original backlash compensation amount is not changed.

7.3 Torque Limit Function

This function restricts the generating torque of the servomotor within the setting range. If the torque required for control exceeds the torque limit value during positioning control, it restricts with the setting torque limit value.

(1) Default of the torque limit value

The default 300[%] is set as torque limit value at the servo amplifier's power supply or Multiple CPU system's power supply ON.

(2) Setting method of torque limit value Set the torque limit value by the following method. The positive direction of torque limit value restricts the forward rotation (CCW) driving and reverse rotation (CW) regenerative torque of servo motor, and the negative direction of torque limit value restricts the reverse rotation (CW) driving and forward rotation (CCW) regenerative torque.

Se	tting method	Setting details	Setting range	Setting units	Reference
Parameter bl	lock	Set the torque limit value in the parameter block. By setting the parameter block No. used in the servo program, the torque limit value of specified axis is changed to same value for both of positive direction and negative direction for every positioning control. Set the torque limit value in the parameter block. By setting the parameter block in the home position return data and JOG operation data for every axis, the torque limit value at home position return and JOG operation is changed to same value for both of positive direction and negative direction.	1 to 1000	[%]	Section 4.3
Servo progra	ım	By setting the torque limit value in the servo program, the torque limit value of specified axis at servo program execution is changed to same value for both of positive direction and negative direction.			Section 5.3
Motion SFC	Torque limit value change request (CHGT)	By executing the torque limit value change request (CHGT) in the operating control step of Motion SFC program, the torque limit value of specified axis is changed to same value for both of positive direction and negative direction.			
program	Torque limit value individual change request (CHGT2)	By executing the torque limit value individual change request (CHGT2) in the operating control step of Motion SFC program, the torque limit value of specified axis is changed to different value for positive direction and negative direction.	1 to 10000	[0.1%]	(Note-1)
Motion dedicated	Torque limit value change request instruction (D(P).CHGT)	By executing the torque limit value change request instruction (D(P).CHGT) in the PLC CPU, the torque limit value of specified axis is changed to same value for both of positive direction and negative direction.	1 to 1000	[%]	
PLC instruction	Torque limit value individual change request instruction (D(P).CHGT2)	By executing the torque limit value individual change request instruction (D(P).CHGT2) in the PLC CPU, the torque limit value of specified axis is changed to different value for positive direction and negative direction.	1 to 10000	[0.1%]	

(Note-1): Q173D(S)CPU/Q172D(S)CPU Motion controller (SV13/SV22) Programming Manual (Motion SFC)


(3) Priority of torque limit value setting

When the multiple torque limit values are set on the same axis, the latest torque limit value is valid. However, the setting of torque limit value set in the parameter block or servo program is valid only if lower than the torque limit value set in the Motion SFC program or Motion dedicated PLC instruction.

POINTS


When the torque limit value is set individually for positive direction and negative direction in the Motion SFC program or Motion dedicated PLC instruction, only either one of the positive direction or negative direction may become valid depending on the setting value of servo program.

(a) Operation description for Q173DSCPU/Q172DSCPU use

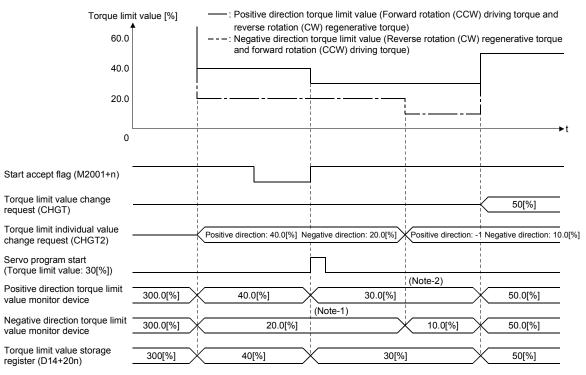

(Note-1): The torque limit value specified with servo program is cramped with the negative direction torque limit value changed by CHGT2.

(Note-2): The torque limit value is not changed so that "-1" is set as the positive direction toruque limit value of CHGT2.

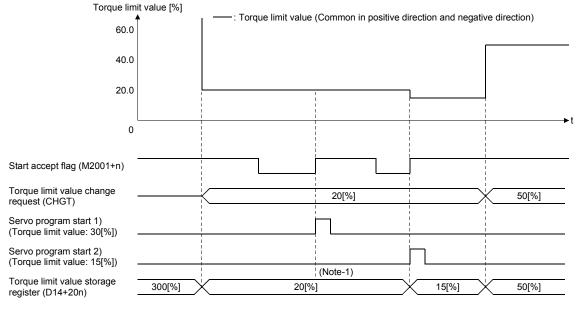

(b) Operation description for Q173DCPU(-S1)/Q172DCPU(-S1) use

(Note-1): The torque limit value specified with servo program is cramped with the torque limit value changed by CHGT.

(4) Maintaining of torque limit value


The setting of torque limit value is held during servo amplifier's power supply ON and Multiple CPU system's power supply ON. When the default of torque limit value becomes 300[%] by turning ON again the servo amplifier's power supply or Multiple CPU system's power supply.

7.4 Skip Function in which Disregards Stop Command

When the current positioning is stopped by input from external source and the next positioning control is performed, it enables starting of the next positioning control even if the input from external source is on (continuation).


There are following tow functions in the function called "Skip".

- Skip during CP command (Refer to Section "6.17.6 Pass point skip function".)
- Skip in which disregards stop command Usually, although an error [***] occurs with the servo program start during the STOP signal on, if M3209+20n turns on and the servo program starts, the next servo program starts even if during the STOP signal on.
- (1) The procedure for the skip function by the external STOP signal and Motion SFC program is shown below.

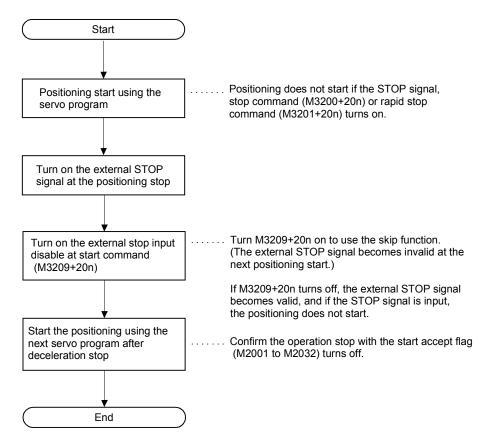

(2) Operation timing


The operation timing for the skip function is shown below.

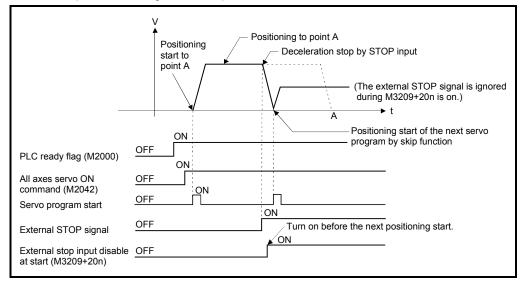

7 AUXILIARY AND APPLIED FUNCTIONS


7.5 Cancel of the Servo Program

[Control details]	This function performs a deceleration stop of executing servo program during execution by turning on the cancel signal.
	(1) When the cancel signal is turned on during execution of a program for which the cancel has been specified, the positioning processing is suspended, and a deceleration stop is executed.
[Data setting]	·
	 Cancel signal device The usable cancel signal devices are shown below.
	X, Y, M, B, F, U□\G
[Note]	
	 This function cannot be used in the home position return instruction (ZERO) or simultaneous start instruction (START).
	Refer to the servo instruction list (5.2(2)) for setting of other instructions.
[Operation timing]	
	The operation timing for deceleration stop is shown below.

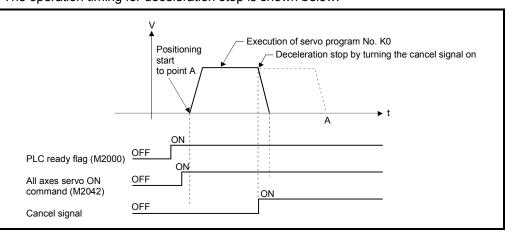

[Program example]


Motion SFC program is shown bellow.

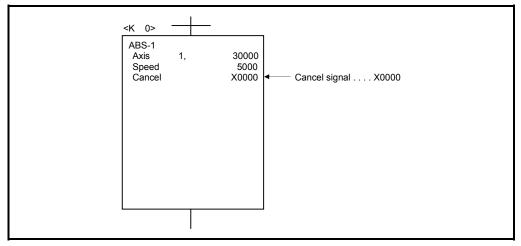

7.5.1 Cancel/start

When a cancel/start has been set in the setting items of the servo program which was started at the motion control step of the Motion SFC program, the cancel of the running servo program is valid but the servo program specified to start after a cancel is ignored, without being started.

Example of the Motion SFC program which executed control equivalent to a cancel start is shown below.

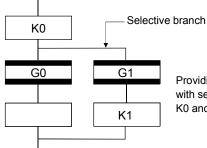

Providing transition G1 with cancel device condition specified with servo program K0 will cancel to execute of servo program K0 and allow servo program K1 to start.

7.6 Synchronous Encoder Ver.)


The synchronous encoder can be used in real mode by setting the synchronous encoder used in the system setting.

The synchronous encoder set in the system setting can be used the following functions in both of the real mode and virtual mode regardless of whether or not the synchronous encoder is set in the mechanical program.

Functions	Description
Current value storage register (D1120+10n, D1121+10n)	A current value of synchronous encoder is updated for operation cycle.
 Synchronous encoder current value change Servo instruction of Motion SFC (CHGA-E) Motion dedicated PLC instruction (D(P).CHGA) 	A current value change of synchronous encoder axis is executed.
Error reset command (M5440+4n)	An error reset of synchronous encoder axis is executed.

[Control details]

The input pulse from external synchronous encoder is always input after Multiple CPU system's power supply ON. The input pulse is always input in real mode regardless of the state for the clutch of mechanical system program or external signal. Refer to the "Q173D(S)CPU/Q172D(S)CPU Motion controller Programming Manual (VIRTUAL MODE)" for operation in virtual mode.

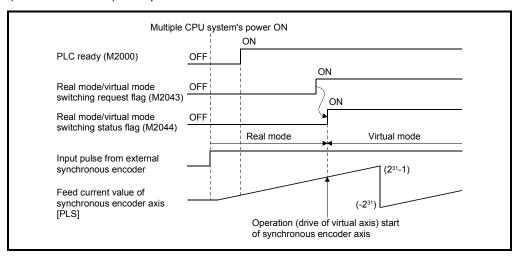

Ver. : Refer to Section 1.3 for the software version that supports this function.

7.7 Speed-Torque Control

This function is used to execute the speed control or torque control that does not include the position loop for the command to servo amplifier.

The "continuous operation to torque control mode" that switches the control mode to torque control mode without stop of servomotor during positioning operation when tightening a bottle cap or a screw.

Switch the control mode from "position control mode" to "speed control mode", "torque control mode" or "continuous operation to torque control mode" to execute the "Speed-torque control.

Control mode	Control	Remark
Position control mode	Positioning control ^(Note-1) , home position return control, JOG operation, and manual pulse generator operation	Control that include the position loop for the command to servo amplifier
Speed control mode		Control that does not include the
Torque control mode		position loop for the command to servo amplifier
Continuous operation to torque control mode	Speed-torque control	Control that does not include the position loop for the command to servo amplifier Control mode can be switched during positioning control or speed control.

(Note-1): Excluding speed control (II).

Use the servo amplifiers whose software versions are compatible with each control mode to execute the "Speed-torque control".

Servo amplifier software versions that are compatible with each control mode are shown below.

	Software version				
Servo amplifier model	Speed control	Torque control (Note-1)	Continuous operation to torque control		
MR-J4-⊟B	_	_	_		
MR-J4W-□B	_	—	_		
MR-J3-□B		B3 or later	C7 or later		
MR-J3W-□B	_	_	Not compatible		
MR-J3-⊟B Safety	_	—	C7 or later		

-: There is no restriction by the version.

(Note-1): In the servo amplifier that supports continuous operation to torque control, the torque generation direction of servo motor can be switched by setting "Function selection C-B (PC29) (POL reflection selection at torque control)". (Refer to Section 7.7.1 (7).)

In the servo amplifier that does not support continuous operation to torque control, the operation is the same as when "0: Valid" is set in "Function selection C-B (PC29) (POL reflection selection at torque control)".

▲CAUTION

If operation that generates torque more than 100% of the rating is performed with an abnormally high frequency in a servo motor stop status (servo lock status) or in a 30r/min or less low-speed operation status, the servo amplifier may malfunction regardless of the electronic thermal relay protection.

7.7.1 Speed-torque control data

Speed-torque control data are for executing "speed-torque control". Set the data using servo data setting of MT Developer2.

<u> </u>											
		95	Setting nec	-	Setting value using MT Developer2						
No.	Setting item	Speed control	Torque control	Continuous operation to torque control	Initial value	Units	mm	inch	g range degree	PLS	
1	Control mode switching request device	0	0	0		-		-	_		
2	Control mode setting device	0	0	0	-			-	_		
3	Speed limit value at speed-torque control	0	0	0	200000	Selected unit	0.01 to 6000000.00 [mm/min]	0.001 to 600000.000 [mm/min]	0.001 to 2147483.647 [degree/min] (Note-1)	1 to 2147483647 [PLS/s]	
4	Torque limit value at speed-torque control	0	0	0	300.0	%		0.1 to 10	000.0 [%]		
5	Speed command device	0	0	0	_		_				
6	Command speed acceleration time	0	_	0	1000	ms	0 to 65535 [ms]				
7	Command speed deceleration time	0	_	0	1000	ms	0 to 65535 [ms]				
8	Torque command device	_	0	0		_	_				
9	Command torque time constant (positive direction)	_	0	0	1000	ms	0 to 65535 [ms]				
10	Command torque time constant (negative direction)	_	0	0	1000	ms	0 to 65535 [ms]				
11	Speed initial value selection at control mode switching	0	_	0	0	_	0: Command speed 1: Feedback speed 2: Automatic selection				
12	Torque initial value selection at control mode switching	_	0	0	0	_	0: Command torque 1: Feedback torque				
13	Invalid selection during zero speed at control mode switching	0	0	0	0	_	0: Condition at control mode switching: valid 1: Condition during zero speed at control mode switching: invalid				

Table 7.2 Speed-torque control data list

Setting	value using the Motion	SFC program (Indirect s	settina)	Indirect	settina	
	Setting		0/			
mm	inch	degree	PLS	Valid/ invalid	Number of words	Remarks
	-	_		0	Bit	
1	 Position control mod Speed control mode Torque control mode Continuous operation)	9	0	1	
1 to 600000000 (×10 ⁻² [mm/min])	1 to 600000000 (×10 ⁻³ [inch/min])	1 to 2147483647 (×10 ⁻³ [degree/min]) (Note-2)	1 to 2147483647 [PLS/s]	0	2	
1 to 10000 (×0.1 [%])						
-60000000 to 600000000 (×10 ⁻² [mm/min])	-600000000 to 600000000 (×10 ⁻³ [inch/min])	-2147483648 to 2147483647 (×10 ⁻³ [degree/min]) (Note-3)	-2147483648 to 2147483647 [PLS/s]	0	2	
	0 to 655	535 [ms]		0	1	
	0 to 655	535 [ms]		0	1	
	-10000 to 100	000 (×0.1 [%])		0	1	
	0 to 655	35 [ms]		0	1	
0 to 65535 [ms]					1	
_					_	
_					_	
	-	_				

(Note-1): When the "speed control 10×multiplier setting for degree axis" is set to "valid", the setting range is 0.01 to 2147483647[degree/min]. (Note-2): When the "speed control 10×multiplier setting for degree axis" is set to "valid", the setting range is 1 to 2147483647[×10⁻² degree/min]. (Note-3): When the "speed control 10×multiplier setting for degree axis" is set to "valid", the setting range is -2147483648 to 2147483647[×10⁻² degree/min]. A part of speed-torque control data can be executed the indirect setting by the word devices of Motion CPU

Word devices for indirect setting

The word devices for indirect setting are the data registers (D), link registers (W), motion registers (#) and Multiple CPU area device (U \square \G). Word devices except the above devices cannot be used.

The usable setting range of word devices is shown below.

Word device	Setting range	
D	0 to 8191	
W	0 to 1FFF	
#	0 to 7999	
U⊡\G 10000 to (10000+p-1) ^{(Note}		

(Note-1): "p" indicates the user setting area points of the Multiple CPU high speed transmission area for each CPU.

(Note-2): Refer to Chapter 2 of the "Q173D(S)CPU/Q172D(S)CPU Motion controller Programming Manual (COMMON)" for the user setting area points of the Multiple CPU high speed transmission area.

· Bit devices for indirect setting

The bit devices for indirect setting are the input (X), output (Y), internal relay (M), link relay (B), annunciator (F) and Multiple CPU area device $(U\Box\backslash G)$.

Bit devices except the above devices cannot be used.

Bit device	Setting range	
Х	0000 to 1FFF ^(Note-1)	
Y	0000 to 1FFF	
М	0 to 8191	
В	0000 to 1FFF	
F	0 to 2047	
U⊟\G 10000.0 to (10000+p-1).F		

The usable setting range of bit devices is shown below.

(Note-1): The range of "PXn+4 to PXn+F" cannot be used (fixed at 0) for the input device (PXn+0 to PXn+F) allocated to the built-in interface in Motion CPU (DI). (n: First input No.)

(Note-2): "p" indicates the user setting area points of the Multiple CPU high speed transmission area for each CPU.

(Note-3): Refer to Chapter 2 of the "Q173D(S)CPU/Q172D(S)CPU Motion controller Programming Manual (COMMON)" for the user setting area points of the Multiple CPU high speed transmission area.

Input of speed-torque control data

Input timing of each setting device is shown below.

Setting item	Input timing of device
Control mode switching request device	Operation cycle
Control mode setting device	
Speed limit value at speed-torque control	Control mode switching
Torque limit value at speed-torque control	
Speed command device	Operation cycle
Command speed acceleration time	
Command speed deceleration time	Control mode switching
Torque command device	Operation cycle
Command torque time constant (positive direction)	O sectoral and de souitablie a
Command torque time constant (negative direction)	Control mode switching

(1) Control mode switching request device

Request the control mode switching. When the control mode switching request device is turned OFF to ON, the mode is switched to the control mode set in the control mode setting device.

(2) Control mode setting device

Set the control mode to be changed.

When the control mode switching request device is turned OFF to ON, the mode is switched to the following control mode according to the value of control mode setting device.

Control mode setting device value	Control mode
0	Position control mode
10	Speed control mode
20	Torque control mode
30	Continuous operation to toque control mode

If the value of control mode setting device is outside the range at control mode switching request, a minor error (error code: 155) will occur, and the control mode is not switched.

(3) Speed limit value at speed-torque control

Set the speed limit value (absolute value) at speed control, torque control or continuous operation to torque control. If the command speed exceeds the speed limit value at speed-torque control, a minor error (error code: 315) will occur, and the control is executed with the speed limit value at speed-torque control.

(4) Torque limit value at speed-torque control

Set the torque limit value (absolute value) in speed control, torque control or continuous operation to torque control. If the command torque exceeds the torque limit value at speed-torque control, a minor error (error code: 316) will occur, and the control is executed with the torque limit value at speed-torque control.

(5) Speed command device


Set the command speed at speed control and the speed limit command value to servo amplifier at torque control or continuous operation to torque control. The value of speed command device can be changed at any time.

POINTS

The actual motor speed may not reach the speed limit value depending on the machine load situation during torque control or continuous operation to torque control.

(6) Command speed acceleration time, Command speed deceleration time

Set the acceleration time for the speed to increase from "0" to reach the speed limit value at speed-torque control and deceleration time taken to stop from the speed limit value at speed-torque control during speed control or continuous operation to torque control.

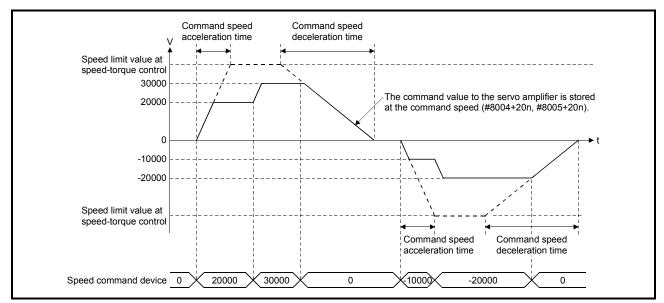

When the rotation direction is changed due to the command speed change during speed control, the operation is as follows.

• A deceleration is made to 0 [r/min] according to the setting value of command speed deceleration time. After that, an acceleration is made to the command speed according to the setting value of command speed acceleration time.

(7) Torque command device

Set the command torque at torque control and continuous operation to torque control. Command torque can be changed at any time.

(a) Torque control

The relation between setting of command torque and torque generation direction of servomotor differs from the setting of servo parameter "Rotation direction selection (PA14)" and "Function selection C-B (PC29) (POL reflection selection at torque control)".

Table 7.3 Relation between setting of command torque and torque generation direction of servomotor (Torque control)

Function selection C-B (PC29) (POL reflection selection at torque control)"	Rotation direction selection (PA14)	Torque command device	Torque generat	ion direction of servo motor
	0: Forward rotation (CCW)	Positive value (Forward direction)	CCW direction	
	with the increase of the positioning address	Negative value (Reverse direction)	CW direction	
0: Valid	1: Reverse rotation (CW)	Positive value (Forward direction)	CW direction	
	with the increase of the positioning address	Negative value (Reverse direction)	CCW direction	
	0: Forward rotation (CCW)	Positive value (Forward direction)	CCW direction	CCW direction CW
1: Invalid	with the increase of the positioning address	Negative value (Reverse direction)	CW direction	direction GW direction
	1: Reverse rotation (CW)	Positive value (Forward direction)	CCW direction	
with the increase of the positioning address		Negative value (Reverse direction)	CW direction	

(b) Continuous operation to torque control


The relation between setting of command torque and torque generation direction of servomotor is fixed regardless of the setting of servo parameter "Rotation direction selection (PA14)" and "Function selection C-B (PC29) (POL reflection selection at torque control)".

Table 7.4 Relation between setting of command torque and torque generation direction of servomotor (Continuous operation to torque control)

Function selection C-B (PC29) (POL reflection selection at torque control)"	Rotation direction selection (PA14)	Torque command device	Torque generat	ion direction of servo motor
	0: Forward rotation (CCW)	Positive value (Forward direction)	CCW direction	
0.) (-154	with the increase of the positioning address	Negative value (Reverse direction)	CW direction	
0: Valid	1: Reverse rotation (CW)	Positive value (Forward direction)	CCW direction	
	with the increase of the positioning address	Negative value (Reverse direction)	CW direction	
	0: Forward rotation (CCW)	Positive value (Forward direction)	CCW direction	CCW direction CW
1: Invalid positionin 1: Reverse	with the increase of the positioning address	Negative value (Reverse direction)	CW direction	direction CW direction
	1: Reverse rotation (CW)	Positive value (Forward direction)	CCW direction	
with the increase of the positioning address		Negative value (Reverse direction)	CW direction	

(8) Command torque time constant (positive direction), Command torque time constant (negative direction)

Set the time (positive direction) for torque to increase from "0" to reach the torque limit value at speed-torque control and the time (negative direction) to decrease to "0" from the torque limit value at speed-torque control during torque control or continuous operation to torque control.

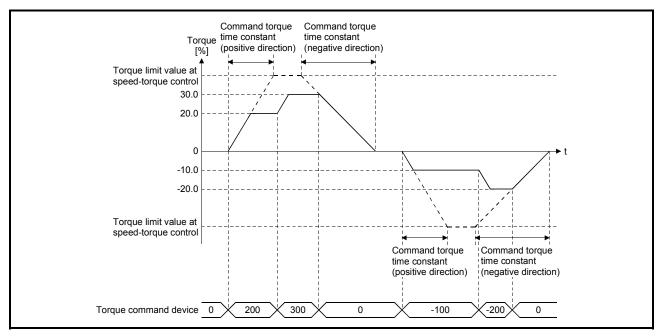

When the torque generation direction of servo motor is changed due to the command torque change during torque control or continuous operation to torque control, the operation is as follows.

- The torque output value is 0 [%] according to the setting value of command torque time constant (negative direction). After that, the value becomes command torque according to the setting value of command torque time constant (positive direction).
- (9) Speed initial value selection at control mode switching
 - Set the speed initial value at the following control mode switching.
 - Position control to speed control
 - Position control to continuous operation to torque control
 - Speed control to continuous operation to torque control

Speed initial value selection at control mode switching	Command speed to servo amplifier immediately after control mode switching
0: Command speed	The speed to servo amplifier immediately after switching is the speed during command.
1: Feedback speed Motor speed received from servo amplifier at switching.	
2: Automatic selection	The speed to servo amplifier immediately after switching is the lower speed between "0: Command speed" and "1: Feedback speed".

POINT

When the mode is switched to continuous operation to torque control mode in cases where command speed and actual speed are different such as during acceleration/deceleration or when the speed does not reach command speed due to torque limit, set "1: Feedback speed".

(10) Torque initial value selection at control mode switching Set the torque initial value at switching to torque control mode or continuous operation to torque control mode.

Torque initial value selection at control mode switching	Command torque to servo amplifier immediately after control mode switching
0: Command speed	Immediately after switching the control mode, the value of torque command device is the torque to servo amplifier regardless of the command torque time constant.
1: Feedback speed	Motor current value received from servo amplifier at switching is the command torque to servo amplifier.

(11) Invalid selection during zero speed at control mode switching Set to switch the control mode without waiting for stop of servo motor.

Invalid selection during zero speed at control mode switching		
0: Condition at control mode switching: valid		
1: Condition during zero speed at control mode switching: invalid		

POINT

Set normally "0". Set "1" to switch to the control mode without waiting for stop of servo motor immediately after completion of the command to servo motor. At switching to continuous operation to torque control, switching of control mode is possible without stop regardless of the setting value.


7.7.2 Operation of speed-torque control

- (1) Switching of control mode (Speed control/Torque control)
 - (a) Switching method of control mode

Turn OFF to ON the control mode switching request device after setting the control mode (10: Speed control mode, 20: Torque control mode) in the control mode setting device to switch to the speed control or torque control. When the mode is switched to the speed control mode or torque control mode, the control data used in each control mode must be set before turning ON the control mode switching request device.

When the switching condition is satisfied at control mode switching request, the control mode is switched, and the start accept flag (M2001+n) turns ON. A minor error (error code: 101, 156) will occur if the switching condition is not satisfied, and the control mode is not switched.

The following shows the switching condition of each control mode.



	Switching operation	Switching condition	
1)	Position control mode \rightarrow Speed control mode	Not during positioning ^(Note-1) and during motor stop _(Note-2)	
2)	Seed control mode \rightarrow Position control mode	During motor stop (Note-2)	
3)	Position control mode \rightarrow Torque control mode	Not during positioning $^{(Note-1)}$ and during motor stop $^{(Note-2)}$	
4)	Torque control mode \rightarrow Position control mode	During motor stop (Note-2)	
5)	Speed control mode \rightarrow Torque control mode	→ Torque control mode None	
6)	Torque control mode \rightarrow Speed control mode		

(Note-1): The start accept flag (M2001+n) is OFF.

(Note-2): ZERO speed (b3) of Servo status2 (#8011+20n) is ON.

The control mode can be changed without checking the switching condition of "during motor stop" in Motion CPU by setting "1: Condition during zero speed at control mode switching: invalid" in "Invalid selection during zero speed at control mode switching". Set "1: Condition during zero speed at control mode switching: invalid" to switch the control mode without waiting for stop of servo motor.

Confirm the control mode with "control mode (b2, b3)" of servo status1 (#8010+20n).


1) Control mode (b2, b3) of servo status1 (#8010+20n)

b3	b2	Control mode
0	0	Position control mode
0	1	Speed control mode
1	0	Torque control mode

- (b) Precautions at control mode switching
 - 1) The positioning start complete signal (M2400+20n) and positioning complete signal (M2401+20n) do not turn ON at control mode switching.
 - During speed control or torque control, the start accept flag (M2001+n) turns ON.
 - 3) The motor speed might change momentarily at switching from the speed control mode to torque control mode. Therefore, it recommended to switch from the speed control mode to torque control mode after the servomotors are stopped.
 - 4) Cannot use press with limited torque during speed control mode.
 - 5) In speed controlling signal (M2404+20n) does not turn ON during speed control mode in the speed-torque control.
- (c) Operation for "Position control mode ↔ Speed control mode switching" When the mode is switched from position control mode to speed control mode, the command speed immediately after switching is the speed set in "speed initial value selection at control mode switching".

Speed initial value selection at	Command speed to servo amplifier immediately after switching
control mode switching	from position control mode to speed control mode
0: Command speed	The speed to servo amplifier immediately after switching is "0".
1: Feedback speed	Motor speed received from servo amplifier at switching.
2: Automatic selection	At control mode switching, operation is the same as "0: Command speed".

When the mode is switched from speed control mode to position control mode, the command position immediately after switching is the current feed value at switching.

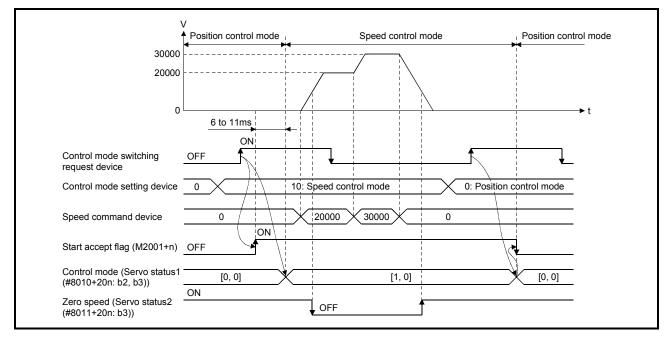

The following chart shows the operation timing.


 (d) Operation for "Position control mode ↔ Speed control mode switching" When the mode is switched from position control mode to torque control mode, the command torque immediately after switching is the torque set in "torque initial value selection at control mode switching".

Torque initial value selection at control mode switching	Command torque to servo amplifier immediately after switching from position control mode to torque control mode
0: Command torque	Immediately after switching the control mode, the value of torque command device is the torque to servo amplifier regardless of the command torque time constant.
1: Feedback torque	Motor current value received from servo amplifier at switching is the torque to servo amplifier.

POINT

When the servo parameter "POL reflection selection at torque control (PC29)" is set to "0: Valid" and "Torque initial value selection at control mode switching" is set to "1: Feedback torque", a minor error (error code: 154) will occur at control mode switching, and the command value immediately after switching is the same as the case of selecting "0: Command torque". If the feedback torque is selected, set "1: Invalid" in the servo parameter "POL reflection selection at torque control (PC29)".

When the mode is switched from torque control mode to position control mode, the command position immediately after switching is the current feed value at switching.

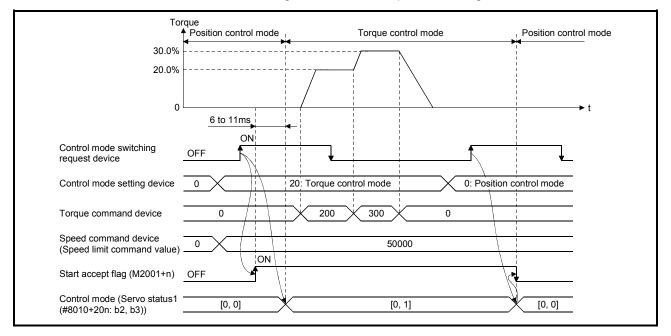

The following chart shows the operation timing.

(e) Operation for "Speed control mode ↔ Torque control mode switching" When the mode is switched from speed control mode to torque control mode, the command torque immediately after switching is the torque set in "Torque initial value selection at control mode switching".


Torque initial value selection at control mode switching	Command torque to servo amplifier immediately after switching from speed control mode to torque control mode	
0: Command torque	Immediately after switching the control mode, the value of torque command device is the torque to servo amplifier regardless of the command torque time constant.	
1: Feedback torque	Motor current value received from servo amplifier at switching is the torque to servo amplifier.	

POINT

When the servo parameter "POL reflection selection at torque control (PC29)" is set to "0: Valid" and "Torque initial value selection at control mode switching" is set to "1: Feedback torque", a minor error (error code: 154) will occur at control mode switching, and the command value immediately after switching is the same as the case of selecting "0: Command torque". If the feedback torque is selected, set "1: Invalid" in the servo parameter "POL reflection selection at torque control (PC29)".

When the mode is switched from torque control mode to speed control mode, the command speed immediately after switching is the motor speed at switching.

The following chart shows the operation timing.

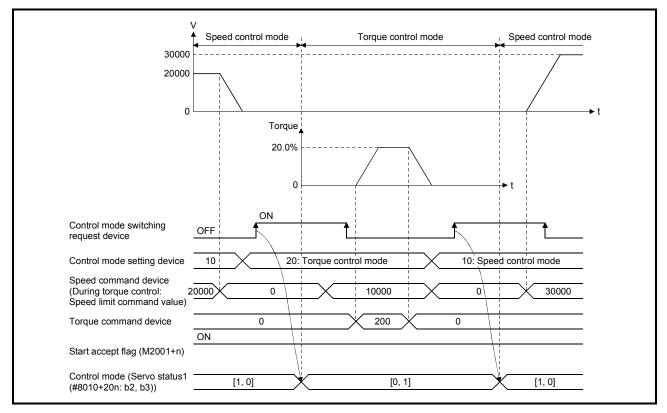


- (2) Switching of control mode (Continuous operation to torque control)(a) Switching method of control mode
 - Turn OFF to ON the control mode switching request device after setting the control mode in the control mode setting device (30: Continuous operation to torque control mode) to switch from position control mode or speed control mode to continuous operation to torque control.

When the mode is switched to continuous operation to torque control mode, the control data used in continuous operation to torque control mode must be set before turning on the control mode switching request device. When the switching condition is satisfied at control mode switching request, the control mode is switched, and the start accept flag (M2001+n) turns ON. The following shows the switching condition of continuous operation to

torque control mode. Position control mode 1)
2)
3)
4)
Torque control mode 5)
6)

Continuous operation

to torque control mode



	Switching operation	Switching condition	
1)	Position control mode → Continuous operation to torque control mode	Not during positioning (Note-1) or during following positioning mode • ABS-1 : 1-axis linear control (ABS) • INC-1 : 1-axis linear control (INC) • FEED-1 : 1-axis fixed-feed control • VF : Speed control (I) (Forward) • VR : Speed control (I) (Reverse) • VPF : Speed-position switching control (Forward) • VPR : Speed-position switching control (Reverse) • PFSTART : Position follow-up control • CPSTART : 1-axis constant-speed control • PVF : Speed control with fixed position stop (Forward) • PVF : Speed control with fixed position stop (Reverse) • PVR : Speed control with fixed position stop (Reverse) (Note): JOG operation, Speed control (I) (VVF, VVR), Speed switching control (VSTART), High-speed oscillation control (OSC) are not supported.	
2)	Continuous operation to torque control mode \rightarrow Position control mode	During motor stop (Note-2)	
3)	Speed control mode \rightarrow Continuous operation to torque control mode	None	
4)	Continuous operation to torque control mode \rightarrow Speed control mode	None	
5)	Torque control mode \rightarrow Continuous operation to torque control mode	Switching not possible	
6)	Continuous operation to torque control mode \rightarrow Torque control mode		

(Note-1): The start accept flag (M2001+n) is OFF.

(Note-2): ZERO speed (b3) of Servo status2 (#8011+20n) is ON.

The control mode can be changed without checking the switching condition of "during motor stop" in Motion CPU by setting "1: Condition during zero speed at control mode switching: invalid" in "Invalid selection during zero speed at control mode switching". Set "1: Condition during zero speed at control mode switching: invalid" to switch the control mode without waiting for stop of servo motor.

Confirm the status of continuous operation to torque control mode with "Continuous operation to torque control (b14)" of servo status3 (#8012+20n). When the mode is switched to continuous operation to torque control mode, the value in "control mode (b2, b3)" of servo status1 (#8010+20n) will stay the same before control mode switching.

 Continuous operation to torque control mode (b14) of servo status3 (#8012+20n)

b14	Continuous operation to torque control mode
0	Not continuous operation to torque control mode
1	Continuous operation to torque control mode

POINTS

- (1) When the mode is switched from position control mode to continuous operation to torque control mode, only the switching from continuous operation to torque control mode to position control mode is possible. If the mode is switched to other control modes, a minor error (error code: 155) will occur, and the control mode is not switched.
- (2) When the mode is switched from speed control mode to continuous operation to torque control mode, only the switching from continuous operation to torque control mode to speed control mode is possible. If the mode is switched to other control modes, a minor error (error code: 155) will occur, and the control mode is not switched.
 - (b) Precautions at control mode switching
 - 1) The positioning start complete signal (M2400+20n) and positioning complete signal (M2401+20n) do not turn ON at control mode switching.
 - During continuous operation to torque control, the start accept flag (M2001+n) turns ON.
 - 3) When using continuous operation to torque control mode, use the servo amplifiers that are compatible with continuous operation to torque control. If servo amplifiers that are not compatible with continuous operation to torque control are used, a minor error (error code: 318) will occur at request of switching to continuous operation to torque control mode. (A deceleration stop is made during the positioning control. The mode is switched to position control during the speed control, and the operation immediately stops.)

(c) Operation for "Position control mode ↔ Continuous operation to torque control mode switching


When the mode is switched from position control mode to continuous operation to torque control mode, the command torque and command speed immediately after switching are the values set in "Torque initial value selection at control mode switching" and "Speed initial value selection at control mode switching".

Torque initial value selection at control mode switching	Command torque to servo amplifier immediately after switching from position control mode to continuous operation to torque control mode
0: Command torque	Immediately after switching the control mode, the value of torque command device is the torque to servo amplifier regardless of the command torque time constant.
1: Feedback torque	Motor current value received from servo amplifier at switching is the torque to servo amplifier.
Speed initial value selection at control mode switching	Command speed to servo amplifier immediately after switching from position control mode to continuous operation to torque control mode

Speed miliar value selection	Command speed to serve ampliner immediately after switching from	
at control mode switching	position control mode to continuous operation to torque control mode	
0: Command speed	The speed to servo amplifier immediately after switching is the speed during command.	
1: Feedback speed	Motor speed received from servo amplifier at switching.	
2: Automatic selection	The speed commanded to servo amplifier immediately after switching is the lower speed between "0: Command speed" and "1: Feedback speed".	

POINT

When the mode is switched to continuous operation to torque control mode in cases where command speed and actual speed are different such as during acceleration/deceleration or when the speed does not reach command speed due to torque limit, set "1: Feedback speed" in "Speed initial value selection at control mode switching".

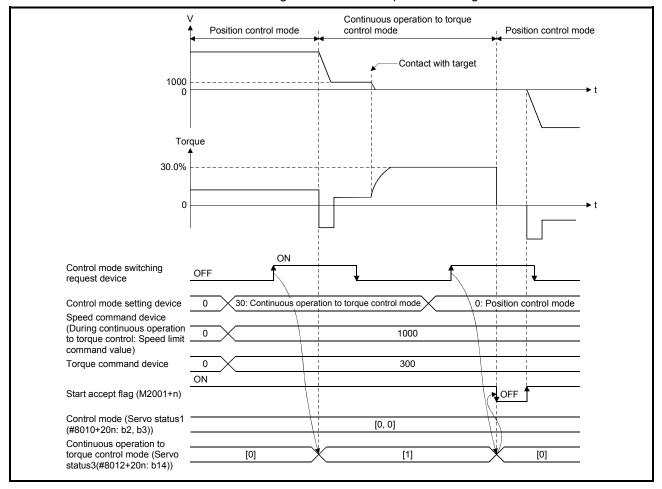


The following chart shows the operation timing.

(d) Operation for "Speed control mode ↔ Continuous operation to torque control mode switching"

When the mode is switched from speed control mode to continuous operation to torque control mode, the command torque and command speed immediately after switching are the values set in "Torque initial value selection at control mode switching" and "Speed initial value selection at control mode switching".

Torque initial value selection at control mode switching	Command torque to servo amplifier immediately after switching from speed control mode to continuous operation to torque control mode
0: Command torque	Immediately after switching the control mode, the value of torque command device is the torque to servo amplifier regardless of the command torque time constant.
1: Feedback torque	Motor current value received from servo amplifier at switching is the torque to servo amplifier.

Speed initial value selection	Command speed to servo amplifier immediately after switching from	
at control mode switching	speed control mode to continuous operation to torque control mode	
0: Command speed	The speed to servo amplifier immediately after switching is the speed during command.	
1: Feedback speed	Motor speed received from servo amplifier at switching.	
2: Automatic selection	The speed to servo amplifier immediately after switching is the lower speed between "0: Command speed" and "1: Feedback speed".	

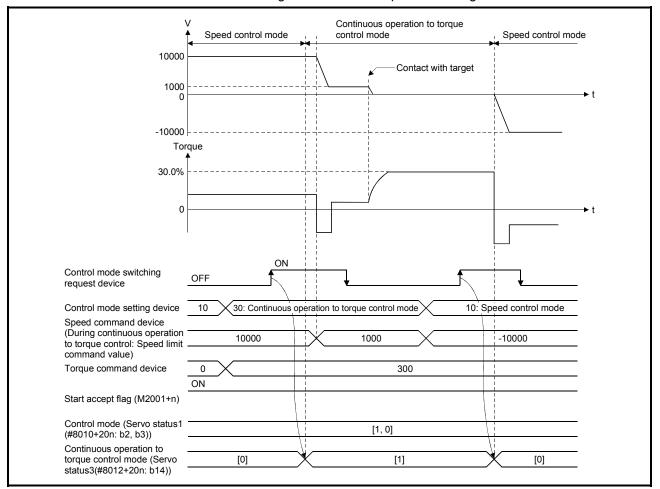

The following chart shows the operation timing.

POINT

When the mode is switched from continuous operation to torque control mode to speed control mode, the torque command during continuous operation to torque control is invalid. As shown in the figure above, when the target is pressed in continuous operation to torque control direction, if the mode is switched to speed control, torque is output to the torque limit value.

Execute the following either if such operation will be a problem.

- Set the speed command which is in opposite direction of continuous operation to torque control direction in the speed command device before switching to the speed control mode.
- Change the torque limit value to the lower value by torque limit value change request (CHGT) before switching to the speed control mode.

(3) Speed control mode

- (a) Operation for speed control mode
 - The speed control is executed at speed set in "Speed command device" in the speed control mode.

Set a positive value for forward rotation and a negative value for reverse rotation. "Speed command device" can be changed any time during speed control mode.

Acceleration/deceleration is a trapezoidal acceleration/deceleration processing. Set acceleration/deceleration time toward "Speed limit value at speed-torque control" in "Command speed acceleration time" and "Command speed deceleration time". The value when the control mode switching request device turns OFF to ON is valid.

The command speed during speed control mode is limited with "Speed limit value at speed-torque control". If the speed exceeds speed limit value is set, a minor error (error code: 315) will occur, and the operation is controlled with speed limit value.

Confirm the command speed to servo amplifier the command speed (#8004+20n, #8005+20n).

Speed change request (CHGV, D(P).CHGV) is invalid (no operation). Torque limit value can be changed within the range of "Torque limit value at speed-torque control" by torque limit value change request (CHGT, D(P).CHGT) or torque limit value individual change request (CHGT2, D(P).CHGT2). If the change outside the range of "Torque limit value at speed-torque control" is requested by torque limit value change request or torque limit value individual change request, a minor error (error code: 319) will occur, and the torque limit value is not changed.

(b) Current feed value during speed control mode

Feed current value (D0+20n, D1+20n) and real current value (D2+20n, D3+20n) are updated even during speed control mode. If the current feed value exceeds the software stroke limit, a minor error (error code: 207) will occur and the operation is switched to position control mode. Invalidate the software stroke limit to execute one-way feed.

(c) Stop cause during speed control mode	
The operation for stop cause during speed control mode is shown below.	

Item	Operation during speed control mode
The stop command (M3200+20n) turned ON.	The motor decelerates to speed "0" by setting value of
The rapid stop command (M3201+20n)	"command speed deceleration time". The mode is switched
turned ON.	to position control mode when "Zero speed (b3)" of servo
The external stop input turned ON.	status2 (#8011+20) turns ON, and the operation stops.
The All axis servo ON (M2042) turned OFF.	The servo OFF is not executed during speed control mode.
The servo OFF command (M3215+20n)	The command status at that time becomes valid when the
turned ON.	mode is switched to position control mode.
The current value reached to software stroke	A minor error (error code: 200, 207) and major error (error
limit.	code: 1101, 1102) will occur, and the motor decelerates to
The position of motor reached to hardware	speed "0" by setting value of "Command speed deceleration
stroke limit	time". The mode is switched to position control when "Zero
The PLC ready flag (M2000) turned OFF.	speed (b3)" of servo status2 (#8011+20n) turns ON, and
The FLC ready hag (M2000) turned OFF.	the operation stops.
The forced stop input to Motion CPU.	The mode is switched to position control mode when the
The emergency stop input to servo amplifier.	servo OFF (The servo ready signal (M2415+20n) turns
	OFF) is executed. (While the servo amplifier is servo OFF,
	even if the mode is switched to position control mode, the
The servo error occurred.	servomotor occurs to the free run. (The operation stops with
	dynamic brake.))
	The motor occurs to the free run. (The operation stops with
The servo amplifier's power supply turned	dynamic brake.)
OFF.	(The mode is to position control mode at the servo
	amplifier's power supply ON again.)

(4) Torque control mode

(a) Operation for torque control mode

The torque control is executed at command torque set in "Torque command device" in the torque control mode. Command torque can be changed any time during torque control mode.

Set time that reaches "Torque limit value at speed-torque control" from 0[%] in "Command torque time constant (Positive direction)" and time that decreases 0[%] from "Torque limit value at speed-torque control" in "Command torque time constant (Negative direction)". The value when the control mode switching request turns OFF to ON is valid for command torque time constant (Positive direction) and command torque time constant (Negative direction).

The command torque during torque control mode is limited with "Torque limit value at speed-torque control". If the torque exceeds torque limit value is set, a minor error (error code: 316) will occur, the operation is controlled with torque limit value at speed-torque control.

Speed change request (CHGV, D(P).CHGV) is invalid (no operation). Torque limit value to servo amplifier can be changed within the range of "Torque limit value at speed-torque control" by torque limit value change request (CHGT, D(P).CHGT) or torque limit value individual change request (CHGT2, D(P).CHGT2), but the value is valid when the mode is switched to position control mode. Command torque time constant is calculated based on the "Torque limit value at speed-torque control" at torque control mode switching after the torque limit value is changed. If the change outside the range of "Torque limit value at speed-torque control" is requested by torque limit value change request torque limit value individual change request, a minor error (error code: 319) will occur, and the torque limit value is not changed.

(b) Speed during torque control mode

The speed during torque control mode is controlled with the absolute value of value set in "Speed command device" as speed limit command value. When the speed reaches the absolute value of "Speed command device", "Speed limit (b4)" of servo status2 (#8011+20n)" turns ON. And, the value of "Speed command device" (speed limit command value for torque control) is limited with "Speed limit value at speed-torque control". If the speed limit command value exceeds speed limit value at speed-torque control is set, a minor error (error code: 315) will occur, and the operation is controlled with speed limit value at speed-torque control. The acceleration/deceleration processing is invalid for the value of "Speed command device".

POINTS

The actual motor speed may not reach the speed limit command value depending on the machine load situation during torque control.


- (c) Current feed value during torque control mode
 Feed current value (D0+20n, D1+20n) and real current value (D2+20n, D3+20n) are updated even in torque control. If the current feed value exceeds the software stroke limit, a minor error (error code: 207) will occur and the operation is switched to position control mode. Invalidate the software stroke limit to execute one-way feed.
- (d) Stop cause during speed control modeThe operation for stop cause during torque control mode is shown below.

Item	Operation during torgue control mode
The stop command (M3200+20n) turned ON.	The speed limit command value commanded to servo
The rapid stop command (M3201+20n)	amplifier is "0" regardless of the setting value of "Speed
turned ON.	command device". The mode is switched to position control
The external stop input turned ON.	mode when "Zero speed (b3)" of servo status2 (#8011+20n) turns ON, and the operation stops immediately. (Deceleration processing is not executed.) The value of command torque is not changed. It might take time to reach at the speed "0" depending on the current torque command value.
The All axis servo ON command (M2042) turned OFF.	The servo OFF is not executed during torque control mode. The command status at that time becomes valid when the
The servo OFF command (M3215+20n) turned ON.	mode is switched to position control mode.
The current value reached to software stroke	The minor error (error code: 200, 207) and major error
limit.	(error code: 1101, 1102) will occur. The mode is switched to
The position of motor reached to hardware	position control mode at current position, and the operation
stroke limit	immediately stops. (Deceleration processing is not
The PLC ready flag (M2000) turned OFF.	executed.)
The forced stop input to Motion CPU.	The mode is switched to position control mode when the
The emergency stop input to servo amplifier.	servo OFF (The servo ready signal (M2415+20n) turns
The servo error occurred.	OFF) is executed. (While the servo amplifier is servo OFF, even if the mode is switched to position control mode, the servomotor occurs to the free run. (The operation stops with dynamic brake.))
The servo amplifier's power supply turned OFF.	The motor occurs to the free run. (The operation stops with dynamic brake.) (The mode is to position control mode at the servo amplifier's power supply ON again.)

(5) Continuous operation to torque control mode

(a) Operation for continuous operation to torque control mode In continuous operation to torque control, the torque control can be executed by the speed limit command value after acceleration/deceleration processing without stopping the operation during the positioning in position control mode or speed command in speed control mode.

(Example) When the torque command is changed from 0.0% to 100% with the torque command device.

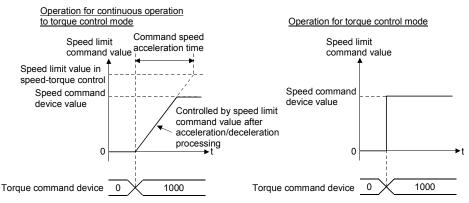

During continuous operation to torque control mode, the torque control is executed at command torque set in "Torque command device". Command torque can be changed any time during continuous operation to torque control mode.

Speed change request (CHGV, D(P).CHGV) is invalid (no operation). Torque limit value to servo amplifier can be changed within the range of "Torque limit value at speed-torque control" by torque limit value change request (CHGT, D(P).CHGT) or torque limit value individual change request (CHGT2, D(P).CHGT2), but the value is valid when the mode is switched to position control mode. Command torque time constant is calculated based on the "Torque limit value at speed-torque control" at torque control mode switching after the torque limit value is changed. If the change outside the range of "Torque limit value at speed-torque control" is requested by torque limit value change request or torque limit value individual change request, a minor error (error code: 319) will occur, and the torque limit value is not changed.

(b) Torque command setting method

During continuous operation to torque control mode, set time for the command torque to increase from 0[%] to torque limit value at speed-torque control" in "Command torque time constant (Positive direction)", and the command torque to decrease from "Torque limit value at speed-torque control" to 0[%] in "Command torque time constant (Negative direction)". The value when the control mode switching request turns OFF to ON is valid for "Command torque time constant (Positive direction) and command torque time constant (Negative direction) and command torque time constant (Negative direction). The command torque during continuous operation to torque control mode is limited with "Torque limit value at speed-torque limit value at speed-torque control".


If torque exceeds torque limit value is commanded, a minor error (error code: 316) will occur, and the operation is controlled with torque limit value at speed-torque control.

(c) Acceleration/deceleration processing at continuous operation to torque control mode

Acceleration/deceleration is a trapezoidal acceleration/deceleration processing. Set acceleration/deceleration time toward "Speed limit value at speed-torque control" in "Command speed acceleration time" and "Command speed deceleration time". The value when the control mode switching request device turns OFF to ON is valid.

Command speed during continuous operation to torque control mode is limited with "Speed limit value at speed-torque control". If the speed exceeds speed limit value is commanded, a minor error (error code: 315) will occur, and the operation is controlled with speed limit value.

Confirm the command speed to servo amplifier with command speed (#8004+20n, #8005+20n).

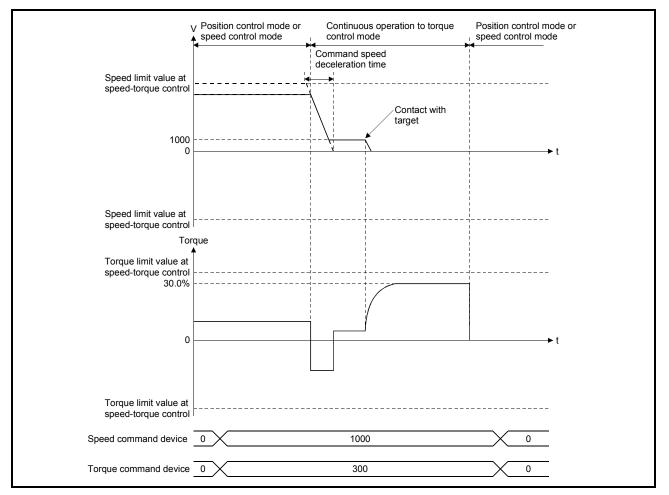

- (d) Precautions at continuous operation to torque control mode The following servo amplifier functions cannot be used during continuous operation to torque mode.
 - · Base cut delay time function
 - Forced stop deceleration function
 - Vertical axis freefall prevention function

 (e) Speed during continuous operation to torque control mode The speed during continuous operation to torque control mode is limited with the absolute value of speed limit command value after acceleration/ deceleration processing with signed value set in "Speed command device". Speed direction depends on the torque command. When the speed reaches the absolute value of speed limit command value, "Speed limit (b4)" of servo status2 (#8011+20n) turns ON". And, the value of "Speed command device" (speed limit command value for continuous operation to torque control) is limited with "Speed limit value at speed-torque control". If the speed limit command value exceeds speed limit

value at speed-torque control is set, a minor error (error code: 315) will occur, and the operation is controlled with speed limit value at speed-torque control.

POINTS

- (1) The actual motor speed may not reach the speed limit command value depending on the machine load situation during continuous operation to torque control mode.
- (2) It is recommended to match the direction of torque command and speed command. When the direction of torque command and speed command is different, the speed may decelerate to 0.
 - (f) Current feed value during continuous operation to torque control mode Feed current value (D0+20n, D1+20n) and real current value (D2+20n, D3+20n) are updated even in continuous operation to torque control mode. If the current feed value exceeds the software stroke limit, a minor error (error code: 207) will occur and the operation is switched to position control mode. Invalidate the software stroke limit to execute one-way feed.

(g) Stop cause during continuous operation to torque control mode The operation for stop cause during continuous operation to torque control mode is shown below.

Item	Operation during torque control mode
The stop command (M3200+20n) turned ON. The rapid stop command (M3201+20n) turned ON.	The speed limit command value commanded to servo amplifier is "0" regardless of the setting value of "Speed command device". The mode is switched to position control
The external stop input turned ON.	mode when "Zero speed (b3)" of servo status2 (#8011+20n) turns ON, and the operation stops immediately. (Deceleration processing is not executed.) The value of command torque is not changed. It might take time to reach at the speed "0" depending on the current torque command value.
The All axis servo ON command (M2042) turned OFF.	The servo OFF is not executed during torque control mode. The command status at that time becomes valid when the
Servo OFF command (M3215+20n) turned ON.	mode is switched to position control mode.
The current value reached to software stroke limit.	The minor error (error code: 200, 207) and major error (error code: 1101, 1102) will occur. The mode is switched to
The position of motor reached to hardware stroke limit	position control mode at current position, and the operation immediately stops. (Deceleration processing is not
The PLC ready flag (M2000) turned OFF.	executed.) When the operation immediately stops, the motor will start hunting depending on the motor speed. Therefore, be sure not to reach to limit in high speed or do not turn OFF the PLC READY.
The forced stop input to Motion CPU.	The mode is switched to position control mode when the
The emergency stop input to servo amplifier.	servo OFF (The servo ready signal (M2415+20n) turns
The servo error occurred.	OFF) is executed. (While the servo amplifier is servo OFF, even if the mode is switched to position control mode, the servomotor occurs to the free run. (The operation stops with dynamic brake.))
The servo amplifier's power supply turned OFF.	The motor occurs to the free run. (The operation stops with dynamic brake.) (The mode is to position control mode at the servo amplifier's power supply ON again.)

7.8 Acceleration/Deceleration Time Change Function QDSK Ver

This function arbitrarily changes the acceleration/deceleration time at speed change, when changing speed with Motion dedicated functions (CHGV, CHGVS) of Motion SFC program (and also the Motion dedicated PLC instruction D(P).CHGV, D(P).CHGVS).

Normally (speed change without changing the acceleration/deceleration time), the acceleration/deceleration time is controlled by the positioning data of the servo program or the parameter block at the start. However, if a speed change is executed after setting the acceleration/deceleration time change parameter, speed changes at the set acceleration/deceleration time.

POINTS

"Acceleration/deceleration time after change" is the acceleration/deceleration time of positioning control being executed. "Acceleration/deceleration time after change" is valid until the switching of the next positioning point. (Automatic decelerating processing at positioning completion is also controlled by "Acceleration/deceleration time after change".)

(1) Speed change instructions for acceleration/deceleration time change

Classification	Instruction	Description	Remarks
Motion SFC program (Motion dedicated function)	CHGV	Speed change request	The acceleration/deceleration time change function toward the virtual servo amplifier axis is invalid.
	CHGVS	Command generation axis speed change request	
Motion dedicated	D(P).CHGV	Speed change request of the specified axis	The acceleration/deceleration time change function toward the virtual servo amplifier axis is invalid.
PLC instruction	D(P).CHGVS	Speed change request of the specified command generation axis	

(2) Control details

After setting the acceleration/deceleration time change parameter, if speed change command is executed, the acceleration/deceleration time changes. The acceleration/deceleration time change parameter is set for every axis in the servo data settings of MT Developer2.

Refer to Section 4.4 for details of acceleration/deceleration time change parameter.


Refer to the "Q173DSCPU/Q172DSCPU Motion controller (SV22) Programming Manual (Advanced Synchronous Control)" for details of command generation axis parameter.

Ver. : Refer to Section 1.3 for the software version that supports this function.

(a) Set the change value of acceleration/deceleration time in the device set by acceleration time change value device/deceleration time change value device.


Name	Setting range
New acceleration time value device	0: Time change invalid
New deceleration time value device	1 to 65535[ms]

(b) Device set by the acceleration/deceleration time change enable device turns ON (valid).

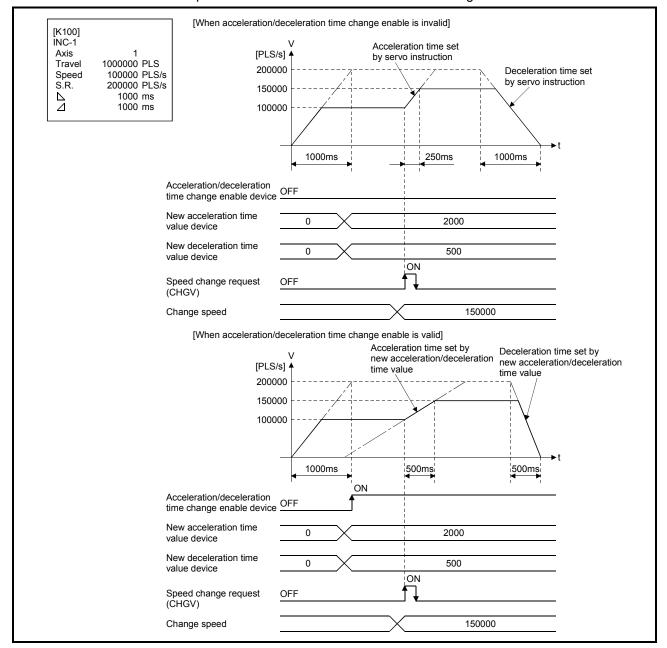

Operation at acceleration/deceleration time change is shown below.


- (3) Cautions
 - (a) In the following cases acceleration time or deceleration time does not change when a speed change is executed. The acceleration time or deceleration time at the time of speed change accept is maintained.
 - When setting of the acceleration/deceleration time change enable device was omitted.
 - When setting of new acceleration time value device or new deceleration time value device was omitted.
 - When the device set by new acceleration time value device or new deceleration time value device is set to "0".

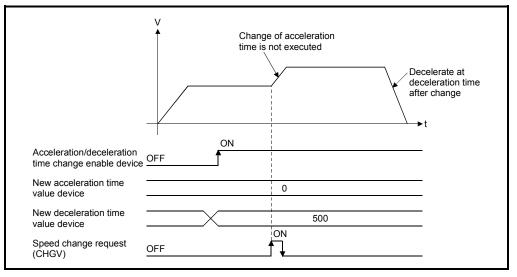

- (b) During interpolation control, change of acceleration/deceleration time is executed by the acceleration/deceleration time change parameter of the axis No. specified with the speed change command.
- (c) Acceleration/deceleration time change function becomes invalid for axes executing the following servo instructions:
 - Circular interpolation control (including point during CPSTART)
 - Helical interpolation control (including point during CPSTART)
 - Speed control with fixed position stop
- (d) Acceleration/deceleration time change function becomes invalid for axes executing the following acceleration/deceleration methods:
 - FIN acceleration/deceleration
 - Advanced S-curve acceleration/deceleration control

(e) If a negative speed change request is executed acceleration/deceleration time change function is only valid for axes executing speed control (I), or speed control (I).

If a negative speed change request is executed for axes executing other instructions, acceleration/deceleration time change function becomes invalid. Also, if an acceleration/deceleration time change is performed for axes operating at a negative speed, acceleration/deceleration time change function becomes invalid.

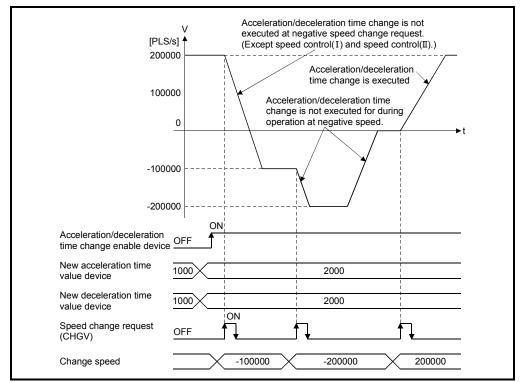

- (f) After changing deceleration time, operations for a stop or rapid stop are shown below:
 - Stop Deceleration stop by the deceleration speed after change.
 - Rapid stop Rapid stop by parameter setting values at start.


If changing deceleration time by the acceleration/deceleration time change function, regardless of whether the rapid stop deceleration time setting error invalid flag (SM805) is ON or OFF, deceleration time can be changed. Therefore, if the setting values of the rapid stop deceleration time are larger than the deceleration time change value after change, an overrun may occur. Refer to Section 4.3.1 for details of operation.

(g) When the current value is to execute a deceleration stop from current command speed, if the current value exceeds the stroke limit range, a minor error (error code: 207) occurs, and deceleration stop is made before a stroke limit. However, if the deceleration distance after the deceleration time change is longer than the distance until the stroke limit, deceleration stop exceeds the stroke limit. Execute a speed change at a position where enough movement amount until the stroke limit is ensured.

- (h) During a positioning operation where acceleration/deceleration time is changed, and the deceleration distance to the final positioning address for the output speed is not enough, a minor error (error code: 211) occurs and the operation immediately stops at the final positioning address. Execute a speed change at a position where enough movement amount until the stop position is ensured.
- (i) If acceleration/deceleration time is changed during speed control in speedposition switching (VPF/VPR), control continues at the acceleration/deceleration times changed during speed control even after switching from speed to position control. To control with the acceleration/deceleration time of the start after switching to position control, execute speed change again.
- (j) If acceleration/deceleration time is changed during speed switching control (VSTART), constant-speed control (CPSTART), control at the "acceleration/deceleration time after change" occurs only between the points where change was executed. From the next point onward, control at the "acceleration/deceleration time at start" set beforehand occurs. If the speed switching point specified flag (M2040) is ON in constant-speed control (CPSTART), speed change is executed up to the speed switching point at the "acceleration/deceleration time after change". (If the acceleration/deceleration time is changed to a large value, speed change may not be completed up to the speed switching point).

S.R. 2 INC-1 Axis Travel	1 500000 PL 000000 PL 1000 ms 1000 ms 1 800000 PL	S/s S	[PLS/s] 200000 150000 100000 75000 50000 Control at deceleration time after change Control at deceleration time at start t
M-code INC-1 Axis Travel 1	100000 PL 10 10 000000 PL 150000 PL 20	s	Speed switching point specified flag (M2040) M-code (D13+20n) Acceleration/deceleration
Speed M-code	1 600000 PL 50000 PL 30		Acceleration/deceleration OFF time change enable device 0 New acceleration time value device 0 2000
CPEND			New deceleration time 0 500 value device ON ON Speed change request (CHGV) OFF OFF
			Change speed 75000

(k) For control with changed acceleration/deceleration time, even if acceleration/deceleration time change enable device is turned OFF (invalid), control at acceleration/deceleration time after change continues until the operation ends.

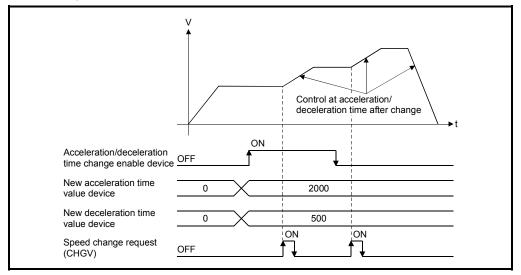

MEMO

APPENDICES

APPENDIX 1 Error Codes Stored Using the Motion CPU

The servo program setting errors and positioning errors are detected in the Motion CPU side.

(1) Servo program setting errors

These are positioning data errors set in the servo program, and it checks at the start of each servo program.

They are errors that occur when the positioning data is specified indirectly. The operations at the error occurrence are shown below.

- The servo program setting error flag (SM516) turns on.
- The erroneous servo program is stored in the error program No. storage register (SD516).
- The error code is stored in the error item information register (SD517).

(2) Positioning error

(a) Positioning errors occurs at the positioning start or during positioning control. There are minor errors, major errors and servo errors.

1) Minor errors These e	rrors occur in the Motion SFC program or servo
program	, and the error codes 1 to 999 are used.
Check th	e error code, and remove the error cause by
correctin	g the Motion SFC program or servo program.
2) Major errors These er	rrors occur in the external input signals or
control c	ommands from the Motion SFC program, and
the error	codes 1000 to 1999 are used.
Check th	e error code, and remove the error cause of
the exter	nal input signal state or Motion SFC program.
3) Servo errors These er	rors detected in the servo amplifier, and the
error coo	les 2000 to 2999 are used.
Check th	e error code, and remove the error cause of

the servo amplifier side.

APP.

(b) The error detection signal of the erroneous axis turns on at the error occurrence, and the error codes are stored in the minor error code, major error code or servo error code storage register.

Table 1.1 Error code storage registers, error detection signals

Device						E	Error c	ode ste	orage i	registe	r						Error
	Axis	Axis	Axis	Axis	Axis	Axis	Axis	Axis	Axis	Axis	detection						
Error class	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	signal
Minor error	D6	D26	D46	D66	D86	D106	D126	D146	D166	D186	D206	D226	D246	D266	D286	D306	10.407.00.
Major error	D7	D27	D47	D67	D87	D107	D127	D147	D167	D187	D207	D227	D247	D267	D287	D307	M2407+20n
Servo error	D8	D28	D48	D68	D88	D108	D128	D148	D168	D188	D208	D228	D248	D268	D288	D308	M2408+20n

Device						E	Error c	ode ste	orage i	registe	r						Error
	Axis	Axis	Axis	Axis	Axis	Axis	Axis	Axis	Axis	Axis	detection						
Error class	17	18	19	20	21	22	23	24	25	26	27	28	29	30	31	32	signal
Minor error	D326	D346	D366	D386	D406	D426	D446	D466	D486	D506	D526	D546	D566	D586	D606	D626	10.107.00
Major error	D327	D347	D367	D387	D407	D427	D447	D467	D487	D507	D527	D547	D567	D587	D607	D627	M2407+20n
Servo error	D328	D348	D368	D388	D408	D428	D448	D468	D488	D508	D528	D548	D568	D588	D608	D628	M2408+20n

(Note): The following range is valid.

• Q172DSCPU : Axis No.1 to 16

• Q172DCPU(-S1) : Axis No.1 to 8

(c) If another error occurs after an error code has been stored, the existing error code is overwritten, deleting it.

However, the error history can be checked using MT Developer2.

 (d) Error detection signals and error codes are held until the error reset command (M3207+20n) or servo error reset command (M3208+20n) turns on.

POINTS

(1) Even if the servo error reset (M3208+20n) turns on at the servo error occurrence, the same error code might be stored again.

(2) Reset the servo error after removing the error cause of the servo amplifier side at the servo error occurrence.

APPENDIX 1.1 Servo program setting errors (Stored in SD517)

The error codes, error contents and corrective actions for servo program setting errors are shown in Table 1.2.

In the error codes marked with "Note" indicates the axis No. (1 to 32).

Error code stored in SD517	Error name	Error contents	Error processing	Corrective action
1	Parameter block No. setting error	The parameter block No. is outside the range of 1 to 64.	Execute the servo program with the default value "1" of parameter block.	Set the parameter block No. within the range of 1 to 64.
n03 ^(Note)	Address (travel value) setting error (Except the speed control and speed/position control.) (Setting error for linear axis at the balloci interpolation	 (1) The address is outside the setting range at the positioning start for absolute data method. Unit Address setting range 0 to × 10⁻⁵ 35999999 [degree] (2) The travel value is set to 	 Positioning control does not start. (All interpolation control at the interpolation control.) If the error is detected during the speed- switching control or constant-speed control, a deceleration stan is 	 (1) If the control unit is [degree], set the address within the range of 0 to 35999999. (2) Set the travel value within
	helical-interpolation.)	-2147483648 (H80000000) at the positioning start for incremental data method.	 deceleration stop is made. (3) If an error occurs in one servo program, all servo programs do not execute during the simultaneous start. 	the range of "0 to $\pm (2^{31}-1)$ ".
4	Command speed error	(1) The command speed is outside the range of 1 to the speed limit value. (2) The command speed is outside the setting range. Unit Speed setti∪g range <u>Unit Speed setti∪g range</u> <u>Unit Speed setti∪g range</u> <u>000000000000000000000000000000000000</u>	 Positioning control does not start if the command speed is "0" or less. If the command speed exceeds the speed limit value, control with the speed limit value. 	Set the command speed within the range of 1 to the speed limit value.
5	Dwell time setting error	The dwell time is outside the range of 0 to 5000.	Control with the default value "0".	Set the dwell time within the range of 0 to 5000.
6	M-code setting error	The M-code is outside the range of 0 to 32767.		Set the M-code within the range of 0 to 32767.
7	Torque limit value setting error	The torque limit value is outside the range of 1 to 1000.	Control with the torque limit value of the specified parameter block.	Set the torque limit value within the range of 1 to 1000.

Table 1.2 Servo program setting error list

(Note-1): When the "speed control $10 \times$ multiplier setting for degree axis" is set to "valid", the setting range is 0.01 to 21474836.47 [degree/min].

	1			1
Error code stored in SD517	Error name	Error contents	Error processing	Corrective action
n08 ^(Note)	Auxiliary point setting error (At the auxiliary point-specified circular interpolation.) (At the auxiliary point-specified		Positioning control does not start.	(1) If the control unit is [degree], set the auxiliary point address within the range of 0 to 35999999.
	helical interpolation.)	 (2) The auxiliary point address is set to -2147483648 (H80000000) at the positioning start for incremental data method. 		 (2) Set the auxiliary point address within the range of 0 to ± (2³¹-1).
n09 ^(Note)	Radius setting error (At the radius- specified circular interpolation.) (At the radius- specified helical interpolation.)	(1) The radius is outside the setting range at the positioning control for absolute data method. Unit Address setting range degree 0 to $\times 10^{-5}$ (degree] (degree]		(1) If the control unit is [degree], set the radius within the range of 0 to 35999999.
		(2) The radius is set to "0" or negative setting at the positioning start for incremental data method.		(2) Set the radius within the range of 1 to (2 ³¹ -1).
n10 ^(Note)	Central point setting error (At the central point- specified circular interpolation.) (At the central point- specified helical interpolation.)			(1) If the control unit is [degree], set the central point address within the range of 0 to 359999999.
		(2) The central point is set to -2147483648 (H80000000) at the positioning start for incremental data method.		 (2) Set the central point address within the range of 0 to ± (2³¹-1).
11	Interpolation control unit setting error	The interpolation control unit is set outside the range of 0 to 3.	Control with the default value "3".	Set the interpolation control unit within the range of 0 to 3.
12	Speed limit value setting error	The speed limit value is set outside the setting range.	Control with the default value 200000[PLS/s].	Set the speed limit value withir the setting range. [For PLS] 1 to 2147483647[PLS/s]
13	Acceleration time setting error FIN acceleration/ deceleration setting error Fixed position stop acceleration/ deceleration time setting error	The acceleration time is set to "0". The FIN acceleration/deceleration time is set except 1 to 5000. The fixed position stop acceleration/deceleration time is set to "0".	Control with the default value "1000".	Set the acceleration time within the range of 1 to 65535. The FIN acceleration/ deceleration time within the range of 1 to 5000. Set the fixed position stop acceleration/deceleration time within the range of 1 to 65535.
14	Deceleration time setting error	The deceleration time is set to "0".		Set the deceleration time within the range of 1 to 65535.

Table 1.2 Servo program setting error list (Continued)

	i i i i i i i i i i i i i i i i i i i		<u> </u>	-
Error code stored in SD517	Error name	Error contents	Error processing	Corrective action
15	Rapid stop deceleration time setting error	The rapid stop deceleration time is set to "0".	Control with the default value "1000".	Set the rapid stop deceleration time within the range of 1 to 65535.
16	Torque limit value setting error	The torque limit value is outside the range of 1 to 1000.	Control with the default value "300[%]".	Set the torque limit value within the range of 1 to 1000.
17	Allowable error range for circular interpolation setting error	The allowable error range for circular interpolation is outside the setting range. $\begin{tabular}{ c c c c } \hline Unit & Address setting range \\ \hline \hline Unit & Address setting range \\ \hline \hline mm & $\times10^{-1}[\mu m]$ \\ \hline inch & 0 to $$\times10^{-5}[inch]$ \\ \hline $degree$ & 100000 & $\times10^{-5}$ \\ \hline $[degree]$ & PLS & $[PLS]$ \\ \hline \end{tabular}$	Control with the default value "100[PLS]".	Set the allowable error range for circular interpolation within the setting range.
18	Repeat count error	The repeat count is outside the range of 1 to 32767.	Control the repeat count with "1".	Set the repeat count within the range of 1 to 32767.
	START instruction setting error	 The servo program specified with the START instruction does not exist. There is a START instruction in the specified servo program. 	Positioning control does not start.	 Create the servo program specified with the START instruction. Delete the servo program specified with the START instruction.
19		 (3) The starting axis of the specified servo program overlap. (4) The real mode program and virtual mode program are 		 (3) Do not overlap the starting axis. (4) Do not allow mixture of the real mode program and
		mixed. (5) The real axis program and command generation axis program are mixed.		virtual mode program. (5) Do not allow mixture of the real axis program and command generation axis program.
20	Point setting error	Point is not specified in the instruction at the constant-speed control.		Set a point between CPSTAR and CPEND.
21	Reference axis speed setting error	The axis except interpolation axis is set as the reference axis at the linear interpolation of the reference axis speed-specified method.		Set one of the interpolation axes as the reference axis.
22	S-curve ratio setting error	S-curve ratio is set outside the range of 0 to 100[%] at the S- curve acceleration/deceleration.	Control the S-curve ratio with 0[%] (Trapezoidal acceleration/deceleration).	Set the S-curve ratio within the range of 0 to 100[%].
23	VSTART setting error	Not even one speed-switching point has been set between a VSTART and VEND instruction, or between FOR and NEXT instruction.	Positioning control does not start.	Set the speed switching point between the VSTART and VEND instructions or the FOR and NEXT instructions.
24	Cancel function start program No. error	The start program No. for the cancel function is set outside the range 0 to 4095.		Start after set the start program No. within the range of 0 to 4095.

Table 1.2 Servo program setting error list (Continued)

T 0 0			
Table 1.2 Servo	program setting	error list (Continued)

Error code stored in D517	Error name	Error contents	Error processing	Corrective action
25	High-Speed oscillation command amplitude error	Operation cannot be started because the amplitude specified with the high-speed oscillation function is outside the range 1 to 2147483647.	Positioning control does not start.	Start after set the command amplitude within the range of 1 to 214783647.
26	High-Speed oscillation command starting angle error	Operation cannot be started because the starting angle specified with the high-speed oscillation function is outside the range of 0 to 3599 ($\times 0.1$ [degree]).		Start after set the starting angle within the range of 0 to 3599 ($\times 0.1$ [degree]).
27	High-Speed oscillation command frequency error	Operation cannot be started because the frequency specified with the high-speed oscillation function is outside the range of 1 to 5000[CPM].		Start after set the frequency within the range of 1 to 5000[CPM].
28	Number of helical interpolation pitches error	The specified number of pitches of helical interpolation is outside the range of 0 to 999.	*	Set the specified number of pitches within the range of 0 to 999.
41	Device error of the	Any unauthorized devices are set in the home position return data for indirect setting.	Positioning control does not start.	Review the devices of home position return data for indirect setting.
45	Advanced S-curve acceleration/ deceleration setting	The acceleration section 1 ratio is outside the range of 0.0 to 100.0[%].	Control with acceleration section 1 ratio = 0.0	Set the each ratio within the range of 0.0 to 100.0[%].
46	error	The acceleration section 2 ratio is outside the range of 0.0 to 100.0[%].	0.0 deceleration section 1 ratio =	
47		The deceleration section 1 ratio is outside the range of 0.0 to 100.0[%].		
48		The deceleration section 2 ratio is outside the range of 0.0 to 100.0[%].	*	
49	-	(Acceleration section 1 + Acceleration section 2) > 100.0[%]		
50		(Deceleration section 1 + Deceleration section 2) > 100.0[%]		
51	Rapid stop deceleration time setting error	The rapid stop deceleration time is bigger than the setting value of deceleration time.	Control the rapid stop deceleration time with the setting value of deceleration time.	Set the rapid stop deceleration time within the range of 1 to deceleration time setting value
900	START instruction setting error	The servo program specified with the servo program start does not exist.	Positioning control does not start.	Set the correct servo program No.
901	START instruction setting error	The axis No. set in the servo program start is different from the axis No. set in the servo program.	•	Set the correct axis No.
902	Servo program instruction code error	The instruction code cannot be decoded. (A non-existent instruction code has been specified.)		Set the correct instruction code.

Error code stored in SD517	Error name	Error contents	Error processing	Corrective action		
903	Start error	A virtual mode program was started in the real mode.	Positioning control does not start.	Check the program mode allocation.		
	Start error	(1) Operation disable instructions (VPF, VPR, VPSTART, PVF, PVR, ZERO, VVF, VVR, OSC) was started in virtual mode.		Correct the servo program.		
		(2) Operation disable instructions (ZERO, OSC, CHGA-C) was started in real mode axis.				
905		(3) Operation disable instructions (VPF, VPR, VPSTART, VSTART, ZERO, VVF, VVR,				
		OSC) was started in command generation axis.				
		 (4) Operation disable instructions (CHGA-C, CHGA-E) from the D(P).SVST instruction of Motion dedicated instruction was started. 		Use the D(P).CHGA instruction of Motion dedicated instruction		
	Axis No. setting error	(1) Unused axis of the system setting is set in the servo program start.	*	Set the axis No. set in the system setting or mechanical system program.		
		(2) It was started by setting the real mode axis in the virtual servo program.				
906		(3) It was started in the condition that the real mode axis had been mixed with virtual axis in the interpolation axis.				
		(4) It was started by setting the virtual axis in the real mode program in virtual mode.				
907	Start error	It was started during processing for switching from real mode to virtual mode.		Use M2043 (real mode/virtua mode switching request), M2044 (real mode/virtual		
908	Start error	It was stated during processing for switching from virtual mode to real mode.		mode switching status) as interlocks for start.		

Table 1.2 Servo program setting error list (Continued)

APPENDIX 1.2 Minor errors

These errors are detected in the sequence program or servo program, and the error codes of 1 to 999 are used.

Minor errors include the setting data errors, starting errors, positioning control errors and current value/speed/target position change errors and system errors.

(1) Setting data errors (1 to 99)

These errors occur when the data set in the parameters for positioning control is not correct.

The error codes, causes, processing, and corrective actions are shown in Table 1.3.

Error code	Erroneous data	Check timing	Error cause	Error processing	Corrective action		
21		Home position return start of the proximity dog type, count type, data set type, dog cradle type, stopper type, limit switch combined type, scale home position signal detection type, and dogless home position signal reference type.	The home position address is outside the range of 0 to $359999999 (\times 10^{-5} [degree])$ with degree axis.		Set the home position address within the setting range using MT Developer2.		
22		Home position return start of the proximity dog type, count type, data set type,	The home position return speed is outside the range of 1 to speed limit value.		Set the home position return speed or less to the speed limit value using MT Developer2.		
23	Home	dog cradle type, stopper type, limit switch combined type, scale home position signal detection type, and dogless home position signal reference type.	The creep speed is outside the range of 1 to home position return speed.	Home position	Set the creep speed below to the home position return speed or less using MT Developer2.		
24	position return data	Home position return start of the count type.	The travel value after the proximity dog ON is outside the range of 0 to $(2^{31}-1)$ (\times unit).	return is not started.	Set the travel value after the proximity dog ON within the setting range using MT Developer2.		
25		Home position return start of the count type, proximity dog type, dog cradle type, stopper type, limit switch combined type, scale home position signal detection type, and dogless home position signal reference type.	The parameter block No. is outside the range of 1 to 64.		Set the parameter block No. within the setting range using MT Developer2.		
26		Home position return start of the stopper type.	Torque limit value at the creep speed is outside the range of 1 to 1000[%].		Set the torque limit value at the creep speed within the setting range using MT Developer2.		
27		Home position return start of the usable retry function.	Dwell time at the home position return is outside the range of 0 to 5000[ms].		Set the dwell time at the home position return retry within the setting range using MT Developer2.		

Table 1.3 Setting data error (1 to 99) list

Error code	Erroneous data	Check timing	Error cause	Error processing	Corrective action
40	Parameter block	Interpolation control start	The interpolation control unit of the parameter block is different from the control unit of the fixed parameters.	the control unit	Set the same control unit of the fixed parameters and servo parameters.

Table 1.3 Setting data error (1 to 99) list (Continued)

POINT

When the interpolation control unit of parameter block is different from the control unit of fixed parameters, an error code may not be stored with the combination of units.

Refer to Section 6.1.4 for details.

Positioning control start errors (100 to 199) These errors are detected at the positioning control start.

The error codes, causes, processing, and corrective actions are shown in Table 1.4.

					(Cont	trol n	node	e							
Error code	Positioning	Fixed-pitch feed	Speed	Speed/position switching	Speed switching	Constant-speed	DOL	Manual pulse generator	Home position return	Position follow-up control	OSC	Speed control with fixed position stop	Speed-torque control	Error cause	Error processing	Corrective action
100	0	0	0	0	0	0	0	0	0	0	0	0	0	• The PLC ready flag (M2000) or PCPU READY complete flag (SM500) is OFF.		 Set the Motion CPU to RUN. Turn the PLC ready flag (M2000) on.
101	0	0	0	0	0	0	0	0	0	0	0	0	0	The start accept flag (M2001 to M2032) for applicable axis is ON.		 Take an interlock in the program not to start the starting axis. (Use the start accept flag OFF of the applicable axis as the starting condition).
103	0	0	0	0	0	0	0	0	0	0	0	0	0	• The stop command (M3200+20n) for applicable axis is ON.		• Turn the stop command (M3200+20n) off and start.
104	0	0	0	0	0	0	0	0	0	0	0	0	0	• The rapid stop command (M3201+20n) for applicable axis is ON.		• Turn the rapid stop command (M3201+20n) off and start.
105 (Note)	0				0	0				0				The feed current value is outside the range of stroke limit at the start.		 Set within the stroke limit range by the JOG operation. Set within the stroke limit range by the home position return or current value change.
106 (Note)	0	0			0	0				0	0			 Positioning is outside the range of stroke limit. 	Positioning	 Perform the positioning within the range of stroke limit.
														The address that does not generate an arc is set at auxiliary point-specified circular interpolation or auxiliary point-specified helical interpolation. Relationship between the start point, auxiliary point and end point.	Positioning control does not start.	Correct the addresses of the servo program.
107 (Note)	0					0								The auxiliary point-specified circular interpolation or auxiliary point-specified helical interpolation was started in the control unit degree axis which is "stroke limit invalid".		Make the stroke limit valid for the control unit degree axis starts the auxiliary point- specified circular interpolation or auxiliary point-specified helical interpolation.
														The auxiliary point-specified circular interpolation or auxiliary point-specified helical interpolation was started in the axis which is "stroke limit invalid".		 Make the stroke limit valid for the axis starts the auxiliary point-specified circular interpolation or auxiliary point- specified helical interpolation.

(Note): These errors are stored the error codes of the all applicable interpolation axes at the interpolation operation.

					(Cont	trol n	node	9							
Error code	Positioning	Fixed-pitch feed	Speed	Speed/position switching	Speed switching	Constant-speed	JOG	Manual pulse generator	Home position return	Position follow-up control	OSC	Speed control with fixed position stop	Speed-torque control	Error cause	Error processing	Corrective action
108 (Note)	0					0								 The address that does not generate an arc is set at R (radius) specified circular interpolation or R (radius) specified helical interpolation. Relationship between the start point, radius and end point. The radius-specified circular interpolation or radius-specified helical interpolation was started in the control unit degree axis which is "stroke limit invalid". The radius-specified circular interpolation or radius-specified helical interpolation was started in the control unit degree axis which is "stroke limit invalid". 		Correct the addresses of the servo program. Make the stroke limit valid for the control unit degree axis starts the radius-specified circular interpolation or radius- specified helical interpolation. Make the stroke limit valid for the axis starts the radius- specified circular interpolation or radius-specified helical interpolation.
109 (Note)	0					0								 The address that does not generate an arc is set at central point-specified circular interpolation or central point-specified helical interpolation. Relationship between the start point, central point and end point. The central point-specified helical interpolation or central point-specified helical interpolation or central point-specified helical interpolation was started in the control unit degree axis which is "stroke limit invalid". The central point-specified helical interpolation was started in the control unit degree axis which is "stroke limit invalid". 		 Correct the addresses of the servo program. Make the stroke limit valid for the control unit degree axis starts the central point-specified circular interpolation or central point-specified helical interpolation. Make the stroke limit valid for the axis starts the central point-specified helical interpolation.
110 (Note)	0					0								 The difference between the end point address and ideal end point is outside the allowable error range for circular interpolation at the circular interpolation. 		Correct the addresses of the servo program.

Table 1.4 Positioning control start error (100 to 199) list (Continued)

(Note): These errors are stored the error codes of the all applicable interpolation axes at the interpolation operation.

					(Cont	rol n	node	;							
Error code	Positioning	Fixed-pitch feed	Speed	Speed/position switching	Speed switching	Constant-speed	DOC	Manual pulse generator	Home position return	Position follow-up control	osc	Speed control with fixed position stop	Speed-torque control	Error cause	Error processing	Corrective action
111				0										 The speed/position control restarting was performed, although it was not after stop during operation of the speed/position switching control. 		 Do not re-start except the stop during speed/position switching control.
115									0					• The home position return complete signal (M2410+20n) turned on at the home position return of proximity dog type, dog cradle type, stopper type, and dogless home position signal reference type.	Positioning control does not start.	 Do not start continuously for the home position return. (1) At the home position return of proximity dog type, dog cradle type or stopper type: Return to a point before the proximity dog signal ON by JOG operation or positioning operation, etc., and perform the home position return. (2) At the home position return of dogless home position signal reference type: Return to a point before the home position by JOG operation or positioning operation, etc., and perform the home position return.
116							0							The setting JOG speed is "0". The setting JOG speed exceeded the JOG speed limit value. The setting JOG speed limit value exceeded the setting range.	Control with the JOG speed limit value. Control with the maximum setting range	 Set the correct speed (within the setting range). Set the correct JOG speed limit value (within the setting range).
117							0							• Both of forward and reverse rotation were set at the simultaneous start for the JOG operation.	of each control unit. Only the applicable axis set to the forward direction starts.	Set a correct data.

Table 1.4 Positioning control start error (100 to 199) list (Continued)

					(Cont	rol n	node	;							
Error code	Positioning	Fixed-pitch feed	Speed	Speed/position switching	Speed switching	Constant-speed	JOG	Manual pulse generator	Home position return	Position follow-up control	osc	Speed control with fixed position stop	Speed-torque control	Error cause	Error processing	Corrective action
119					0									 In the real mode or at the real mode axis, the instruction to specify the end point address by absolute data method in speed switching control was executed for the axis with unit [PLS/mm/inch] where the stroke limit is disabled. 	Positioning control does not start.	When specifying the end point address by absolute data method in speed switching control, make the stroke limit valid.
120									0					• ZCT not set The zero pass signal (M2406+20n) turned off at the re-travel at the home position return for proximity dog, count and limit switch	Home position return is not completed correctly.	• Execute the home position return after the zero point passed.
121	0	0	0	0	0	0				0	0	0	0	When "Not execute servo program" is selected in the operation setting for incompletion of home position return, the home position return request signal (M2409+20n) turns on.	Positioning control does not start.	 Execute servo program after home position return. In the system which enables execution of servo program even if the home position return request signal (M2409+20n) turns on, set "Execute servo program" as "operation setting for incompletion of home position return".
122									0					 Home position return is started on the direct drive motor when the absolute position data of the encoder has not been established. 		 Turn the power supplies of the system or servo amplifier from OFF to ON after passing the zero point of the motor by the JOG operation, etc.
123									0					When the home position is on the proximity dog, the scale home position signal detection type home position return was started up again, at the home position return complete signal ON, after completion of the home position return.	Home position return does not start.	 When the home position is on the proximity dog, continuous home position returns of scale home position signal detection type are not supported. Execute JOG operation or positioning to return before the proximity dog ON, and execute home position return.

Table 1.4 Positioning control start error (100 to 199) list (Continued)

					(Cont	rol n	node	;							
Error code	Positioning	Fixed-pitch feed	Speed	Speed/position switching	Speed switching	Constant-speed	DOG	Manual pulse generator	Home position return	Position follow-up control	osc	Speed control with fixed position stop	Speed-torque control	Error cause	Error processing	Corrective action
124									0					• When using the scale home position signal detection type home position return or the dogless home position signal reference type home position return (operation A), the servo parameter PC17 is other than "Need to pass motor Z phase after the power supply is switched on".	Home position return does not start.	 Set "Need to pass motor Z phase after the power supply is switched on" to the servo parameter PC17. When you change the servo parameter PC17, please once turn off the power supply of servo amplifier and turn it on again.
130												0		 Speed control with fixed position stop with was started for the axis set in except unit [degree]. Speed control with fixed position stop was started in the axis which is not "stroke limit invalid". 	Positioning control does not start.	 Set the unit [degree] in the axis which starts speed control with fixed position stop. Set the stroke limit invalid "(Upper stroke limit value) equal to (lower stroke limit value)" in the axis which starts speed control with fixed position stop.
133									0					 A data set type 2 and stopper type 1/2 home position return were started when using VCI (Nikki Denso). 	Home position return does not start.	 VCII (Nikki Denso) does not support data set type 2 and stopper type 1/2 home position return. Change to the usable home position return system.
140	0													• The travel value of the reference axis is set at "0" in the linear interpolation for reference axis specification.		Do not set axis of travel value "0" as the reference axis.
141										0				• The position command device of position follow-up control is set the odd number.		 Set the even number for the position command device of position follow-up control.
142				0					0					• The positioning control which use the external input signal was executed for the axis which has not set the external input signal in the system settings.	Positioning control does not start.	 Set the external input signal in the system setting.
145				0					0					Unusable instructions were started in the external input signal setting via servo amplifier.		• Do not start the speed/position switching control and count type home position return in the external input signal setting via servo amplifier.

Table 1.4 Positioning control start error (100 to 199) list (Continued)

					(Cont	rol r	node	;							
Error code	Positioning	Fixed-pitch feed	Speed	Speed/position switching	Speed switching	Constant-speed	90ſ	Manual pulse generator	Home position return	Position follow-up control	OSC	Speed control with fixed position stop	Speed-torque control	Error cause	Error processing	Corrective action
151	0	0	0		0	0	0	0		0				 Not allowed axis started in the virtual mode. (It cannot be started with error at real mode/virtual mode switching.) 		 Start in the virtual mode again after correct the error cause in the real mode.
152	0	0	0		0	0	0	0		0				and during deceleration by all axes servo OFF (M2042 OFF).	Positioning control does not start.	
153	0	0	0		0	0	0	0		0				 It started at the virtual mode and during deceleration by occurrence of the output module servo error. 		0
154													0	 One of the devices set in the speed-torque control operation data is outside the range. The servo parameter "POL reflection selection at torque control (PC29)" is set to "0: Valid" in the axis where the torque initial value selection at control mode switching is set to the feedback torque. 	The control mode is not switched. Control with the initial value selection of torque at control mode switching as command torque.	 Correct the speed-torque control operation data device. Use the servo amplifier compatible with the reflection selection at torque control and set the POL reflection selection at torque control to "1: Invalid". Set the command torque to the torque initial value selection at control mode switching.
155													0	 The control mode switching was executed with an invalid value specified in the control mode setting device. 	The control	 Correct the value of the control mode setting device. When switching the mode from the continuous operation to torque control mode to another, return the mode to the previous one.
156													0	 The control mode switching request was executed during the zero speed was OFF. 	mode is not switched.	 Switch the control mode while the axis is stopped and the zero speed is turned on. Make "Invalid selection during zero speed at control mode switching" valid when not waiting for the stop of the servo motor.
157													0	 At the control mode switching, a value set to the speed limit value at speed- torque control is outside the range. 	Control with the maximum setting range of each axis unit.	Set the correct speed limit value (within the setting range).

Table 1.4 Positioning control start error (100 to 199) list (Continued)

					(Cont	trol n	node	;							
Error code	Positioning	Fixed-pitch feed	Speed	Speed/position switching	Speed switching	Constant-speed	JOG	Manual pulse generator	Home position return	Position follow-up control	osc	Speed control with fixed position stop	Speed-torque control	Error cause	Error processing	Corrective action
158													0	• At the control mode switching, a value set to the torque limit value at speed- torque control is outside the range.	Control with the default value "300[%]".	• Set the torque limit value to 0.1[%] to 1000.0[%].
192									0					The dogless home position signal reference type home position return was started for the axis which is connected with an amplifier other than MR-J3(W)-B series and MR-J4(W)-B series.	Home	• Start the dogless home position signal reference type home position return for the axis which is connected with either of MR-J3(W)-B series and MR-J4(W)-B series.
193									0					When using the dogless home position signal reference type home position return (operation B), the servo parameter PC17 is other than "Not need to pass motor Z phase after the power supply is switched on".	position return does not start.	 Set the servo parameter PC17 to "Not need to pass motor Z phase after the power supply is switched on". When you change the servo parameter PC17, please once turn off the power supply of servo amplifier and turn it on again.

Table 1.4 Positioning control start error (100 to 199) list (Continued)

(3) Positioning control errors (200 to 299)

These are errors detected during the positioning control. The error codes, causes, processing and corrective actions are shown in Table 1.5.

1					(Cont	rol n	node	;							
Error code	Positioning	Fixed-pitch feed	Speed	Speed/position switching	Speed switching	Constant-speed	JOG	Manual pulse generator	Home position return	Position follow-up control	osc	Speed control with fixed position stop	Speed-torque control	Error cause	Error processing	Corrective action
200	0	0	0	0	0	0	0	0		0	0	0	0	The PLC ready flag (M2000) turned off during the control by the servo program.	Deceleration stop (Immediate stop during torque control and continuous operation to torque control)	• Turn the PLC ready flag (M2000) on after all axes have stopped.
201									0					• The PLC ready flag (M2000) turned off during the home position return.		 Perform the home position return again after turning the PLC ready flag (M2000) on or
202									0					• The stop command (M3200+20n) turned on during the home position return.	Deceleration stop	turning the stop command (M3200+20n) or rapid stop command (M3201+20n) off. (Return to a point before the
203									0					The rapid stop command (M3201+20n) turned on during the home position return.	Rapid stop	proximity dog signal ON using JOG operation or positioning operation, and perform the home position return again in the proximity dog type.
204	0	0	0	0	0	0	0	0	0	0	0	0		The PLC ready flag (M2000) turned off to on again during deceleration by turning off the PLC ready flag (M2000).	No operation	Turn the PLC ready flag (M2000) off to on after all axes have stopped. Turn the PLC ready flag (M2000) off to on during deceleration is "no operation".

Table 1.5 Positioning control error (200 to 299) list

					(Cont	rol n	node	;							
Error code	Positioning	Fixed-pitch feed	Speed	Speed/position switching	Speed switching	Constant-speed	JOG	Manual pulse generator	Home position returm	Position follow-up control	OSC	Speed control with fixed position stop	Speed-torque control	Error cause	Error processing	Corrective action
206									0					All axes rapid stop is executed using the test mode of MT Developer2 during the home position return.	Rapid stop	 Return to a point before the proximity dog signal ON using JOG operation or positioning operation, and perform the home position return again in the proximity dog type. Return to a point before the proximity dog signal ON using JOG operation or positioning operation, and perform the home position return again, when the proximity dog signal turns off in the count type. Perform the home position return operation again, when the proximity dog signal turns off in the count type.
207	0				0	0	0			0			0	 The feed current value exceeded the stroke limit range during positioning control. Only the axis exceed the stroke limit range is stored at the circular/helical interpolation. All interpolation axes are stored in the linear interpolation. 	Deceleration stop (Immediate stop during torque control and continuous operation to torque control)	Correct the stroke limit range or travel value setting so that positioning control is within the range of the stroke limit.
208	0				0	0		0						 The feed current value of another axis exceeded the stroke limit value during the circular/helical interpolation control or simultaneous manual pulse generator operation. (For detection of other axis errors). 		
209				0					0					An overrun occurred because the setting travel value is less than the deceleration distance at the speed/position switching (CHANGE) signal input during speed/position switching control, or at the proximity dog signal input during home position return of count type.	Deceleration stop	 Set the speed setting so that overrun does not occur. Set the travel value so that overrun does not occur.

 Table 1.5 Positioning control error (200 to 299) list (Continued)

					(Cont	rol n	node	•							
Error code	Positioning	Fixed-pitch feed	Speed	Speed/position switching	Speed switching	Constant-speed	JOG	Manual pulse generator	Home position returm	Position follow-up control	OSC	Speed control with fixed position stop	Speed-torque control	Error cause	Error processing	Corrective action
210				0										• The setting travel value exceeded the stroke limit range at the speed/position switching (CHANGE) signal input during the speed/ position switching control.		 Correct the stroke limit range or setting travel value so that positioning control is within the range of stroke limit.
						0								• During positioning control, an overrun occurred because the deceleration distance for the output speed is not attained at the point where the final positioning address was detected.	Deceleration stop	 Set the speed setting so that overrun does not occur. Set the travel value so that overrun does not occur.
211	0	0			0					0				• During control with acceleration/deceleration time change, an overrun occurred because the deceleration distance to the final positioning address for the output speed was not attained.	Immediate stop after reaching the final positioning address	 Set the speed setting so that overrun does not occur. Set the travel value so that overrun does not occur. Change the deceleration time so that overrun does not occur.
214								0							Manual pulse generator input is ignored until the axis stops.	Execute the manual pulse generator operation after the applicable axis stopped.
215					0									 The speed switching point address exceed the end point address. The positioning address in the reverse direction was set during the speed switching control. The same servo program 	Rapid stop	Set the speed-switching point between the previous speed switching point address and the end point address. Correct the Motion SFC
220										0				 was executed again. When the control unit is "degree" during the position follow-up control, the command address exceeded the range of 0 to 35999999. The command address for the position follow-up control exceeded the stroke limit range. 	Deceleration stop	 program. When the control unit is "degree", set the command address within the range of 0 to 35999999. Set the address within the stroke limit range.

 Table 1.5 Positioning control error (200 to 299) list (Continued)

					(Cont	rol n	node	;							
Error code	Positioning	Fixed-pitch feed	Speed	Speed/position switching	Speed switching	Constant-speed	DOG	Manual pulse generator	Home position retum	Position follow-up control	OSC	Speed control with fixed position stop	Speed-torque control	Error cause	Error processing	Corrective action
221												0		• During the speed control with fixed position stop, the setting address exceeded the range of 0 to 35999999 at the fixed position stop command device ON.	Deceleration stop	• Set the command address within the range of 0 to 35999999.
222												0		• During the speed control with fixed position stop, the fixed position acceleration/ deceleration time is "0" at the fixed position acceleration/ deceleration time input.	Control with the default value "1000".	 Set the acceleration/ deceleration time within the range of 1 to 65535.
225						0								control.	Control with the speed limit value. Control with the speed of last pass point	 Set the speed command value within the range of 1 to speed limit value.
230						0								 When the skip is executed in the constant-speed control, the next interpolation instruction is an absolute circular interpolation or absolute helical interpolation. After the skip is executed in the constant-speed control, an absolute circular interpolation or absolute helical interpolation is executed while passing through only the positioning point for incremental 	Immediate stop Deceleration	 If absolute circular interpolation or absolute helical interpolation is designated at a point after the skip designation point, set an absolute linear interpolation in the interval.
260	0	0				0								method. • The target position change request (CHGP) specifying the address where the target position is outside the range of 0 to 35999999 is executed to the axis whose unit is [degree].	stop	• When executing the target position change request specifying the address to the axis whose unit is [degree], set the target position within the range of 0 to 35999999.

 Table 1.5 Positioning control error (200 to 299) list (Continued)

					(Cont	rol n	node	•			1				
Error code	Positioning	Fixed-pitch feed	Speed	Speed/position switching	Speed switching	Constant-speed	DOC	Manual pulse generator	Home position return	Position follow-up control	osc	Speed control with fixed position stop	Speed-torque control	Error cause	Error processing	Corrective action
261	0	0				0								 At the target position change request (CHGP), since the travel to the target position after the change was shorter than the deceleration distance, an overrun occurred. 		 Set the speed so that an overrun will not occur. Set the target position so that an overrun will not occur.
262	0	0				0								 At the target position change request (CHGP), the target position after the change exceeds the range of the stroke limit. 		 Set the stroke limit range or the target position after the change so that the positioning control is performed within the stroke limit range.
263	0	0				0								 The target position change request (CHGP) is executed to the program where the following acceleration/deceleration system is set. (1) FIN acceleration/ deceleration (2) Advanced S-curve acceleration/ deceleration 	Deceleration stop	 Do not execute the target position change to the program where the FIN acceleration/deceleration or the advanced S-curve acceleration/deceleration is set. Set the acceleration/ deceleration system of the parameter block or the servo program to the trapezoid/ S-curve acceleration/ deceleration.
264	0													 In reference axis-specified linear interpolation or the long axis-specified linear interpolation, the travel of the reference axis or the long axis after the target position change request (CHGP) is 0. 		 Set a target position so that the travel of the reference axis or the long axis after the target position change is not 0.

Table 1.5 Positioning control error (200 to 299) list (Continued)

 (4) Current value/speed/target position change errors (300 to 399) These are errors detected at current value change, speed change or target position change. The error codes, causes, processing and corrective actions are shown in Table

The error codes, causes, processing and corrective actions are shown in Table 1.6.

Table 1.6 Current value/speed/target position change error (300 to 39	9) list
	- /

1					(Cont	rol n	node	;							
Error code	Positioning	Fixed-pitch feed	Speed	Speed/position switching	Speed switching	Constant-speed	JOG	Manual pulse generator	Home position return	Position follow-up control	osc	Speed control with fixed position stop	Speed-torque control	Error cause	Error processing	Corrective action
300	0	0	0	0	0	0	0	0	0	0	0	0	0	 The current value was changed during positioning control of the applicable axis. The current value was changed for the axis that had not been started. The current value was changed for the servo OFF axis. 	Current value is not changed.	 Use the following devices as interlocks not to change the current value for the applicable axis. (1) The start accept flag (M2001 to M2032) OFF for applicable axis. (2) The servo READY signal (M2415+20n) ON.
301									0					 The speed was changed for the axis during home position return. 	Speed is not changed.	 Do not change speed during home position return.
005				0	0		0			0		0		 The speed after speed change is set outside the range of 0 to speed limit value. 	Control with	 Set the speed after speed change within the range of 0 to speed limit value.
305	0	0	0			0								• The absolute value of speed after speed change is set outside the range of 0 to speed limit value.	the speed limit value.	 Set the absolute value of speed after speed change within the range of 0 to speed limit value.
309														• The current value was changed outside the range of 0 to 35999999 (×10-5 [degree]) for the degree axis.	Current value is not changed.	• Set the current value within the range of 0 to 35999999 (×10-5[degree]).
310											0			 The speed was changed during high-speed oscillation. The speed change to "0" was requested during high- speed oscillation. 	Speed is not changed.	 Do not change speed during high-speed oscillation.
	0	0				0								 Change speed to negative speed in the invalid axis of stroke limit. 		 Do not change speed to negative speed in the invalid axis of stroke limit.

					(Cont	rol n	node	;							
Error code	Positioning	Fixed-pitch feed	Speed	Speed/position switching	Speed switching	Constant-speed	JOG	Manual pulse generator	Home position return	Position follow-up control	osc	Speed control with fixed position stop	Speed-torque control	Error cause	Error processing	Corrective action
311														 The value outside the range of 1 to 1000[%] was set in the torque limit value change request (D(P).CHGT, CHGT). The positive direction torque limit value or the negative direction torque limit value outside the range of 0.1 to 1000.0[%] was set in the torque limit value individual change request (D(P).CHGT2, CHGT2). 	Torque limit value is not changed.	 Set the change request within the range of 1 to 1000[%] in the torque limit value change request (CHGT). Set the change request within the range of 0.1 to 1000.0[%] for the positive direction torque limit value or the negative direction torque limit value in the torque limit value individual change request (CHGT2).
312														 The torque limit value change request (D(P).CHGT,CHGT) was made for the axis that had not been started. The torque limit value individual change request (D(P).CHGT2, CHGT2) was made for the axis that had not been started. 		Request the torque limit change or the torque limit value individual change for the starting axis.
315													0	• During speed-torque control, the absolute value of the command speed is outside the range of 0 to the speed limit value at speed-torque control.	Control with the speed limit value at speed-torque control.	Set the speed after speed change within the range of 0 to speed limit value at speed- torque control.
316													0	value of the command torque is outside the range	Control with the torque limit value at speed-torque control.	Set the torque after torque change within the range of 0 to the torque limit value at speed- torque control.
317	0	0	0		0		0	0	0		0		0	 At the switching request to the continuous operation to torque control, a control mode which cannot be switched is used. 	The control mode is not switched.	 Request switching during the control which can be switched to the continuous operation to torque control.

Table 1.6 Current value/speed/target position change error (300 to 399) list(Continued)

					(Cont	rol n	node	;							
Error code	Positioning	Fixed-pitch feed	Speed	Speed/position switching	Speed switching	Constant-speed	DOC	Manual pulse generator	Home position return	Position follow-up control	osc	Speed control with fixed position stop	Speed-torque control	Error cause	Error processing	Corrective action
318	0	0	0		0		0	0	0		0		0	• Switching to the stopper control was requested to the servo amplifier which is not compatible with the continuous operation to torque control.	Position control: Deceleration stop Speed control: The mode is switched to position control mode, and the operation stops immediately.	Use the servo amplifier where the continuous operation to torque control is available.
319													0	During the speed-torque control, the change value by the torque limit value change request (D(P).CHGT, CHGT) or torque limit value individual change request (D(P).CHGT2, CHGT2) exceeds the torque limit value at speed-torque control.	Torque limit value is not changed.	Request changing within the range of torque limit value at speed-torque control.
330			0	0	0		0	0	0		0	0	0	The target position change request (CHGP) was executed for the axis which was executing a servo instruction which was not compatible with target position change.	Target position is not changed.	 Change the target position for the axes operated by the following servo instructions. (1) Linear interpolation control (2) Fixed-pitch feed operation (3) Constant-speed control

Table 1.6 Current value/speed/target position change error (300 to 399) list(Continued)

(5) System errors (900 to 999)

These are errors detected at the power-on.

The error codes, causes, processing and corrective actions are shown in Table 1.7.

					(Cont	rol n	node	;							
Error code	Positioning	Fixed-pitch feed	Speed	Speed/position switching	Speed switching	Constant-speed	JOG	Manual pulse generator	Home position return	Position follow-up control	osc	Speed control with fixed position stop	Speed-torque control	Error cause	Error processing	Corrective action
901														allowable travel value during	Further operation is possible.	 Check the position. Check the battery of encoder.
902														At VCI (Nikki Denso) power- on, ABS/INC setting in "System Setting" differs from	operation is possible according to	Correct ABS/INC setting in "System Setting".

Table 1.7 System error (900 to 999) list

APPENDIX 1.3 Major errors

These errors occur by control command from the external input signal or Motion SFC program, and the error codes 1000 to 1999 are used.

Major errors include the positioning control start errors, positioning control errors, absolute position system errors and system errors.

(1) Positioning control start errors (1000 to 1099)

These errors are detected at the positioning control start. The error codes, causes, processing and corrective actions are shown in Table 1.8.

					(Cont	rol r	node	9							
Error code	Positioning	Fixed-pitch feed	Speed	Speed/position switching	Speed switching	Constant-speed	JOG	Manual pulse generator	Home position return	Position follow-up control	osc	Speed control with fixed position stop	Speed-torque control	Error cause	Error processing	Corrective action
1000	0	0	0	0	0	0	0	0	0	0	0	0	0	 The external STOP signal of the applicable axis turned on. 		Turn the STOP signal off.
1001	0	0	0	0	0		0	0	0	0	0	0		The external signal FLS (upper limit LS) turned off at the forward direction (address increase direction) start.		 Move in the reverse direction by the JOG operation, etc. and set within the external limit range.
1002	0	0	0	0	0		0	0	0	0	0	0		The external signal RLS (lower limit LS) turned off at the reverse direction (address decrease direction) start.		 Move in the forward direction by the JOG operation, etc. and set within the external limit range.
1003									0					 The external DOG (proximity dog) signal turned on at the home position return start of the proximity dog type. 		 Perform the home position return after move to the proximity dog ON by the JOG operation, etc. at the home position return of the proximity dog type.
1004	0	0	0	0	0	0	0	0	0	0	0	0	0	 The applicable axis is not servo READY state. (M2415+20n: OFF). (1) The power supply of the servo amplifier is OFF. (2) During initial processing after turning on the servo amplifier. (3) The servo amplifier is not mounted. (4) A servo error is occurred. (5) Cable fault. (6) Servo OFF command (M3215+20n) is ON. 	Positioning control does not start.	• Wait until the servo READY state (M2415+20n: ON).
1005	0	0	0	0	0	0	0	0	0	0	0	0	0	• The servo error detection signal of the applicable axis (M2408+20n) turned on.		• Eliminate the servo error, reset the servo error detection signal (M2408+20n) by the servo error reset command (M3208+20n), then start operation.

Table 1.8 Positioning control start error (1000 to 1099) list

(2) Positioning control errors (1100 to 1199)

These errors are detected at the positioning control. The error codes, causes, processing and corrective actions are shown in Table 1.9.

Table 1.9 Positioning control error	(1100 to	1199) list
-------------------------------------	----------	------------

					(Cont	rol n	node	9							
Error code	Positioning	Fixed-pitch feed	Speed	Speed/position switching	Speed switching	Constant-speed	JOG	Manual pulse generator	Home position return	Position follow-up control	osc	Speed control with fixed position stop	Speed-torque control	Error cause	Error processing	Corrective action
1101	0	0	0	0	0	0	0	0	0	0	0	0	0	• The external signal FLS (upper limit LS) turned off during the forward direction (address increase direction).	Deceleration stop by "Stop processing on STOP input" of the	• Travel in the reverse direction by the JOG operation, etc. and set within the external limit range.
1102	0	0	0	0	0	0	0	0	0	0	0	0	0	The external signal RLS (lower limit LS) turned off during the reverse direction (address decrease direction).	parameter block. (Deceleration stop during speed control, immediate stop during continuous operation to torque control mode)	 Travel in the forward direction by the JOG operation, etc. and set within the external limit range.
1103									0					The external stop signal (stop signal) turned on during home position return.	Deceleration stop by "Stop processing on STOP input" of the parameter block.	• Execute the home position return so that the external stop signal (stop signal) may not turn on.
1104	0	0	0	0	0	0	0	0	0	0	0	0	0	The servo error detection signal turned on during positioning control.	Immediate stop without decelerating.	Start after disposal at the servo error.
1105	0	0	0	0	0	0	0	0	0	0	0	0	0	 The power supply of the servo amplifier turned off during positioning control. (Servo not mounted status detection, cable fault, etc.) Home position return did not complete normally without stop within the in-position range of home position at the home position return. 	Turn the servo READY	 Turn on the power supply of the servo amplifier. Check the connecting cable to the servo amplifier. Make the gain adjustment.
1151														 Q172DEX or encoder hardware error. Disconnected encoder cable. A synchronous encoder set in the system setting differs 	Immediate input stop Input from synchronous encoder does not accept.	 Check (replace) the Q172DEX or encoder. Check the encoder cable. Set a synchronous encoder actually connected in the system setting.
1152 1153														 Low voltage at Q172DEX. No battery or disconnected battery at Q172DEX. 	Operation continues.	Replace the battery. Replace the battery or check (replace) the Q172DEX.

 (3) Absolute position system errors (1200 to 1299) These errors are detected at the absolute position system. The error codes, causes, processing and corrective actions are shown in Table 1.10.

Table 1.10 Absolute position system error (1200 to 1299) list

					(Cont	rol n	node	<u>,</u>							,
Error code	Positioning	Fixed-pitch feed	Speed	Speed/position switching	Speed switching	Constant-speed	JOG	Manual pulse generator	Home position return	Position follow-up control	osc	Speed control with fixed position stop	Speed-torque control	Error cause	Error processing	Corrective action
1201														 The error causes why the home position return is required in the absolute position system are as follows: (1) The home position return has never been executed after the system start. (2) The home position return is started, but not completed correctly. (3) Absolute data in the Motion CPU is erased due to causes such as a battery error. (4) Servo error [2025], [2143], or [2913] occurred. (5) Major error [1202], [1203] or [1204] occurred. (6) "Rotation direction selection" of the servo parameter is changed. 	Home position return request ON	Execute the home position return after checking the batteries of the Motion CPU module and servo amplifier.
1202														• A communication error between the servo amplifier and encoder occurred at the turning on servo amplifier power supply.	Depending on the version of operating system software and servo amplifier, home position return request ON, servo error [2016] set. (Fully closed loop control servo amplifier use: Servo error [2070] is set.)	 Check the motor and encoder cables. If the home position return request signal is turning ON, execute a home position return.

					(Cont	rol n	node	è							
Error code	Positioning	Fixed-pitch feed	Speed	Speed/position switching	Speed switching	Constant-speed	DOG	Manual pulse generator	Home position return	Position follow-up control	osc	Speed control with fixed position stop	Speed-torque control	Error cause	Error processing	Corrective action
1203														 The amount of change in encoder current value is excessive during operation. A continual check is performed (both of servo ON and OFF states) after the servo amplifier power has been turned ON. (Q17 DCPU(-S1) use) 		Check the motor and encoder cables.
1204														 The following expression holds: "Encoder current value [PLS] ≠ feedback current value [PLS] (encoder effective bit number)" during operation. A continual check is performed (both of servo ON and OFF states) after the servo amplifier power has been turned on. (Q17□DCPU(-S1) use) 	Home position return request ON	
1205														• The following expression holds: "Encoder current value [PLS] ≠ feedback current value [PLS] (encoder	Operation continues. (Home position return signal does not turn ON.)	

Table 1.10 Absolute position system error (1200 to 1299) list (Continued)

(4) System errors (1300 to 1399)

These errors are detected at the power-on. The error codes, causes, processing and corrective actions are shown in Table 1.11.

					(Cont	rol n	node	;							
Error code	Positioning	Fixed-pitch feed	Speed	Speed/position switching	Speed switching	Constant-speed	JOG	Manual pulse generator	Home position return	Position follow-up control	osc	Speed control with fixed position stop	Speed-torque control	Error cause	Error processing	Corrective action
1310														 Initial communication with the Multiple CPU system did not complete normally. Motion CPU fault. 	Positioning control does not start.	Replace the Motion CPU.
1360														Number of axes set for the master axis in servo parameter "Driver communication setting (PD15)" exceed the setting range.		• Set the number of master axis to 4 axes or less for SSCNETII lines, and 8 axes or less for SSCNETII/H lines in servo parameter "PD15".
1361														 Servo parameters "Driver communication setting Master axis No. selection 1 for slave (PD20)" or "PD21 to PD23" are set the self axis. 	System	 Review the servo parameters "PD20" or "PD21 to PD23" of applicable slave axis.
1362														• There is no master axis setting corresponding to the slave axis.	setting error	
1363														Setting the driver communication to servo amplifier which does not support the driver communication.		Confirm the driver communication and the actually connected servo amplifier.
1365														Setting the driver communication in the operation cycle setting of 0.2ms.		 For SSCNETI, set the operation cycle setting to 0.4ms or more.

Table 1.11 System error (1300 to 1399) list

APPENDIX 1.4 Servo errors

(1) Servo errors (2000 to 2999)

These errors are detected by the servo amplifier, and the error codes are [2000] to [2999].

The servo error detection signal (M2408+20n) turns on at the servo error occurrence. Eliminate the error cause, reset the servo amplifier error by turning on the servo error reset command (M3208+20n) and perform re-start. (The servo error detection signal does not turn on because the codes [2100] to [2599] are for warnings.)

- (Note-1): As for the regenerative alarm (error code [2030]) or overload 1 or 2 (error codes [2050], [2051]), the state at the operation is held also for after the protection circuit operation in the servo amplifier. The memory contents are cleared with the external power supply off, but are not cleared by the reset signal.
- (Note-2): If resetting by turning off the external power supply is repeated at the occurrence of error code [2030], [2050] or [2051], it may cause devices to be destroyed by overheating. Re-start operation after eliminating the cause of the error certainly.

The hexadecimal display of servo amplifier display servo error code (#8008+20n) is the same as the LED of servo amplifier. \sqrt{er}

If a controller, servo amplifier self-diagnosis error occurs, check the points stated in this manual and clear the error.

Servo amplifier type	Instruction manual name
MR-J4-□B	SSCNETⅢ/H interface MR-J4-□B Servo amplifier Instruction Manual (SH-030106)
MR-J4W-⊟B	SSCNETII/H interface Multi-axis AC Servo MR-J4W-⊡B Servo amplifier Instruction Manual (SH-030105)
MR-J3-□B	SSCNETⅢ interface MR-J3-□B Servo amplifier Instruction Manual (SH-030051)
MR-J3W-⊟B	SSCNETⅢ interface 2-axis AC Servo Amplifier MR-J3W-⊟B Servo amplifier Instruction Manual (SH-030073)
MR-J3-□B-RJ004	SSCNETII Compatible Linear Servo MR-J3-□B-RJ004 Instruction Manual (SH-030054)
MR-J3-⊟B-RJ006	SSCNETⅢ Compatible Fully Closed Loop Control MR-J3-□B-RJ006 Servo amplifier Instruction Manual (SH-030056)
MR-J3-□B-RJ080	SSCNETⅢ interface Direct Drive Servo MR-J3-□B-RJ080W Servo amplifier Instruction Manual (SH-030079)
MR-J3-⊟B Safety	SSCNETⅢ interface Drive Safety integrated MR-J3-□B Safety Servo amplifier Instruction Manual (SH-030084)

List of servo errors are shown in next page or later. Refer to the "Servo amplifier Instruction Manual" for details.

Ver. : Refer to Section 1.3 for the software version that supports this function.

(2	۱ г	1D	140	\ \/`		P
(a)	٨R-	J4(vv,)-∟	D

Table 1.12 Servo error (2000 to 2999) list (MR-J4(W)- \Box B)

Error code	Servo amplifier LED display	Name	Details name	Remarks
0040	10.1		Voltage drop in the control power	
2010	10.2	Undervoltage	Voltage drop in the main circuit power	
	11.1		Axis number setting error	
2011	11.2	Switch setting error	Disabling control axis setting error	MR-J4W-⊡B use
	12.1		RAM error 1	
	12.2		RAM error 2	
2012	12.3	Memory error 1 (RAM)	RAM error 3	
	12.4		RAM error 4	
	12.5		RAM error 5	
	13.1		Clock error 1	
2013	13.2	Clock error	Clock error 2	
	14.1		Control process error 1	
	14.2		Control process error 2	
	14.3	1	Control process error 3	
	14.4 14.5 14.6	-	Control process error 4	
		-	Control process error 5	
2014		Control process error	Control process error 6	
		-	Control process error 7	
	14.7 14.8 14.9 14.A 15.1 15.2	-	Control process error 8	
		4	Control process error 9	
		4	•	
			Control process error 10	
2015		Memory error 2 (EEP-ROM)	EEP-ROM error at power on	
			EEP-ROM error during operation	
	16.1		Encoder initial communication - Receive	
		4	data error 1	
	16.2		Encoder initial communication - Receive data error 2	
	16.3		Encoder initial communication - Receive data error 3	
		4	Encoder initial communication -	
	16.5		Transmission data error 1	
		-	Encoder initial communication -	
	16.6		Transmission data error 2	
		4	Encoder initial communication -	
	16.7	Encoder initial communication	Transmission data error 3	
2016	16.A	error 1	Encoder initial communication - Process	
	10.3 (4	error 1	
	16.B		Encoder initial communication - Process error 2	
	16.C		Encoder initial communication - Process	
		4	error 3	
	16.D		Encoder initial communication - Process error 4	
	16.E		Encoder initial communication - Process	
		4	error 5	
	16.F		Encoder initial communication - Process error 6	

Error code	Servo amplifier LED display	Name	Details name	Remarks
	17.1		Board error 1	
	17.3		Board error 2	
0047	17.4		Board error 3	
2017	17.5	Board error	Board error 4	
	17.6		Board error 5	
	17.8		Board error 6	
	19.1		Flash-ROM error 1	
2019	19.2	Memory error 3 (Flash-ROM)	Flash-ROM error 2	
	20.1		Encoder normal communication - Receive data error 1	
	20.2		Encoder normal communication -	
	20.3	-	Receive data error 2 Encoder normal communication -	
		-	Receive data error 3	
	20.5		Encoder normal communication -	
2020		Encoder normal	Transmission data error 1	
	20.6	communication error 1	Encoder normal communication -	
		-	Transmission data error 2	
	20.7		Encoder normal communication -	
		-	Transmission data error 3	
	20.9		Encoder normal communication -	
		-	Receive data error 4	
	20.A		Encoder normal communication -	
			Receive data error 5	
	21.1	-	Encoder error 1	
	21.2	-	Encoder data update error	
	21.3	Encoder normal	Encoder data waveform error	
2021	21.4	communication error 2	Encoder non-signal error	
	21.5	-	Encoder hardware error 1	
	21.6	4	Encoder hardware error 2	
	21.9		Encoder error 2	
	24.1		Ground fault detected at hardware detection circuit	
2024		Main circuit error	Ground fault detected at software	
	24.2		detection function	
			Servo motor encoder - Absolute position	
	25.1		erased	
2025	25.2	Absolute position erased	Scale measurement encoder - Absolute	
	+		position erased	
	27.1		Magnetic pole detection - Abnormal	
	27.2	4	termination	
	27.2	4	Magnetic pole detection - Time out error	
	27.3		Magnetic pole detection - Limit switch	
2027	27 /	Initial magnetic pole detection	error Magnetic pole detection - Estimated error	
2021	27.4	error		
	27.5		Magnetic pole detection - Position deviation error	
	27.6		Magnetic pole detection - Speed	
		4	deviation error	
	27.7		Magnetic pole detection - Current error	

Table 1.12 Servo error (2000 to 2999) list (MR-J4(W)-□B) (Continued)

Error code	Servo amplifier LED display	Name	Details name	Remarks
2028	28.1	Linear encoder error 2	Linear encoder - Environment error	
	30.1		Regeneration heat error	
2030	30.2	Regenerative error	Regeneration signal error	
	30.3		Regeneration feedback signal error	
2031	31.1	Overspeed	Abnormal motor speed	
	00.4		Overcurrent detected at hardware	
	32.1		detection circuit (during operation)	
	22.0		Overcurrent detected at software	
0000	32.2	Querent	detection function (during operation)	
2032	22.2	Overcurrent	Overcurrent detected at hardware	
	32.3		detection circuit (during a stop)	
	32.4		Overcurrent detected at software	
	32.4		detection function (during a stop)	
2033	33.1	Overvoltage	Main circuit voltage error	
	34.1		SSCNET receive data error	
0004	34.2		SSCNET connector connection error	
2034	34.3	SSCNET receive error 1	SSCNET communication data error	
	34.4		Hardware error signal detection	
2035	35.1	Command frequency error	Command frequency error	
2036	36.1	SSCNET receive error 2	Continuous communication data error	
2037 ^(Note-1)	37.1		Parameter setting range error	
2037 (1010 1)	37.2	Parameter error	Parameter combination error	
	42.1		Servo control error by position deviation	
	42.2		Servo control error by speed deviation	
		Servo control error	Servo control error by torque/thrust	
	42.3		deviation	
			Fully closed loop control error by position	
2042	42.8		deviation	
	42.9	Fully closed loop control error	Fully closed loop control error by speed	
		-	deviation	
	42.A		Fully closed loop control error by position	
			deviation (during command stop)	
2045	45.1	Main circuit device overheat	Main circuit device overheat error	
	46.1	-	Abnormal temperature of servo motor 1	
	46.2	-	Abnormal temperature of servo motor 2	
2046	46.3	Servo motor overheat	Thermistor disconnected	
	46.5		Abnormal temperature of servo motor 3	
	46.6		Abnormal temperature of servo motor 4	
2047	47.1	Cooling fan error	Cooling fan stop error	
2041	47.2		Cooling fan speed reduction error	
	50.1	4	Thermal overload error 1 during operation	
	50.2		Thermal overload error 2 during operation	
2050	50.3	Overload 1	Thermal overload error 4 during operation	
2000	50.4		Thermal overload error 1 during a stop	
	50.5		Thermal overload error 2 during a stop	
	50.6		Thermal overload error 4 during a stop	
2051	51.1	Overland 2	Thermal overload error 3 during operation	
2051	51.2	Overload 2	Thermal overload error 3 during a stop	

Table 1.12 Servo error (2000 to 2999) list (MR-J4(W)-□B) (Continued)

(Note-1): Refer to the parameter No. stored in the parameter error No. (#8009+20n) for details of the erroneous parameter.

Error code	Servo amplifier LED display	Name	Details name	Remarks
	52.1		Excess droop pulse 1	
0050	52.3		Excess droop pulse 2	
2052	52.4	Error excessive	Error excessive during 0 torque limit	
	52.5		Excess droop pulse 3	
2054	54.1	Oscillation detection	Oscillation detection error	
	56.2		Over speed during forced stop	
2056	56.3	Forced stop error	Estimated distance over during forced	
	50.5		stop	
	1A.1		Servo motor combination error	
2060	1A.2	Servo motor combination error	Servo motor control mode combination error	
	2A.1		Linear encoder error 1-1	
	2A.2		Linear encoder error 1-2	
2061	2A.3	1	Linear encoder error 1-3	
	2A.4	-	Linear encoder error 1-4	
	2A.4 2A.5	Linear encoder error 1	Linear encoder error 1-5	
	2A.5 2A.6	4	Linear encoder error 1-5	
		-		
	2A.7 2A.8	-	Linear encoder error 1-7	
			Linear encoder error 1-8	
2063	63.1	STO timing error	STO1 off	
	63.2		STO2 off	
	1E.1	Encoder initial communication	Encoder malfunction	
	1E.2	error 2	Load-side encoder malfunction	
2064	1F.1	Encoder initial communication Incompatible encoder		
	1F.2	error 3	Incompatible load-side encoder	
	70.1		Load-side encoder initial communication - Receive data error 1	
	70.2		Load-side encoder initial communication - Receive data error 2	
	70.3		Load-side encoder initial communication -	
	70.5		Receive data error 3 Load-side encoder initial communication -	
		_	Transmission data error 1	
	70.6		Load-side encoder initial communication -	
		-	Transmission data error 2	
2070	70.7	Load-side encoder initial	Load-side encoder initial communication - Transmission data error 3	
2070	70.A	communication error 1	Load-side encoder initial communication - Process error 1	
	70.B		Load-side encoder initial communication -	
		-	Process error 2	
	70.C		Load-side encoder initial communication - Process error 3	
	70.D		Load-side encoder initial communication - Process error 4	
	70.E		Load-side encoder initial communication -	
		4	Process error 5 Load-side encoder initial communication -	
	70.F		Process error 6	

Table 1.12 Servo error (2000 to 2999) list (MR-J4(W)-□B) (Continued)

Error code	Servo amplifier LED display	Name	Details name	Remarks
	74.4		Load-side encoder communication -	
	71.1		Receive data error 1	
	71.0		Load-side encoder communication -	
	71.2		Receive data error 2	
	71.3		Load-side encoder communication -	
	71.5		Receive data error 3	
	71.5		Load-side encoder communication -	
2071	71.5	Load-side encoder normal	Transmission data error 1	
2071	71.6	communication error 1	Load-side encoder communication -	
	71.0		Transmission data error 2	
	71.7		Load-side encoder communication -	
	/1./		Transmission data error 3	
	71.9		Load-side encoder communication -	
	71.9		Transmission data error 4	
	71.A		Load-side encoder communication -	
	/1.A		Transmission data error 5	
	72.1		Load-side encoder data error 1	
	72.2	Load-side encoder normal	Load-side encoder data update error	
	72.3		Load-side encoder data waveform error	
2072	72.4		Load-side encoder non-signal error	
	72.5	communication error 2	Load-side encoder hardware error 1	
	72.6		Load-side encoder hardware error 2	
	72.9		Load-side encoder data error 2	
2082	82.1	Master-slave operation error 1	Master-slave operation error 1	MR-J4-□B use
2088	888	Watchdog	Watchdog	
2091	91.1	Servo amplifier overheat warning	Main circuit device overheat warning	
2005	95.1		STO1 off detection	
2095	95.2	STO warning	STO2 off detection	
	06.4		Encoder battery cable disconnection	
2102	92.1	Battery cable disconnection	warning	
	92.3	warning	Battery degradation	
	96.1		In-position warning at home positioning	
2106	00.0	Home position setting warning	Command input warning at home	
	96.2		positioning	
	9F.1	_	Low battery	
2116	9F.2	Battery warning	Battery degradation warning	
2140	E0.1	Excessive regeneration warning	Excessive regeneration warning	

Table 1.12 Servo error (2000 to 2999) list (MR-J4(W)-□B) (Continued)

Error code	Servo amplifier LED display	Name	Details name	Remarks
	E1.1		Thermal overload warning 1 during operation	
	E1.2		Thermal overload warning 2 during operation	
	E1.3		Thermal overload warning 3 during operation	
2141	E1.4	Overload warning 1	Thermal overload warning 4 during operation	
	E1.5		Thermal overload error 1 during a stop	
	E1.6		Thermal overload error 2 during a stop	
	E1.7		Thermal overload error 3 during a stop	
	E1.8		Thermal overload error 4 during a stop	
2142	E2.1	Servo motor overheat warning	Servo motor temperature warning	
	E3.2		Absolute position counter warning	
2143	E3.5	Absolute position counter warning	Encoder absolute positioning counter warning	
2144 ^(Note-1)	E4.1	Parameter warning	Parameter setting range error warning	
2146	E6.1	Servo forced stop warning	Forced stop warning	
2147	E7.1	Controller forced stop warning	Controller forced stop warning	
2148	E8.1	Cooling fan speed reduction	Decreased cooling fan speed warning	
	E8.2	warning	Cooling fan stop	
	E9.1		Servo-on signal on during main circuit off	
2149	E9.2	Main circuit off warning	Bus voltage drop during low speed operation	
	E9.3		Ready-on signal on during main circuit off	
2151	EB.1	The other axis error warning	The other axis error warning	MR-J4W-□B use
2152	EC.1	Overload warning 2	Overload warning 2	
2153	ED.1	Output watt excess warning	Output watt excess warning	
2160	F0.1	Tough drive warning	Instantaneous power failure tough drive warning	
2.00	F0.3		Vibration tough drive warning	
2162	F2.1	Drive recorder - Miswriting	Drive recorder - Area writing time-out warning	
	F2.2	warning	Drive recorder - Data miswriting warning	
2163	F3.1	Oscillation detection warning	Oscillation detection warning	
2.00	2B.1		Encoder counter error 1	
2913	2B.1	Encoder counter error	Encoder counter error 2	
2918	3A.1	Inrush current suppression circuit error	Inrush current suppression circuit error	
	3D.1	Parameter setting error for	Parameter combination error for driver communication on slave	
2921	3D.2	driver communication	Parameter combination error for driver communication on master	MR-J4-⊟B use
2922	3E.1	Operation mode error	Operation mode error	
2948	8A.1	USB communication time-out error	USB communication time-out error	

Table 1.12 Servo error (2000 to 2999) list (MR-J4(W)-□B) (Continued)

(Note-1): Refer to the parameter No. stored in the parameter error No. (#8009+20n) for details of the erroneous parameter.

Error code	Servo amplifier LED display	Name	Details name	Remarks
	8E.1		USB communication receive error	
	8E.2		USB communication checksum error	
2952	8E.3	USB communication error	USB communication character error	
	8E.4		USB communication command error	
	8E.5		USB communication data number error	

Table 1.12 Servo error (2000 to 2999) list (MR-J4(W)-□B) (Continued)

(b) MR-J3-⊟B

Table 1.13 Servo error (2000 to 2999) list (MR-J3-□B)

Error code	Servo amplifier LED display	Name	Remarks
2010	10	Undervoltage	
2012	12	Memory error 1 (RAM)	
2013	13	Clock error	
2015	15	Memory error 2 (EEP-ROM)	
2016	16	Encoder error 1 (At power on)	
2017	17	Board error	
2019	19	Memory error 3 (Flash ROM)	
2020	20	Encoder error 2 (During runtime)	
2021	21	Encoder error 3 (During runtime)	
2024	24	Main circuit error	
2025	25	Absolute position erase	
2030	30	Regenerative error	
2031	31	Overspeed	
2032	32	Overcurrent	
2033	33	Overvoltage	
2034	34	Receive error 1	
2035	35	Command frequency error	
2036	36	Receive error 2	
2045	45	Main circuit device overheat	
2046	46	Servo motor overheat	
2047	47	Cooling fan error	
2050	50	Overload 1	
2051	51	Overload 2	
2052	52	Error excessive	
2060	1A	Motor combination error	
2082	82	Master/slave operation error 1	
2088	888	Watchdog	
2102	92	Battery cable disconnection warning	
2106	96	Home position setting warning	
2116	9F	Battery warning	
2140	E0	Excessive regeneration warning	
2141	E1	Overload warning 1	
2143	E3	Absolute position counter warning	
2146	E6	Servo forced stop warning	
2147	E7	Controller forced stop warning	
2148	E8	Cooling fan speed reduction warning	
2149	E9	Main circuit off warning	
2152	EC	Overload warning 2	
2153	ED	Output watt excess warning	
2301 to 2599	E4	Parameter warning (Refer to the table 1.14)	
2601 to 2899	37	Parameter error (Refer to the table 1.14)	
2907	1B	Converter alarm	
2921	3D	Driver communication parameter setting error	
2948	8A	USB communication time-out error	
2952	8E	USB communication error	
2956	9C	Converter warning	

(Note): The LED display is different when using the servo amplifiers with a large capacity.

Refer to the "Servo amplifier Instruction Manual" for details.

Error	code	Parameter No.	Name	Error	code	Parameter No.	Name
2301	2601	PA01	Control mode	2339	2639	PB20	Vibration suppression control resonance frequency setting
2302	2602	PA02	Regenerative option	2340	2640	PB21	F
2303	2603	PA03	Absolute position detection system	2341	2641	PB22	For manufacturer setting
2304	2604	PA04	Function selection A-1	2342	2642	PB23	Low-pass filter selection
2305	2605	PA05		2343	2643	PB24	Slight vibration suppression control selection
2306	2606	PA06	For manufacturer setting	2344	2644	PB25	For manufacturer setting
2307	2607	PA07		2345	2645	PB26	Gain changing selection
2308	2608	PA08	Auto tuning mode	2346	2646	PB27	Gain changing condition
2309	2609	PA09	Auto tuning response	2347	2647	PB28	Gain changing time constant
2310		PA10	In-position range	2348	2648	PB29	Gain changing ratio of load inertia moment
2311	2611	PA11		2349	2649	PB30	Gain changing position loop gain
2312		PA12		2350		PB31	Gain changing speed loop gain
2313		PA13	For manufacturer setting	2351	2651	PB32	Gain changing speed integral compensation
2314	2614	PA14	Rotation direction selection	2352	2652	PB33	Gain changing vibration suppression control vibration frequency setting
2315	2615	PA15	Encoder output pulse	2353	2653	PB34	Gain changing vibration suppression control resonance frequency setting
2316	2616	PA16		2354	2654	PB35	
2317		PA17	For manufacturer setting	2355		PB36	
2318		PA18	J	2356		PB37	
2319		PA19	Parameter write inhibit	2357	2657	PB38	
2320		PB01	Adaptive tuning mode (adaptive filter II)	2358	2658	PB39	
2321	2621	PB02	Vibration suppression control tuning mode (advanced vibration suppression control)	2359	2659	PB40	For manufacturer setting
2322	2622	PB03	For manufacturer setting	2360	2660	PB41	
2323	2623	PB04	Feed forward gain	2361	2661	PB42	
2324		PB05	For manufacturer setting	2362		PB43	
2325	2625	PB06	Ratio of load inertia moment to servo motor inertia moment	2363	2663	PB44	
2326	2626	PB07	Model loop gain	2364	2664	PB45	Vibration suppression control filter 2
	2627	PB08	Position loop gain	2365	2665	PC01	Error excessive alarm level
2328		PB09	Speed loop gain		2666	PC02	Electromagnetic brake sequence output
2329		PB10	Speed integral compensation	2367	2667	PC03	Encoder output pulse selection
2330	2630	PB11	Speed differential compensation	2368	2668	PC04	Function selection C-1
	2631	PB12	Overshoot amount compensation		2669	PC05	Function selection C-2
2332		PB13	Machine resonance suppression filter 1	2370		PC06	Function selection C-3
2333		PB14	Notch shape selection 1	2371	2671	PC07	Zero speed
	2634	PB15	Machine resonance suppression filter 2	2372		PC08	For manufacturer setting
2335		PB16	Notch shape selection 2	2373		PC09	Analog monitor 1 output
2336		PB17	Automatic setting parameter	2374		PC10	Analog monitor 2 output
	2637	PB18	Low-pass filter setting	2375		PC11	Analog monitor 1 offset
	2638	PB19	Vibration suppression control vibration		2676	PC12	Analog monitor 2 offset

Table 1.14 Parameter warning (2301 to 2599)/Parameter error (2601 to 2899) error detail

(Note): The details are different when using the servo amplifiers with a large capacity. Refer to the "Servo amplifier Instruction Manual" for details.

		1.1 4 Fa	rameter warning (2301 to 2599)/Para		enu	(2001.10	
Error	code	Parameter No.	Name	Error	code	Parameter No.	Name
2377	2677	PC13	Analog monitor feedback position output standard data Low	2416	2716	PD20	Driver communication setting Master axis No. selection1 for slave
2378	2678	PC:14	Analog monitor feedback position output standard data High	2417	2717	PD21	Master axis No. selection nor slave
2379	2679	PC15	For manufacturer setting	2418	2718	PD22	
2380	2680	PC16	Function selection C-3A	2419	2719	PD23	
2381	2681	PC17	Function selection C-4		2720	PD24	
2382	2682	PC18		2421	2721	PD25	For manufacturer setting
2383	2683	PC19	For manufacturer setting	2422	2722	PD26	
2384	2684	PC20	Function selection C-7	2423	2723	PD27	
2385	2685	PC21	Alarm history clear	2424	2724	PD28	
2386		PC22			2725	PD29	
2387		PC23			2726	PD30	Master-slave operation - Torque command coefficient on slave
2388	2688	PC24		2427	2727	PD31	Master-slave operation - Speed limit coefficient on slave
2389	2689	PC25		2428	2728	PD32	Master-slave operation - Speed limit adjustment value on slave
2390	2690	PC26		2429	2729	PE01	
2391		PC27			2730	PE02	
2392		PC28			2731	PE03	
2393		PC29	For manufacturer setting		2732	PE04	
2394		PC30			2733	PE05	
2395		PC31			2734	PE06	
2396		PC32			2735	PE07	
2397		PD01			2736	PE08	
2398	2698	PD02		2437	2737	PE09	
2399		PD03		2438	2738	PE10	
2400	2700	PD04		2439	2739	PE11	
2401	2701	PD05		2440	2740	PE12	
2402	2702	PD06		2441	2741	PE13	
2403	2703	PD07	Output signal device selection 1 (CN3-13)	2442	2742	PE14	For manufacturer setting
2404	2704	PD08	Output signal device selection 2 (CN3-9)	2443	2743	PE15	
2405		PD09	Output signal device selection 3 (CN3-15)		2744	PE16	
2406		PD10	For manufacturer setting		2745	PE17	
2407		PD11	Input filter setting		2746	PE18	
2408		PD12			2747	PE19	
2409		PD13	For manufacturer setting		2748	PE20	
2410		PD14	Function selection D-3		2749	PE21	
2411		PD15	Driver communication setting		2750	PE22	
2412		PD16	Driver communication setting Master transmit data selection1		2751	PE23	
2413	2713	PD17	Driver communication setting Master transmit data selection2	2452	2752	PE24	
2414	2714	PD18		2453	2753	PE25	
	2715	PD19	For manufacturer setting		2754	PE26	Filter coefficient 2-1

Table 1.14 Parameter warning (2301 to 2599)/Parameter error (2601 to 2899) error detail (Continued)

(Note): The details are different when using the servo amplifiers with a large capacity.

Refer to the "Servo amplifier Instruction Manual" for details.

Table	1.14 Pa	rameter warn	ing (2301 to	o 2599)/Par	ameter e	error (260	1 to 2899)	error det	ail (Continue	d)

Error	code	Parameter No.	Name	Error	code	Parameter No.	Name
2455	2755	PE27	Filter coefficient 2-2	2462	2762	PE34	
2456	2756	PE28	Filter coefficient 2-3	2463	2763	PE35	
2457	2757	PE29	Filter coefficient 2-4	2464	2764	PE36	
2458	2758	PE30	Filter coefficient 2-5	2465	2765	PE37	For manufacturer setting
2459	2759	PE31	Filter coefficient 2-6	2466	2766	PE38	
2460	2760	PE32	Filter coefficient 2-7	2467	2767	PE39	
2461	2761	PE33	Filter coefficient 2-8	2468	2768	PE40	

(Note): The details are different when using the servo amplifiers with a large capacity. Refer to the "Servo amplifier Instruction Manual" for details.

Table 1.15 Servo error (2000 to 2999) list (MR-J3W-□B)

Error code	Servo amplifier LED display	Name	Details name	Remarks
2010	10.1	Undervoltage	Voltage drop in the control circuit power supply	
	10.2		Voltage drop in the main circuit power	
	11.1		Rotary switch setting error	
	11.2		DIP switch setting error	
2011	11.3	Switch setting error	Servo motor selection switch setting error	
	11.4		Servo motor selection switch setting error 2	
	12.1		CPU built-in RAM error	
2012	12.2	Memory error 1 (RAM)	CPU data RAM error	
	12.3		Custom IC RAM error	
2013	13.1	Clock error	Clock error	
	15.1		EEP-ROM error at power on	
2015	15.2	Memory error 2 (EEP-ROM)	EEP-ROM error during operation	
	16.1		Encoder receive data error 1	
	16.2		Encoder receive data error 2	
	16.3	Encoder initial communication	Encoder receive data error 3	
2016	16.5	error 1	Encoder transmission data error 1	
	16.6		Encoder transmission data error 2	
	16.7		Encoder transmission data error 3	
	17.1		AD converter error	
	17.2		Current feedback data error	
	17.3		Custom IC error	
2017	17.4	Board error	Amplifier detection signal error	
	17.5		Rotary switch error	
	17.6		DIP switch error	
	19.1		Flash-ROM error 1	
2019	19.2	Memory error 3 (Flash ROM)	Flash-ROM error 2	
	20.1		Encoder receive data error 1	
	20.2		Encoder receive data error 2	
	20.3	Encoder normal	Encoder receive data error 3	
2020	20.5	communication error 1	Encoder transmission data error 1	
	20.6	1	Encoder transmission data error 2	
	20.7	1	Encoder transmission data error 3	
	21.1		Encoder data error	
2021	21.2	Encoder normal	Encoder data update error	
	21.3	communication error 2	Encoder waveform error	Direct drive motor use
			Ground fault detected at hardware	
000	24.1		detection circuit	
2024	010	Main circuit error	Ground fault detected at software	
	24.2		detection function	
2025	25.1	Absolute position erase	Absolute position data erase	

(Note-1): The name is different when using the linear servo motors. Refer to the "Servo amplifier Instruction Manual" for details.

(Note-2): The name is different when using the direct drive motors.

Refer to the "Servo amplifier Instruction Manual" for details.

Error code	Servo amplifier LED display	Name	Details name	Remarks
	27.1		Magnetic pole detection abnormal termination	
	27.2		Magnetic pole detection time out error	
	27.3		Magnetic pole detection limit switch error	
	27.4	Initial magnetic pole detection	Magnetic pole detection estimated error	Linear servo motor/
2027	27.5	error	Magnetic pole detection position deviation error	direct drive motor use
	27.6		Magnetic pole detection speed deviation error	
	27.7		Magnetic pole detection current error	
2028	28.1	Linear encoder error 2	Linear encoder environment error	Linear servo motor use
	30.1		Regeneration heat error	
	30.2		Regenerative transistor error	
2030	30.3	Regenerative error	Regenerative transistor feedback data error	•
2031	31.1	Overspeed	Abnormal motor speed ^{(Note-1), (Note-2)}	
2001	0111		Overcurrent detected at hardware	
	32.1	Overcurrent	detection circuit (during operation).	
			Overcurrent detected at software	
	32.2		detection function (during operation).	
2032			Overcurrent detected at hardware	
	32.3 32.4		detection circuit (during a stop).	
			Overcurrent detected at software	
			detection function (during a stop).	
2033	33.1	Overvoltage	Main circuit voltage error	
	34.1		SSCNET receive data error	
		1	SSCNET communication connector	
2034	34.2	SSCNET receive error 1	connection error	
	34.3		Communication data error	
	34.4		Hardware error signal detection	
2035	35.1	Command frequency error	Command frequency error	
2036	36.1	SSCNET receive error 2	Continuous communication data error	
		Linear servo control error	Linear servo control error on the positioning detection	Linear servo motor use
	42.1	Servo control error	Servo control error due to position deviation	Direct drive motor use
		Linear servo control error	Linear servo control error on the speed detection	Linear servo motor use
2042	42.2	Servo control error	Servo control error due to speed deviation	Direct drive motor use
		Linear servo control error	Linear servo control error on the thrust detection	Linear servo motor use
	42.3	Servo control error	Servo control error due to torque detection	Direct drive motor use
	45.1		Main circuit abnormal temperature	
2045	45.2	Main circuit device overheat	Board temperature error	

Table 1.15 Servo error (2000 to 2999) list (MR-J3W-□B) (Continued)

(Note-1): The name is different when using the linear servo motors. Refer to the "Servo amplifier Instruction Manual" for details.

Refer to the "Servo amplifier Instruction Manual" for details.

⁽Note-2): The name is different when using the direct drive motors.

Error code	Servo amplifier	Name	Details name	Remarks	
	LED display				
	46.1		Abnormal temperature of servo motor	Linear servo motor	
2046	46.2	Servo motor overheat (Note-2)	Linear servo motor thermal sensor error	use	
2040		Servo motor overneat	Direct drive motor thermal sensor error	Direct drive motor use	
	46.3		Thermistor wires are not connected error	Linear servo motor/ direct drive motor use	
00.17	47.1	O a l'an fan anna	Cooling fan stop error		
2047	47.2	Cooling fan error	Decreased cooling fan speed error		
	50.1		Thermal overload error 1 during operation		
	50.2		Thermal overload error 2 during operation		
2050	50.3	Overland 4	Thermal overload error 4 during operation		
2050	50.4	Overload 1	Thermal overload error 1 during a stop		
	50.5		Thermal overload error 2 during a stop		
	50.6]	Thermal overload error 4 during a stop		
	51.1		Thermal overload error 3 during operation		
2051	51.2	Overload 2	Thermal overload error 3 during a stop		
	52.3		Excess droop pulse (Note-1), (Note-2)		
2052	52.4	Error excessive	Maximum deviation at 0 torque limit (Note-1), (Note-2)		
2060	1A.1	Motor combination error Motor combination error			
	2A.1		Linear encoder side error 1		
	2A.2		Linear encoder side error 2		
	2A.3		Linear encoder side error 3	Linear servo motor use	
	2A.4	1	Linear encoder side error 4		
2061	2A.5	Linear encoder error 1	Linear encoder side error 5		
	2A.6		Linear encoder side error 6		
	2A.7	1	Linear encoder side error 7		
	2A.8	1	Linear encoder side error 8		
2063	1E.1	Encoder initial communication error 2	Encoder failure		
2064	1F.1	Encoder initial communication error 3	Incompatible encoder		
2088	888	Watchdog	_		
0404	91.1	Main circuit device overheat	Main circuit device overheat warning		
2101	91.2	warning	Board temperature warning		
2102	92.1	Battery cable disconnection warning	y cable disconnection Encoder battery disconnection warning		
	96.1	Ŭ	In-position error at home positioning		
2106	96.2	Home position setting warning	Command input error at home positioning		
2116	9F.1	Battery warning	Low battery		
2140	E0.1	Excessive regeneration warning	Excessive regeneration warning		

T I I <i>A</i> 46	•				
1 able 1.15	Servo error (2000 to	2999) list ((MR-J3W-⊟B)	(Continued)

(Note-1): The name is different when using the linear servo motors. Refer to the "Servo amplifier Instruction Manual" for details. (Note-2): The name is different when using the direct drive motors. Refer to the "Servo amplifier Instruction Manual" for details.

Error code	Servo amplifier LED display	Name Details name		Remarks
	E1.1		Thermal overload warning 1 during operation	
	E1.2		Thermal overload warning 2 during operation	
	E1.3		Thermal overload warning 3 during operation	
2141	E1.4	Overload warning 1	Thermal overload warning 4 during operation	
	E1.5		Thermal overload warning 1 during a stop	
	E1.6		Thermal overload warning 2 during a stop	
	E1.7	-	Thermal overload warning 3 during a stop	
	E1.8	-		
0140		Linear servo motor overheat warning	Thermal overload warning 4 during a stop Linear servo motor overheat warning	Linear servo motor use
2142	E2.1	Direct drive motor overheat warning	Direct drive motor overheat warning	Direct drive motor use
2143	E3.1	Absolute position counter	The multi-revolution counter travel distance excess warning	
	E3.2	warning	Absolute positioning counter error	
2146	E6.1	Servo forced stop warning	Servo forced stop warning	
2147	E7.1	Controller forced stop warning		
2148	E8.1	Cooling fan speed reduction warning	Decreased cooling fan speed warning	
	E9.1		Ready-on signal on at main circuit off	
2149	E9.2	Main circuit off warning	Bus voltage drop during low speed operation ^(Note-1)	
	E9.3		Servo-on signal on at main circuit off	
2151	EB.1	The other axis fault warning	The other axis fault warning	
2152	EC.1	Overload warning 2	Overload warning 2	
2153	ED.1	Output watt excess warning	Output watt excess	
2301 to 2599	E4.1	Parameter warning (Refer to the table 1.16)	Parameter setting range error warning	
00011	37.1	Parameter error	Parameter setting range error	
2601 to 2899	37.2	(Refer to the table 1.16)	Parameter combination error]
	2B.1		Encoder counter error 1	
2913	2B.2	Encoder counter error	Encoder counter error 2	Direct drive motor use
2948	8A.1	USB communication time-out error	USB communication time-out error	
	8E.1		USB communication receive error	
	8E.2	1	USB communication checksum error	
2952	8E.3	USB communication error	USB communication character error	
	8E.4		USB communication command error	
	8E.5	1	USB communication data No. error	

Table 1.15 Servo er	rror (2000 to 2999)) list (MR-J3W-⊟B)	(Continued)
---------------------	---------------------	--------------------	-------------

(Note-1): The name is different when using the linear servo motors. Refer to the "Servo amplifier Instruction Manual" for details.

(Note-2): The name is different when using the direct drive motors.

Refer to the "Servo amplifier Instruction Manual" for details.

Error code		Parameter No.	Name				
2301	2601	PA01	Control mode				
2302	2602	PA02	Regenerative option				
2303	2603	PA03	Absolute position detection system				
2304	2604	PA04	Function selection A-1				
2305	2605	PA05					
2306	2606	PA06	For manufacturer setting				
2307	2607	PA07					
2308	2608	PA08	Auto tuning mode				
2309	2609	PA09	Auto tuning response				
2310	2610	PA10	In-position range				
2311	2611	PA11					
2312	2612	PA12	For manufacturer setting				
2313	2613	PA13					
2314	2614	PA14	Rotation direction selection				
2315	2615	PA15	Encoder output pulse				
2316	2616	PA16	Encoder output pulse 2				
2317	2617	PA17	For manufacturer setting				
2318	2618	PA18					
2319	2619	PA19	Parameter write inhibit				
2320	2620	PB01	Adaptive tuning mode (adaptive filter II)				
2321	2621	PB02	Vibration suppression control tuning mode (advanced vibration suppression control)				
2322	2622	PB03	For manufacturer setting				
2323	2623	PB04	Feed forward gain				
2324	2624	PB05	For manufacturer setting				
2325	2625	PB06	Ratio of load inertia moment to servo motor inertia moment				
2326	2626	PB07	Model loop gain				
2327	2627	PB08	Position loop gain				
2328	2628	PB09	Speed loop gain				
2329		PB10	Speed integral compensation				
2330	2630	PB11	Speed differential compensation				
2331	2631	PB12	For manufacturer setting				
2332	2632	PB13	Machine resonance suppression filter 1				
2333		PB14	Notch shape selection 1				
2334	2634	PB15	Machine resonance suppression filter 2				
2335	2635	PB16	Notch shape selection 2				
2336	2636	PB17	Automatic setting parameter				
2337	2637	PB18	Low-pass filter setting				
2338	2638	PB19	Vibration suppression control vibration frequency setting				
2339	2639	PB20	Vibration suppression control resonance frequency setting				

Table 1.16 Parameter warning (2301 to 2599)/Parameter error (2601	to 2899) error detail
---	-----------------------

Error code		Parameter No.	Name				
2340	2640	PB21					
2341	2641	PB22	For manufacturer setting				
2342	2642	PB23	Low-pass filter selection				
2343	2643	PB24	Slight vibration suppression control selection				
2344	2644	PB25	For manufacturer setting				
2345	2645	PB26	Gain changing selection				
2346	2646	PB27	Gain changing condition				
2347	2647	PB28	Gain changing time constant				
2348	2648	PB29	Gain changing ratio of load inertia moment to servo motor inertia moment				
2349	2649	PB30	Gain changing position loop gain				
2350	2650	PB31	Gain changing speed loop gain				
2351	2651	PB32	Gain changing speed integral compensation				
2352	2652	PB33	Gain changing vibration suppression control vibration frequency setting				
2353	2653	PB34	Gain changing vibration suppression control resonance frequency setting				
2354	2654	PB35					
2355	2655	PB36					
2356	2656	PB37					
2357	2657	PB38					
2358	2658	PB39					
2359	2659	PB40					
2360	2660	PB41	For manufacturer setting				
2361	2661	PB42					
2362	2662	PB43					
2363	2663	PB44					
2364	2664	PB45					
2365	2665	PC01	Error excessive alarm level				
2366	2666	PC02	Electromagnetic brake sequence output				
2367	2667	PC03	Encoder output pulse selection				
2368	2668	PC04	Function selection C-1				
2369	2669	PC05	Function selection C-2				
2370	2670	PC06	Function selection C-3				
2371	2671	PC07	Zero speed				
2372	2672	PC08	For manufacturer setting				
2373	2673	PC09	Analog monitor 1 output				
2374	2674	PC10	Analog monitor 2 output				
2375	2675	PC11	Analog monitor 1 offset				
2376	2676	PC12	Analog monitor 2 offset				
2377	2677	PC13					
2378	2678	PC14	For manufacturer setting				

Error	code	Parameter No.	Name	Error	code	Parameter No.	Name
2379	2679	PC15	Station number selection	2412	2712	PD16	
2380		PC16	For manufacturer setting	2413	2713	PD17	
2381	2681	PC17	Function selection C-4	2414	2714	PD18	
2382	2682	PC18		2415	2715	PD19	
2383	2683	PC19	For manufacturer setting	2416	2716	PD20	
2384	2684	PC20		2417	2717	PD21	
2385	2685	PC21	Alarm history clear	2418	2718	PD22	
2386	2686	PC22		2419	2719	PD23	
2387	2687	PC23		2420	2720	PD24	For manufacturer setting
2388	2688	PC24		2421	2721	PD25	
2389	2689	PC25		2422	2722	PD26	
2390	2690	PC26		2423	2723	PD27	
2391	2691	PC27		2424	2724	PD28	
2392	2692	PC28		2425	2725	PD29	
2393	2693	PC29		2426	2726	PD30	
2394	2694	PC30		2427	2727	PD31	
2395	2695	PC31	For manufacturer setting	2428	2728	PD32	
2396	2696	PC32		2485	2785	Po01	Function selection O-1
2397	2697	PD01		2486	2786	Po02	Axis selection for graphing analog data (MR Configurator)
2398	2698	PD02		2487	2787	Po03	Axis selection for graphing digital data (MR Configurator)
2399	2699	PD03		2488	2788	Po04	Function selection O-2
2400	2700	PD04		2489	2789	Po05	
2401	2701	PD05		2490	2790	Po06	
2402	2702	PD06		2491	2791	Po07	
2403	2703	PD07	Output signal device selection 1 (CN3-12 for A-axis and CN3-25 for B-axis)	2492	2792	Po08	
2404	2704	PD08	For manufacturer setting	2493	2793	Po09	
2405	2705	PD09	Output signal device selection 3 (CN3-11 for A-axis and CN3-24 for B-axis)	2494	2794	Po10	For manufacturer setting
2406	2706	PD10	For manufacturer setting	2495	2795	Po11	
2407	2707	PD11	Input filter setting	2496	2796	Po12	
2408	2708	PD12		2497	2797	Po13	
2409	2709	PD13	For manufacturer setting	2498	2798	Po14	
2410		PD14	Function selection D-3		2799	Po15	
	2711	PD15	For manufacturer setting		2800	Po16	

Table 1.16 Parameter warning (2301 to 2599)/Parameter error (2601 to 2899) error detail (Continued)

(d) MR-J3B-RJ004 (For linear servo)

Table 1.17 Servo error (2000 to 2999) list (MR-J3-□B-RJ004)

Error code	Servo amplifier LED display	Name	Remarks
2010	10	Undervoltage	
2012	12	Memory error 1 (RAM)	
2013	13	Clock error	
2015	15	Memory error 2 (EEP-ROM)	
2016	16	Encoder error 1 (At power on)	
2017	17	Board error	
2019	19	Memory error 3 (Flash ROM)	
2020	20	Encoder error 2	
2021	21	Encoder error 3	
2024	24	Main circuit error	
2027	27	Initial magnetic pole detection error	
2028	28	Linear encoder error 2	
2030	30	Regenerative error	
2031	31	Overspeed	
2032	32	Overcurrent	
2033	33	Overvoltage	
2034	34	Receive error 1	
2035	35	Command frequency alarm	
2036	36	Receive error 2	
2042	42	Linear servo control error	
2045	45	Main circuit device overheat	
2046	46	Linear servo motor overheat	
2047	47	Cooling fan alarm	
2050	50	Overload 1	
2051	51	Overload 2	
2052	52	Error excessive	
2061	2A	Linear encoder error 1	
2088	888	Watchdog	
2106	96	Home position setting error	
2140	E0	Excessive regeneration warning	
2141	E1	Overload warning 1	
2142	E2	Linear servo motor overheat warning	
2146	E6	Servo forced stop warning	
2147	E7	Controller emergency stop warning	
2148	E8	Cooling fan speed reduction warning	
2149	E9	Main circuit off warning	
2152	EC	Overload warning 2	
2153	ED	Output watt excess warning	
2301 to 2599	E4	Parameter warning (Refer to the table 1.18)	
2601 to 2899	37	Parameter error (Refer to the table 1.18)	
2948	8A	USB communication time-out error	
2952	8E	USB communication error	

Error	code	Parameter No.	Name			
2301	2601	PA01	For manufacturer setting			
2302	2602	PA02	Regenerative option			
2303	2603	PA03	Absolute position detection system			
2304	2604	PA04	Function selection A-1			
2305	2605	PA05				
2306	2606	PA06	For manufacturer setting			
2307	2607	PA07				
2308	2608	PA08	Auto tuning mode			
2309	2609	PA09	Auto tuning response			
2310	2610	PA10	In-position range			
2311	2611	PA11				
2312	2612	PA12	For manufacturer setting			
2313	2613	PA13				
2314	2614	PA14	Moving direction selection			
2315	2615	PA15	Encoder output pulse			
2316	2616	PA16	Encoder output pulse 2			
2317	2617	PA17				
2318	2618	PA18	For manufacturer setting			
2319	2619	PA19	Parameter write inhibit			
2320	2620	PB01	Adaptive tuning mode (adaptive filter I)			
			Vibration suppression control tuning mode			
2321	2621	PB02	(advanced vibration suppression control)			
2322	2622	PB03	For manufacturer setting			
2323	2623	PB04	Feed forward gain			
2324	2624	PB05	For manufacturer setting			
2325		PB06	Load mass ratio to the linear servo motor primary side (coil)			
2326	2626	PB07	Model loop gain			
2327	2627	PB08	Position loop gain			
2328		PB09	Speed loop gain			
2329		PB10	Speed integral compensation			
2329		PB10 PB11	Speed differential compensation			
2330	2631	PB12	For manufacturer setting			
2331		PB12 PB13	Machine resonance suppression filter 1			
2332		PB13 PB14	Notch form selection 1			
2333		PB14 PB15				
		PB15 PB16	Machine resonance suppression filter 2			
2335			Notch form selection 2			
2336		PB17	Automatic setting parameter			
2337	2637	PB18	Low-pass filter setting			
2338	2638	PB19	Vibration suppression control vibration frequency setting			
2339	2639	PB20	Vibration suppression control resonance frequency setting			
2340	2640	PB21	For manufacturer setting			
_0.0	_0.0					

Table 1.18 Parameter warning (2	2301 to 2599)/Parameter error	(2601 to 2899) error detail
---------------------------------	-------------------------------	-----------------------------

Error code		Parameter No.	Name						
2341	2641	PB22	For manufacturer setting						
2342	2642	PB23	Low-pass filter selection						
2343	2643	PB24	Slight vibration suppression control selection						
2344	2644	PB25	For manufacturer setting						
2345	2645	PB26	Gain changing selection						
2346	2646	PB27	Gain changing condition						
2347	2647	PB28	Gain changing time constant						
2348	2648	PB29	Gain load mass ratio to the linear servo motor primary side (coil)						
2349	2649	PB30	Gain changing position loop gain						
2350	2650	PB31	Gain changing speed loop gain						
2351	2651	PB32	Gain changing speed integral compensation						
			Gain changing vibration suppression						
2352	2652	PB33	control vibration frequency setting						
			Gain changing vibration suppression						
2353	2653	PB34	control resonance frequency setting						
2354	2654	PB35	. , , , ,						
2355	2655	PB36							
2356	2656	PB37							
2357	2657	PB38							
2358	2658	PB39							
2359	2659	PB40	For manufacturer setting						
2360	2660	PB41	· · · · · · · · · · · · · · · · · · ·						
2361	2661	PB42							
2362	2662	PB43							
2363	2663	PB44							
2364	2664	PB45	Vibration suppression control filter 2						
2365	2665	PC01	Error excessive alarm level						
2366	2666	PC02	Electromagnetic brake sequence output						
2367	2667	PC03	Encoder output pulse selection						
2368	2668	PC04							
2369	2669	PC05	For manufacturer setting						
2370		PC06	Ŭ						
2371	2671	PC07	Zero speed						
2372	2672	PC08	For manufacturer setting						
2373	2673	PC09	Analog monitor 1 output						
2374	2674	PC10	Analog monitor 2 output						
2375	2675	PC11	Analog monitor 1 offset						
2376	2676	PC12	Analog monitor 2 offset						
2377	2677	PC13							
2378	2678	PC14	F						
2379	2679	PC15	For manufacturer setting						
2380	2680	PC16							

Error	code	Parameter No.	Name	Error	code	Parameter No.	Name
2381	2681	PC17	Function selection C-4	2427	2727	PD31	
2382	2682	PC18		2428	2728	PD32	
2383	2683	PC19	For manufacturer setting	2429	2729	PE01	
2384	2684	PC20	2430 2730 PE02 Alarm history clear 2431 2731 PE03				
2385	2685	PC21	Alarm history clear	2431	2731	PE03	
2386	2686	PC22		2432	2732	PE04	
2387	2687	PC23		2433	2733	PE05	
2388	2688	PC24	For manufacturer setting	2434	2734	PE06	
2389	2689	PC25		2435	2735	PE07	
2390	2690	PC26	Function selection C-8	2436	2736	PE08	
2391		PC27	Function selection C-9		2737	PE09	
2392		PC28			2738	PE10	
	2693	PC29			2739	PE11	1
2394		PC30			2740		For manufacturer setting
	2695	PC31	For manufacturer setting		2741	PE13	
	2696	PC32			2742	PE14	
2397		PD01			2743	PE15	
2398		PD02	Input signal automatic ON selection		2744	PE16	
2399		PD03			2745	PE17	
2400		PD04			2746	PE18	
2401		PD05	For manufacturer setting		2747	PE19	
2402		PD06			2748	PE20	
2403		PD07	Output signal device selection 1 (CN3-13)		2749	PE21	
2404		PD08	Output signal device selection 2 (CN3-9)		2750	PE22	
2405		PD09	Output signal device selection 2 (CN3-3)		2751	PE23	
2405		PD10	For manufacturer setting		2752	PE24	
2400		PD10	Input filter setting		2753	PE25	
2407		PD11			2754	PE26	Filter coefficient 2-1
2400		PD12	For manufacturer setting		2755	PE27	Filter coefficient 2-2
	2709	PD13	Function selection D-3		2756	PE28	Filter coefficient 2-3
2410		PD14 PD15			2757	PE29	Filter coefficient 2-4
	2712	PD15 PD16			2758	PE29 PE30	Filter coefficient 2-5
	2712	PD10 PD17			2759		Filter coefficient 2-6
	2713	PD17 PD18			2759	PE31 PE32	Filter coefficient 2-7
	2714	PD18 PD19			2760	PE32 PE33	Filter coefficient 2-8
2416		PD20			2762	PE34	
2417		PD21			2763	PE35	
	2718	PD22			2764	PE36	For monufactures a string
2419		PD23	For manufacturer setting		2765		For manufacturer setting
2420		PD24			2766	PE38	
2421		PD25		2467	2767	PE39	
2422		PD26			2768	PE40	
2423	2723	PD27		2501	2801	PS01	Linear function selection 1
2424	2724	PD28		2502	2802	PS02	Linear encoder resolution setting Numerator
2425	2725	PD29		2503	2803	PS03	Linear encoder resolution setting Denominator
2426	2726	PD30		2504	2804	PS04	Linear function selection 2

Table 1.18 Parameter warning (2301 to 2599)/Parameter error (2601 to 2899) error detail (Continued)

Error	Error code Parameter No.		Name	Error code		Parameter No.	Name
2505	2805	PS05	Linear servo motor control position deviation error detection level	251	2819	PS19	
2506	2806	PS06	Linear servo motor control speed deviation error detection level	252	2820	PS20	
2507	2807	PS07	Linear servo motor control thrust deviation error detection level	252	2821	PS21	
2508	2808	PS08	Linear function selection 3	252	2 2822	PS22	
2509	2809	PS09	Magnetic pole detection voltage level	252	3 2823	PS23	
2510	2810		At magnetic pole detection current detection method Identification signal frequency	2524	2824	PS24	For manufacturer setting
2511	2811		At magnetic pole detection current detection method Identification signal amplitude	252	5 2825	PS25	
2512	2812	PS12		252	6 2826	PS26]
2513	2813	PS13		252	2827	PS27	
2514	2814	PS14		252	3 2828	PS28	
2515	2815	PS15	For manufacturer setting	252	2829	PS29	
2516	2816	PS16		253	2830	PS30	
2517	2817	PS17		253	2831	PS31	
2518	2818	PS18		253	2 2832	PS32	

Table 1.18 Parameter warning (2301 to 2599)/Parameter error (2601 to 2899) error detail (Continued)

(e) MR-J3-DB-RJ006 (For fully closed control)

Table 1.19 Servo error (2000 to 2999) list (MR-J3-□B-RJ006)

Error code	Servo amplifier LED display	Name	Remarks
2010	10	Undervoltage	
2012	12	Memory error 1 (RAM)	
2013	13	Clock error	
2015	15	Memory error 2 (EEP-ROM)	
2016	16	Encoder error 1 (At power on)	
2017	17	Board error	
2019	19	Memory error 3 (Flash ROM)	
2020	20	Encoder error 2 (During runtime)	
2021	21	Encoder error 3 (During runtime)	
2024	24	Main circuit error	
2028	28	Linear encoder error 2	
2030	30	Regenerative error	
2031	31	Overspeed	
2032	32	Overcurrent	
2033	33	Overvoltage	
2034	34	Receive error 1	
2035	35	Command frequency alarm	
2036	36	Receive error 2	
2042	42	Fully closed control error detection	
2045	45	Main circuit device overheat	
2046	46	Servo motor overheat	
2047	47	Cooling fan alarm	
2050	50	Overload 1	
2051	51	Overload 2	
2052	52	Error excessive	
2060	1A	Motor combination error	
2061	2A	Linear encoder error 1	
2070	70	Load side encoder error 1	
2071	71	Load side encoder error 2	
2088	888	Watchdog	
2106	96	Home position setting error	
2140	E0	Excessive regeneration warning	
2141	E1	Overload warning 1	
2146	E6	Servo forced stop warning	
2147	E7	Controller emergency stop warning	
2148	E8	Cooling fan speed reduction warning	
2149	E9	Main circuit off warning	
2152	EC	Overload warning 2	
2153	ED	Output watt excess warning	
2301 to 2599	E4	Parameter warning (Refer to the table 1.20)	
2601 to 2899	37	Parameter error (Refer to the table 1.20)	
2948	8A	USB communication time-out error	
2952	8E	USB communication error	

Table 1.20 Parameter warning (2301 to 2599)						
Error	code	Parameter No.	Name			
2301	2601	PA01	Control mode			
2302	2602	PA02	Regenerative option			
2303	2603	PA03	Absolute position detection system			
2304	2604	PA04	Function selection A-1			
2305	2605	PA05				
2306	2606	PA06	For manufacturer setting			
2307	2607	PA07				
2308	2608	PA08	Auto tuning mode			
2309	2609	PA09	Auto tuning response			
2310	2610	PA10	In-position range			
2311	2611	PA11				
2312	2612	PA12	For manufacturer setting			
2313	2613	PA13				
2314	2614	PA14	Rotation direction selection			
2315	2615	PA15	Encoder output pulse			
2316	2616	PA16	Encoder output pulse 2			
2317	2617	PA17				
2318	2618	PA18	For manufacturer setting			
	2619	PA19	Parameter write inhibit			
2320		PB01	Adaptive tuning mode (adaptive filter II)			
			Vibration suppression control tuning mode			
2321	2621	PB02	(advanced vibration suppression control)			
2322	2622	PB03	For manufacturer setting			
2323	2623	PB04	Feed forward gain			
2324		PB05	For manufacturer setting			
2325		PB06	Ratio of load inertia moment to servo			
2226	2626		motor inertia moment			
		PB07	Model loop gain			
2327	2627	PB08	Position loop gain			
2328	2628	PB09	Speed loop gain			
2329	2629	PB10	Speed integral compensation			
2330	2630	PB11	Speed differential compensation			
2331	2631	PB12	Overshoot amount compensation			
2332		PB13	Machine resonance suppression filter 1			
2333	2633	PB14	Notch shape selection 1			
2334		PB15	Machine resonance suppression filter 2			
2335	2635	PB16	Notch shape selection 2			
2336		PB17	Automatic setting parameter			
2337	2637	PB18	Low-pass filter setting			
2338	2638	PB19	Vibration suppression control vibration frequency setting			
2339	2639	PB20	Vibration suppression control resonance frequency setting			
2340	2640	PB21	For manufacturer setting			
2040	2040		i or manulacturer setting			

Error code		Parameter No.	Name
2341	2641	PB22	For manufacturer setting
2342	2642	PB23	Low-pass filter selection
2343	2643	PB24	Slight vibration suppression control selection
2344	2644	PB25	For manufacturer setting
2345	2645	PB26	Gain changing selection
2346	2646	PB27	Gain changing condition
2347	2647	PB28	Gain changing time constant
2348	2648	PB29	Gain changing ratio of load inertia moment to servo motor inertia moment
2349	2649	PB30	Gain changing position loop gain
2350	2650	PB31	Gain changing speed loop gain
2351	2651	PB32	Gain changing speed integral compensation
0050	0050	DDAA	Gain changing vibration suppression
2352	2652	PB33	control vibration frequency setting
2353	2653	PB34	Gain changing vibration suppression
2303	2000	PD34	control resonance frequency setting
2354	2654	PB35	
2355	2655	PB36	
2356	2656	PB37	
2357	2657	PB38	
2358	2658	PB39	
2359	2659	PB40	For manufacturer setting
2360	2660	PB41	
2361	2661	PB42	
2362	2662	PB43	
2363	2663	PB44	
2364	2664	PB45	Vibration suppression control filter 2
2365	2665	PC01	Error excessive alarm level
2366	2666	PC02	Electromagnetic brake sequence output
2367	2667	PC03	Encoder output pulse selection
2368	2668	PC04	Function selection C-1
2369	2669	PC05	Function selection C-2
2370	2670	PC06	Function selection C-3
2371	2671	PC07	Zero speed
2372	2672	PC08	For manufacturer setting
2373	2673	PC09	Analog monitor 1 output
2374	2674	PC10	Analog monitor 2 output
2375	2675	PC11	Analog monitor 1 offset
2376	2676	PC12	Analog monitor 2 offset
2377	2677	PC13	
2378	2678	PC14	For manufacturer setting
2379	2679	PC15	
2380	2680	PC16	Function selection C-3A

Error	code	Parameter No.	Name	Error	code	Parameter No.	Name	
2381	2681	PC17	Function selection C-4	2422	2722	PD26		
2382	2682	PC18	For manufacturer setting	2423	2723	PD27		
2383	2683	PC19		2424	2724	PD28		
2384	2684	PC20	Function selection C-7	2425	2725	PD29	For manufacturer setting	
2385	2685	PC21	Alarm history clear	2426	2726	PD30		
2386	2686	PC22		2427	2727	PD31		
2387	2687	PC23	For manufacturar actting	2428	2728	PD32		
2388	2688	PC24	For manufacturer setting	2429	2729	PE01	Fully closed loop selection 1	
2389	2689	PC25		2430	2730	PE02	For manufacturer setting	
2390	2690	PC26	Function selection C-8	2431	2731	PE03	Fully closed loop selection 2	
2391	2691	PC27	Function selection C-9	2432	2732	PE04	Fully closed loop feedback pulse electronic 1 gear numerator	
2392	2692	PC28		2433	2733	PE05	Fully closed loop feedback pulse electronic gear 1 denominator	
2393	2693	PC29		2434	2734	PE06	Fully closed loop control speed deviation error detection level	
2394	2694	PC30		2435	2735	PE07	Fully closed loop control position deviation error detection level	
2395	2695	PC31	For monufacturer active	2436	2736	PE08	Fully closed loop dual feedback filter	
2396	2696	PC32	For manufacturer setting	2437	2737	PE09	For manufacturer setting	
2397	2697	PD01		2438	2738	PE10	Fully closed loop selection 3	
2398	2698	PD02		2439	2739	PE11		
2399	2699	PD03		2440	2740	PE12		
2400	2700	PD04		2441	2741	PE13		
2401	2701	PD05		2442	2742	PE14		
2402	2702	PD06		2443	2743	PE15		
2403	2703	PD07	Output signal device selection 1 (CN3-13)	2444	2744	PE16		
2404	2704	PD08	Output signal device selection 2 (CN3-9)	2445	2745	PE17		
2405	2705	PD09	Output signal device selection 3 (CN3-15)	2446	2746	PE18	For manufacturer setting	
2406	2706	PD10	For manufacturer setting	2447	2747	PE19		
2407	2707	PD11	Input filter setting	2448	2748	PE20		
2408		PD12	For manufacturer setting		2749	PE21		
	2709	PD13		2450	2750	PE22		
2410		PD14	Function selection D-3	2451	2751	PE23		
2411		PD15			2752	PE24		
2412		PD16		2453	2753	PE25		
2413		PD17		2454	2754	PE26	Filter coefficient 2-1	
2414		PD18		2455	2755	PE27	Filter coefficient 2-2	
2415		PD19		2456	2756	PE28	Filter coefficient 2-3	
2416	2716	PD20	For manufacturer setting	2457	2757	PE29	Filter coefficient 2-4	
2417	2717	PD21	i or manufacturer octaing	2458	2758	PE30	Filter coefficient 2-5	
2418		PD22		-	2759	PE31	Filter coefficient 2-6	
2419	2719	PD23		2460	2760	PE32	Filter coefficient 2-7	
2420	2720	PD24		2461	2761	PE33	Filter coefficient 2-8	
2421	2721	PD25		2462	2762	PE34	Fully closed loop feedback pulse electronic gear 2 numerator	

Table 1.20 Parameter warning (2301 to 2599)/Parameter error (2601 to 2899) error detail (Continued)

Error	code	Parameter No.	Name	Error	code	Parameter No.	Name
2463	2763	PE35	Fully closed loop feedback pulse electronic gear 2 denominator	2466	2766		
2464	2764	PE36		2467	2767	PE39	For manufacturer setting
2465	2765	PE37	For manufacturer setting	2468	2768	PE40	

Table 1.20 Parameter warning (2301 to 2599)/Parameter error (2601 to 2899) error detail (Continued)

(f) MR-J3-□B-RJ080W (For direct drive motor)

Table 1.21 Servo error (2000 to 2999) list (MR-J3-□B-RJ080W)

Error code	Servo amplifier LED display	Name	Remarks
2010	10	Undervoltage	
2012	12	Memory error 1 (RAM)	
2013	13	Clock error	
2015	15	Memory error 2 (EEP-ROM)	
2016	16	Encoder error 1	
2017	17	Board error	
2019	19	Memory error 3 (Flash ROM)	
2020	20	Encoder error 2	
2021	21	Encoder error 3	
2024	24	Main circuit error	
2025	25	Absolute position erase	
2027	27	Initial magnetic pole detection error	
2030	30	Regenerative error	
2031	31	Overspeed	
2032	32	Overcurrent	
2033	33	Overvoltage	
2034	34	Receive error 1	
2035	35	Command frequency alarm	
2036	36	Receive error 2	
2030	42	Servo control error	
2042	45	Main circuit device overheat	
2045	46	Direct drive motor overheat	
2040	40	Cooling fan alarm	
2047	50	Overload 1	
2050	51	Overload 2	
2052	52	Error excessive	
2060	1A	Motor combination error	
2064	1F	Encoder combination error	
2088	888	Watchdog	
2102	92	Battery cable disconnection warning	
2106	96	Home position setting error	
2116	9F	Battery warning	
2140	EO	Excessive regeneration warning	
2141	E1	Overload warning 1	
2142	E2	Direct drive motor overheat warning	
2143	E3	Absolute position counter warning	
2146	E6	Servo forced stop warning	
2147	E7	Controller emergency stop warning	
2148	E8	Cooling fan speed reduction warning	
2149	E9	Main circuit off warning	
2152	EC	Overload warning 2	
2153	ED	Output watt excess warning	
2301 to 2599	E4	Parameter warning (Refer to the table 1.22)	
2601 to 2899	37	Parameter error (Refer to the table 1.22)	
2913	2B	Encoder counter error	
2948	8A	USB communication time-out error	
2952	8E	USB communication error	

Error	code	Parameter No.	Name					
2301	2601	PA01	For manufacturer setting					
2302	2602	PA02	Regenerative option					
2303	2603	PA03	Absolute position detection system					
2304	2604	PA04	Function selection A-1					
2305	2605	PA05						
2306	2606	PA06	For manufacturer setting					
2307	2607	PA07						
2308	2608	PA08	Auto tuning mode					
2309	2609	PA09	Auto tuning response					
2310	2610	PA10	In-position range					
2311	2611	PA11						
2312	2612	PA12	For manufacturer setting					
2313	2613	PA13						
2314	2614	PA14	Rotation direction selection					
2315	2615	PA15	Encoder output pulse					
2316	2616	PA16						
2317	2617	PA17	For manufacturer setting					
2318	2618	PA18						
2319	2619	PA19	Parameter write inhibit					
2320	2620	PB01	Adaptive tuning mode (adaptive filter II)					
2321	2621	PB02	Vibration suppression control tuning mode (advanced vibration suppression control)					
2322	2622	PB03	For manufacturer setting					
2323	2623	PB04	Feed forward gain					
2324	2624	PB05	For manufacturer setting					
2325	2625	PB06	Ratio of load inertia moment to direct drive motor inertia moment					
2326	2626	PB07	Model loop gain					
2327	2627	PB08	Position loop gain					
2328	2628	PB09	Speed loop gain					
2329	2629	PB10	Speed integral compensation					
2330	2630	PB11	Speed differential compensation					
2331	2631	PB12	For manufacturer setting					
2332	2632	PB13	Machine resonance suppression filter 1					
2333	2633	PB14	Notch shape selection 1					
2334	2634	PB15	Machine resonance suppression filter 2					
2335		PB16	Notch shape selection 2					
2336	2636	PB17	Automatic setting parameter					
2337	2637	PB18	Low-pass filter setting					
2338	2638	PB19	Vibration suppression control vibration frequency setting					
2339	2639	PB20	Vibration suppression control resonance frequency setting					

Table 1.22 Parameter warning (2301	to 2599)/Parameter error (2601 to 2899) error detail
Table 1.22 Talameter warning (2001	

Error	code	Parameter No.	Name				
2340	2640	PB21					
2341	2641	PB22	For manufacturer setting				
2342	2642	PB23	Low-pass filter selection				
			Slight vibration suppression control				
2343	2643	PB24	selection				
2344	2644	PB25	For manufacturer setting				
2345	2645	PB26	Gain changing selection				
2346	2646	PB27	Gain changing condition				
2347	2647	PB28	Gain changing time constant				
2348	2648	PB29	Gain changing ratio of load inertia moment				
2349	2649	PB30	to direct drive motor inertia moment Gain changing position loop gain				
2350	2650	PB31	Gain changing speed loop gain				
2000	2000	1 001	Gain changing speed loop gain				
2351	2651	PB32	compensation				
2352	2652	PB33	Gain changing vibration suppression				
2002	2002	FDDD	control vibration frequency setting				
2353	2653	PB34	Gain changing vibration suppression				
			control resonance frequency setting				
2354	2654	PB35					
2355	2655	PB36					
2356							
2357							
2358	2658	PB39					
2359	2659	PB40	For manufacturer setting				
2360	2660	PB41					
2361	2661	PB42					
2362	2662	PB43					
2363	2663	PB44					
2364	2664	PB45	Vibration suppression control filter 2				
2365	2665	PC01	Error excessive alarm level				
2366	2666	PC02	Electromagnetic brake sequence output				
2367	2667	PC03	Encoder output pulse selection				
2368	2668	PC04	Function selection C-1				
2369	2669	PC05	For manufacturer setting				
2370	2670	PC06	Function selection C-3				
2371	2671	PC07	Zero speed				
2372	2672	PC08	For manufacturer setting				
2373	2673	PC09	Analog monitor 1 output				
2374	2674	PC10	Analog monitor 2 output				
2375	2675	PC11	Analog monitor 1 offset				
2376	2676	PC12	Analog monitor 2 offset				
2277	2677	PC13	Analog monitor feedback position output				
2377	2677	PG13	standard data Low				
2378	2678	PC14	Analog monitor feedback position output				
20/0	2010		standard data High				

Error	code	Parameter No.	Name	Error	code	Parameter No.	Name
2379	2679	PC15		2426	2726	PD30	
2380	2680	PC16		2427	2727	PD31	
2381	2681	PC17	For manufacturer setting	2428	2728	PD32	
2382	2682	PC18		2429	2729	PE01	
2383	2683	PC19		2430	2730	PE02	
2384	2684	PC20	Function selection C-7	2431	2731	PE03	
2385	2685	PC21	Alarm history clear	2432	2732	PE04	
2386	2686	PC22		2433	2733	PE05	
2387	2687	PC23		2434	2734	PE06	
2388	2688	PC24		2435	2735	PE07	
2389	2689	PC25		2436	2736	PE08	
2390	2690	PC26		2437	2737	PE09	
2391	2691	PC27		2438	2738	PE10	
2392	2692	PC28		2439	2739	PE11	For more than a string
2393	2693	PC29		2440	2740	PE12	For manufacturer setting
2394	2694	PC30	For manufacturer setting	2441	2741	PE13	
2395	2695	PC31		2442	2742	PE14	
2396	2696	PC32		2443	2743	PE15	
2397	2697	PD01		2444	2744	PE16	
2398	2698	PD02		2445	2745	PE17	
2399	2699	PD03		2446	2746	PE18	
2400	2700	PD04		2447	2747	PE19	
2401	2701	PD05			2748	PE20	
2402	2702	PD06		2449	2749	PE21	
2403	2703	PD07	Output signal device selection 1 (CN3-13)	2450	2750	PE22	
2404	2704	PD08	Output signal device selection 2 (CN3-9)	2451	2751	PE23	
2405	2705	PD09	Output signal device selection 3 (CN3-15)	2452	2752	PE24	
2406	2706	PD10	For manufacturer setting	2453	2753	PE25	
2407	2707	PD11	Input filter setting	2454	2754	PE26	Filter coefficient 2-1
2408	2708	PD12		2455	2755	PE27	Filter coefficient 2-2
2409	2709	PD13	For manufacturer setting	2456	2756	PE28	Filter coefficient 2-3
2410	2710	PD14	Function selection D-3	2457	2757	PE29	Filter coefficient 2-4
2411	2711	PD15		2458	2758	PE30	Filter coefficient 2-5
2412		PD16			2759	PE31	Filter coefficient 2-6
2413	2713	PD17		2460	2760	PE32	Filter coefficient 2-7
2414		PD18		2461	2761	PE33	Filter coefficient 2-8
2415	2715	PD19		2462	2762	PE34	
2416		PD20		2463	2763	PE35	
2417		PD21		2464	2764	PE36	
2418		PD22	For manufacturer setting	2465	2765	PE37	For manufacturer setting
2419		PD23			2766	PE38	
2420		PD24		2467	2767	PE39	
2421		PD25			2768	PE40	
2422		PD26			2801	PS01	Special function selection 1
2423		PD27			2802	PS02	•
2424		PD28			2803	PS03	For manufacturer setting
2425		PD29			2804	PS04	Special function selection 2

Table 1.22 Parameter warning (2301 to 2599)/Parameter error (2601 to 2899) error detail (Continued)

Error	ror code Parameter Name Error co		code	Parameter No.	Name		
2505	2805	PS05	Servo control position deviation error detection level		2819	PS19	
2506	2806	PS06	Servo control speed deviation error detection level	2520	2820	PS20	
2507	2807	PS07	Servo control torque deviation error detection level	2521	2821	PS21	
2508	2808	PS08	Special function selection 3	2522	2822	PS22	
2509	2809	PS09	Magnetic pole detection voltage level	2523	2823	PS23	
2510	2810	PS10		2524	2824	PS24	
2511	2811	PS11		2525	2825	PS25	For manufacturer setting
2512	2812	PS12		2526	2826	PS26	
2513	2813	PS13	For manufacturer setting	2527	2827	PS27	
2514	2814	PS14		2528	2828	PS28	
2515	2815	PS15		2529	2829	PS29	
2516	2816	PS16		2530	2830	PS30	
2517	2817	PS17	Minimal position detection method function selection	2531	2831	PS31	
2518	2818	PS18	Minimal position detection method identification signal amplitude	2532	2832	PS32	

Table 1.22 Parameter warning (2301 to 2599)/Parameter error (2601 to 2899) error detail (Continued)

(g) MR-J3B Safety (For safety servo)

Table 1.23 Servo error (2000 to 2999) list (MR-J3-DB Safety)

Error code	Servo amplifier LED display	Name	Remarks
2010	10	Undervoltage	
2012	12	Memory error 1 (RAM)	
2013	13	Clock error	
2015	15	Memory error 2 (EEP-ROM)	
2016	16	Encoder error 1 (At power on)	
2017	17	Board error	
2019	19	Memory error 3 (Flash ROM)	
2020	20	Encoder error 2 (during runtime)	
2021	21	Encoder error 3 (during runtime)	
2024	24	Main circuit error	
2025	25	Absolute position erase	
2028	28	Linear encoder error 2	
2030	30	Regenerative error	
2031	31	Overspeed	
2032	32	Overcurrent	
2033	33	Overvoltage	
2034	34	Receive error 1	
2035	35	Command frequency error	
2036	36	Receive error 2	
2042	42	Fully closed control error detection	
2045	45	Main circuit device overheat	
2046	46	Servo motor overheat	
2047	47	Cooling fan error	
2050	50	Overload 1	
2051	51	Overload 2	
2052	52	Error excessive	
2056	56	Forced stop error	
2070	70	Load side encoder error 1	
2071	71	Load side encoder error 2	
2060	1A	Motor combination error	
2061	2A	Linear encoder error 1	
2063	63	STO timing error	
2088	888	Watchdog	
2095	95	STO warning	
2102	92	Battery cable disconnection warning	
2106	96	Home position setting warning	
2116	9F	Battery warning	
2140	E0	Excessive regeneration warning	
2141	E1	Overload warning 1	
2143	E3	Absolute position counter warning	
2146	E6	Servo forced stop warning	
2147	E7	Controller forced stop warning	
2148	E8	Cooling fan speed reduction warning	
2149	E9	Main circuit off warning	
2152	EC	Overload warning 2	
2153	ED	Output watt excess warning	
2301 to 2599	E4	Parameter warning (Refer to the table 1.24)	

Error code	Servo amplifier LED display	Name	Remarks
2601 to 2899	37	Parameter error (Refer to the table 1.24)	
2948	8A	USB communication time-out error	
2952	8E	USB communication error	

Table 1.23 Servo error (2000 to 2999) list (MR-J3-DB Safety) (Continued)

			24 Parameter warning (2301 to 258					
Error code		Parameter No.	Name					
2301	2601	PA01	Control mode					
2302	2602	PA02	Regenerative option					
2303	2603	PA03	Absolute position detection system					
2304	2604	PA04	Function selection A-1					
2305	2605	PA05						
2306	2606	PA06	For manufacturer setting					
2307	2607	PA07	or manalastaror solarly					
2308	2608	PA08	Auto tuning mode					
2309	2609	PA09	Auto tuning response					
2310	2610	PA10	In-position range					
2311	2611	PA11						
2312	2612	PA12	For manufacturer setting					
2313	2613	PA13						
2314	2614	PA14	Rotation direction selection					
2315	2615	PA15	Encoder output pulse					
2316	2616	PA16	Encoder output pulse 2					
2317	2617	PA17						
2318	2618	PA18	For manufacturer setting					
2319	2619	PA19	Parameter write inhibit					
2320	2620	PB01	Adaptive tuning mode (adaptive filter II)					
2321	2621	PB02	Vibration suppression control tuning mode (advanced vibration suppression control)					
2322	2622	PB03	For manufacturer setting					
2323	2623	PB04	Feed forward gain					
2324	2624	PB05	For manufacturer setting					
2325	2625	PB06	Ratio of load inertia moment to servo motor inertia moment					
2326	2626	PB07	Model loop gain					
2327	2627	PB08	Position loop gain					
2328	2628	PB09	Speed loop gain					
2329	2629	PB10	Speed integral compensation					
2330	2630	PB11	Speed differential compensation					
2331	2631	PB12	Overshoot amount compensation					
2332	2632	PB13	Machine resonance suppression filter 1					
2333		PB14	Notch shape selection 1					
2334		PB15	Machine resonance suppression filter 2					
2335	2635	PB16	Notch shape selection 2					
2336	2636	PB17	Automatic setting parameter					
2337	2637	PB18	Low-pass filter setting					
2338	2638	PB19	Vibration suppression control vibration frequency setting					
2339	2639	PB20	Vibration suppression control resonance frequency setting					

0 (,
Name	Erro	or code	Parameter No.	Name
ode	234	2640	PB21	F
ive option	234	1 2641	PB22	For manufacturer setting
osition detection system	234	2 2642	PB23	Low-pass filter selection
election A-1	234	3 2643	PB24	Slight vibration suppression control selection
	234	4 2644	PB25	For manufacturer setting
acturer setting	234	5 2645	PB26	Gain changing selection
	234	3 2646	PB27	Gain changing condition
g mode	234	7 2647	PB28	Gain changing time constant

Table 1.24 Parameter warning (2301 to 2599)/Parameter error (2601 to 2899) error detail

			selection						
2344	2644	PB25	For manufacturer setting						
2345	2645	PB26	Gain changing selection						
2346	2646	PB27	Gain changing condition						
2347	2647	PB28	Gain changing time constant						
2240	2649	0000	Gain changing ratio of load inertia moment						
2348	3 2648 PB29		to servo motor inertia moment						
2349	2649	PB30	Gain changing position loop gain						
2350	2650	PB31	Gain changing speed loop gain						
2351	2651	PB32	Gain changing speed integral						
2001	2001	1 052	compensation						
2352	2652	PB33	Gain changing vibration suppression						
2002	2002	1 800	control vibration frequency setting						
2353	2653	PB34	Gain changing vibration suppression						
		. 501	control resonance frequency setting						
2354		PB35	-						
2355	2655	PB36	-						
2356	2656	PB37	-						
2357	2657	PB38	-						
2358	2658	PB39							
2359	2659	PB40	For manufacturer setting						
2360	2660	PB41							
2361	2661	PB42							
2362	2662	PB43							
2363	2663	PB44							
2364	2664	PB45	Vibration suppression control filter 2						
2365	2665	PC01	Error excessive alarm level						
2366	2666	PC02	Electromagnetic brake sequence output						
2367	2667	PC03	Encoder output pulse selection						
2368	2668	PC04	Function selection C-1						
2369	2669	PC05	Function selection C-2						
2370	2670	PC06	Function selection C-3						
2371	2671	PC07	Zero speed						
2372	2672	PC08	For manufacturer setting						
2373	2673	PC09	Analog monitor 1 output						
2374	2674	PC10	Analog monitor 2 output						
2375	2675	PC11	Analog monitor 1 offset						
2376	2676	PC12	Analog monitor 2 offset						
		DC 10	Analog monitor feedback position output						
2377	2677	PC13	standard data Low						
0070	0070	DOLL	Analog monitor feedback position output						
2378	2678	PC14	standard data High						
			and the second						

Error	code	Parameter No.	Name	Error	code
2379	2679	PC15	For manufacturer setting	2421	272
2380	2680	PC16	Function selection C-3A	2422	272
2381	2681	PC17	Function selection C-4	2423	272
2382	2682	PC18		2424	272
2383	2683	PC19	For manufacturer setting	2425	272
2384	2684	PC20	Function selection C-7	2426	272
2385	2685	PC21	Alarm history clear	2427	272
2386	2686	PC22		2428	272
2387	2687	PC23	For manufacturer setting	2429	272
2388	2688	PC24	Forced stop deceleration time constant	2430	273
2389	2689	PC25	For manufacturer setting	2431	273
2390	2690	PC26	Function selection C-8	2432	273
2391	2691	PC27	Function selection C-9	2433	273
2392	2692	PC28		2434	273
2393	2693	PC29	For manufacturer setting	2435	273
2394	2694	PC30		2436	273
2395	2695	PC31	Vertical axis freefall prevention compensation amount	2437	273
2396	2696	PC32		2438	273
2397		PD01		2439	
	2698	PD02		2440	
	2699	PD03	For manufacturer setting	2441	
	2700	PD04		2442	
2401		PD05		2443	
	2702	PD06		2444	
	2702	PD07	Output signal device selection 1 (CN3-13)	2445	
	2704	PD08	Output signal device selection 2 (CN3-9)	2446	
	2705	PD09	Output signal device selection 3 (CN3-15)	2447	
	2706	PD10	For manufacturer setting	2448	
	2707	PD10	Input filter setting	2449	
2408		PD12		2450	
2409		PD13	For manufacturer setting	2451	
2410	2710	PD14	Function selection D-3	2452	
	2711	PD15		2453	
	2712	PD16		2454	
2413		PD17		2455	
2414		PD18		2456	
	2715	PD19		2457	
			For manufacturor sotting		
2416		PD20	For manufacturer setting	2458	
2417	2717	PD21		2459	275
2418		PD22		2460	
2419 2420		PD23 PD24		2461 2462	

2421 2422		No.	Name	
	2721	PD25		
14//				
	2723	PD26 PD27		
	2724	PD28	For manufacturer setting	
	2725	PD29		
	2726	PD30		
	2727	PD31		
	2728	PD32 PE01	Fully alread loss calestics 4	
	2729		Fully closed loop selection 1	
	2730	PE02	For manufacturer setting	
2431	2731	PE03	Fully closed loop selection 2	
2432	2732	PE04	Fully closed loop feedback pulse electronic gear 1 numerator	
2433	2733	PE05	Fully closed loop feedback pulse	
2-100	2,00	1 200	electronic gear 1 denominator	
2434	2734	PE06	Fully closed loop speed deviation error	
		. 200	detection level	
2435	2735	PE07	Fully closed loop position deviation error	
			detection level	
2436	2736	PE08	Fully closed loop dual feedback filter	
2437	2737	PE09	For manufacturer setting	
2438	2738	PE10	Fully closed loop selection 3	
2439	2739	PE11		
2440	2740	PE12		
2441	2741	PE13		
2442	2742	PE14		
2443	2743	PE15		
2444	2744	PE16		
2445	2745	PE17		
2446	2746	PE18	For manufacturer setting	
2447	2747	PE19		
2448	2748	PE20		
2449	2749	PE21		
2450	2750	PE22		
2451	2751	PE23		
2452	2752	PE24		
2453	2753	PE25		
2454	2754	PE26	Filter coefficient 2-1	
2455	2755	PE27	Filter coefficient 2-2	
2456	2756	PE28	Filter coefficient 2-3	
2457	2757	PE29	Filter coefficient 2-4	
2458	2758	PE30	Filter coefficient 2-5	
2459	2759	PE31	Filter coefficient 2-6	
2460	2760	PE32	Filter coefficient 2-7	
2461	2761	PE33	Filter coefficient 2-8	
2462	2762	PE34	Fully closed loop feedback pulse electronic gear 2 numerator	

Error	code	Parameter No.	Name		Error code		Parameter No.	Name
2463	2763	PE35	Fully closed loop feedback pulse electronic gear 2 denominator		2466	2766		
2464	2464 2764 PE36				2467	2767	PE39	For manufacturer setting
2465	2765	PE37 For manufacturer setting			2468	2768	PE40	

Table 1.24 Parameter warning (2301 to 2599)/Parameter error (2601 to 2899) error detail (Continued)

APPENDIX 2 Example Programs

APPENDIX 2.1 Reading M-code


The program example for reading M-code at the completion of positioning start or positioning is shown below.

The judgement of the positioning start completion and positioning completion is made with the following signals.

- Positioning start completionM2400+20n (positioning start complete signal)
- Positioning completionM2401+20n (positioning complete signal)

[Program Example]

(1) A program that outputs the M-code from PY000 to PY00F to external destination after conversion into BCD code at the positioning start completion is shown below.

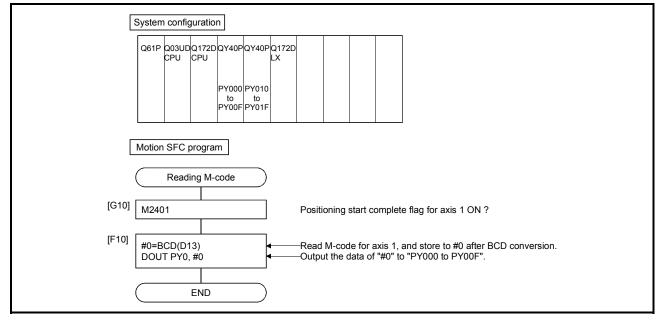

APPENDIX 2.2 Reading error code

The program example for reading error code at the error occurrence is shown below. The following signals are used to determine whether or not an error has occurred:

- Minor errors, major errorsError detection signal (M2407+20n)
- Servo errorsServo error detection signal (M2408+20n)


POINT

- (1) The following delay occurs for leading edge of M2407+20n/M2408+20n and storage of the error code.
 - (a) If the sequence program scan time is 80[ms] or less, there will be a delay of up to 80[ms].
 - (b) If the sequence program scan time is 80[ms] or more, there will be a delay of up to one scan time.

The error code is stored to each error code storage area after turning on M2407+20n/M2408+20n, and then read the error code.

[Program Example]

 A program that outputs each error code to PY000 to PY00F (minor error), PY010 to PY01F (major error) and PY020 to PY02F (servo error) after conversion into BCD code at the error occurrence with axis 1 is shown below.

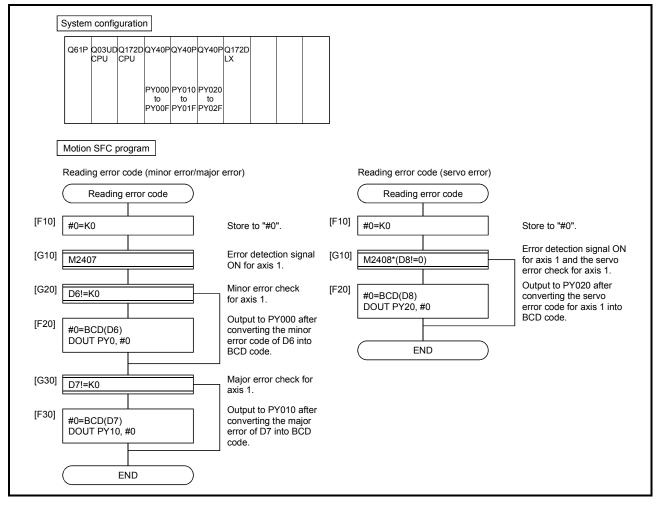

APPENDIX 3 Setting Range for Indirect Setting Devices

Positioning address, command speed or M-code, etc. (excluding the axis No.) set in the servo program can be set indirectly by the word.

(1) Device range

The number of device words and device range at indirect setting are shown below.

\square		Item	Number of		Device setting range	Remarks
\vdash	Deveneteriale		device words			
	Parameter block No. Address (travel value)		1 2			
Б			2	Device	Banaa	
Common	Command spe	eu			Range 0 to 8191 ^(Note-1)	
ပိ	Dwell time		1	D		
	M-code	lu.	1		0000 to 1FFF	
	Torque limit va	lue	2		0 to 7999 10000 to (10000+p-1) ^(Note-2)	
	Auxiliary point			U□\G	10000 t8 (10000+p-1)	
Arc	Radius		2			
	Central point		2			
	Pitch Control unit		1			
	Control unit		2			
	Speed limit val		1			
	Acceleration til		1			
	Deceleration ti		1			
쏭	Rapid stop deo S-curve ratio		1			
Parameter block		Acceleration/deceleration	1			
ame	Advanced S-curve	Acceleration section 1 ratio	1			
Jare	acceleration/	Acceleration section 2 ratio	1			
_	deceleration	Deceleration section 1 ratio	1			
		Deceleration section 2 ratio	1			
	Torque limit va	lue	1			
	Deceleration p	rocessing on STOP input	1			
	Allowable error	range for circular interpolation	2			
	Command spe	ed (Constant speed)	2			
	FIN acceleration	on/deceleration	1			
	Fixed position s time	stop acceleration/deceleration	1			
	Repetition con	dition (Number of repetitions)	1			<u> </u>
	Repetition con	Repetition condition (ON/OFF)				
ers	Cancel			Device	Range	
Others	Skip			Х	0000 to 1FFF (Note-3)	
Ĩ	WAIT ON/OFF			Y	0000 to 1FFF	
1	Fixed position	stop	Bit	М	0 to 8191 ^(Note-1)	
				В	0000 to 1FFF	
				F	0 to 2047	
1				U□\G	10000.0 to (10000+p-1).F ^(Note-2)	

(Note-1): Synchronous encoder axis area cannot be set.

(Note-2): "p" indicates the user setting area points of the Multiple CPU high speed transmission area for each CPU. (Note-3): The range of "PXn+4 to PXn+F" cannot be used (fixed at 0) for the input device (PXn+0 to PXn+F)

allocated to the built-in interface in Motion CPU (DI). (n: First input No.)

POINT

(1) Be sure to set even-numbered devices of the items set as 2-word.
 Be sure to set as 32-bit integer type when the data is set in these devices using the Motion SFC programs. (Example : #0L, D0L)

(2) Refer to Chapter 2 of the "Q173D(S)CPU/Q172D(S)CPU Motion controller Programming Manual (COMMON)" for the user setting area points of the Multiple CPU high speed transmission area.

(2) Inputting device data

Indirect setting device data is inputted by the Motion CPU at the servo program start.

Do not change the applicable device before setting to device and start completion.

The procedures by start method for setting data to devices and cautions are shown below.

Start method	Setting method	Notes
Start by the servo program	Set data in indirect setting devices. ↓ Start the servo program.	Do not change the indirect setting device before the "positioning start complete signal" of the starting axis turns on.
Set the loop (FOR - NEXT) point data for CPSTART instruction indirectly	Set initial command data in the indirect setting device. J Start using the servo program (or turn the cancel command device on). Q Read the value of "data set pointer for constant-speed control" of the start axis, and update the data input by Motion CPU.	Refer to the positioning signal data register "Monitoring data area" for details.

APPENDIX 4 Processing Times of the Motion CPU

The processing time of each signal and each instruction for positioning control in the Multiple CPU system is shown below.

(1) Motion operation cycle [ms] (Default)

(a) Q173DSCPU/Q172DSCPU

		Q173E	SCPU		C	172DSCP	U
Number of setting axes (SV22)		1 to 6	7 to 16	17 to 32		1 to 6	7 to 16
Number of setting axes (SV13)	1 to 4	5 to 10	11 to 24	25 to 32	1 to 4	5 to 10	11 to 16
Operation cycle [ms]	0.22	0.44	0.88	1.77	0.22	0.44	0.88

(b) Q173DCPU(-S1)/Q172DCPU(-S1)

		Q173DC	Q172D0	CPU(-S1)		
Number of setting axes (SV22)	1 to 4	5 to 12	13 to 28	29 to 32	1 to 4	5 to 8
Number of setting axes (SV13)	1 to 6	7 to 18	19 to 32		1 to 6	7 to 8
Operation cycle [ms]	0.44	0.88	1.77	3.55	0.44	0.88

(2) CPU processing time [ms]

The instruction processing time means the time until the content is reflected to servo amplifier side after each instruction is executed.

(Including the transmission time between Motion controller and servo amplifier.)(a) Q173DSCPU/Q172DSCPU

		Q173DSCPU/Q172DSCPU							
Ор	eration cycle [ms]	0.22	0.44	0.88	1.77	3.55	7.11		
Servo program	"WAIT ON/OFF" + Motion control step	0.44	0.88	1.77	2.66	4.44	7.99		
start processing	Only Motion control step	0.6 to 0.9	1.0 to 1.4	1.9 to 2.8	2.8 to 4.6	4.6 to 8.2	8.1 to 15.2		
time (Note-1)	Dedicated instruction (D(P).SVST) from the PLC CPU	1.4 to 2.3	2.2 to 3.1	3.5 to 4.4	5.3 to 6.2	8.8 to 9.7	16.0 to 16.9		
Speed change	Instruction (CHGV) from the Motion SFC	0.4 to 0.9	0.8 to 1.3	1.7 to 2.6	2.6 to 4.4	4.4 to 8.0	8.0 to 15.1		
response time	Dedicated instruction (D(P).CHGV) from the PLC CPU	1.4 to 2.3	1.7 to 2.6	2.6 to 3.5	3.5 to 4.4	5.3 to 6.2	8.9 to 9.8		
Command	Instruction (CHGVS) from the Motion SFC	0.4 to 0.9	0.8 to 1.3	1.7 to 2.6	2.6 to 4.4	4.4 to 8.0	8.0 to 15.1		
generation axis speed change response time	Dedicated instruction (D(P).CHGVS) from the PLC CPU	1.4 to 2.3	1.7 to 2.6	2.6 to 3.5	3.5 to 4.4	5.3 to 6.2	8.9 to 9.8		
Torque limit value	Instruction (CHGT) from the Motion SFC	0.4 to 0.9	0.8 to 1.3	1.7 to 2.6	2.6 to 4.4	4.4 to 8.0	4.4 to 11.5		
change response time	Dedicated instruction (D(P).CHGT) from the PLC CPU	1.4 to 2.3	1.7 to 2.6	2.6 to 3.5	3.5 to 4.4	5.3 to 6.2	5.3 to 9.7		
Torque limit value	Instruction (CHGT2) from the Motion SFC	0.4 to 0.9	0.8 to 1.3	1.7 to 2.6	2.6 to 4.4	4.4 to 8.0	4.4 to 11.5		
individual change response time	Dedicated instruction (D(P).CHGT2) from the PLC CPU	1.4 to 2.3	1.7 to 2.6	2.6 to 3.5	3.5 to 4.4	5.3 to 6.2	5.3 to 9.7		
Target position change response time	Instruction (CHGP) from the Motion SFC	0.4 to 0.9	0.8 to 1.3	1.7 to 2.6	2.6 to 4.4	4.4 to 8.0	8.0 to 15.1		
Time from PLC read PCPU READY com	44 to 60								

(Note-1): FEED instruction varies greatly depending on the condition (whether other axes are operating).

		Q173DCPU(-S1)/Q172DCPU(-S1)							
Ор	eration cycle [ms]	0.44	0.88	1.77	3.55	7.11	14.2		
Servo program	"WAIT ON/OFF" + Motion control step	0.88	1.77	2.66	4.44	7.99	15.11		
start processing	Only Motion control step	1.0 to 1.4	1.9 to 2.8	2.8 to 4.6	4.6 to 8.2	8.1 to 15.2	15.2 to 29.4		
time ^(Note-1)	Dedicated instruction (D(P).SVST) from the PLC CPU	2.2 to 3.1	3.5 to 4.4	5.3 to 6.2	8.8 to 9.7	16.0 to 16.9	30.2 to 31.1		
Speed change	Instruction (CHGV) from the Motion SFC	0.8 to 1.3	1.7 to 2.6	2.6 to 4.4	4.4 to 8.0	8.0 to 15.1	15.1 to 29.3		
response time	Dedicated instruction (D(P).CHGV) from the PLC CPU	1.7 to 2.6	2.6 to 3.5	3.5 to 4.4	5.3 to 6.2	8.9 to 9.8	16.0 to 16.9		
Torque limit value	Instruction (CHGT) from the Motion SFC	0.8 to 1.3	1.7 to 2.6	2.6 to 4.4	4.4 to 8.0	4.4 to 11.5	4.4 to 18.6		
change response time	Dedicated instruction (D(P).CHGT) from the PLC CPU	1.7 to 2.6	2.6 to 3.5	3.5 to 4.4	5.3 to 6.2	5.3 to 9.7	5.3 to 16.0		
Time from PLC read PCPU READY com	22 to 28								

(b) Q173DCPU(-S1)/Q172DCPU(-S1)

(Note-1): FEED instruction varies greatly depending on the condition (whether other axes are operating).

APPENDIX 5 Device List

Axis No.	Device No.				Signal name			
1	M2400 to M2419							
2	M2420 to M2439	$\overline{\ }$						
3	M2440 to M2459			Signal name	Refresh cycle	Fetch cycle	Signal direction	
4	M2460 to M2479	0	Positionin	g start complete				
5	M2480 to M2499	1	Positionin	ig complete		/		
6	M2500 to M2519	2	In-positio	n				
7	M2520 to M2539	3	Comman	d in-position	Operation cycle			
8	M2540 to M2559	4	Speed co	ntrolling				
9	M2560 to M2579	5	Speed/pc	sition switching latch				
10	M2580 to M2599	6	Zero pass	3				
11	M2600 to M2619	7	Error dete	ection	Immediate			
12	M2620 to M2639	8	Servo err	or detection	Operation cycle		Status signal	
13	M2640 to M2659	9	Home po	sition return request	Main cycle			
14	M2660 to M2679	10	Home po	sition return complete	Operation cycle			
15	M2680 to M2699	11		FLS				
16	M2700 to M2719	12	External	RLS	Main cycle			
17	M2720 to M2739	13	signals	STOP				
18	M2740 to M2759	14		DOG/CHANGE				
19	M2760 to M2779	15	Servo rea	ıdy	Operation cycle	/		
20	M2780 to M2799	16	Torque lir	niting	Operation cycle	/		
21	M2800 to M2819	17	Unusable		—			
22	M2820 to M2839		Virtual mo	ode continuation	At virtual mode			
23	M2840 to M2859	18	operation	disable warning	transition		Status signal	
24	M2860 to M2879		(SV22) ^{(N}	ole-1)	uansidon		Status signai	
25	M2880 to M2899	19	M-code o	utputting	Operation cycle	\checkmark		
26	M2900 to M2919							
27	M2920 to M2939							
28	M2940 to M2959							
29	M2960 to M2979							
30	M2980 to M2999							
31	M3000 to M3019							
32	M3020 to M3039							

(1) Axis status list

(Note-1): It is unusable in the SV13/SV22 real mode and SV22 advanced synchronous control.

POINT	
(1) The followin	ig range is valid.
• Q172DSC	PU : Axis No.1 to 16
• Q172DCP	U(-S1): Axis No.1 to 8
(2) The followin	ig device area can be used as a user device.
• Q172DSC	PU : 17 axes or more
• Q172DCP	U(-S1): 9 axes or more
However, w	hen the project of Q172DSCPU/Q172DCPU(-S1) is replaced with
Q173DSCP	U/Q173DCPU(-S1), this area cannot be used as a user device.

Axis No.	Device No.		Signal name							
1	M3200 to M3219									
2	M3220 to M3239					Signal				
3	M3240 to M3259		Signal name	Refresh cycle	Fetch cycle	direction				
4	M3260 to M3279	0	Stop command							
5	M3280 to M3299	1	Rapid stop command		Operation cycle					
6	M3300 to M3319	2	Forward rotation JOG start command							
7	M3320 to M3339	3	Reverse rotation JOG start command		Main cycle	Command				
8	M3340 to M3359	4	Complete signal OFF command			signal				
9	M3360 to M3379	_	Speed/position switching enable		One retien evelo					
10	M3380 to M3399	5	command	\checkmark	Operation cycle					
11	M3400 to M3419	6	Unusable	_		_				
12	M3420 to M3439	7	Error reset command							
13	M3440 to M3459	8	Servo error reset command		Main cycle	Command				
14	M3460 to M3479		External stop input disable at start		At start	signal				
15	M3480 to M3499	9	command		At start					
16	M3500 to M3519	10	Unusable							
17	M3520 to M3539	11	Ulusable	_		_				
18	M3540 to M3559	12	Feed current value update command		At start					
19	M3560 to M3579	13	Address clutch reference setting							
20	M3580 to M3599	15	command (SV22 only) (Note-1)		At virtual mode					
21	M3600 to M3619	14	Cam reference position setting		transition					
22	M3620 to M3639	14	command (SV22 only) (Note-1)			Command				
23	M3640 to M3659	15	Servo OFF command		Operation cycle	signal				
24	M3660 to M3679	16	Gain changing command		Operation cycle (Note-2)					
25	M3680 to M3699	17	PI-PID switching command							
26	M3700 to M3719	18	Control loop changing command		Operation cycle					
27	M3720 to M3739	19	FIN signal	/	Operation cycle					
28	M3740 to M3759									
29	M3760 to M3779									
30	M3780 to M3799									
31	M3800 to M3819									
32	M3820 to M3839									

(2) Axis command signal list

(Note-1): It is unusable in the SV13/SV22 real mode and SV22 advanced synchronous control. (Note-2): Operation cycle 7.1[ms] or more: Every 3.5[ms]

POINT
(1) The following range is valid.
Q172DSCPU : Axis No.1 to 16
• Q172DCPU(-S1): Axis No.1 to 8
(2) The following device area can be used as a user device.
Q172DSCPU : 17 axes or more
• Q172DCPU(-S1): 9 axes or more
However, when the project of Q172DSCPU/Q172DCPU(-S1) is replaced with
Q173DSCPU/Q173DCPU(-S1), this area cannot be used as a user device.
·

		(0) 0										
Device No.	Signal name	Refresh cycle	Fetch cycle	Signal direction	Remark (Note-7)	Device No.	Signal nan	ne	Refresh cycle	Fetch cycle	Signal direction	Remark (Note-7)
M2000	PLC ready flag		Main cycle	Command signal	M3072	M2055						
M2001 M2002 M2003 M2004 M2005	Axis 1 Axis 2 Axis 3 Axis 4					M2056 M2057 M2058 M2059 M2060	Unusable (6 points)		_	_	_	_
M2003 M2006 M2007 M2008 M2009 M2010 M2011 M2012 M2013 M2014 M2015 M2016 M2017 M2018 M2019 M2020 M2021 M2022 M2023 M2030 M2031	Axis 5 Axis 6 Axis 7 Axis 8 Axis 9 Axis 10 Axis 11 Axis 12 Axis 13 Axis 14 Axis 15 Axis 16 Axis 17 Axis 16 Axis 17 Axis 20 Axis 20 Axis 21 Axis 22 Axis 23 Axis 24 Axis 22 Axis 23 Axis 24 Axis 22 Axis 23 Axis 24 Axis 22 Axis 23 Axis 24 Axis 27 Axis 28 Axis 29 Axis 20 Axis 30 Axis 31 Axis 31 Axis 32	Operation cycle		Status signal (Note-1), (Note-2), (Note-3), (Note-4)		M2061 M2062 M2063 M2064 M2065 M2066 M2067 M2068	Axis 1 Axis 2 Axis 3 Axis 4 Axis 5 Axis 6 Axis 7 Axis 8 Axis 9 Axis 10 Axis 11 Axis 12 Axis 13 Axis 14 Axis 15 Axis 16 Axis 17 Axis 18 Axis 12 Axis 14 Axis 15 Axis 16 Axis 20 Axis 21 Axis 22 Axis 23 Axis 24 Axis 25 Axis 27		Operation cycle		Status signal (Note-1), (Note-2), (Note-3), (Note-4)	
M2033 M2034	Unusable (2 points)		_	_	_	M2088 M2089	Axis 28 Axis 29					
M2035	Motion error history clear request flag		Main cycle	Command signal	M3080		Axis 30			/		
M2036 M2037	Unusable (2 points)	-	-	_	_	M2091 M2092	Axis 31 Axis 32					
M2038 M2039	Motion SFC debugging flag	At debugging mode transition Immediate		Status signal		M2093 M2094	,					
M2040	Motion error detection flag Speed switching point specified	IIIIIiediate	At start	Command	M3073	M2095						
M2041	flag System setting error flag	Operation cycle		signal Status		M2096						
M2041	All axes servo ON command		Operation cycle	signal	M3074	M2097	Unusable					
	Real mode/virtual mode switching request (SV22) (Note-5)		At virtual mode transition	Command signal	M3075	M2098	(8 points)		_	_	—	_
M2044	Real mode/virtual mode switching status (SV22) (Note-5)					M2099						
M2045	Real mode/virtual mode switching error detection signal (SV22) ^(Note-5)	At virtual mode transition		Status signal		M2100						
	Out-of-sync warning (SV22) (Note-5)					M2101	Axis 1			/		
M2047	Motion slot fault detection flag	Operation cycle	/			M2102	Axis 2			/		
M2048	JOG operation simultaneous start command		Main cycle	Command signal	M3076	M2103	Axis 3			/		
M2049	All axes servo ON accept flag	Operation cycle		Status		M2104	Axis 4				01-1	
M2050	Unusable		_	signal	_	M2105	Axis 5 encoder cu			/	Status signal	
M2051	Manual pulse generator 1	/			M3077	1	Axis 6 (Note-5), (N		Operation cycle		signal (Note-2), (Note-4)	
M2052	enable flag Manual pulse generator 2		Main cycle	Command	M3078	M2107						
M2053	enable flag Manual pulse generator 3		-	signal	M3079	M2108						
M2054	enable flag Operation cycle over flag	Operation cycle		Status signal		M2109	Axis 9			/		
L		1	/	signal					1	V		

(3) Common device list

							- /				
Device No.	Signal name	Refresh cycle	Fetch cycle	Signal direction	Remark (Note-7)	Device No.	Signal name	Refresh cycle	Fetch cycle	Signal direction	Remark (Note-7)
M2110 M2111	Axis 10 Synchronous Axis 11 encoder current Axis 12 value changing flag (Note-5), (Note-6)	Operation cycle		Status signal (Note-2), (Note-4)		M2179 M2180 M2181					
M2113 M2114 M2115 M2116 M2117 M2118 M2120 M2120 M2121 M2122 M2123 M2124 M2125 M2126 M2127	Unusable (15 points)	_	_	_	_	M2182 M2183 M2184 M2185 M2186 M2187 M2188 M2189 M2190 M2191 M2192 M2193 M2194 M2195 M2196					
M2135 M2136 M2137 M2138 M2139 M2140 M2141 M2142 M2143 M2144 M2145 M2146 M2147 M2148 M2149 M2150 M2151	Axis 2 Axis 3 Axis 4 Axis 5 Axis 6 Axis 7 Axis 8 Axis 7 Axis 8 Axis 7 Axis 10 Axis 11 Axis 12 Axis 13 Axis 14 Axis 15 Axis 16 Axis 17 Axis 18 Axis 19 Axis 20 Axis 21 Axis 22 Axis 23 Axis 24 Axis 25 Axis 26 Axis 27	Operation cycle		Status signal (Note-1), (Note-2), (Note-3), (Note-4)			Unusable (45 points) (Note-8)		_	_	_
M2156 M2157 M2158	Axis 29 Axis 30 Axis 31 Axis 32					M2225 M2226 M2227 M2228 M2229 M2230					
M2162 M2163 M2164 M2165 M2166 M2166 M2168 M2168 M2169 M2170	Unusable	_	_	_	_	M2231 M2232 M2233 M2234 M2235 M2236 M2237 M2238 M2239	Unusable (16 points)	_	_	_	_
M2173 M2171 M2172 M2173 M2174 M2175 M2176 M2177 M2178						M2240 M2241 M2242 M2243 M2244 M2245	Axis 2 Axis 3 Axis 4 Axis 5 Axis 5 Axis 6 Axis 7	Operation cycle		Status signal (Note-1), (Note-2), (Note-3), (Note-4)	

Common device list (Continued)

Common device list (Continued)

r	-												
Device		Signal name	Refresh cycle	Fetch cycle	Signal	Remark (Note-7)	Device	:	Signal name	Refresh cycle	Fetch cycle	Signal	Remark (Note-7)
No.					direction		No.					direction	<u> </u>
M2248	Axis 9						-	Axis 13			/	1	
M2249	Axis 10			/			-	Axis 14			/	1	
M2250	Axis 11			/			-	Axis 15			/	1	
M2251	Axis 12							Axis 16			/	1	
M2252	Axis 13						-	Axis 17			/	1	
M2253	Axis 14			/				Axis 18			/	1	
M2254	Axis 15 Axis 16						-	Axis 19			/	1	
M2255							-	Axis 20			/	Status	
M2256 M2257	Axis 17						-	Axis 21	0		/	signal (Note-1),	
M2257	Axis 18 Axis 19						-		Control loop monitor status	Operation cycle	/	(Note-2),	
M2259		0		1				Axis 23 Axis 24	sidius			(Note-3),	
M2259		Speed change "0" accepting flag					-	Axis 24 Axis 25				(Note-4)	
M2261	Axis 21	accepting hag						Axis 25				1	
M2262	Axis 23						-	Axis 20 Axis 27				1	
M2263	Axis 23							Axis 28				1	
M2264	Axis 25				Status signal			Axis 29			/	1	
M2265	Axis 26			1	(Note-1),			Axis 30			/	1	
M2266	Axis 27		Operation cycle	1	(Note-2),			Axis 31			/	1	
M2267	Axis 28				(Note-3),			Axis 32			/	1	
M2268	Axis 29				(Note-4)		M2304						
M2269	Axis 30						M2305					1	
M2270	Axis 31						M2306					1	
M2271	Axis 32						M2307					1	
M2272	Axis 1		İ				M2308					1	
M2273	Axis 2						M2309					1	
M2274	Axis 3						M2310					1	
M2275	Axis 4						M2311	Unusable	e			1	
M2276	Axis 5						M2312	(16 points	s)	—	—		-
M2277	Axis 6	Control loop					M2313					1	
M2278	Axis 7	monitor status					M2314					ł	
M2279	Axis 8			/			M2315					ł	
M2280	Axis 9	1					M2316					l	
M2281	Axis 10			/			M2317					ł	
M2282	Axis 11	1		/			M2318					ł	
M2283	Axis 12	1		/			M2319					ł	
-	·					•					,		

(Note-1): The range of axis No.1 to 16 is valid in the Q172DSCPU.

(Note-2): The range of axis No.1 to 8 is valid in the Q172DCPU(-S1).

(Note-3): Device area of 17 axes or more is unusable in the Q172DSCPU.

(Note-4): Device area of 9 axes or more is unusable in the Q172DCPU(-S1).

(Note-5): It is unusable in the SV22 advanced synchronous control.

(Note-6): It is unusable in the real mode.

(It can be used in the real mode for the version (Refer to Section 1.3) that supports "synchronous encoder current value monitor in real mode".)

(Note-7): It can also be ordered the device of a remark column.

(Note-8): These devices can be used as the clutch statuses.

The clutch status can also be set as the optional device at the clutch parameter.

Refer to Chapter 7 of the "Q173D(S)CPU/Q172D(S)CPU Motion controller (SV22) Programming Manual (VIRTUAL MODE)" for details.

Device No.	Signal name	Refresh cycle	Fetch cycle	Signal direction	Remark (Note-1), (Note-2)
M3072	PLC ready flag	/	Main cycle		M2000
M3073	Speed switching point specified flag		At start		M2040
M3074	All axes servo ON command		Operation cycle		M2042
N0075	Real mode/virtual mode switching request		At virtual mode		M0040
M3075	(SV22) ^(Note-3)		transition		M2043
M3076	JOG operation simultaneous start command			Command signal	M2048
M3077	Manual pulse generator 1 enable flag				M2051
M3078	Manual pulse generator 2 enable flag		Main cycle		M2052
M3079	Manual pulse generator 3 enable flag				M2053
M3080	Motion error history clear request flag	/			M2035
M3081	Unusable (Note-4)				
to		_	—	_	—
M3135	(55 points)				

(4) Common device list (Command signal)

(Note-1): The state of a device is not in agreement when the device of a remark column is turned ON/OFF directly. In addition, when the request from a data register and the request from the above device are performed simultaneously, the request from the above device becomes effective.

(Note-2): It can also be ordered the device of a remark column.

(Note-3): It is unusable in the SV22 advanced synchronous control.

(Note-4): Do not use it as a user device. It can be used as a device that performs automatic refresh because of area for the reserve of command signal.

POINT

The device of a remark column turns ON by OFF to ON of the above device, and turns OFF by ON to OFF of the above device.

The command signal cannot be turned ON/OFF by the PLC CPU in the automatic refresh because the statuses and commands are mixed together in M2000 to M2053. Use the above devices in the case.

And, it can also be turned ON/OFF by the data register. (Refer to Section 3.2.3)

Axis No.	Device No.			Signal name			
1	D0 to D19						
2	D20 to D39				E ()		Signal
3	D40 to D59		Signal name	Refresh cycle	Fetch cycle	Unit	direction
4	D60 to D79	0					
5	D80 to D99	1	Feed current value		/	Command	
6	D100 to D119	2	Deel europhiselise	One retien evelo	/	unit	
7	D120 to D139	3	Real current value	Operation cycle	/		
8	D140 to D159	4					
9	D160 to D179	5	Deviation counter value			PLS	
10	D180 to D199	6	Minor error code	Immediate	/		
11	D200 to D219	7	Major error code	Immediate		—	
12	D220 to D239	8	Servo error code	Main cycle			Monitor
13	D240 to D259	9	Home position return re-			PLS	device
14	D260 to D279	9	travel value	Operation cycle		PL3	
15	D280 to D299	10	Travel value after proximity	Operation cycle		Command	
16	D300 to D319	11	dog ON			unit	
17	D320 to D339	12	Execute program No.	At start			
18	D340 to D359	13	M-code	Operation cycle			
19	D360 to D379	14	Torque limit value	Operation cycle	/	%	
20	D380 to D399	15	Data set pointer for constant-	At start/during start	/		
21	D400 to D419		speed control	At starbuiling start	/		
22	D420 to D439	16	Unusable (Note-1)				
23	D440 to D459	17	Onusable				
24	D460 to D479	18	Real current value at stop	Operation cycle		Command	Monitor
25	D480 to D499	19	input			unit	device
26	D500 to D519						
27	D520 to D539						
28	D540 to D559						
29	D560 to D579						
30	D580 to D599						
31	D600 to D619						
32	D620 to D639						

(5) Axis monitor device list

(Note-1): It can be used as the travel value change register. The travel value change register can be set to the device optionally in the servo program. Refer to Section 6.15 for details.

 POINT

 (1) The following range is valid.

 • Q172DSCPU
 : Axis No.1 to 16

 • Q172DCPU(-S1): Axis No.1 to 8

 (2) The following device area can be used as a user device.

 • Q172DSCPU
 : 17 axes or more

 • Q172DCPU(-S1):
 9 axes or more

 • Q172DCPU(-S1):
 9 axes or more

 However, when the project of Q172DSCPU/Q172DCPU(-S1) is replaced with

 Q173DSCPU/Q173DCPU(-S1), this area cannot be used as a user device.

Axis No.	Device No.			Signal name			
1	D640, D641						
2	D642, D643		Signal name	Refresh cycle	Fetch cycle	Unit	Signal
3	D644, D645						direction
4	D646, D647	0	JOG speed setting		At start	Command	Command
5	D648, D649	1	000000000g			unit	device
6	D650, D651						
7	D652, D653						
8	D654, D655						
9	D656, D657						
10	D658, D659						
11	D660, D661						
12	D662, D663						
13	D664, D665						
14	D666, D667						
15	D668, D669						
16	D670, D671						
17	D672, D673						
18	D674, D675						
19	D676, D677						
20	D678, D679						
21	D680, D681						
22	D682, D683						
23	D684, D685						
24	D686, D687						
25	D688, D689						
26	D690, D691						
27	D692, D693						
28	D694, D695						
29	D696, D697						
30	D698, D699						
31	D700, D701						
32	D702, D703						

(6) Control change register list

POINT	
(1) The followi	ng range is valid.
• Q172DS0	CPU : Axis No.1 to 16
• Q172DCI	PU(-S1): Axis No.1 to 8
(2) The followi	ng device area can be used as a user device.
• Q172DS0	CPU : 17 axes or more
• Q172DCI	PU(-S1): 9 axes or more
However, v	when the project of Q172DSCPU/Q172DCPU(-S1) is replaced with
Q173DSC	PU/Q173DCPU(-S1), this area cannot be used as a user device.

Device No.	Signal name	Refresh cycle	Fetch cycle	Signal direction	Device No.	Signal name	Refresh cycle	Fetch cycle	Signal direction
D704	PLC ready flag request				D752	Manual pulse generator 1 smoothing magnification setting register	/		
D705	Speed switching point specified flag request				D753	Manual pulse generator 2 smoothing magnification setting register		At the manual pulse generator enable flag	
D706	All axes servo ON command request		Main cycle	Command device	D754	Manual pulse generator 3 smoothing magnification setting register			Command device
D707	Real mode/virtual mode switching request (SV22) (Note-1)				D755	Manual pulse generator 1 enable flag request			
D708	JOG operation simultaneous start command request	/			D756	Manual pulse generator 2 enable flag request		Main cycle	
D709	Unusable	_	—	—	D757	Manual pulse generator 3 enable flag request	/		
D710 D711 D712 D713	JOG operation simultaneous start axis setting register		At start		D758 D759 D760 D761				
D714 D715 D716	Manual pulse generator axis 1 No. setting register				D762 D763 D764				
D717 D718 D719	Manual pulse generator axis 2 No. setting register Manual pulse generator axis 3 No. setting register				D765 D766 D767				
D720 D721	Axis 1 Axis 2				D768 D769				
D722 D723 D724	Axis 3 Axis 4 Axis 5				D770 D771 D772				
D725 D726 D727	Axis 6 Axis 7 Axis 8				D773 D774 D775				
D728 D729 D730	Axis 9 Axis 10 Axis 11			Command	D776 D777 D778	Unusable			
D731 D732 D733	Axis 12 Axis 13 Axis 14		At the manual pulse generator enable flag	device	D779 D780 D781	(42 points)	_	_	_
D734 D735 D736	Axis 15 Axis 16 Axis 16 input magnification				D782 D783 D784				
D737 D738	Axis 18 Axis 19				D785 D786				
D739 D740 D741	Axis 20 Axis 21 Axis 22				D787 D788 D789				
D742 D743 D744	Axis 23 Axis 24 Axis 25				D790 D791 D792				
D745 D746	Axis 26 Axis 27				D793 D794				
D747 D748 D749	Axis 28 Axis 29 Axis 30				D795 D796 D797				
D750 D751	Axis 31 Axis 32				D798 D799	(Note 1): It is unus:			

(7) Common device list

(Note-1): It is unusable in the SV22 advanced synchronous control.

(Note-2): The following range is valid.

• Q172DSCPU : Axis No.1 to 16

• Q172DCPU(-S1): Axis No.1 to 8

(Note-3): The following device area is unusable.

• Q172DSCPU : 17 axes or more • Q172DCPU(-S1): 9 axes or more

Axis No.	Device No.				Signal name	
1	#8000 to #8019	_				
2	#8020 to #8039		$\overline{\ }$			
3	#8040 to #8059		Signal name		Refresh cycle	Signal direction
4	#8060 to #8079		0	Servo amplifier type	When the servo amplifier power-on	
5	#8080 to #8099		1	Motor current		
6	#8100 to #8119		2	Materanad	Operation cycle 1.7[ms] or less : Operation cycle	
7	#8120 to #8139		3	Motor speed	otor speed Operation cycle 3.5[ms] or more : 3.5[ms]	
8	#8140 to #8159		4	Command speed	Operation cycle	
9	#8160 to #8179		5	Command Speed		
10	#8180 to #8199		6	Home position return re-	At home position return re-travel	Monitor device
11	#8200 to #8219		7	travel value		
12	#8220 to #8239		8	Servo amplifier display servo		
13	#8240 to #8259		0	error code	Main cycle	
14	#8260 to #8279		9	Parameter error No. QDS		
15	#8280 to #8299		10	Servo status1 QDS	Operation cycle 1.7[ms] or less : Operation cycle	
16	#8300 to #8319		11	Servo status2 QDS	Operation cycle 3.5[ms] or more : 3.5[ms]	
17	#8320 to #8339		12	Servo status3 QDS		
18	#8340 to #8359		13			
19	#8360 to #8379		14			
20	#8380 to #8399		15			
21	#8400 to #8419		16	Unusable	_	—
22	#8420 to #8439		17			
23	#8440 to #8459		18			
24	#8460 to #8479		19			
25	#8480 to #8499					-
26	#8500 to #8519					
27	#8520 to #8539					
28	#8540 to #8559					
29	#8560 to #8579					
30	#8580 to #8599					
31	#8600 to #8619					
32	#8620 to #8639					

(8) Motion register list (#)

(9) Product information list devices Ver

Device No.	Signal name	Refresh cycle	Fetch cycle	Signal direction
#8736				
to	Operating system software version			
#8743		At power supply		Manitan daviaa
#8744		ON		Monitor device
to	Motion CPU module serial number			
#8751				

Ver. Refer to Section 1.3 for the software version that supports this function.

(10) Special relay list

Device No.	Signal name	Refresh cycle	Fetch cycle	Signal type
SM500	PCPU READY complete flag		/	
SM501	TEST mode ON flag	Main cycle		
SM502	External forced stop input flag	Operation cycle		
SM503	Digital oscilloscope executing flag	Main cycle		
SM506	External forced stop input ON latch flag 🕬	Operation cycle		01-1
SM508	Amplifier-less operation status flag			Status signal
SM510	TEST mode request error flag			
SM512	Motion CPU WDT error flag	Main cycle		
SM513	Manual pulse generator axis setting error flag		/	
SM516	Servo program setting error flag		V	

(11) Special register list

Device No.	Signal name	Refresh cycle	Fetch cycle	Signal direction
SD200	State of switch			
SD500	Real mode axis information register (SV22)	Main cycle	/	
SD501	(Note-1)			
SD502		At power supply on/	/	
SD503	Servo amplifier loading information	operation cycle	/	
SD504			/	
SD505	Real mode/virtual mode switching error	At virtual mode transition	/	
SD506	Information (SV22)		/	
SD508	SSCNET control (status)	Main cycle	/	
SD510				
SD511	Test mode request error information	At test mode request	/	
SD512	Motion CPU WDT error cause	At Motion CPU WDT error occurrence		Monitor device
SD513				
SD514	Manual pulse generator axis setting error	At the manual pulse generator		
SD515	- information	enable flag _		
SD516	Error program No.		1 /	
SD517	Error item information	At start		
SD522	Motion operation cycle	Operation cycle] /	
SD523	Operation cycle of the Motion CPU setting	At power supply on] /	
SD524	Maximum Motion operation cycle	Operation cycle] /	
SD550	Custom action amon information (ODS/	At System setting error	/	
SD551	System setting error information	occurrence]/	
SD560	Operation method QDSK Ver	At power supply on	/	
SD803	SSCNET control (command)		Main cycle	Command device


(Note-1): It is unusable in the SV22 advanced synchronous control.


Ver. Refer to Section 1.3 for the software version that supports this function.

APPENDIX 6 Compatible Devices with SSCNETⅢ

APPENDIX 6.1 Servo driver VCII series manufactured by Nikki Denso Co., Ltd.

The direct drive $\tau DISC/\tau iD roll/\tau Servo compass/\tau Linear series, etc. manufactured by Nikki Denso Co., Ltd. can be controlled by connecting with the servo driver VCII series manufactured by the same company using the Motion CPU and SSCNETII(/H). Contact to Nikki Denso overseas sales office for details of VCII series.$

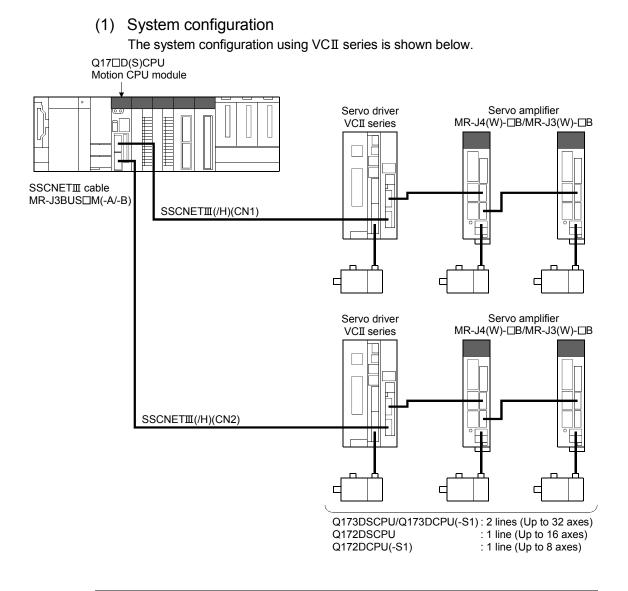



(2) Parameter setting

To connect VCII series, set the following in the system setting of MT Developer2.

- (a) When using Q173DSCPU/Q172DSCPU
 - Set the following for communication type in SSCNET setting.
 - When connecting SSCNETI/H: "SSCNETI/H"
 - When connecting SSCNET
 : "SSCNET
 - Set the amplifier model in amplifier setting to "VCII (Nikki Denso)".
 - Set the ABS/INC setting in amplifier setting to "INC", or "ABS".
- (b) When using Q173DCPU(-S1)/ Q172DCPU(-S1)
 - Set the amplifier model in amplifier setting to "VCII (Nikki Denso)".
 - Set the ABS/INC setting in amplifier setting to "INC", or "ABS".

POINT

Match the ABS/INC setting with the setting of VCII series. Otherwise, it does not operate correctly.

(3) Control of VCII series parameters

Parameters set in VCII series are not controlled by the Motion CPU. They are set directly using VCII data editing software. For details on setting items for VCII series, refer to the instruction manual of VCII series.

Item	VCI series (Note-1)	MR-J4(W)-□B	MR-J3(W)-□B
Amplifier type	VCII (Nikki Denso)	MR-J4(W)-B(-RJ)	MR-J3(W)-B, MR-J3-□B(S) (For fully closed loop control), MR-J3(W)-B (Linear servo), MR-J3(W)-B (Direct drive motor)
Control of servo amplifier parameters	Controlled by VCI series (Note-2)	Controlled by	/ Motion CPU
External input signal	Not available	External input signals of se	ervo amplifier are available.
Optional data monitor (Data type) Absolute position detection	 Effective load ratio Regenerative load ratio Peak load ratio Position feed back Absolute position encoder single revolution position Absolute position encoder multiple revolution counter Position loop gain 1 Main circuit bus voltage Cumulative current value Servo motor speed Selected droop pulse Selected droop pulse Usable ^(Note-3) 	 Effective load ratio Regenerative load ratio Peak load ratio Position feed back Absolute position encoder single revolution position Absolute position encoder multiple revolution counter Load inertia moment ratio Position loop gain 1 Main circuit bus voltage Cumulative current value Servo motor speed Selected droop pulse Module power consumption Unit integral power consumption Instantaneous torque Load-side encoder information 1 Load-side encoder information 2 Z-phase counter Motor thermistor temperature Disturbance torque Overload alarm margin Error excessive alarm margin Settling time Overshoot amount Motor side/load-side speed deviation 	 Effective load ratio Regenerative load ratio Peak load ratio Position feed back Absolute position encoder single revolution position Absolute position encoder multiple revolution counter Load inertia moment ratio Position loop gain 1 Main circuit bus voltage Cumulative current value Selected droop pulse Selected droop pulse Load-side encoder information 1 CISK Load-side encoder information 2 Motor thermistor temperature CISK
system Home position return method	Proximity dog type (1, 2), Count type (1 to 3), Data set type (1), Dog cradle type, Limit switch combined type, Scale home position signal detection type, Dogless home position signal reference type	Dog cradle type, Stopper type (1 Scale home position	type (1 to 3), Data set type (1, 2), , 2), Limit switch combined type, signal detection type, gnal reference type
Speed-torque control	Position control mode, Speed control mode, Torque control mode ^(Note-4)		ntrol mode, Torque control mode, to torque control mode

(4) Comparisons of specifications with MR-J4(W)-B/MR-J3(W)-B

Item	VCI series (Note-1)	MR-J4(W)-□B	MR-J3(W)-⊟B	
Torque limit value change	rque limit value change (Separate setting: Restrictions (^{Note-5})		Usable	
Gain changing command	Valid	Va	alid	
PI-PID switching command	Valid	Va	alid	
Control loop changing command	Invalid	Valid when using servo amplifier for fully closed loop control		
Amplifier-less operation function (Note-6)	Usable	Usable		
External input signals of servo amplifier	Unusable	Usa	able	
Servo parameter read/change	Usable		able	
Driver communication	Unusable	Usable ^(Note-7)		
Servo error (Motion error history)	Error codes detected by VCI series are stored	Error codes detected by servo amplifier are stored.		
Programming tool	MR Configurator2 is not available. Use VCI data editing software.	e. MR Configurator2 is available.		

(Note-1): Confirm the specifications of VCI series for details.

(Note-2): Match the absolute position detection system setting in each setting of VCI series and Motion CPU.

(Note-3): The direct drive τ DISC series manufactured by Nikki Denso Co., Ltd. can restore the absolute position in the range from -2147483648 to 2147483647. Confirm the specifications of VCI series for restrictions by the version of VCI series.

(Note-4): There are restrictions by the version of VCI series.

(Note-5): The specification of torque limit direction differs by the version of VCI series. Confirm the specifications of VCI series for details.

(Note-6): During amplifier-less operation function, the following are spuriously connected.

	Q173DSCPU/	Q173DCPU(-S1)/	
	Communic		
	SSCNETI/H	SSCNET	Q172DCPU(-S1)
Servo amplifier	MR-J4-10B	MR-J3-10B	MR-J3-10B
Servo motor	HG-KR053	HF-KP053	HF-KP053

(Note-7): Refer to the "Servo Amplifier Instruction Manual" for the servo amplifiers that can be used.

(5) Precautions during control

- (a) Absolute position system (ABS)/Incremental system (INC).
 Match the ABS/INC setting in each setting of VCII series and Motion CPU.
 Otherwise, a minor error (error code: 902) occurs, and it is controlled by the setting of VCII series side.
- (b) Home position return
 - 1) Home position return operation types

The home position return methods that can be used in VCII series are					
shown below.					
Home position return method	Possible/Not possible				

Home positi	on return method	Possible/Not possible
Description de la trans	Proximity dog type 1	0
Proximity dog type	Proximity dog type 2	0
	Count type 1	0
Count type	Count type 2	0
	Count type 3	0
Data ant time	Data set type 1	0
Data set type	Data set type 2	imes (Note-1)
Dog cradle type		0
01	Stopper type 1	imes (Note-1)
Stopper type	Stopper type 2	imes (Note-1)
Limit switch combined	d type	0
Scale home position	signal detection type	0
Dogless home position	on signal reference type	0

 $\bigcirc:$ Possible, $\times:$ Not possible

(Note-1): Minor error (error code: 133) occurs, and home position return is not performed.

2) Dogless home position signal reference type

When performing "dogless home position signal reference type" in VCII series, the home position, home position return operation, and home position return data (home position return retry function, dwell time at the home position return retry) is the following.

Also, set the VCII series parameter "Select function for SSCNETII on communicate mode (P612) (Condition selection of home position set)" as follows.

	Servo amplifier type			Home position	Home position return data		Parameter "Select function for	
Servo an			Home position	Home position return operation (Note-1)	Home position return retry	Dwell time at the home position	SSCNET II on communicate mode (P612) (Condition selection of home position set)"	
					function	return retry	selection of nome position set)	
	Linear motor	Absolute Position v address c position type linear enc becomes		Operation C	Invalid		_	
VCI series		Incremental type	Reference mark	Operation A	Va	alid	0	
	Direct drive	Absolute position type	Home position signal	Operation A/ Operation B	Valid/	Invalid	0/1	
	motor	Incremental type	(zero point)	Operation A	Va	alid	0	

(Note-1): Refer to Section 6.23.14 for home position return operation.

- 3) Home position return without passing motor Z phase
 When "1" is set in the first digit of the parameter of VCII series "Select function for SSCNETI on communicate mode (P612)", it is possible to carry out the home position return without passing the zero point. (Return to home position after power is supplied will be executed when passing of motor Z phase is not necessary.) When "0" is set, a minor error (error code: 120) occurs because the home position is executed without passing the motor Z phase (motor reference position signal).
- (c) Control mode QDS
 - Control modes that can be used are shown below.
 - Position control mode (position control, and speed control including position loop)
 - Speed control mode (speed control not including position loop)
 - Torque control mode (torque control)

However, it is not available to switch to continuous operation to torque control mode of "Speed-torque control". If the mode is switched to continuous operation to torque control mode, a minor error (error code: 318) occurs and the operation stops.

"1: Feedback torque" cannot be set in "Torque initial value selection at control mode switching". If it is set, a minor error (error code: 154) occurs and the command value immediately after switching is the same as the case of selecting "0: Command torque".

- (d) Servo parameter
 - 1) Control of servo parameters
 - Parameters of VCII series are not controlled by Motion CPU. Therefore, even though the parameter of VCII series is changed during the communication between Motion CPU and VCII series, it does not process, and is not reflected to the parameter.
 - 2) Servo parameter change function QDS
 - a) Change function of servo parameter can be executed. The following is the operation for the servo parameter change function.

	Operation for the servo parameter change function
Servo parameter write request	The servo parameter of VCII series is controlled in a unit of 2 words, so that it is necessary to set "3: 2 words write request" in servo parameter write/read request (SD804) for executing the parameter write. If "1: write request" is executed to VCII series, the parameter write fails, and "-1" is stored in servo parameter write/read request (SD804).
Servo parameter read request	The servo parameter of VCII series is controlled in a unit of 2 words, so that it is necessary to set "4: 2 words read request" in servo parameter write/read request (SD804) for executing the parameter read. If "2: read request" is executed to VCII series, the parameter read fails, and "-1" is stored in servo parameter write/read request (SD804).

b) When the servo parameter of VCII series is changed by the servo parameter change function, the parameter value after changing the servo parameter cannot be confirmed using VCII data editing software. When confirming the parameter value, execute the servo parameter read request. Also, when the power of VCII series is turned OFF, the parameter changed by the servo parameter change function becomes invalid, and the value written by VCII data editing software becomes valid.

No.	Name	Mooning	Details	Sathy
INO.	Name	Meaning		Set by
SD552	Servo parameter		The read value (low 1 word) of servo parameter which executed "4: 2 word read request" in SD804 is stored.	System
SD553		read value	• The read value (high 1 word) of servo parameter which executed "4: 2 word read request" in SD804 is stored.	(At reading request)
SD804 (Note-1)		Servo parameter write/read request flag	 The "write/read request" is executed after setting of the axis No. and servo parameter No. 3: 2 word write request 4: 2 word read request "0" is automatically set by Motion CPU after completion of servo parameter write/read request. ("-1" is stored by Motion CPU at write/read error.) 	User/ System
SD805	Servo parameter write/read request	Axis No.	The axis No. to write/read servo parameter is stored. Q173DSCPU: 1 to 32 Q172DSCPU: 1 to 16	
SD806		Servo parameter No.	The servo parameter No. to be written/read is stored in hexadecimal. H Parameter No. Parameter group No. O: Group 0 S: Group 5 1: Group 1 6: Group 6 2: Group 2 7: Group 7 3: Group 3 8: Group 8 4: Group 4 9: Group 9	User
SD808		Servo parameter	The setting value of servo parameter to be written is	
SD809		setting value (2 word)	stored when "3: 2 word write request" is set in SD804.	

 c) "Servo parameter write/read" device
 Store the value in the following special registers to change or display the servo parameter.

(Note-1): Do not execute the automatic refresh.

		Niuma la sur suf	Number of	Data types th	nat can be set
Data type ^(Note-1)	Unit	Number of words	communication data points	Q173DSCPU/ Q172DSCPU	Q173DCPU(-S1)/ Q172DCPU(-S1)
Effective load ratio	[%]	1	1	0	0
Regenerative load ratio	[%]	1	1	0	0
Peak load ratio	[%]	1	1	0	0
Position feedback	[PLS]	2	0	0	0
Absolute position encoder single revolution position	[PLS]	2	0	0	0
Absolute position encoder multiple revolution counter	[rev]	1	1	0	×
Position loop gain 1	[rad/s]	1	1	0	0
Cumulative current value	[×1PLS]	2	0	0	×

(e) Optional data monitor setting The following table shows data types that can be set.

○: Settable ×: Unsettable

(Note-1): Data types other than the above are "0".

(f) Gain changing command, PI-PID switching command, control loop changing command.

Gain changing command and PI-PID switching command are available. Control loop changing command becomes invalid.

(g) Driver communication QDS

The driver communication is not supported. If the driver communication is set in a servo parameter, a major error (error code: 1363) will occur when the power of Multiple CPU system is turned ON.

- (h) Monitor devices (#8000 to #8639)
 - 1) Servo amplifier type (#8000 + 20n)

This register stores the servo amplifier types below when using VCII series.

- 4352 VCII series (Note-1) (Nikki Denso Co., Ltd. make)
- 4354 VCII series (For Linear servo motor) (Note-2)

(Nikki Denso Co., Ltd. make)

• 4359..... VCII series (For direct drive motor) ^(Note-2) (Nikki Denso Co., Ltd. make) (Note-1): When connecting SSCNET**I**/H

(Note-2): When connecting SSCNET

(6) VCII series detection error

When an error occurs on VCII series, the servo error detection signal (M2408 + 20n) turns ON. Eliminate the error cause, reset the servo amplifier error by turning ON servo error reset command (M3208 + 20n) and perform restart.

However, "0" is always stored in parameter error No. (#8009 + 20n).

The errors detected by VCII series are shown in Table 6.1. Refer to the instruction manual of VCII series for details of the errors.

(a) VCI series

Error code	VCI series LED display	Name	Remarks
1	1-0	IPM error	
3	1-3	Excessive voltage error	
5	3-0	Encoder-related error	
6	1-4	Over speed error	
7	1-5	Overload error	
8	F-0	Overload precaution	
9	1-8	AC-off detection error	
10	3-1	At-power-ON motor shaft error	
13	4-0	Deviation over flow	
14	4-1	Deviation error	
15	F-1	Deviation abnormal warning	
17	5-0	Forward over travel	
18	5-1	Reverse over travel	
19	5-2	Forward software over travel	
20	5-3	Reverse software over travel	
25	E-0	Absolute encoder battery error	
26	F-4	Absolute encoder battery error warning	
27	3-2	Serial encoder count error	
28	E-2	Absolute encoder over flow error	
29	E-3	Absolute encoder count error	
30	3-3	Serial encoder/IPU communication error	
32	2-0	Motor type none-setup	
33	2-1	Motor type incompatible	
34	A-1	EEPROM (Nonvolatile memory) writing error	
35	A-2	Rated speed command Invalid 1	
36	A-3	Rated speed command Invalid 2	
37	1-2	Main power supply shortage error	
40	1-6	IPM overload error	
41	1-7	Regenerative resistor overload error	
42	F-3	Zero return incomplete automatic startup warning	
43	6-0	Address setting error	
44	6-1	Positioning timeover	
45	6-d	Successive control command invalid	
46	E-1	Absolute encoder backup error	
47	6-2	Positioning data over flow	

Table 6.1 VCII series error list

Table 6.1	VCII series error list	(continued)

Error code	VCI series LED display	Name	Remarks
48	6-3	1-rotation data no-setting	
49	1-A	Servo control error	
50	6-4	Program end command non-setup	
51	6-5	Sub-routine call nesting over	
52	9-4	Receive error 1	
53	<u> </u>	Command frequency error	
54	9-5	Receive error 2	
55	6-9	Division invalid	
56	6-A	Positioning volume error	
58	6-b	Invalid command	
59	6-C	Indirect data No. invalid	
60	7	Data sustain error 1	
61	7		
62	7	Data sustain error 2	
		Data sustain error 3	
63	7	Data sustain error 4	
64	7	Data sustain error 5	
65	7	Data sustain error 6	
66	7	Data sustain error 7	
67	7	Data sustain error 8	
68	7	Data sustain error 9	
69	7	Data sustain error 10	
70	7	Data sustain error 11	
71	7	Data sustain error 12	
72	7	Data sustain error 13	
73	7	Data sustain error 14	
74	7	Data sustain error 15	
75	7	Data sustain error 16	
76	7	Data sustain error 17	
77	7	Data sustain error 18	
78	7	Data sustain error 19	
79	7	Data sustain error 20	
80	7	Data sustain error 21	
81	7	Data sustain error 22	
82	7	Data sustain error 23	
83	7	Data sustain error 24	
84	7	Data sustain error 25	
85	7	Data sustain error 26	
86	7	Data sustain error 27	
87	7	Data sustain error 28	
88	7	Data sustain error 29	
89	7	Data sustain error 30	
90	7	Data sustain error 31	
91	7	Data sustain error 32	
92	7	Data sustain error 33	
93	7	Data sustain error 34	
94	7	Data sustain error 35	
95	7	Data sustain error 36	
96	7	Data sustain error 37	

Table 6.1 VCII series error list ((continued)


Error code	VCI series LED display	Name	Remarks
98	7	Data sustain error 39	
99	7	Data sustain error 40	
100	7	Data sustain error 41	
102	7	Data sustain error 43	
103	7	Data sustain error 44	
108	A-7	Rated speed command Invalid 3	
109	1-b	Input power supply error	
110		FLASH (Nonvolatile memory) writing error	
111	9-3	Remote sequence control receive timeout	
112	F-5	Remote sequence control communication stand-by warning	
113	9-1	Remote sequence control IC defect	
114	9-2	Remote sequence control communication-OFF	
115	A-4	Servo control communication disconnection error	
117	A-5	Servo control communication error	
118	F-2	Main power supply low voltage detection warning	
119	3-4	Linear sensor resolution error	
120	6-0	Free curve motion data error	
121	6-1	Standard position return data error	
122	6-2	Slave axis movement error	
124	F-6	Remote sequence control SW change warning	
130	3-5	IPU error	
131	3-6	Serial number check error	
132	3-7	Serial number none-setup (Empty)	
135	3-8	τDISC motor 1-rotation position detection speed error	
136	3-9	τDISC absolute encoder light-receiving element error	
137	3-A	τDISC absolute encoder light-emitting element error	
139	3-b	Magnetic pole detection error	
170	E-5	Over speed	
171	E-6	Initialization error	
172	E-7	Hardware error	
173	E-8	Absolute data error	
174	E-9	Transducer error	
175	E-A	Signal strength error	
176	F-b	Signal strength warning	
177	F-C	Thermal warning	
190	E-5	Encoder and IPU communication error	
191	E-6	Encoder and IPU cable disconnection	
192	E-7	Encoder backup error	
193	E-8	IPU backup error	
194	F-b	Encoder position sensing part deterioration warning	
230	F-7	Driver emergency stop	
231	F-8	Controller emergency stop	
2088	_	Internal circuit fault	

APPENDIX 6.2 Inverter FR-A700 series 9

FR-A700 series can be connected via SSCNET**II** by using built-in option FR-A7AP and FR-A7NS.

(1) System configuration

The system configuration using FR-A700 series is shown below.

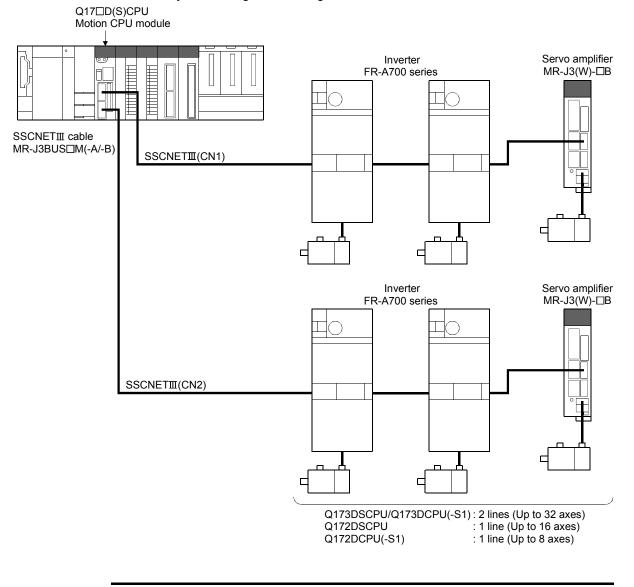



(2) Parameter setting

To connect FR-A700 series, set the following in the system setting of MT Developer2.

- (a) When using Q173DSCPU/Q172DSCPU
 - Set " SSCNET II" for communication type in SSCNET setting.
 - Set the amplifier model in amplifier setting to "FR-A700".
- (b) When using Q173DCPU(-S1)/Q172DCPU(-S1)
 - Set the amplifier model in amplifier setting to "FR-A700".

(3) Control of FR-A700 series parameters

Parameters set in FR-A700 series are not controlled by Motion CPU. Set the parameters by connecting FR-A700 series directly with the operation panel on the front of inverter (FR-DU07/FR-PU07) or FR Configurator that is inverter setup software. For details on setting items for FR-A700 series, refer to the instruction manual of the FR-A700 series.

POINT

In the state of connecting between FR-A700 series and Motion CPU, only a part of parameters can be set if the parameter of the inverter " Pr.77 Parameter write selection" is in the initial state. Set "2: Write parameters during operation" to rewrite the parameters of FR-A700 series.

(4) Reset selection/disconnected PU detection/PU stop selection When PU stop is executed in FR-A700 series, position error excessive, etc. occur because a command from Motion CPU does not stop. Set "0 to 3" in the parameter of the inverter " Pr.75 Reset selection/disconnected PU detection/PU stop selection". To stop FR-A700 series, use the stop signal and the forced stop of Motion CPU, or use the output stop (MRS) of FR-A700 series.

Setting item	Default value	Setting value	Details			
		0	 Reset input is always enabled. If the PU is disconnected, operation will be continued. PU stop is disabled at SSCNETI connection. 			
		1	 A reset can be input only when the protective function is activated. If the PU is disconnected, operation will be continued. PU stop is disabled at SSCNETI connection. 			
		2	 Reset input is always enabled. When the PU is disconnected, the inverter trips. PU stop is disabled at SSCNETI connection. 			
Reset selection/ disconnected PU		3	 A reset can be input only when the protective function is activated. When the PU is disconnected, the inverter trips. PU stop is disabled at SSCNETI connection. 			
detection/ PU stop selection (Pr. 75)	14	14 14	 Reset input is always enabled. If the PU is disconnected, operation will be continued. Deceleration stop by PU stop in any operation mode. 			
	_				15	 A reset can be input only when the protective function is activated. If the PU is disconnected, operation will be continued. Deceleration stop by PU stop in any operation mode.
		16	 Reset input is always enabled. When the PU is disconnected, the inverter trips. Deceleration stop by PU stop in any operation mode. 			
		17	 A reset can be input only when the protective function is activated. When the PU is disconnected, the inverter trips. Deceleration stop by PU stop in any operation mode. 			

(Note): Note that the default value is set to "14". (Change the value to "0 to 3")

(5) In-position range

Set the in-position range in the parameter of the inverter "In-position width (Pr. 426)".

When the position of the cam axis is restored in advanced synchronous control, a check is performed by the servo parameter "In-position range" (PA10). However, because the servo parameter settings are not performed in FR-A700, the "In-position range" is checked as 100[PLS] (fixed value).

(6) Optional data monitor setting

The following table shows data types that can be set.

		Number of	Number of	Data types that can be set	
Data type	Unit	Number of words	communication data points	Q173DSCPU/ Q172DSCPU	Q173DCPU(-S1)/ Q172DCPU(-S1)
Motor load factor	[%]	1	1	0	0
Position feedback	[PLS]	2	0	0	0
Encoder single revolution position	[PLS]	2	0	0	0
Load inertia moment ratio	[× 0.1 times]	1	1	0	0
Position loop gain	[rad/s]	1	1	0	0
Converter output voltage	[V]	1	1	0	0
Cumulative current value	[×1PLS]	2	0	0	×

 \bigcirc : Settable \times : Unsettable

POINT

When FR-A700 series is used, each data is delayed for "update delay time + communication cycle" because of the update cycle of the inverter. The update delay time for each data is shown in the table below.

Data type	Update delay time of FR-A700 series
Motor load factor	12.5ms
Position feedback	222µs
Encoder single revolution position	222µs
Load inertia moment ratio	56ms or more (up to 2500ms)
Position loop gain	56ms or more (up to 2500ms)
Converter output voltage	9.888ms

(7) External input signal

Set as the following to fetch the external input signal (FLS/RLS/DOG) via FR-A700 series.

- (a) Set the following items with MT Developer2
 - When using Q173DSCPU/Q172DSCPU Set "Amplifier input" for every axis with signal type in the servo external signal parameter of servo data setting.
 - When using Q173DCPU(-S1)/ Q172DCPU(-S1) Set "Amplifier input valid" as the external signal input setting in the "Amplifier setting" of system setting.

(b)	Set the	param	eter	rs of	the	inverte	er as below.
	(0)						

(Otherwise, each signal remains OFF.)

Setting item	Default value	Setting value	Details	
STF terminal function selection (Pr. 178)	60	60		
STR terminal function selection (Pr. 179)	61	61	Use with the default value	
JOG terminal function selection (Pr. 185)	5	76	Set 76 (Proximity dog)	
SSCNETⅢ input filter selection (Pr. 449)	4	0: None 1: 0.88ms 2: 1.77ms 3: 2.66ms 4: 3.55ms	Set the input filter setting value at reading an external signal.	

Item	FR-A700 series ^(Note-1)	MR-J3(W)-⊟B
Amplifier type	FR-A700	MR-J3(W)-B, MR-J3-□B(S) (For fully closed loop control), MR-J3(W)-B (Linear servo), MR-J3(W)-B (Direct drive motor)
Control of servo amplifier parameters	Set directly by inverter. (Not controlled by Motion CPU.)	Controlled by Motion CPU.
External input signal	External input signals of FR-A700 series are available.	External input signals of servo amplifier are available.
Optional data monitor (Data type)	 Motor load factor Position feedback Encoder single revolution position Load inertia moment ratio Position loop gain Converter output voltage Cumulative current value ODSK 	 Effective load ratio Regenerative load ratio Peak load ratio Position feed back Absolute position encoder single revolution position Absolute position encoder multiple revolution counter OSK Load inertia moment ratio Position loop gain 1 Main circuit bus voltage Cumulative current value OSK Selected droop pulse OSK Load-side encoder information 1 OSK Load-side encoder information 2 OSK Motor thermistor temperature OSK
Absolute position detection system	Unusable	Usable
Home position return method	Proximity dog type (1, 2), Count type (1 to 3), Data set type (1), Dog cradle type, Limit switch combined type, Scale home position signal detection type	Proximity dog type (1, 2), Count type (1 to 3), Data set type (1, 2), Dog cradle type, Stopper type (1, 2), Limit switch combined type, Scale home position signal detection type, Dogless home position signal reference type
Speed-torque control	Position control mode, Speed control mode, Torque control mode	Position control mode, Speed control mode, Torque control mode, Continuous operation to torque control mode
Gain changing command	Valid	Valid
PI-PID switching command	Valid	Valid
Control loop changing command	Invalid	Valid when using servo amplifier for fully closed loop control (MR-J3-□B-RJ006)
Servo parameter read/write	Unusable	Usable
Amplifier-less operation function ^(Note-2)	Usable ^(Note-3)	Usable
Driver communication	Unusable	Usable ^(Note-4)
Monitoring of servo parameter error No.	Unusable	Usable

(8) Comparisons of specifications with MR-J3(W)-B

Item	FR-A700 series (Note-1)	MR-J3(W)-□B
Servo error (Motion error history)	Error codes detected by FR-A700 series are stored.	Error codes detected by servo amplifier are stored.
Programming tool	MR Configurator2 is not available. Use FR-DU07/FR-PU07, or FR Configurator.	MR Configurator2 is available.

(Note-1): For details of FR-A700 series, refer to FR-A700 series instruction manual.

(Note-2): During amplifier-less operation function, the following are spuriously connected.

• Servo amplifier : MR-J3-10B

• Servo motor : HF-KP053

(Note-3): Parameters set in FR-A700 series are not controlled by Motion CPU. Therefore, the operation is the same as when the servo parameter "Rotation direction selection/travel direction selection (PA14)" is set as below during amplifier-less operation mode.

Setting item	Setting value	Details
Rotation direction selection/travel		Positioning address increase: CCW or positive direction
direction selection (PA14)	0	Positioning address decrease: CW of negative direction

(Note-4): Refer to the "Servo Amplifier Instruction Manual" for the servo amplifiers that can be used.

- (9) Precautions during control
 - (a) Absolute position system (ABS)/Incremental system (INC) When using FR-A700 series, absolute position system (ABS) cannot be used.
 - (b) Control mode QDS

Control modes that can be used are shown below.

- Position control mode (position control, and speed control including position loop)
- Speed control mode (speed control not including position loop)
- Torque control mode (torque control)

However, it is not available to switch to continuous operation to torque control mode of "Speed-torque control". If the mode is switched to continuous operation to torque control mode, a minor error (error code: 318) occurs and the operation stops.

"1: Feedback torque" cannot be set in "Torque initial value selection at control mode switching". If it is set, a minor error (error code: 154) occurs and the command value immediately after switching is the same as the case of selecting "0: Command torque".

(c) Control mode switching of speed-torque control ODS
 The axis connected with FR-A700 series takes more time to switch the control mode than the axis connected with the servo amplifier.

Switching operation	Switching time at the servo amplifier use	Switching time at FR-A700 series use
Position control mode \rightarrow Speed control mode	-	
Speed control mode \rightarrow Position control mode		
Position control mode \rightarrow Torque control mode	6 to 11ms	19 to 24ms
Torque control mode \rightarrow Position control mode	0 10 1 11115	19 10 241115
Speed control mode \rightarrow Torque control mode		
Torque control mode \rightarrow Speed control mode		

(d) Driver communication QDS

The driver communication is not supported. If the driver communication is set in a servo parameter, a major error (error code: 1363) will occur when the power supply of the Multiple CPU system is turned ON.

- (e) Monitor devices (#8000 to #8639)
 - Servo amplifier type (#8000 + 20n) This register stores the servo amplifier types below when using FR-A700 series.
 - 16640 FR-A700 series (Inverter)

(10) FR-A700 series detection error

When an error occurs on FR-A700 series, the servo error detection signal (M2408 + 20n) turns ON. Eliminate the error cause, reset the servo amplifier error by turning ON servo error reset command (M3208 + 20n) and perform restart.

However, "0" is always stored in parameter error No. (#8009 + 20n), and "Absolute position lost (b14)" of servo status 1 (#8010 + 20n).

The errors detected by FR-A700 series are shown in Table 6.2. Refer to the instruction manual of FR-A700 series for details of the errors.

(a) FR-A700 series

Table 6.2 FR-A700 series error list (2000 to 2199)

Error code	VCI series LED display	Name	Remarks
2010	E.OC1	Overcurrent trip during acceleration	
2011	E.OC2	Overcurrent trip during constant speed	
2012	E.OC3	Overcurrent trip during deceleration or stop	
2015	E.OV3	Regenerative overvoltage trip during deceleration or stop	
2016	E.THM	Motor overload trip (electronic thermal relay function)	
2017	E.THT	Inverter overload trip (electronic thermal relay function)	
2018	E.IPF	Instantaneous power failure	
2019	E.UVT	Undervoltage	
2020	E.BE	Brake transistor alarm detection	
2021	E.GF	Output side earth (ground) fault overcurrent	
2022	E.OHT	External thermal relay operation	
2023	E.OLT	Stall prevention stop	
2024	E.OPT	Option fault	
2027	E.PE	Parameter storage device fault	
2028	E.PUE	PU disconnection	
2030	E.CPU	CPU fault	
2031	E.ILF	Input phase loss	
2032	E.FIN	Heatsink overheat	
2033	E.OS	Overspeed occurrence	
2034	E.OSD	Speed deviation excess detection	
2035	E.ECT	Signal loss detection	
2036	E.OD	Excessive position fault	
2045	E.P24	24VDC power output short circuit	
2046	E.CTE	Operation panel power supply short circuit, RS-485 terminal power supply short circuit	
2047	E.LF	Output phase loss	
2048	E.PTC	PTC thermistor operation	
2049	E.PE2	Parameter storage device fault	
2050	E.CDO	Output current detection value exceeded	
2051	E.IOH	Inrush current limit circuit fault	
2052	E.SER	Communication fault (inverter)	
2053	E.AIE	Analog input fault	
2055	E.USB	USB communication fault	

Error code	VCI series LED display	Name	Remarks
2056	E.1	Option fault	
2057	E.2		
2058	E.3		
2061	E.6	CPU fault	
2062	E.7		
2070	E.EP	Encoder phase fault	
2090	E.OP3	Communication option fault	
2091	E.OP3		
2092	E.OP3		
2100	OL	Stall prevention (overcurrent)	
2101	oL	Stall prevention (overvoltage)	
2102	PS	PU stop	
2103	RB	Regenerative brake pre-alarm	
2104	TH	Electronic thermal relay function pre-alarm	
2105	MT	Maintenance signal output	
2106	CP	Parameter copy	
2107	SL	Speed limit indication (Output during speed limit)	
2108	Fn	Fan alarm	
2144		Parameter write error	
2146		Output stop	
2147		Emergency stop	

Table 6.2 FR-A700 series error list (2000 to 2199)

WARRANTY

Please confirm the following product warranty details before using this product.

1. Gratis Warranty Term and Gratis Warranty Range

We will repair any failure or defect hereinafter referred to as "failure" in our FA equipment hereinafter referred to as the "Product" arisen during warranty period at no charge due to causes for which we are responsible through the distributor from which you purchased the Product or our service provider. However, we will charge the actual cost of dispatching our engineer for an on-site repair work on request by customer in Japan or overseas countries. We are not responsible for any on-site readjustment and/or trial run that may be required after a defective unit is repaired or replaced.

[Gratis Warranty Term]

The term of warranty for Product is thirty six (36) months after your purchase or delivery of the Product to a place designated by you or forty two (42) months from the date of manufacture whichever comes first "Warranty Period". Warranty period for repaired Product cannot exceed beyond the original warranty period before any repair work.

[Gratis Warranty Range]

- (1) You are requested to conduct an initial failure diagnosis by yourself, as a general rule.
 - It can also be carried out by us or our service company upon your request and the actual cost will be charged. However, it will not be charged if we are responsible for the cause of the failure.
- (2) This limited warranty applies only when the condition, method, environment, etc. of use are in compliance with the terms and conditions and instructions that are set forth in the instruction manual and user manual for the Product and the caution label affixed to the Product.
- (3) Even during the term of warranty, the repair cost will be charged on you in the following cases;
 - 1) A failure caused by your improper storing or handling, carelessness or negligence, etc., and a failure caused by your hardware or software problem
 - 2) A failure caused by any alteration, etc. to the Product made on your side without our approval
 - 3) A failure which may be regarded as avoidable, if your equipment in which the Product is incorporated is equipped with a safety device required by applicable laws and has any function or structure considered to be indispensable according to a common sense in the industry
 - 4) A failure which may be regarded as avoidable if consumable parts designated in the instruction manual, etc. are duly maintained and replaced
 - 5) Any replacement of consumable parts (battery, fan, etc.)
 - 6) A failure caused by external factors such as inevitable accidents, including without limitation fire and abnormal fluctuation of voltage, and acts of God, including without limitation earthquake, lightning and natural disasters
 - 7) A failure generated by an unforeseeable cause with a scientific technology that was not available at the time of the shipment of the Product from our company
 - 8) Any other failures which we are not responsible for or which you acknowledge we are not responsible for

2. Onerous Repair Term after Discontinuation of Production

- (1) We may accept the repair at charge for another seven (7) years after the production of the product is discontinued.
- The announcement of the stop of production for each model can be seen in our Sales and Service, etc.
- (2) Please note that the Product (including its spare parts) cannot be ordered after its stop of production.

3. Service in overseas countries

Our regional FA Center in overseas countries will accept the repair work of the Product; However, the terms and conditions of the repair work may differ depending on each FA Center. Please ask your local FA center for details.

4. Exclusion of Loss in Opportunity and Secondary Loss from Warranty Liability

Whether under or after the term of warranty, we assume no responsibility for any damages arisen from causes for which we are not responsible, any losses of opportunity and/or profit incurred by you due to a failure of the Product, any damages, secondary damages or compensation for accidents arisen under a specific circumstance that are foreseen or unforeseen by our company, any damages to products other than the Product, and also compensation for any replacement work, readjustment, start-up test run of local machines and the Product and any other operations conducted by you.

5. Change of Product specifications

Specifications listed in our catalogs, manuals or technical documents may be changed without notice.

6. Precautions for Choosing the Products

- (1) For the use of our Motion controller, its applications should be those that may not result in a serious damage even if any failure or malfunction occurs in Motion controller, and a backup or fail-safe function should operate on an external system to Motion controller when any failure or malfunction occurs.
- (2) Our Motion controller is designed and manufactured as a general purpose product for use at general industries. Therefore, applications substantially influential on the public interest for such as atomic power plants and other power plants of electric power companies, and also which require a special quality assurance system, including applications for railway companies and government or public offices are not recommended, and we assume no responsibility for any failure caused by these applications when used.

In addition, applications which may be substantially influential to human lives or properties for such as airlines, medical treatments, railway service, incineration and fuel systems, man-operated material handling equipment, entertainment machines, safety machines, etc. are not recommended, and we assume no responsibility for any failure caused by these applications when used.

We will review the acceptability of the abovementioned applications, if you agree not to require a specific quality for a specific application. Please contact us for consultation.

Microsoft, Windows, Windows NT, and Windows Vista are registered trademarks of Microsoft Corporation in the United States and other countries.

Ethernet is a trademark of Xerox Corporation.

All other company names and product names used in this manual are trademarks or registered trademarks of their respective companies.

MOTION CONTROLLER Qseries SV13/SV22 Programming Manual (REAL MODE) (Q173D(S)CPU/Q172D(S)CPU)

MODEL Q173D-P-SV13/22REALE

1XB930

MODEL CODE

IB(NA)-0300136-G(1311)MEE

MITSUBISHI ELECTRIC CORPORATION

HEAD OFFICE : TOKYO BUILDING, 2-7-3 MARUNOUCHI, CHIYODA-KU, TOKYO 100-8310, JAPAN NAGOYA WORKS : 1-14 , YADA-MINAMI 5-CHOME , HIGASHI-KU, NAGOYA , JAPAN

When exported from Japan, this manual does not require application to the Ministry of Economy, Trade and Industry for service transaction permission.